

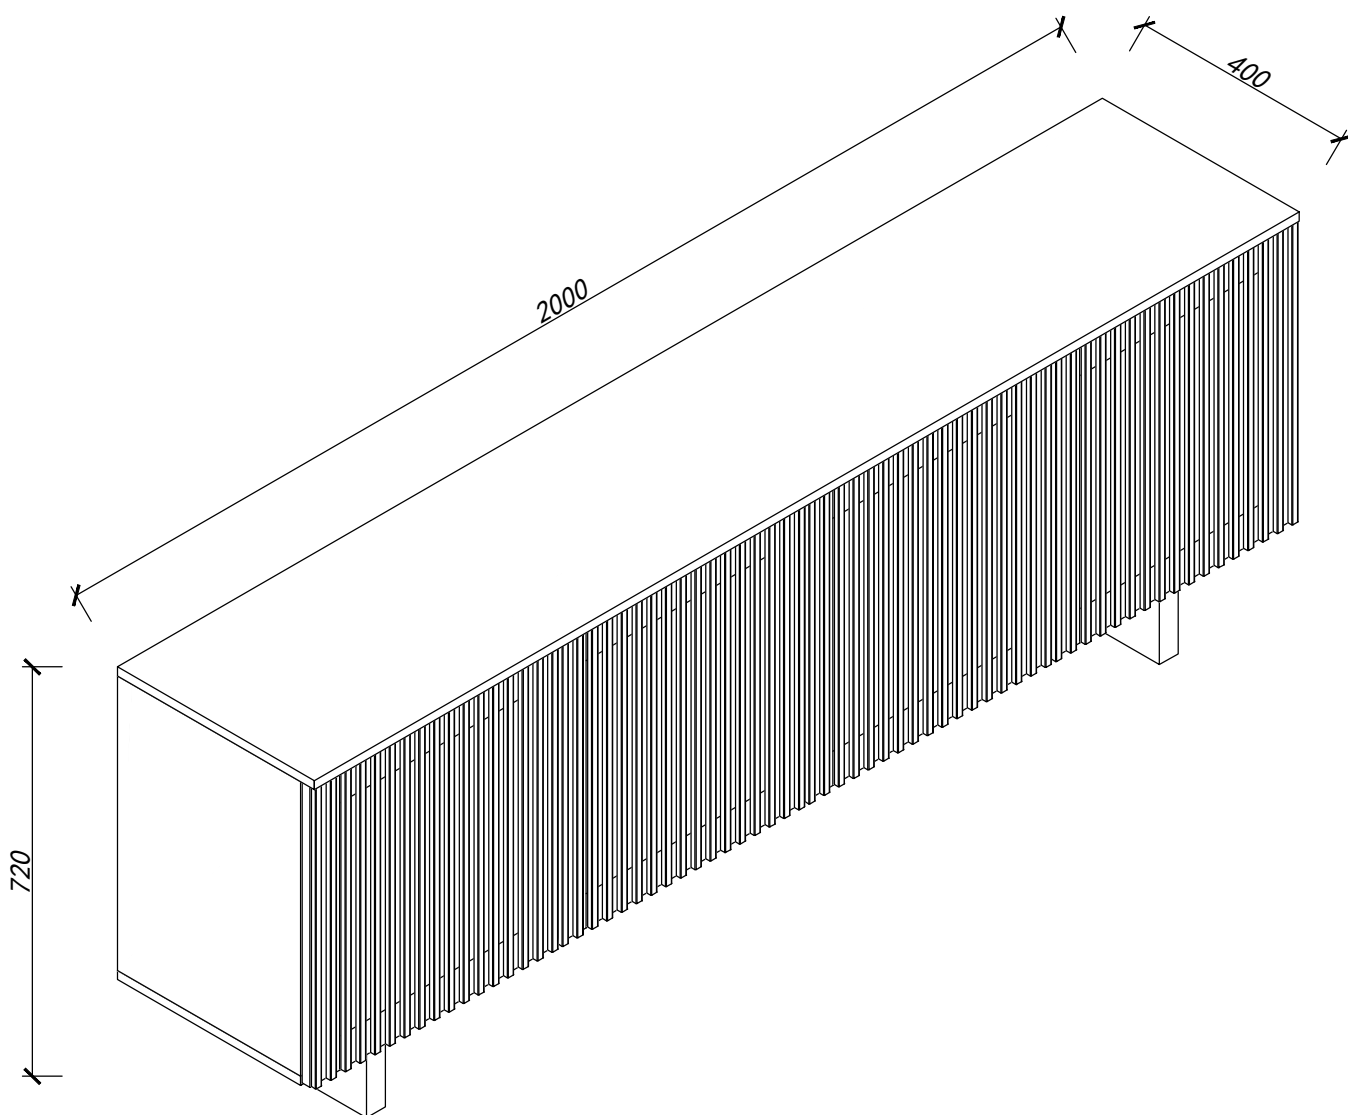
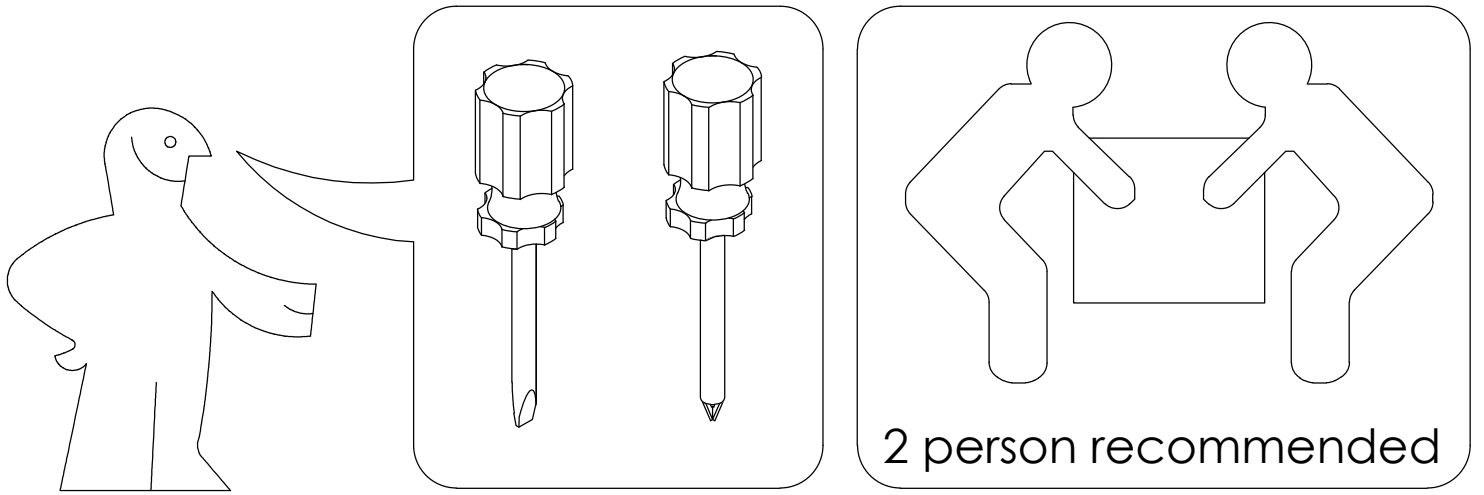
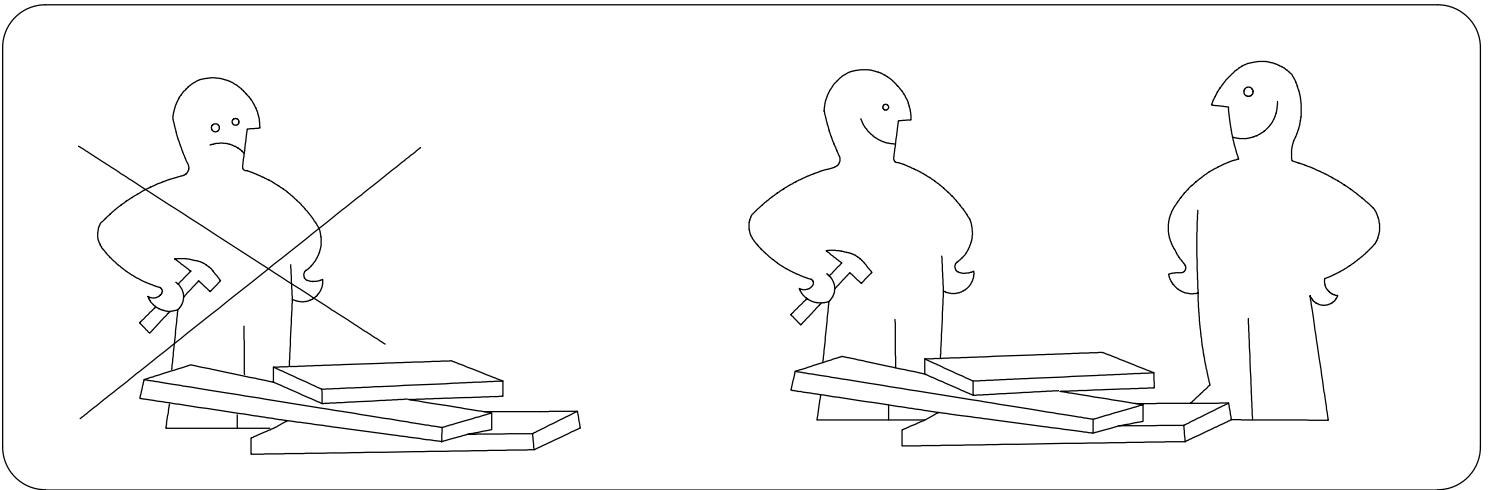


sømcasa

Assembly Instruction

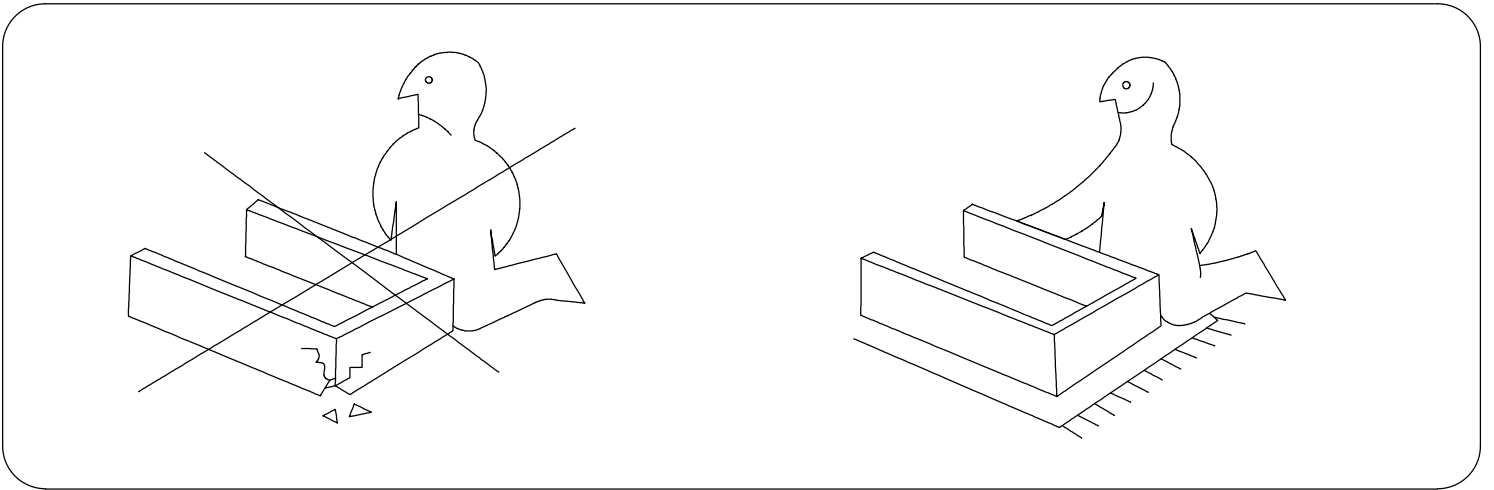

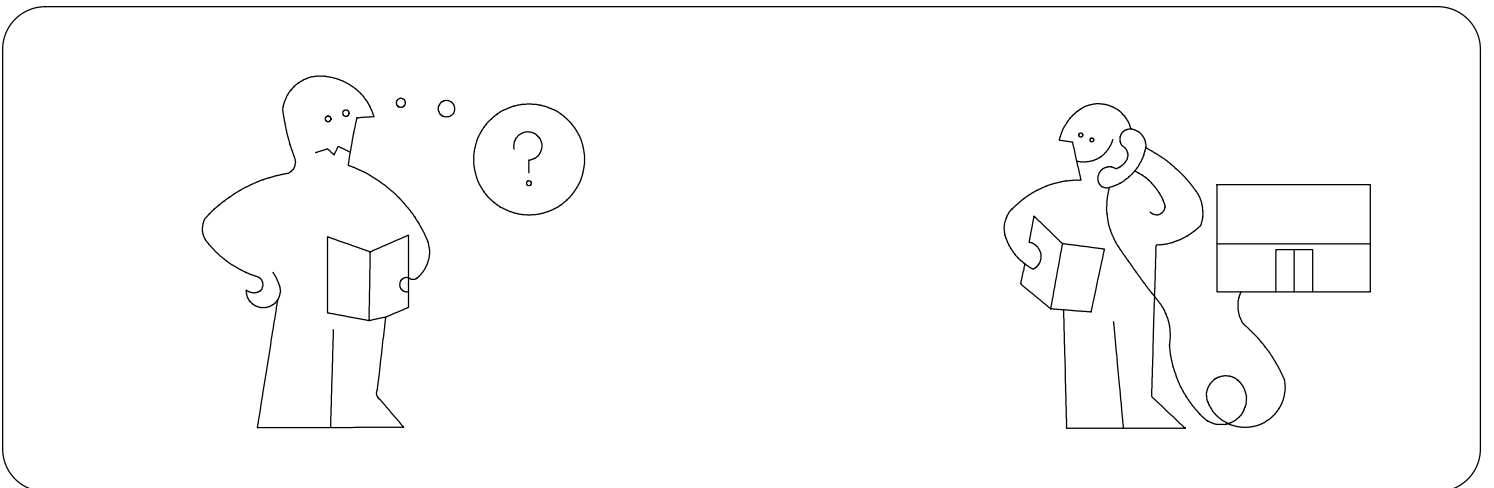


Fittings




M6*40

A=36



Φ8*30

B=42

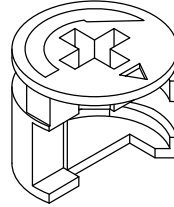


Φ15*12

C=36




Φ21


D=36

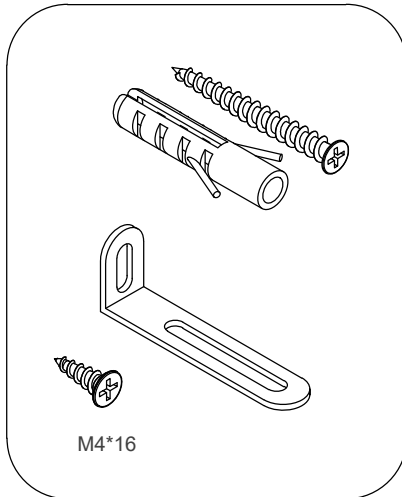


F=2

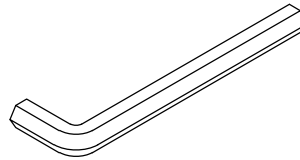


H =1

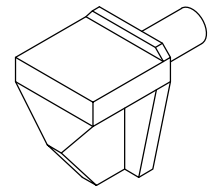


L=16

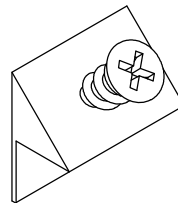


E=16

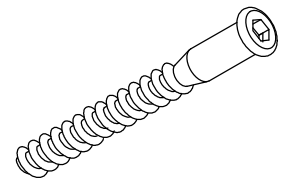

Q=10

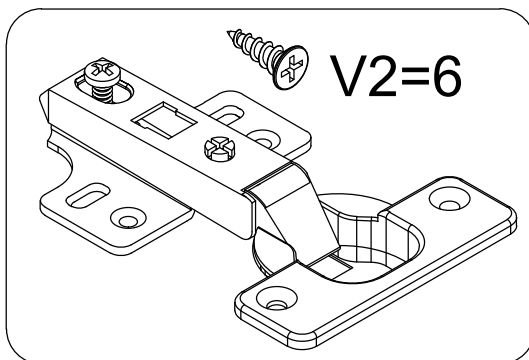


I1=4

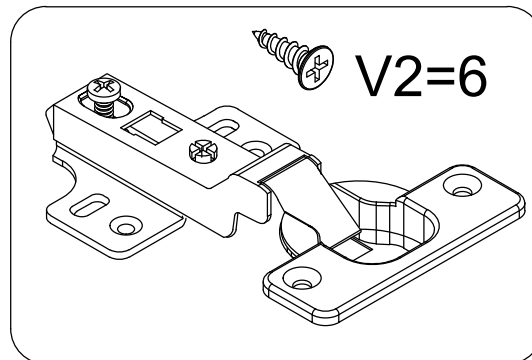


I2=4

Panel No	Panel Sizes	Quantity
1	2000*400*16	1
2	2000*373*16	1
3	518*372*16	1
4	518*372*16	1
5	518*372*16	1
6	518*372*16	1
7	518*372*16	1
8	472*350*16	2
9	481*350*16	2


Panel No	Panel Sizes	Quantity
10	528*485*5	2
11	528*494*5	2
12	530*498*25	2
13	530*498*25	2
14	1564*100*16	2
15	170*310*38	1
16	170*310*38	1
17	120*100*16	3

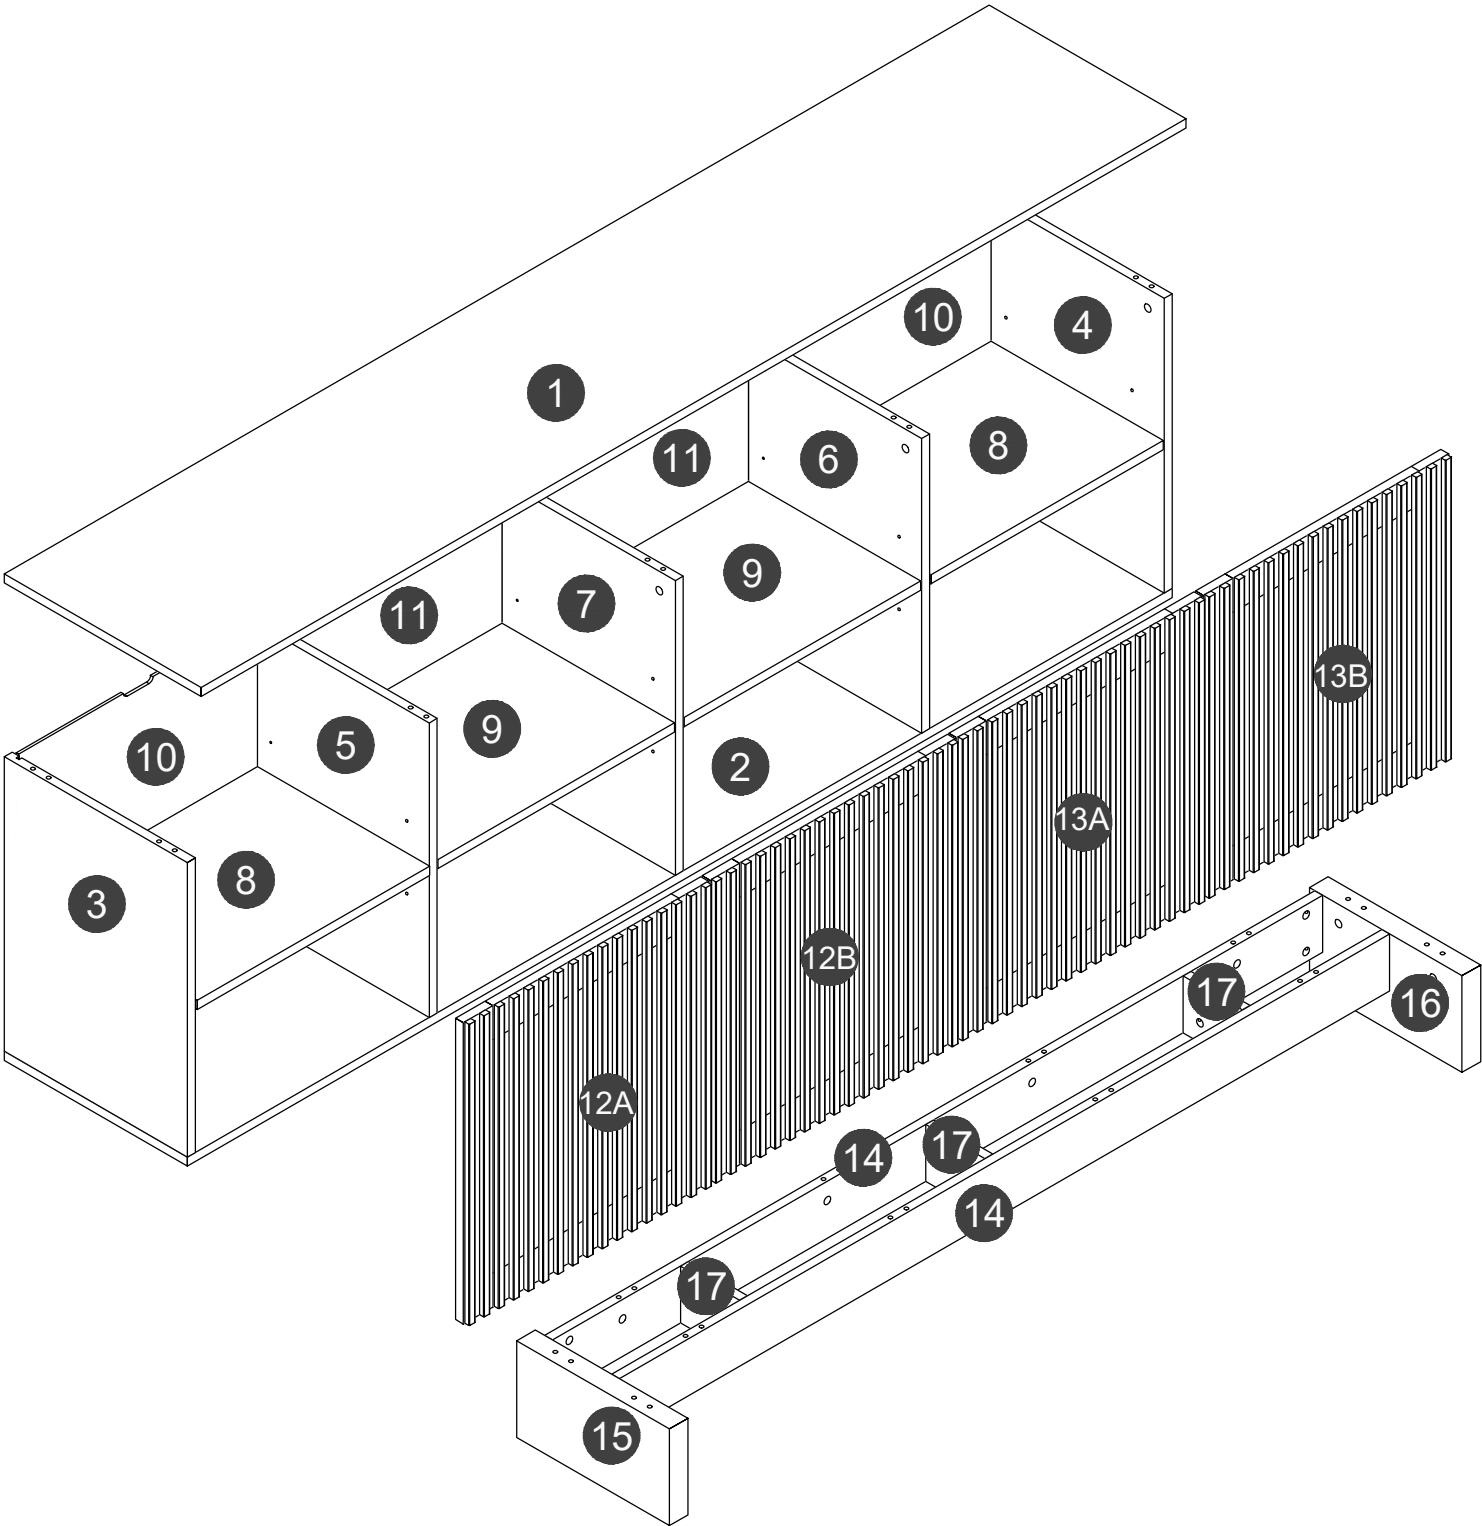


STEP 1

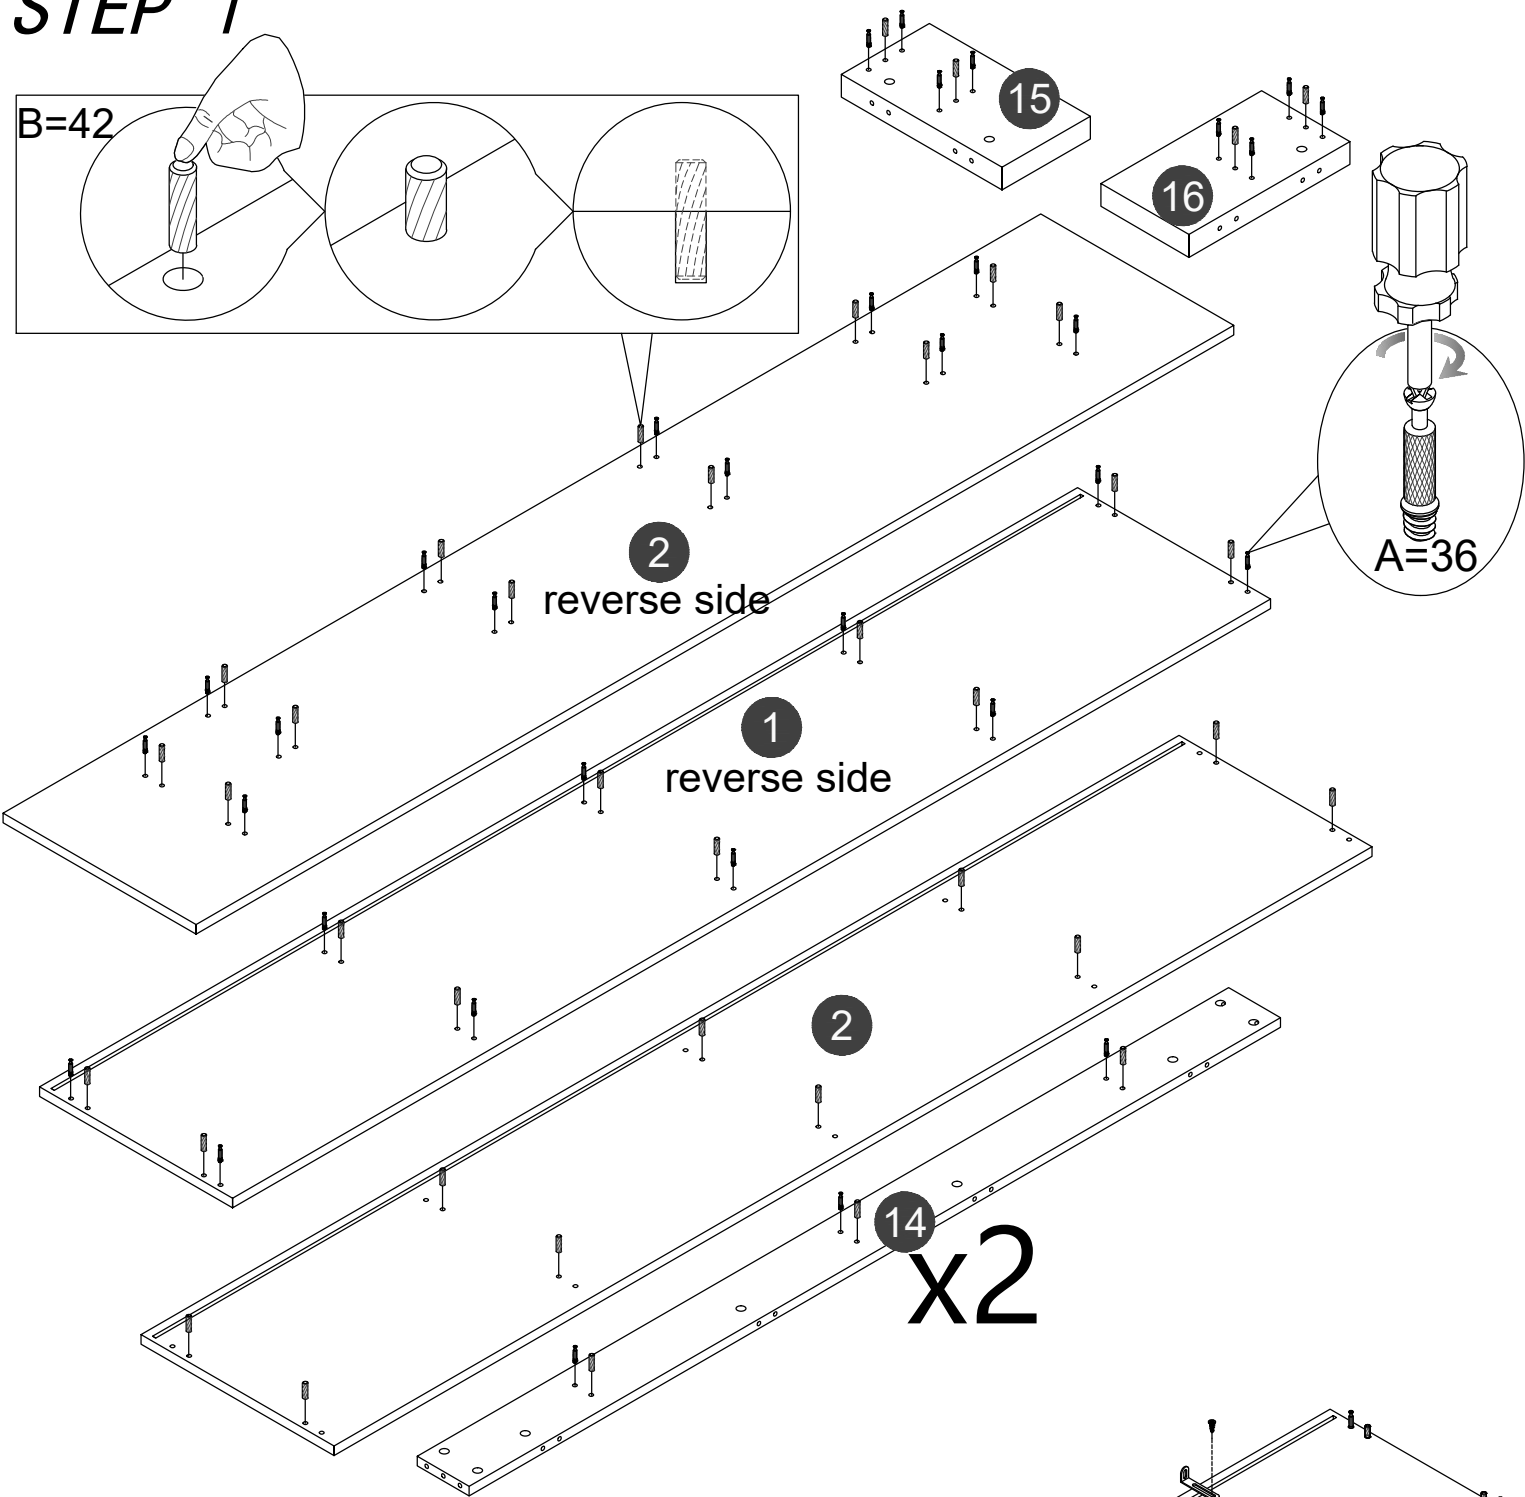


STEP 2

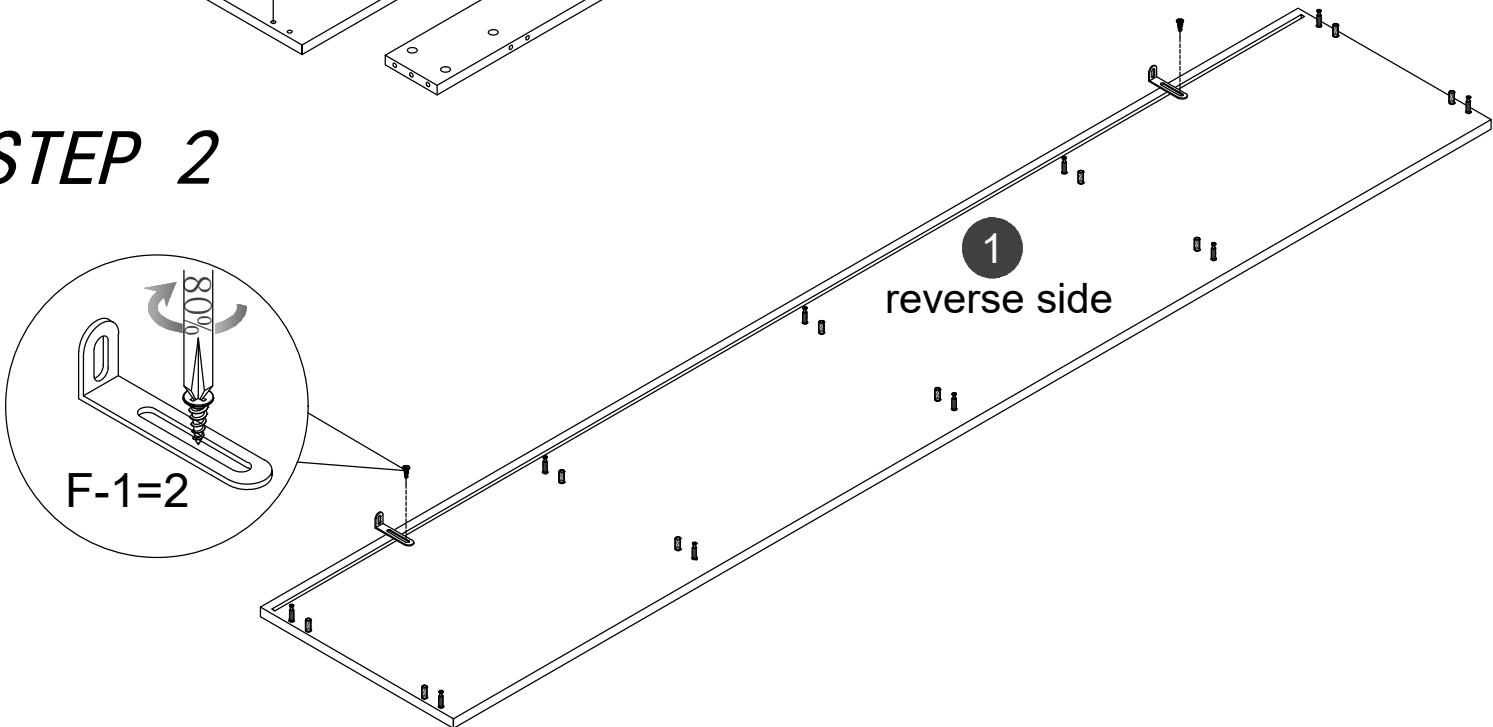


STEP 3

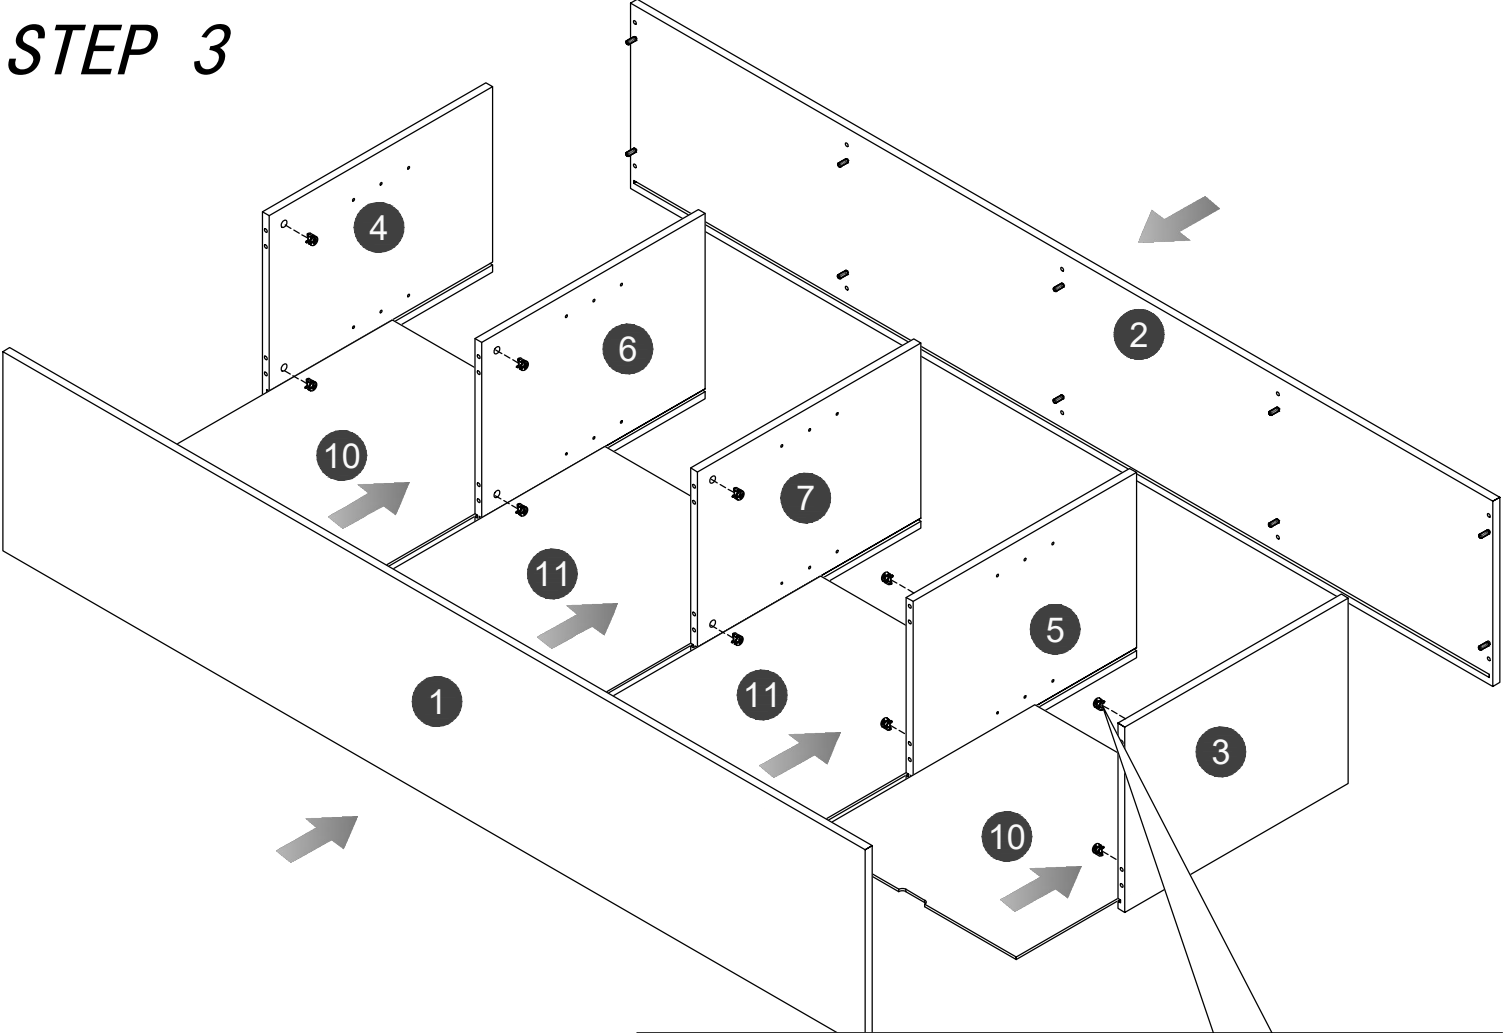


C=10

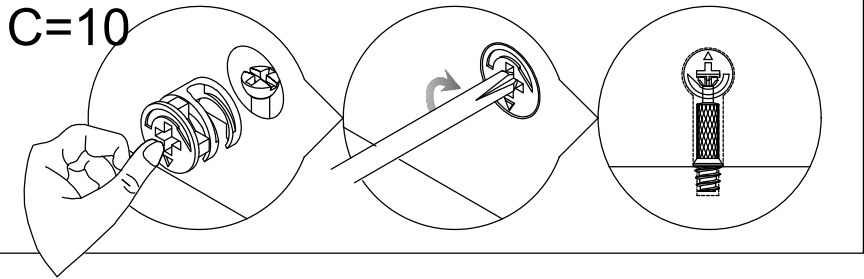


STEP 4

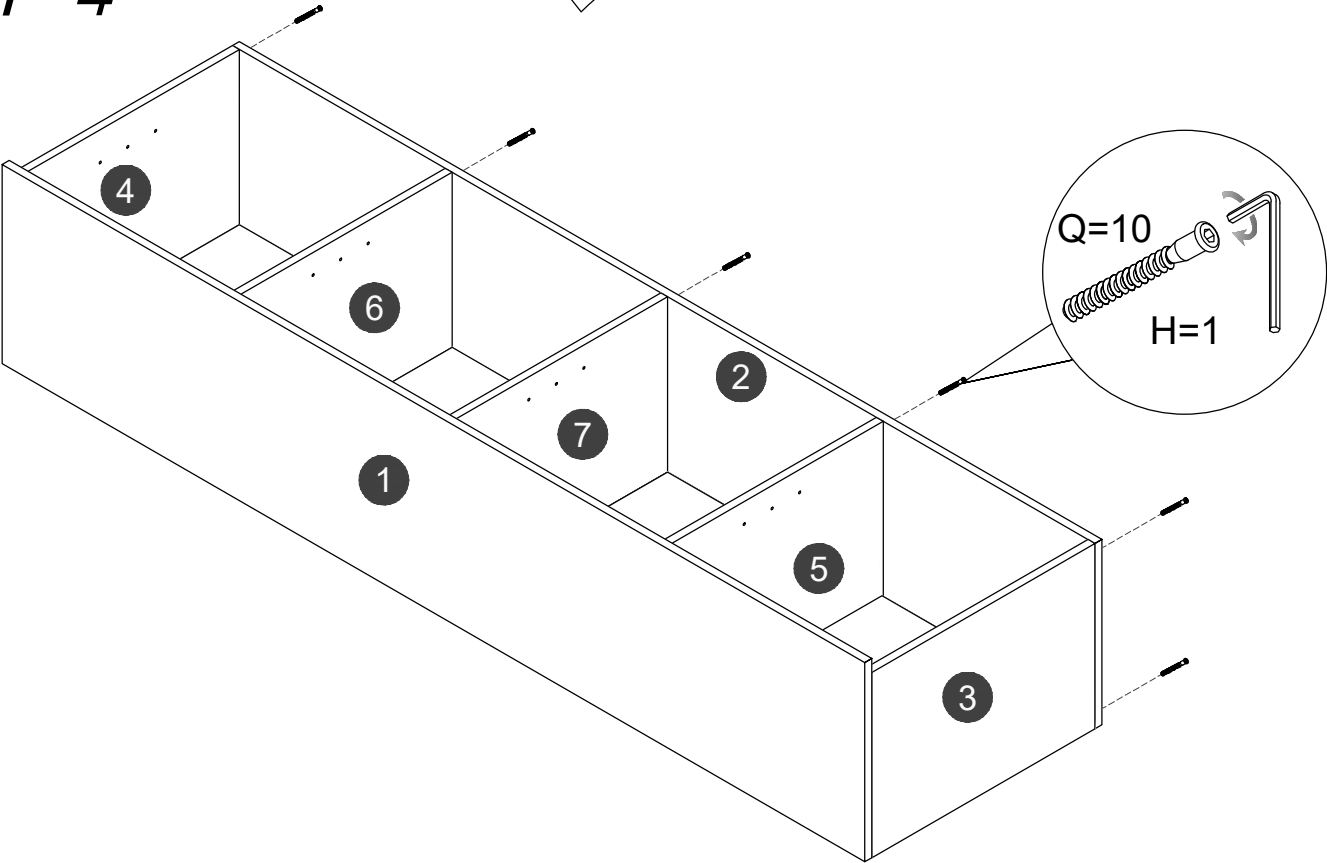


STEP 5

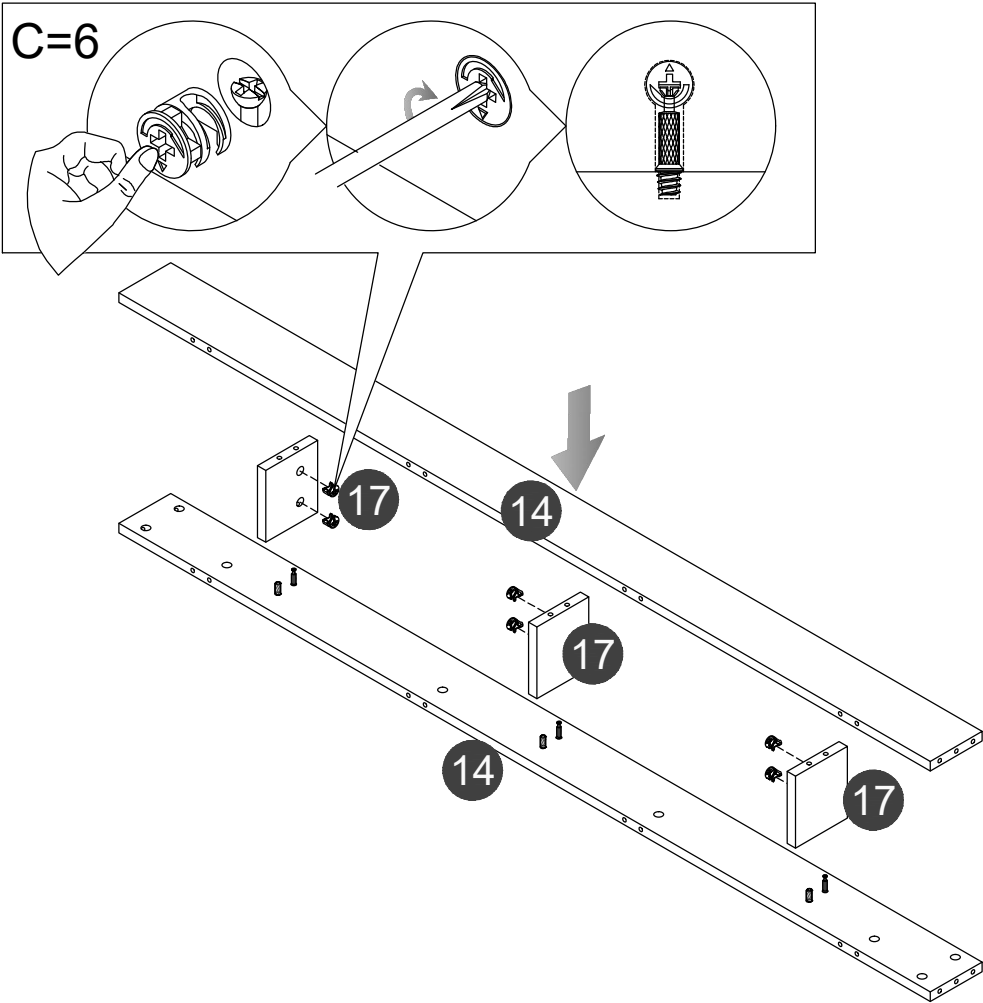


STEP 6

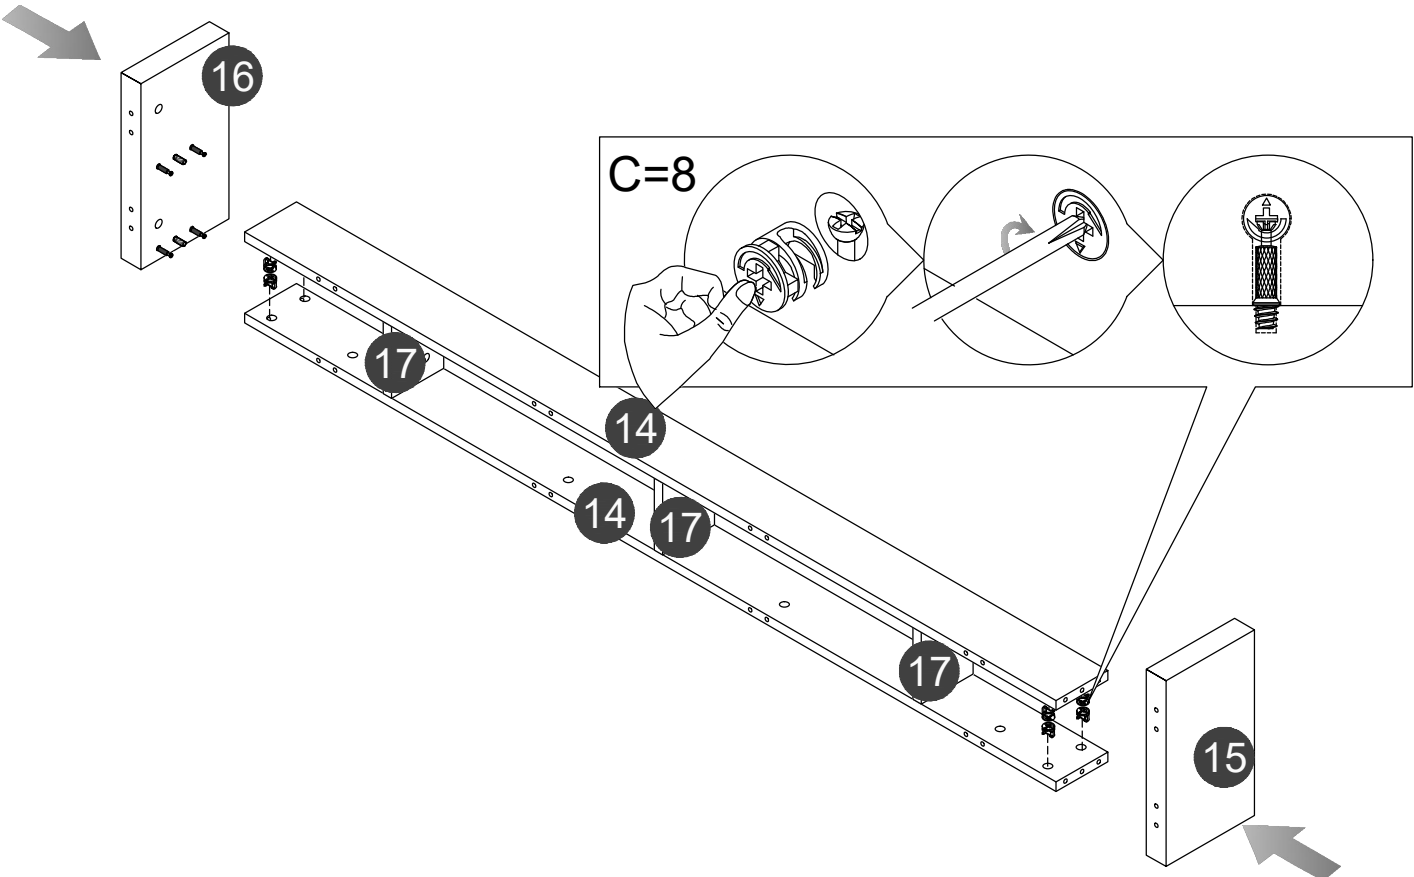


STEP 7

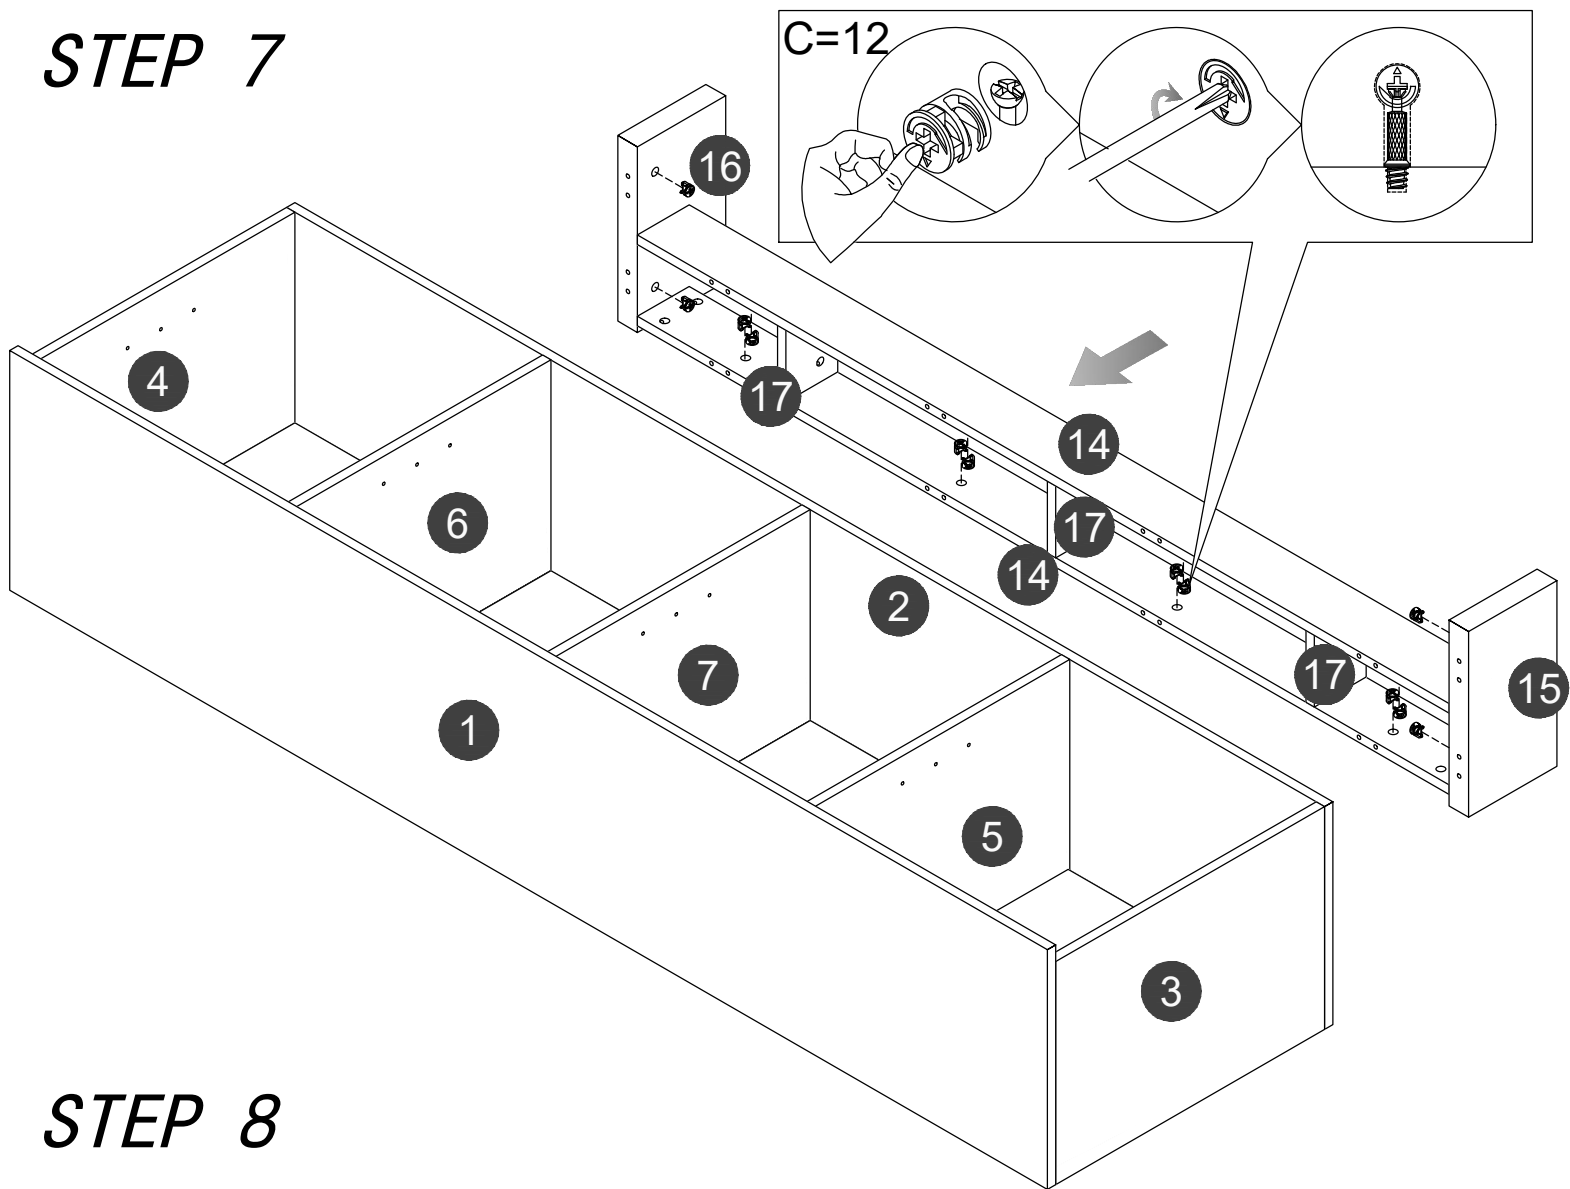


STEP 8

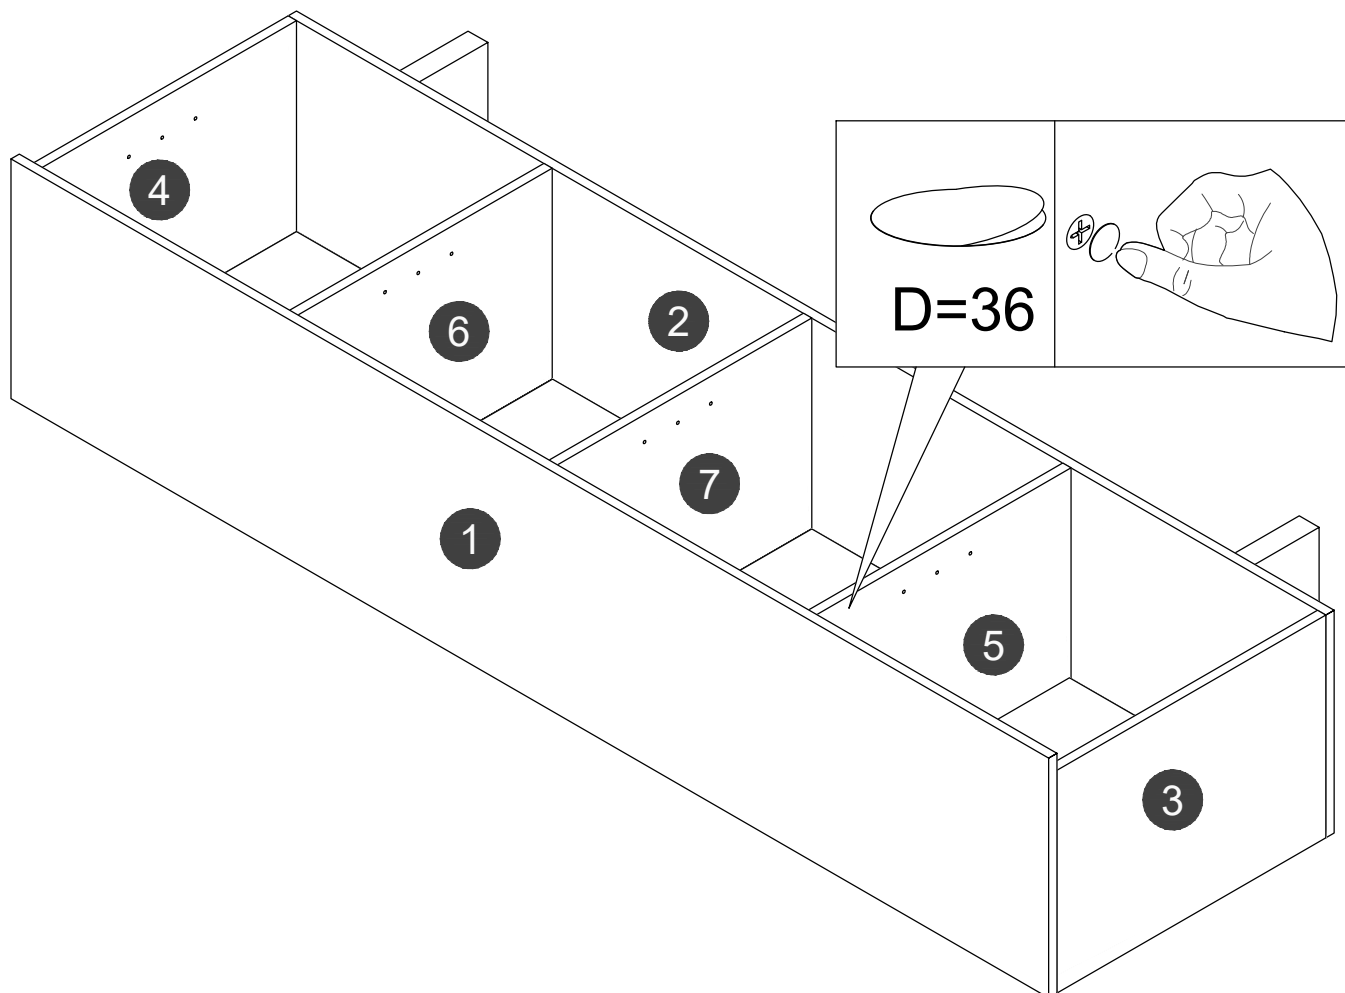


STEP 9

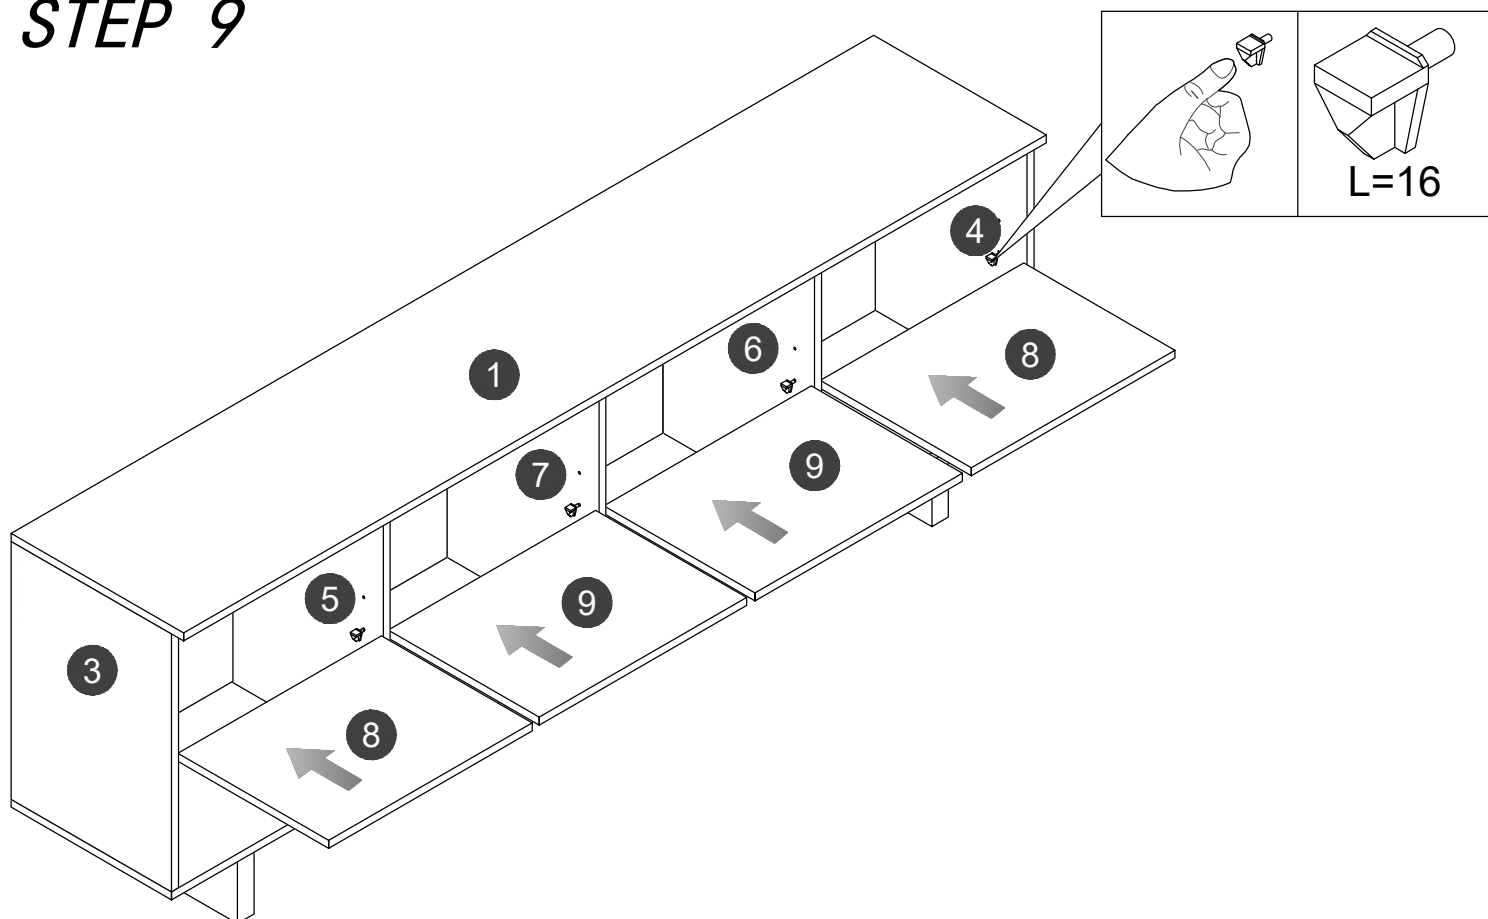





STEP 10

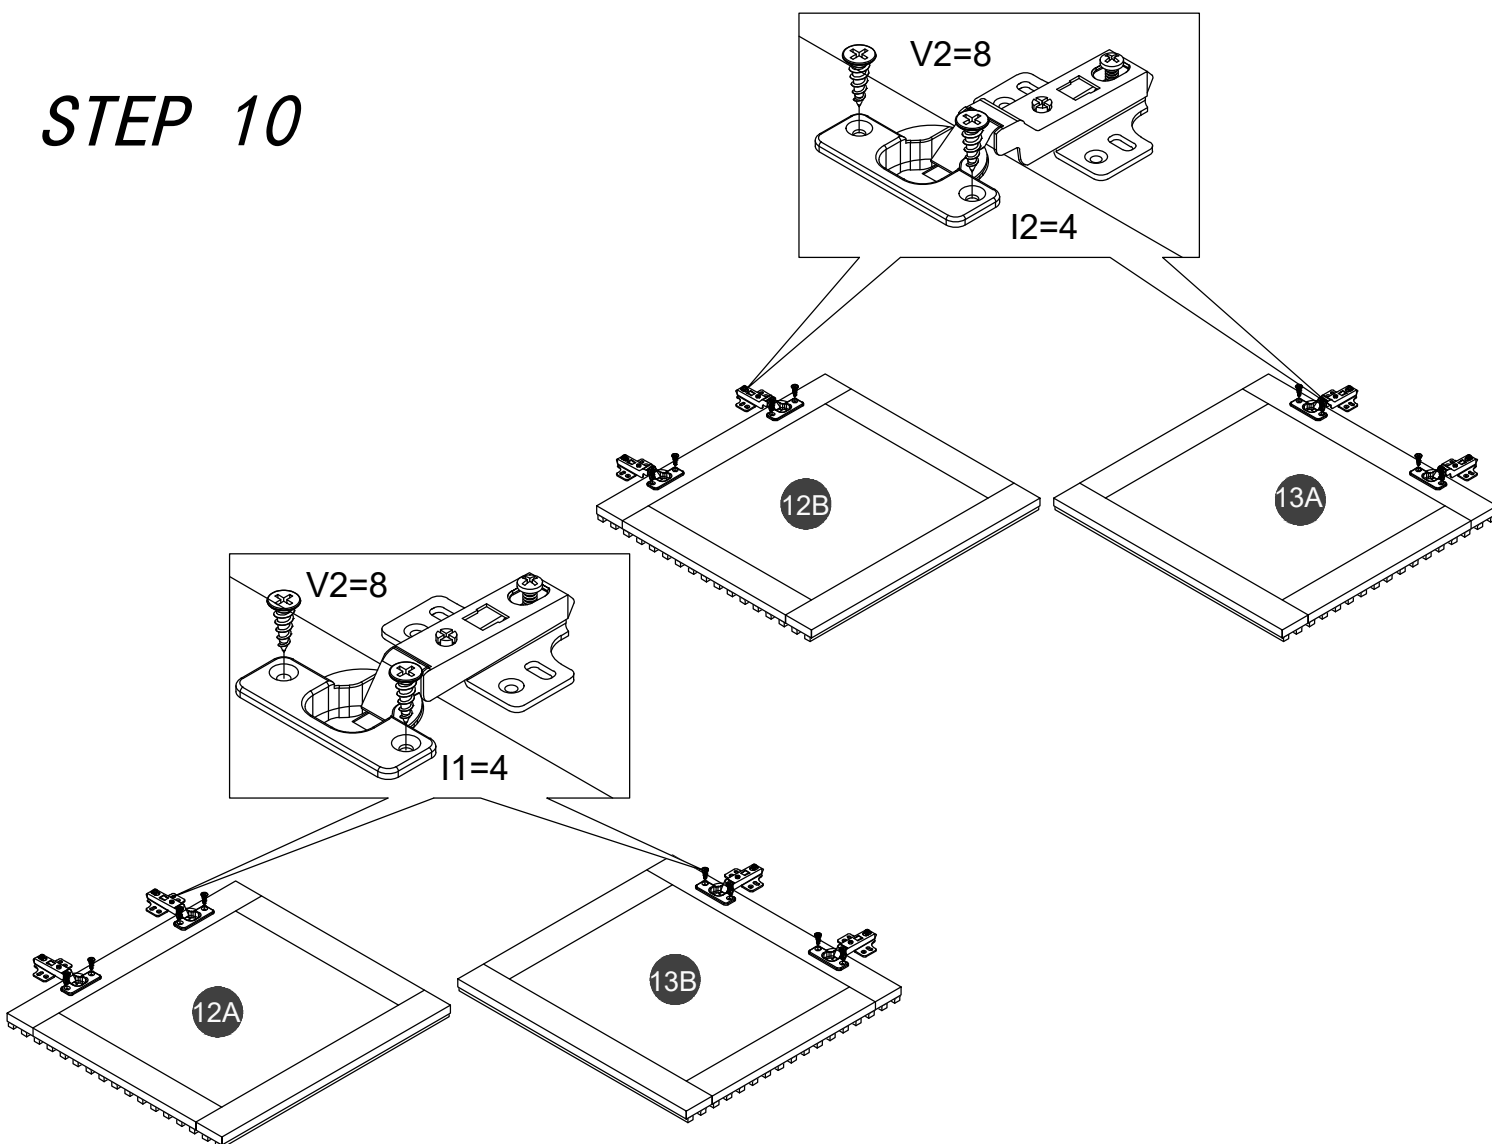


STEP 11

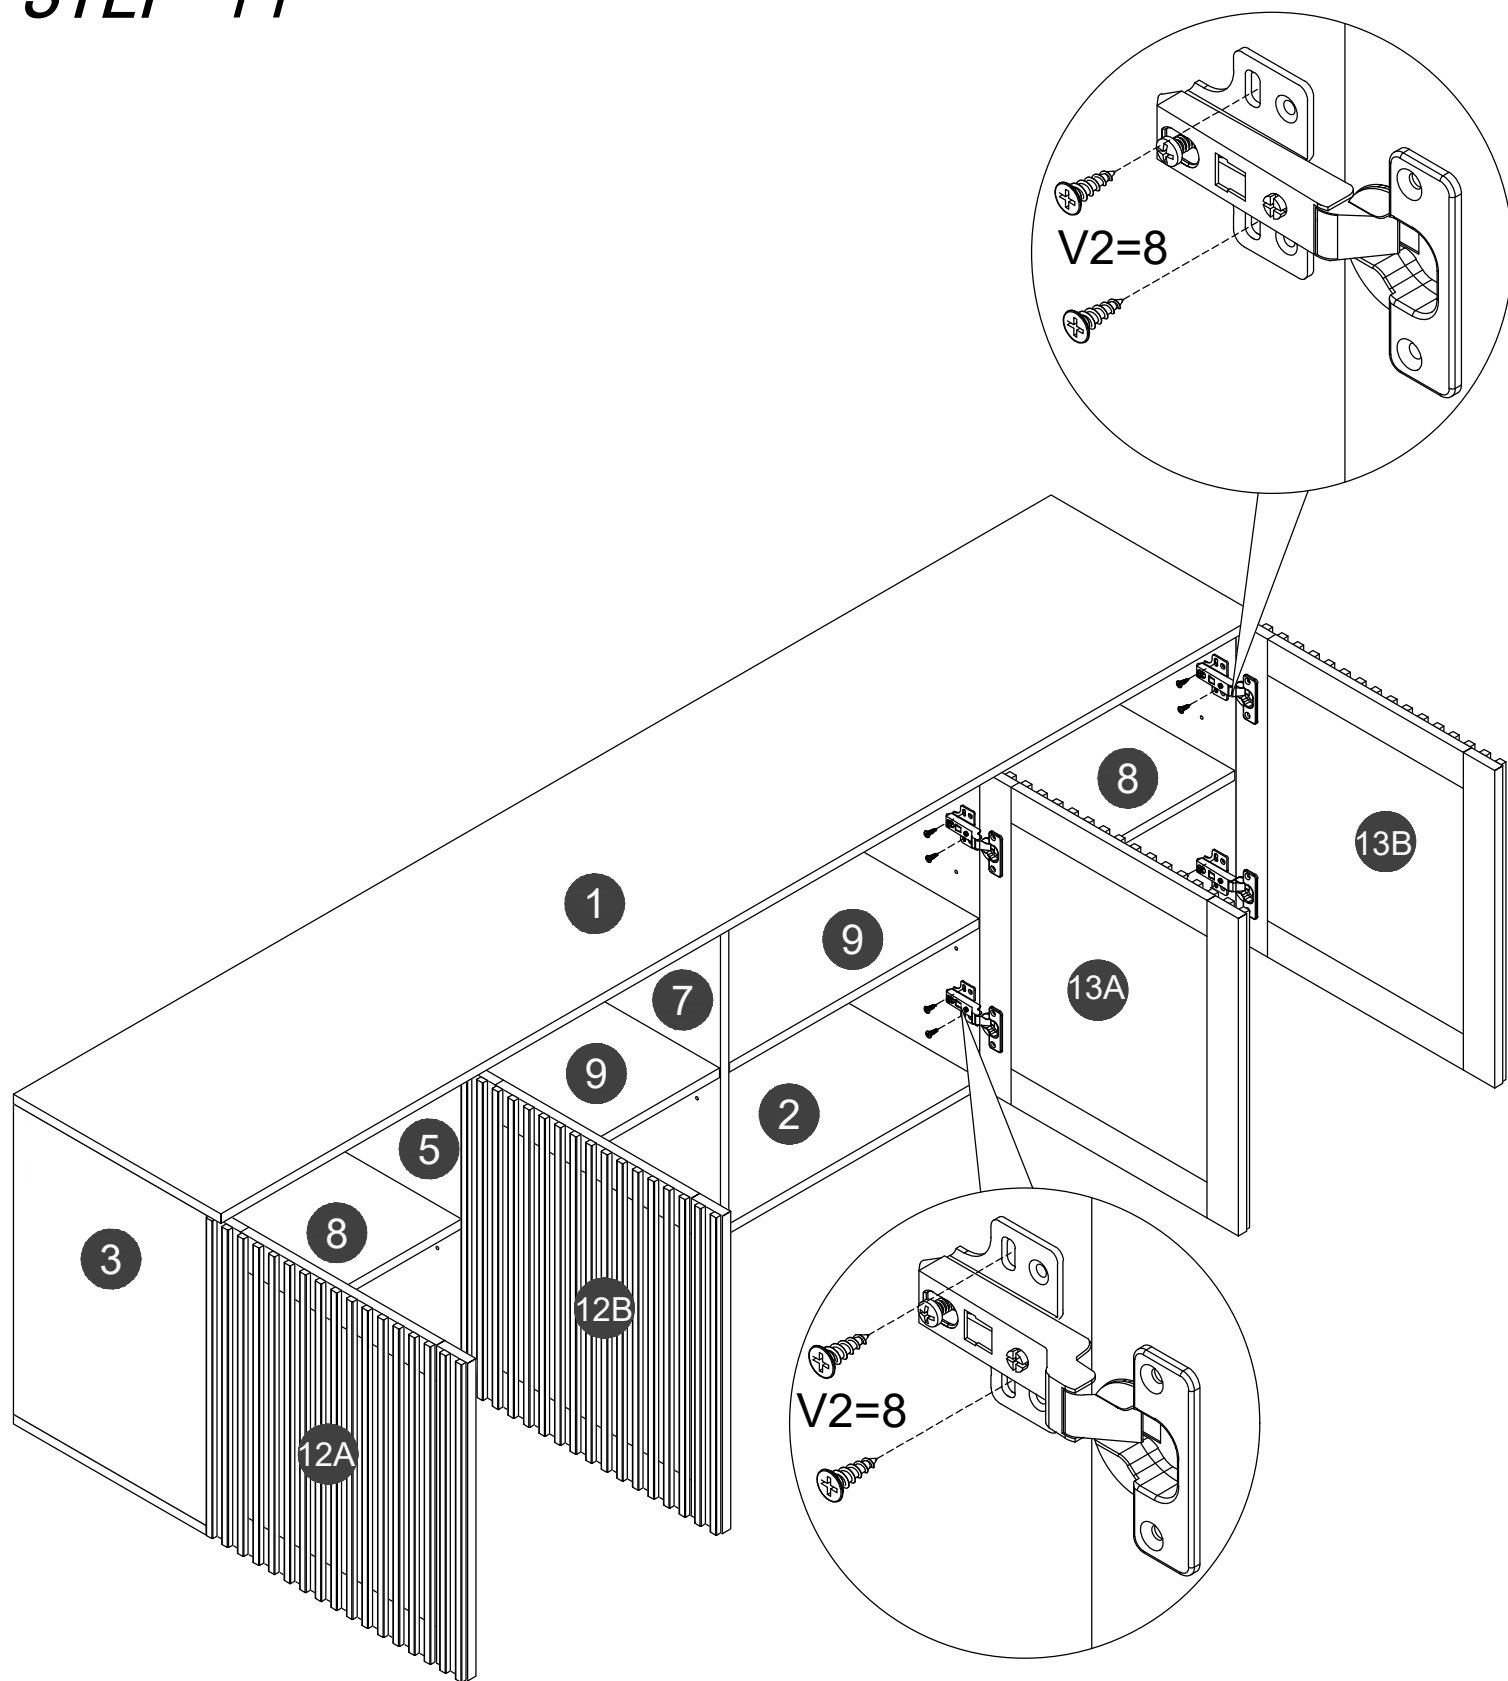


STEP 12

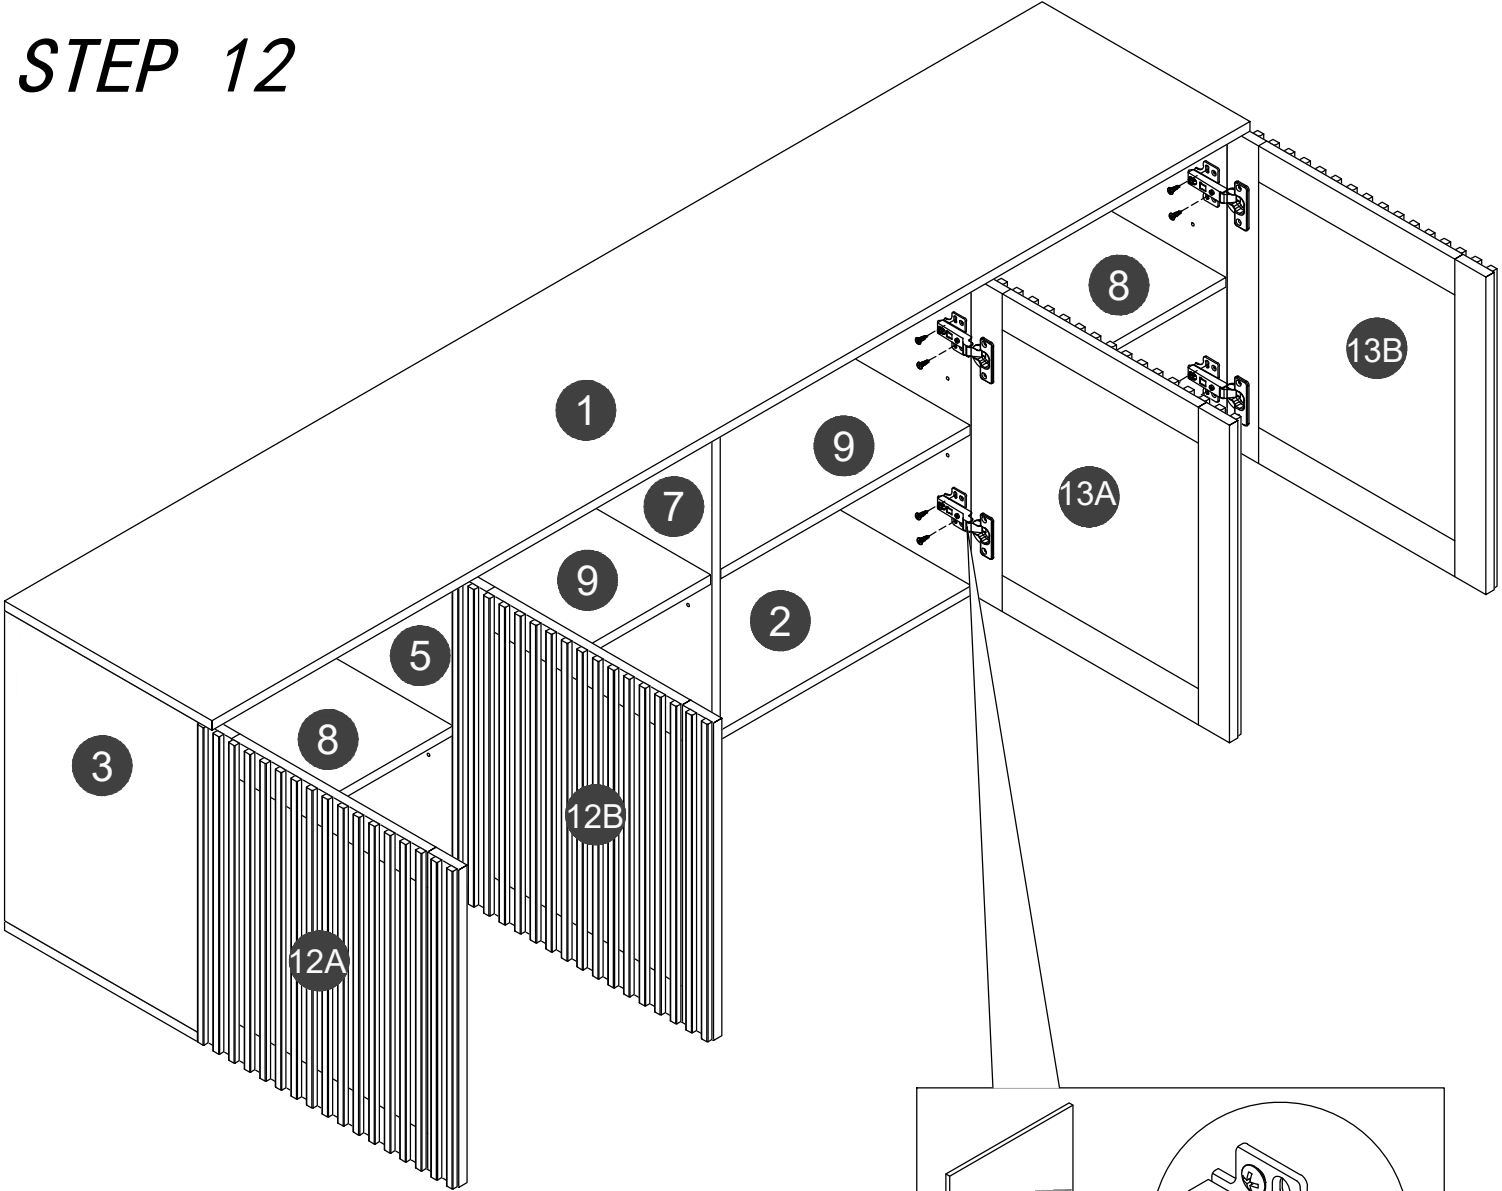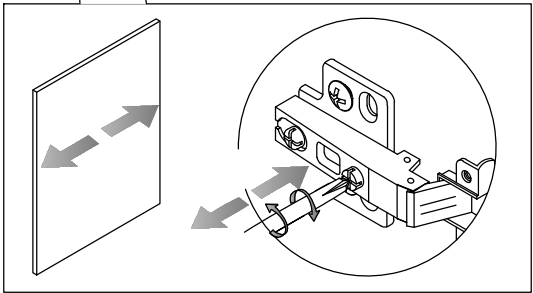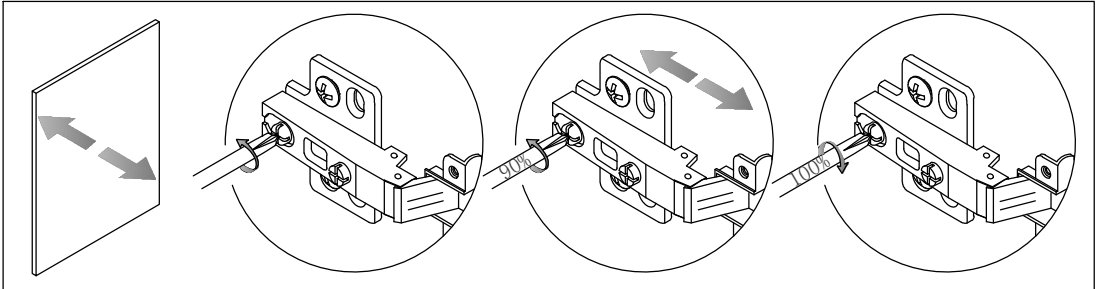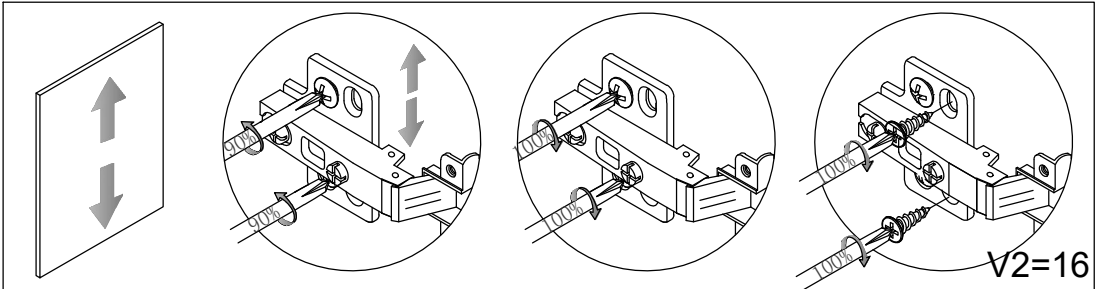


STEP 13

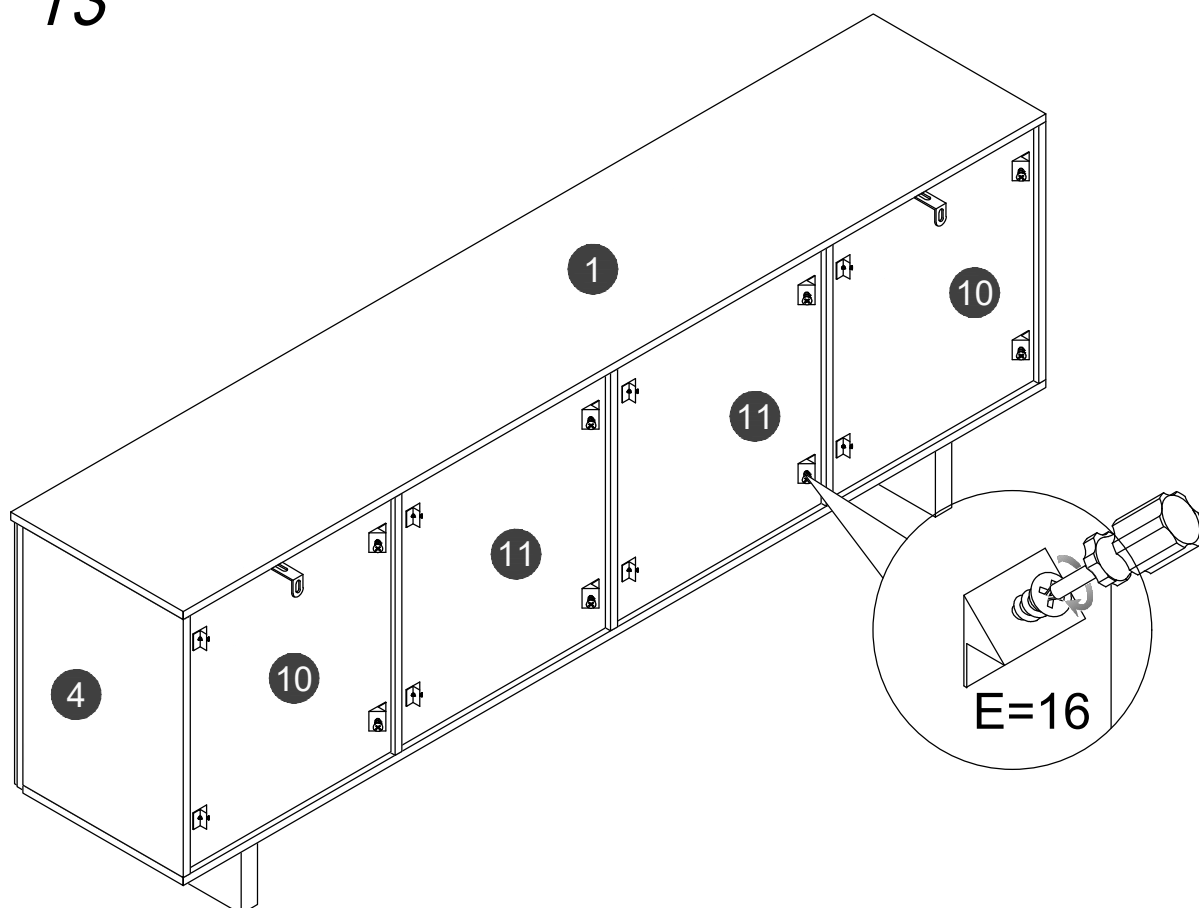

STEP 14

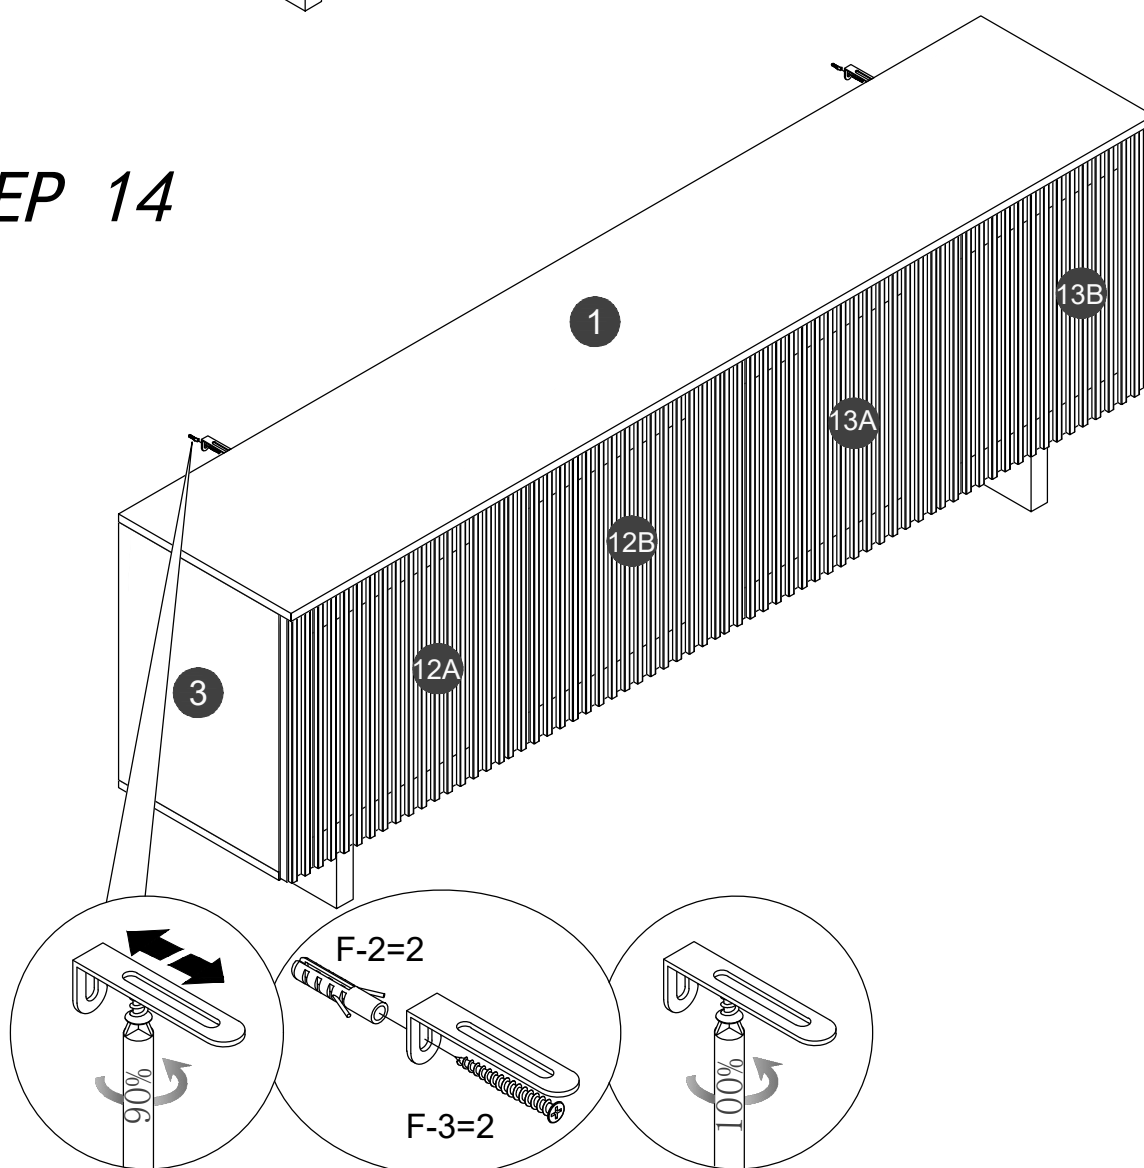

STEP 15

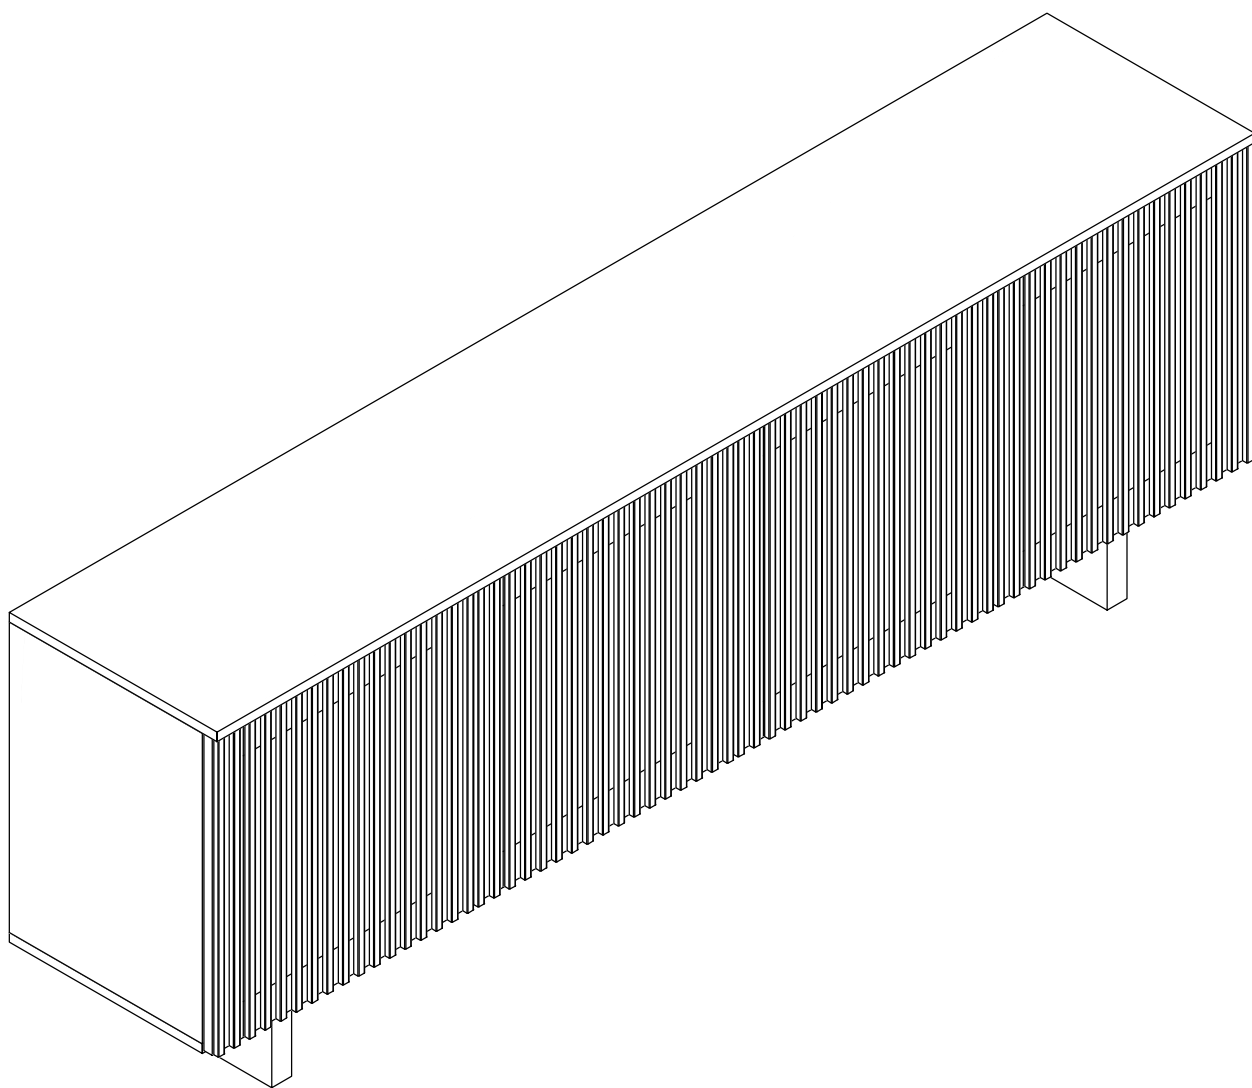

Finish