

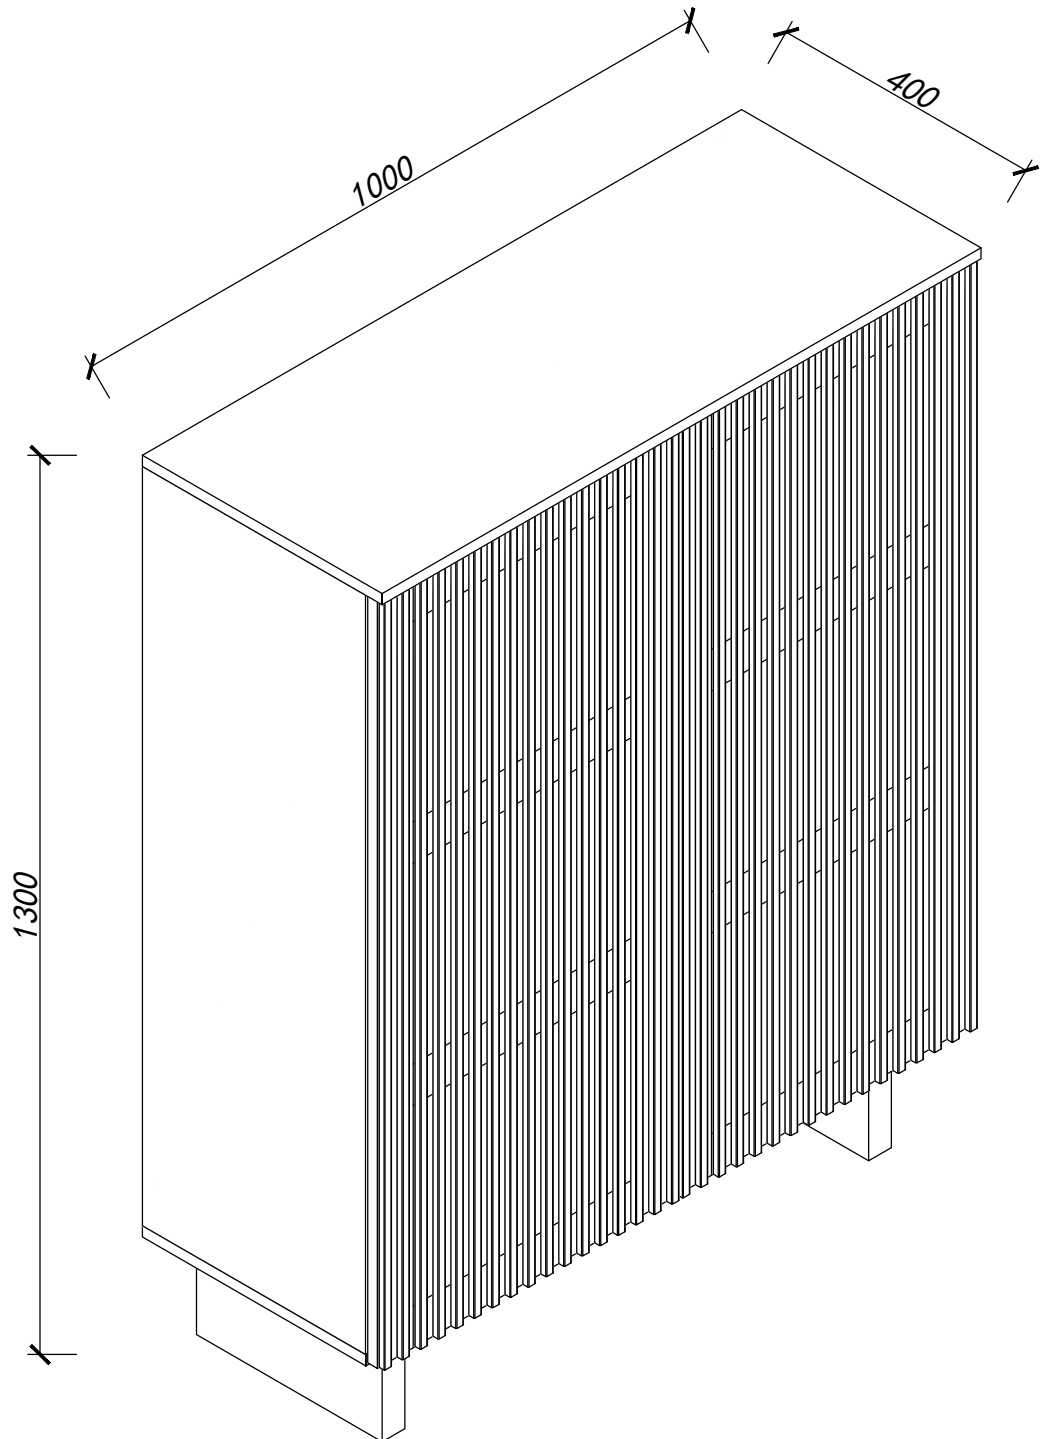
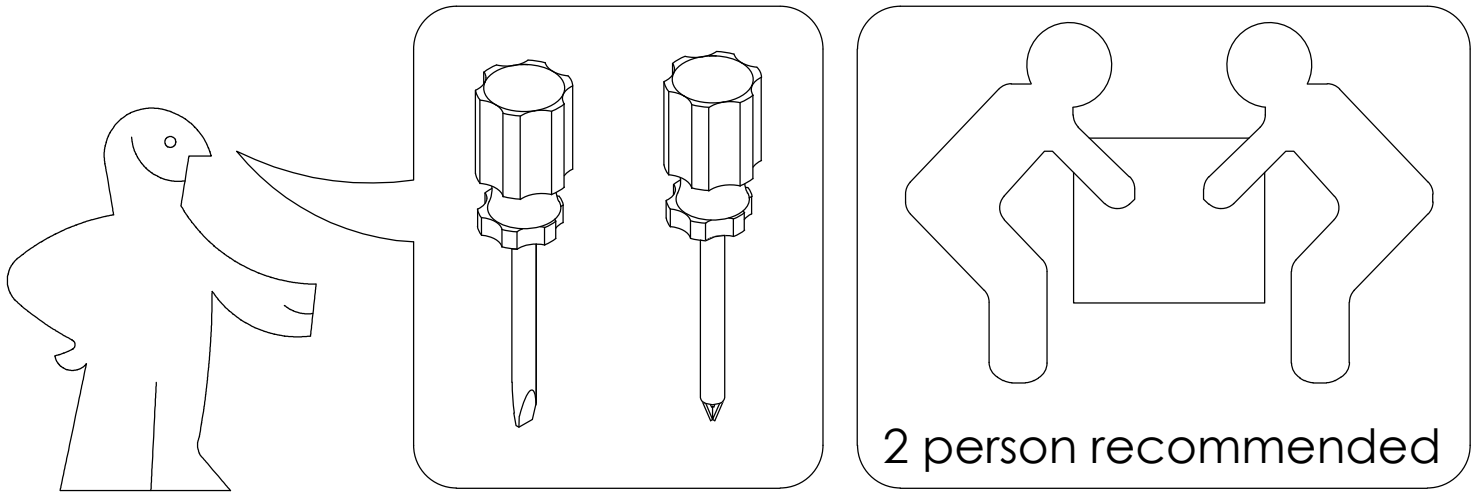
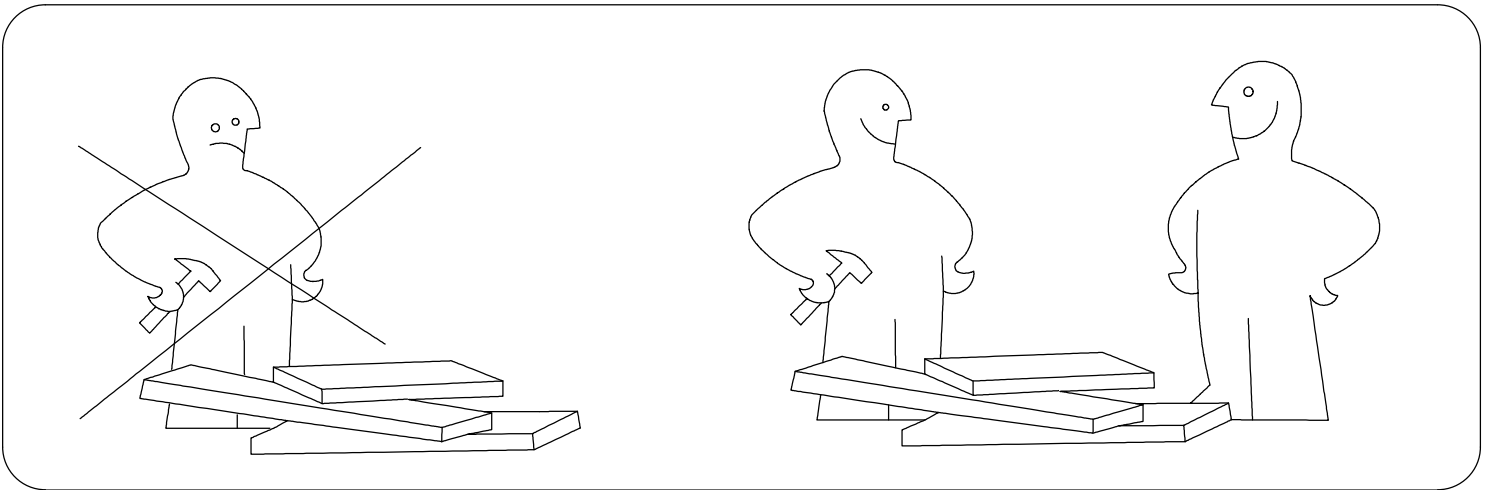


sømcasa

Assembly Instruction

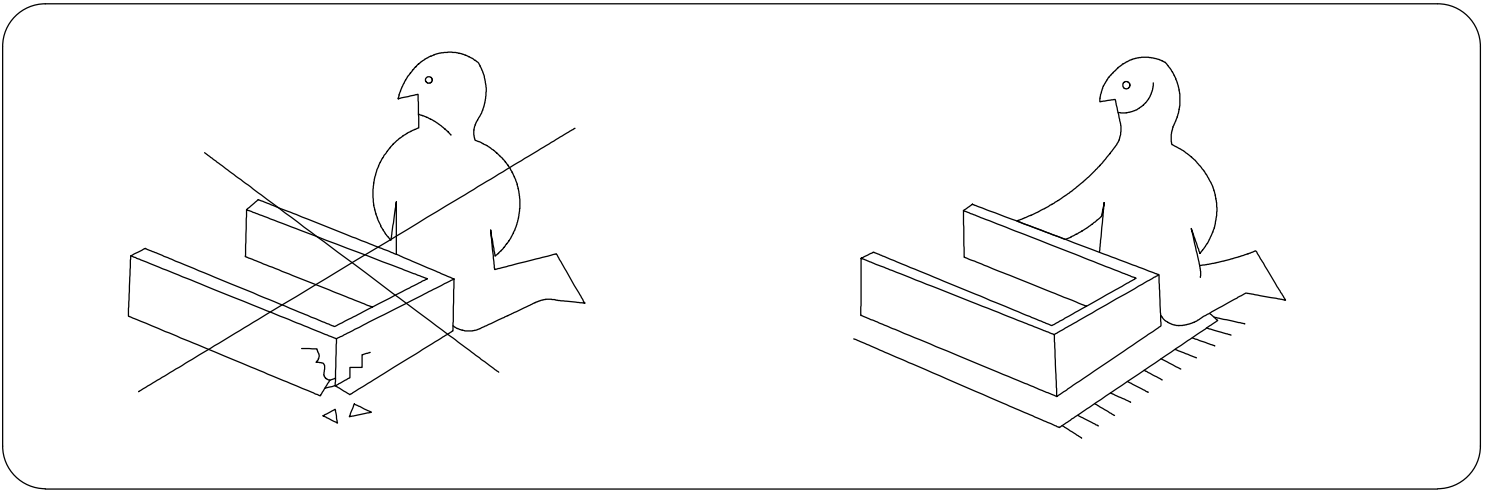

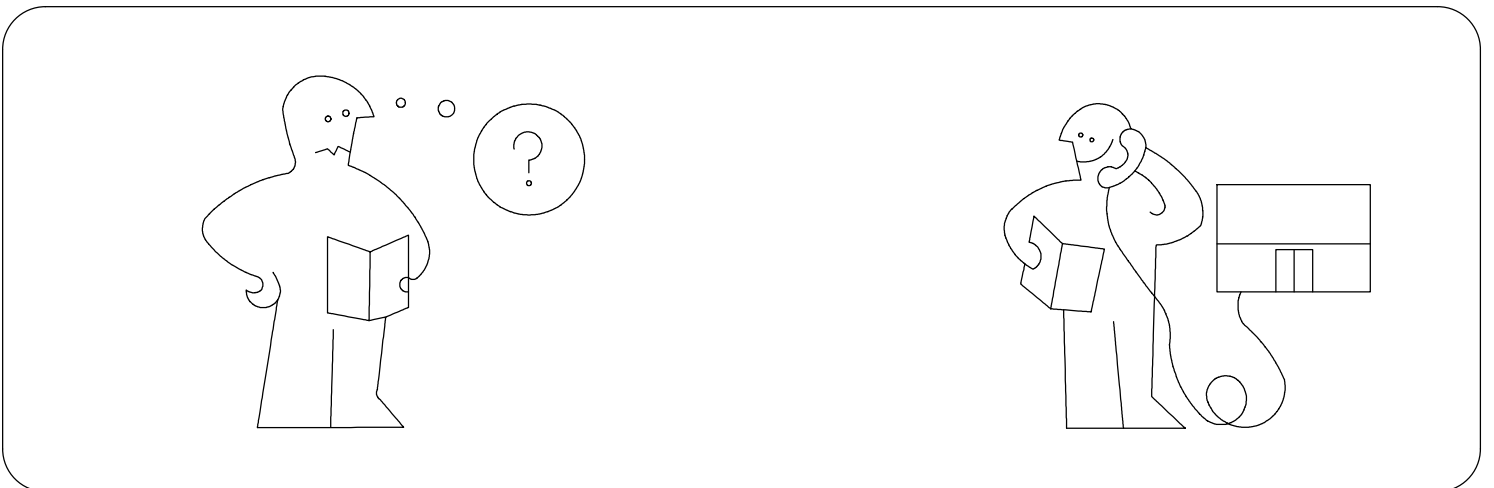


Fittings




M6*40

A=16



Φ8*30

B=20

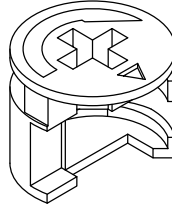


Φ15*12

C=16




Φ21

D=16

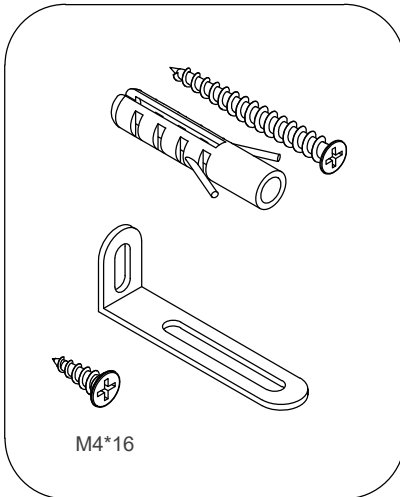


M4*16


F=2

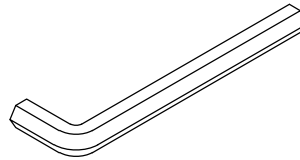


H =1

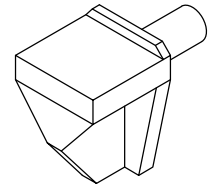


L=16

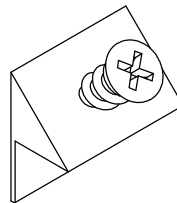

E=16

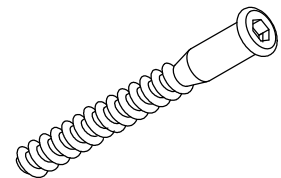

Q=6

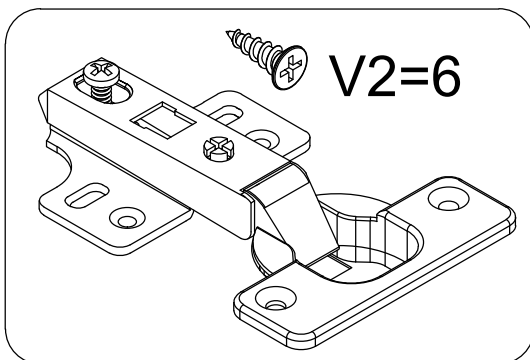


V2=6


I1=6

Panel No	Panel Sizes	Quantity
1	1000*400*16	1
2	1000*373*16	1
3	1098*372*16	1
4	1098*372*16	1
5	1098*372*16	1
6	472*350*16	4


Panel No	Panel Sizes	Quantity
7	1108*485*5	2
8	1110*498*25	1
9	1110*498*25	1
10	774*100*16	1
11	170*310*38	2

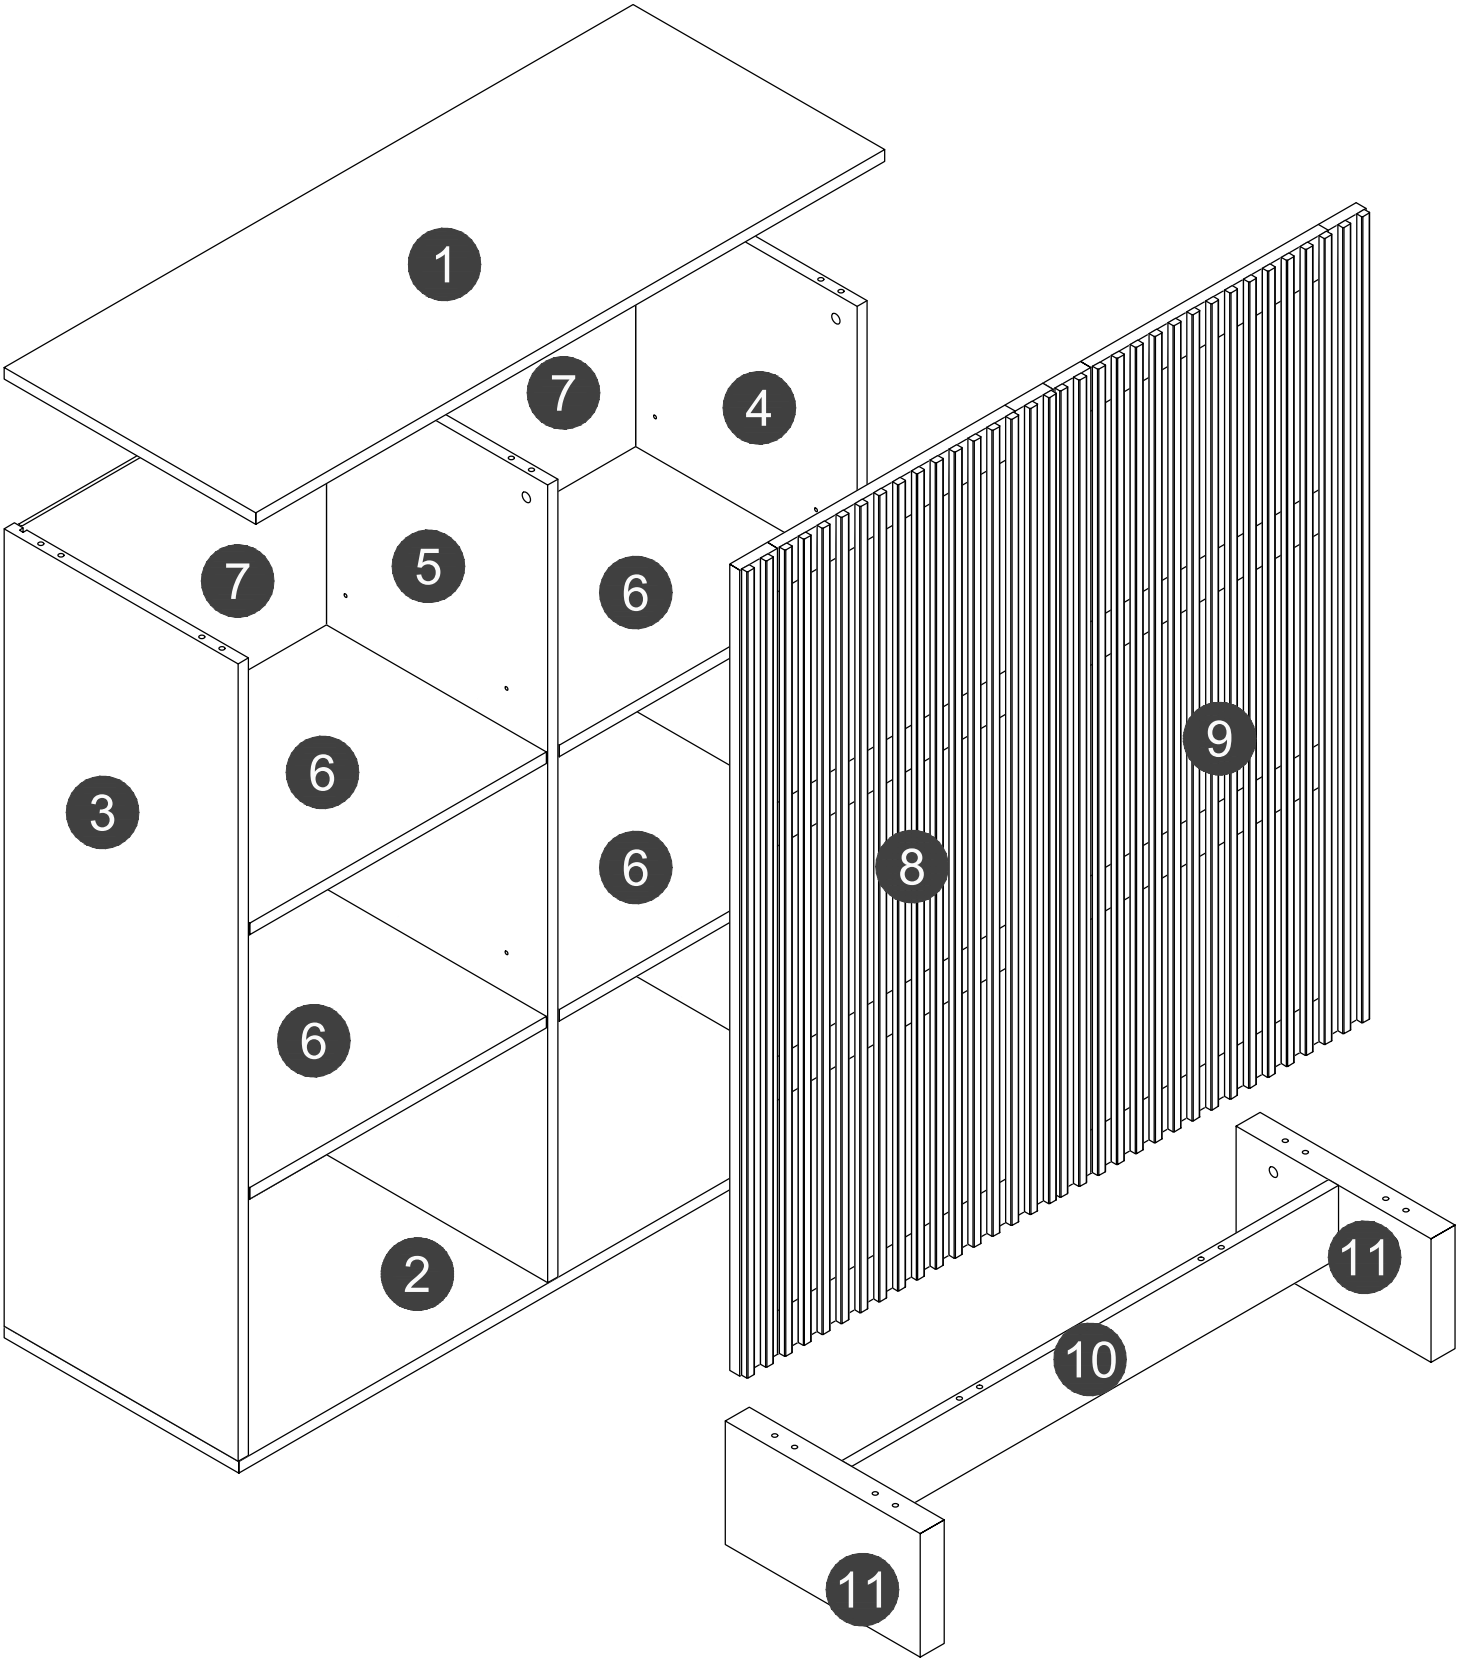


STEP 1

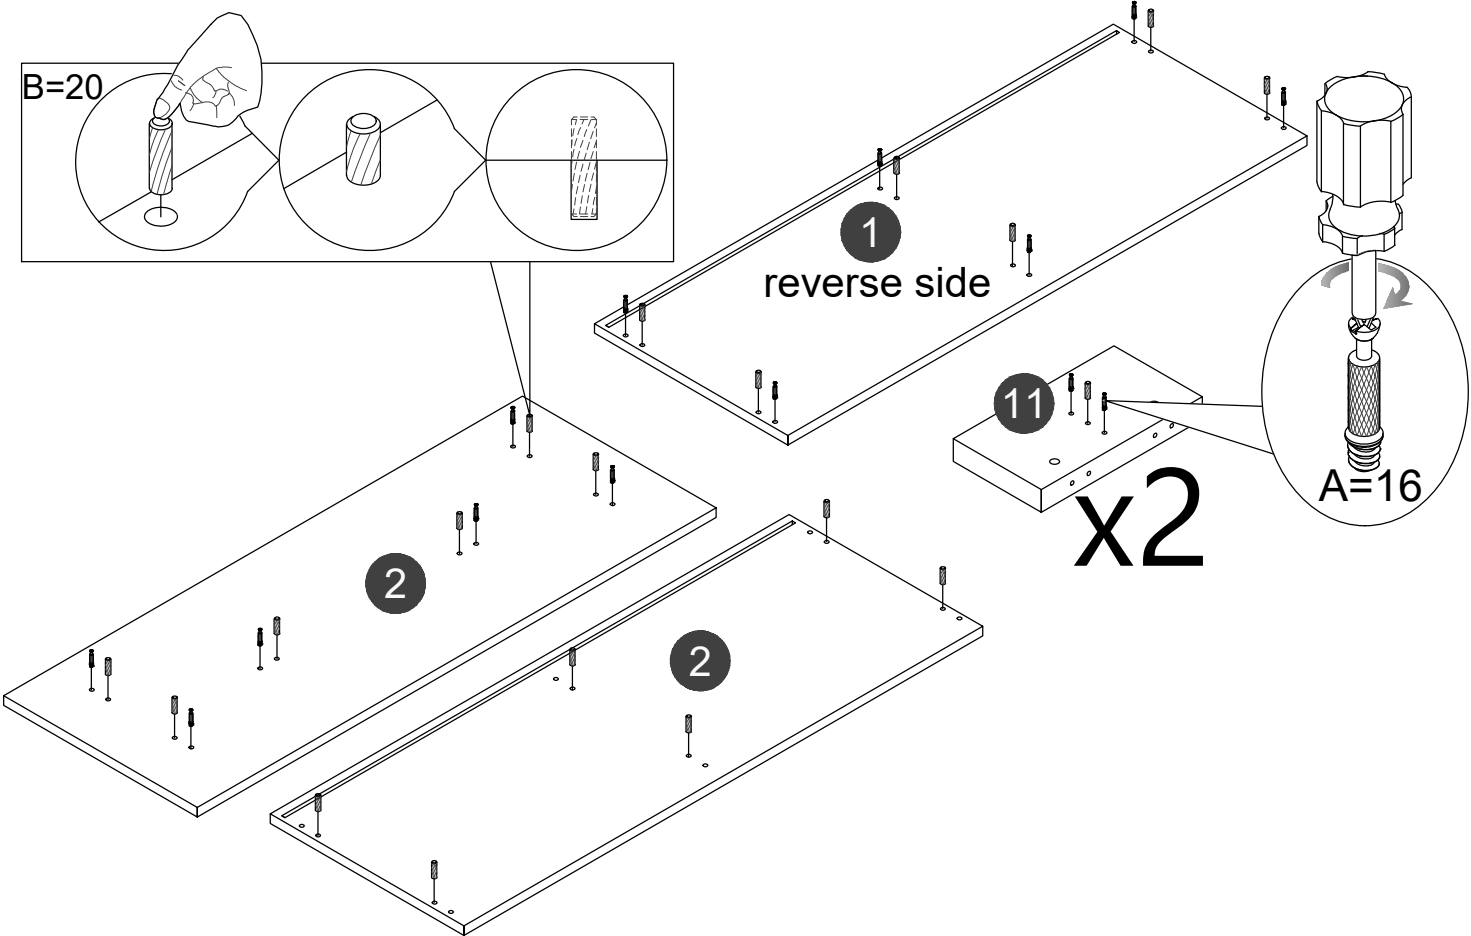


STEP 2

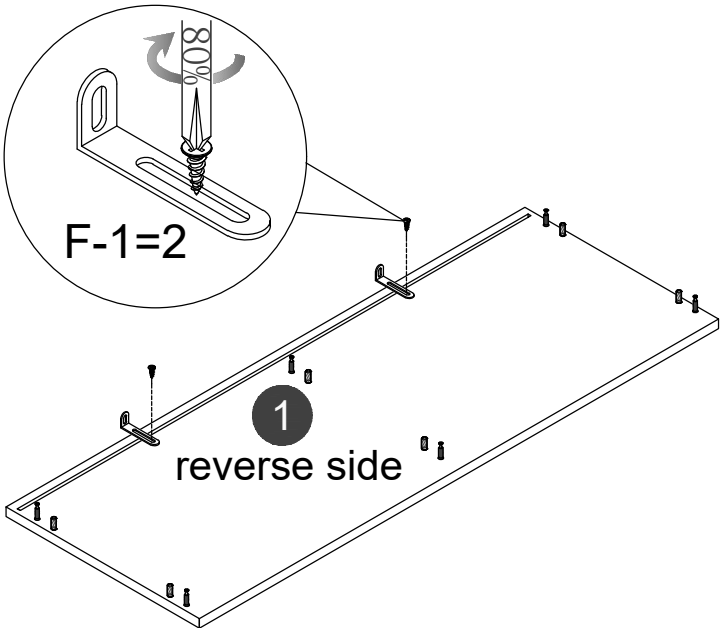


STEP 3

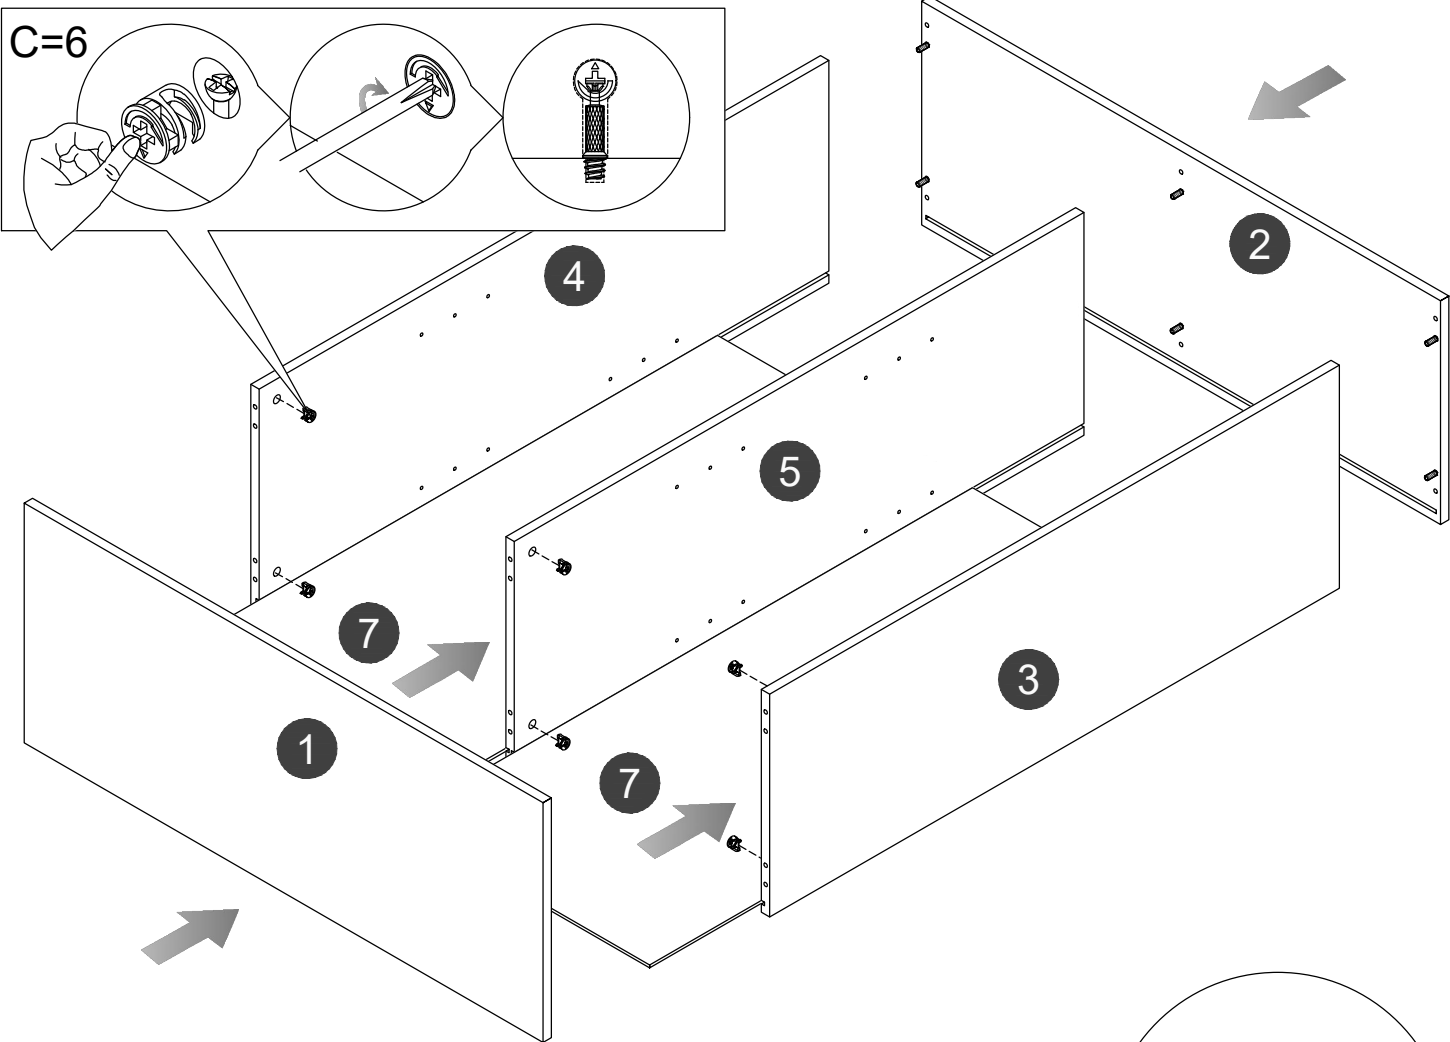


STEP 4

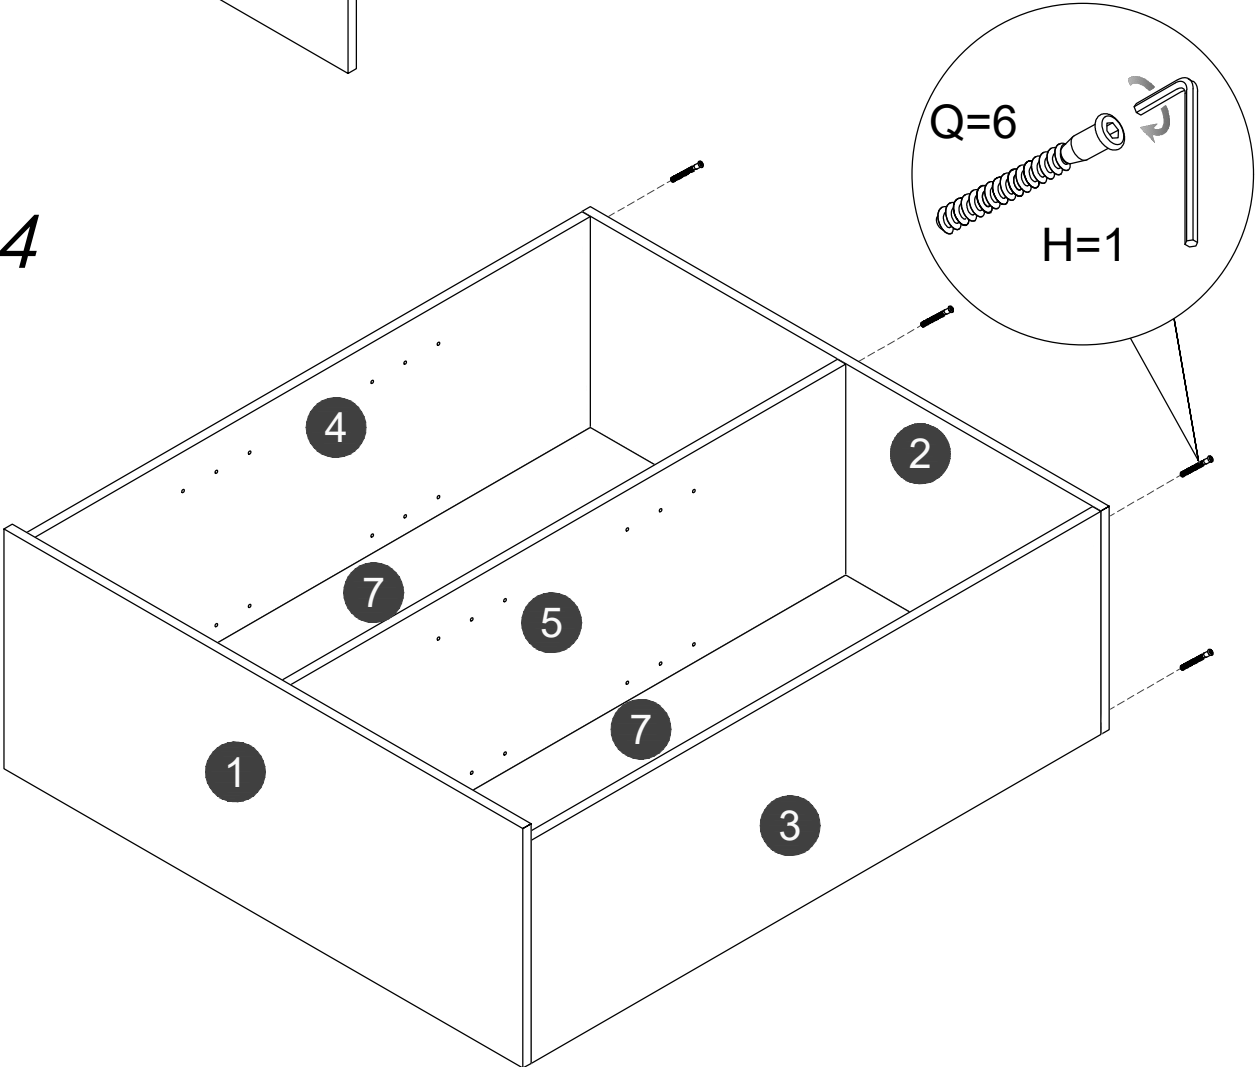


STEP 5

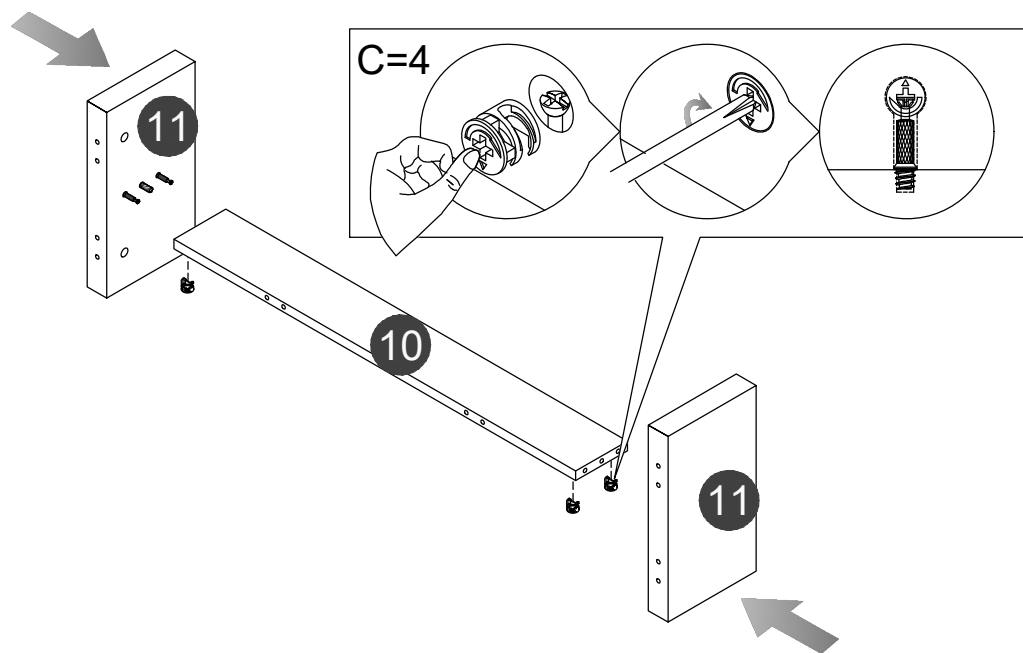


STEP 6

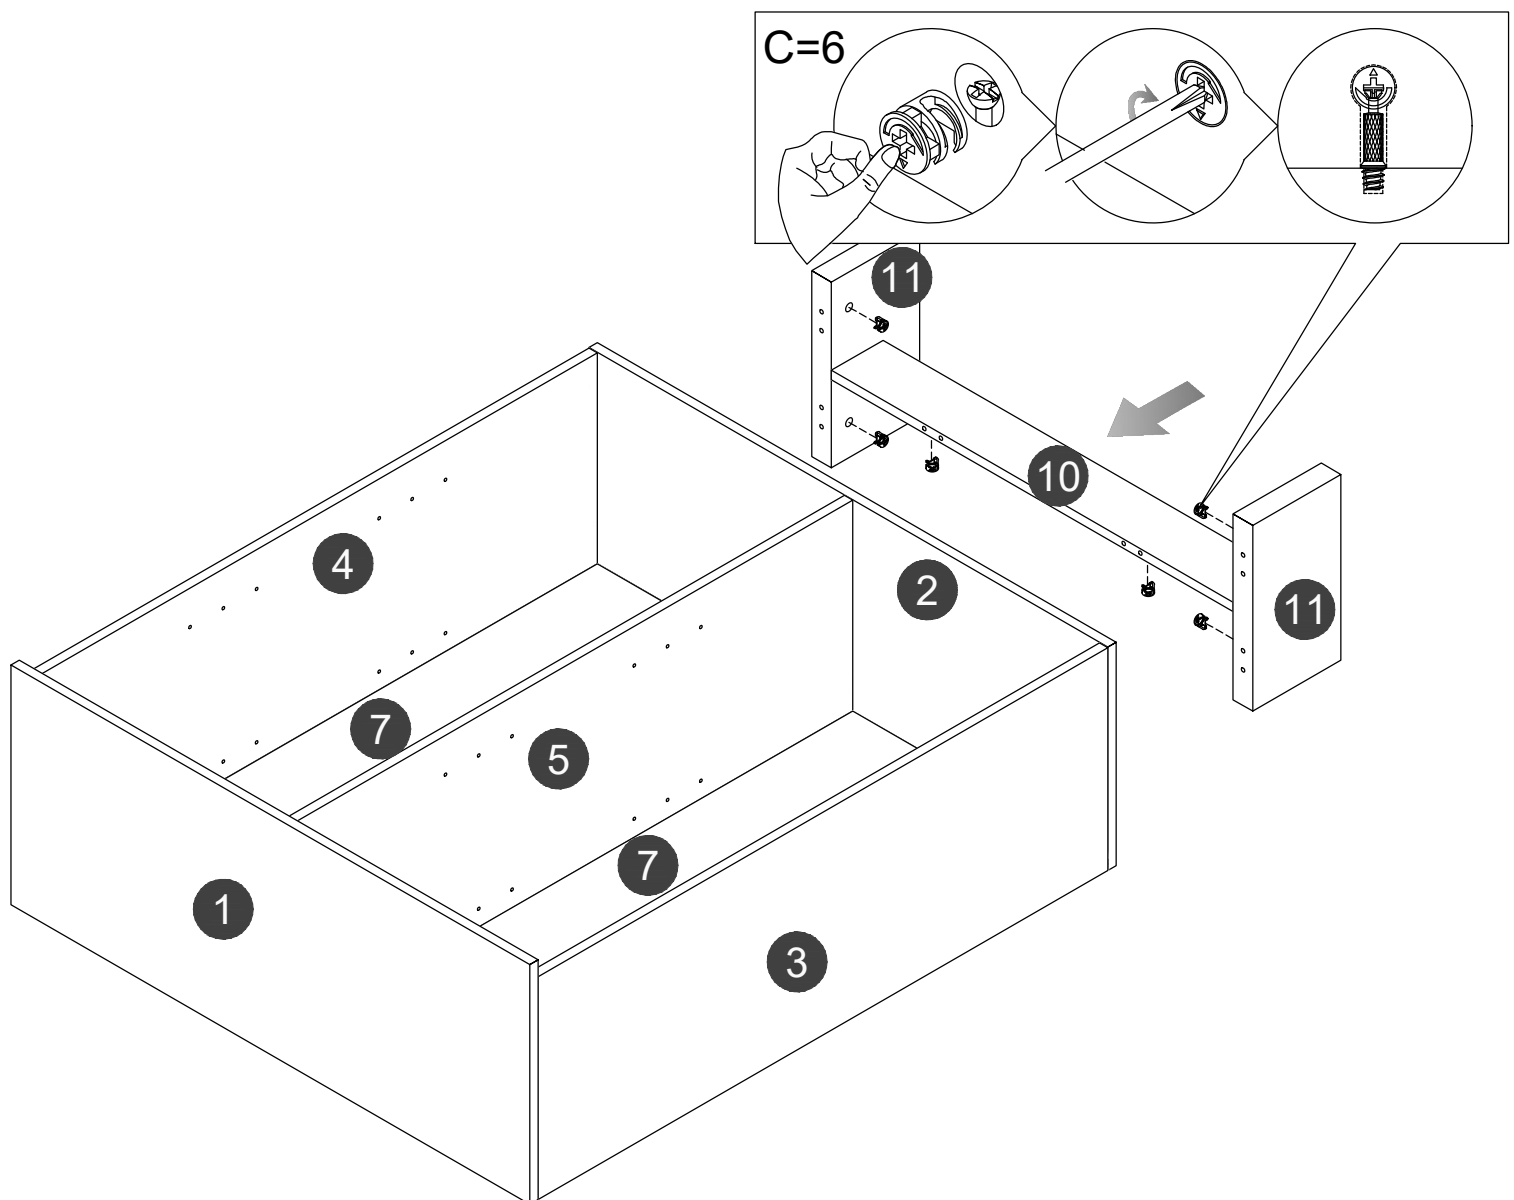


STEP 7

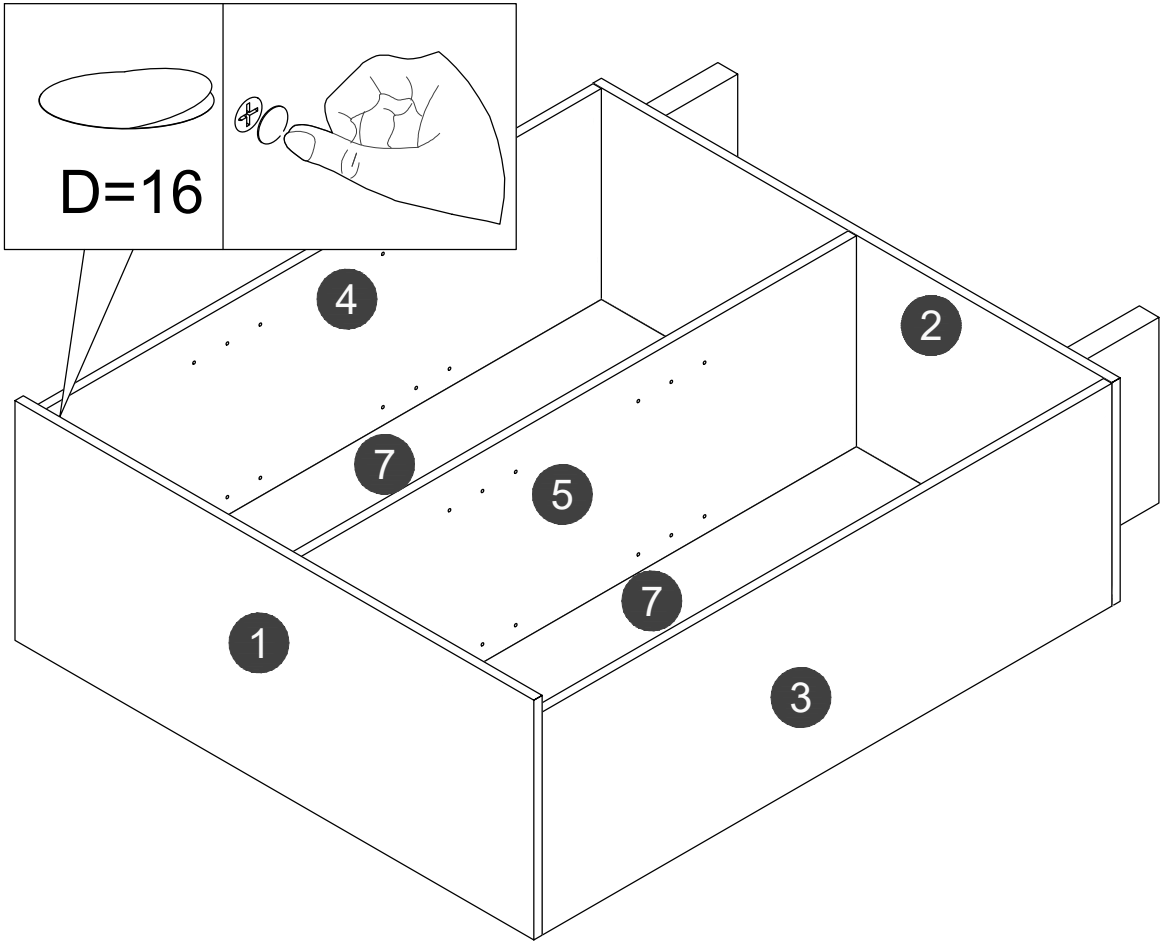


STEP 8

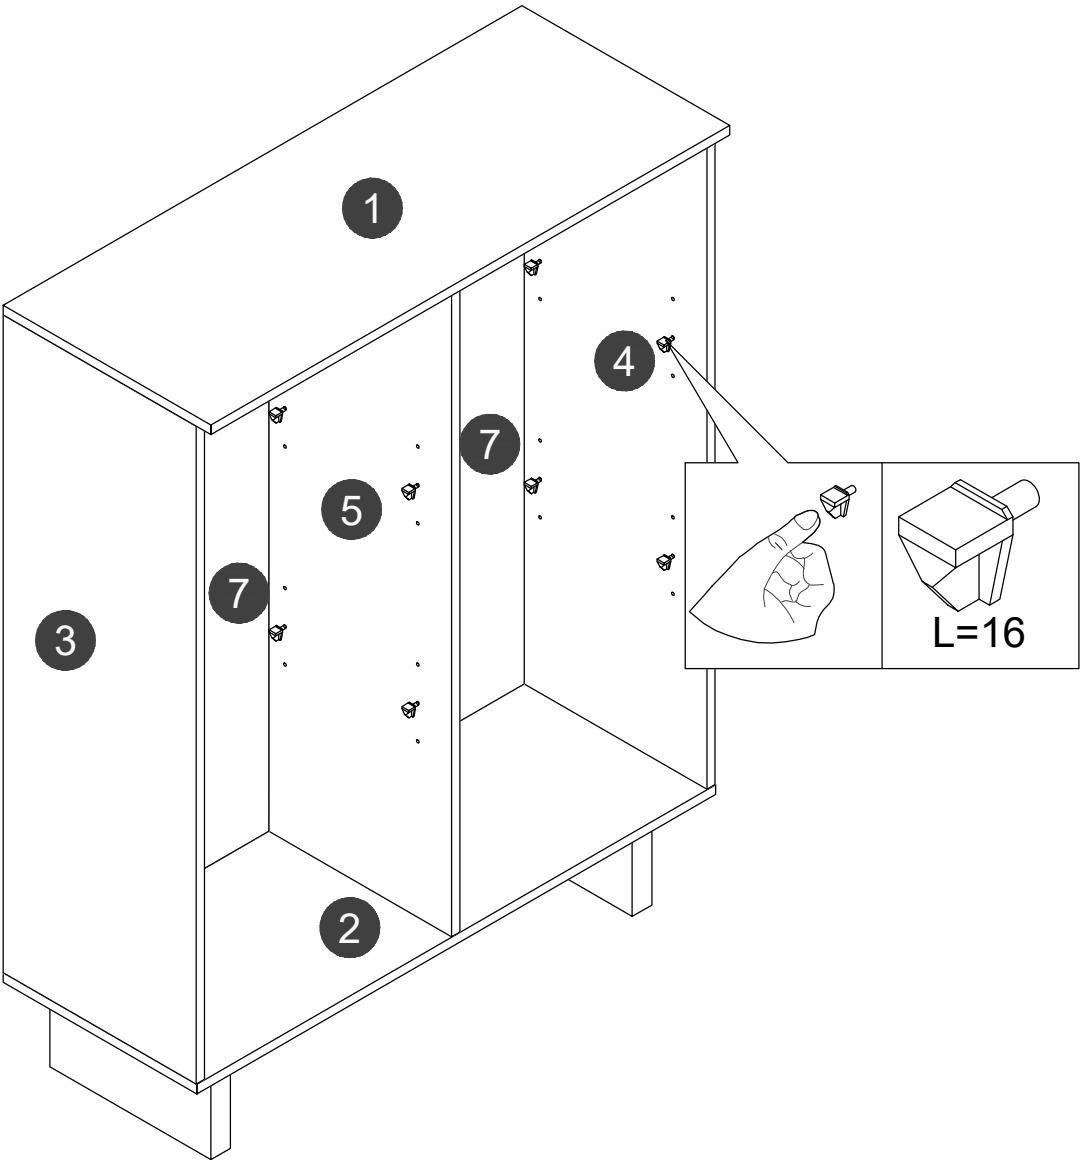


STEP 9

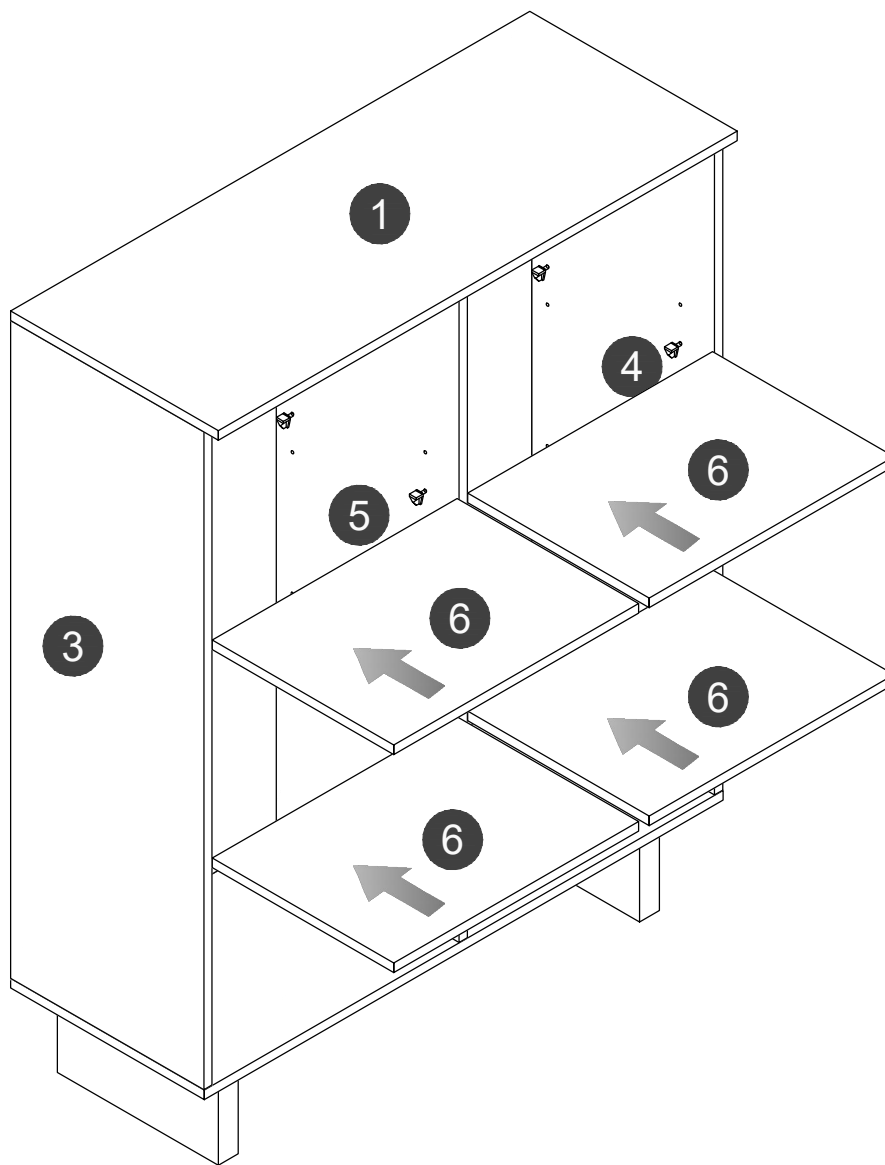


STEP 10

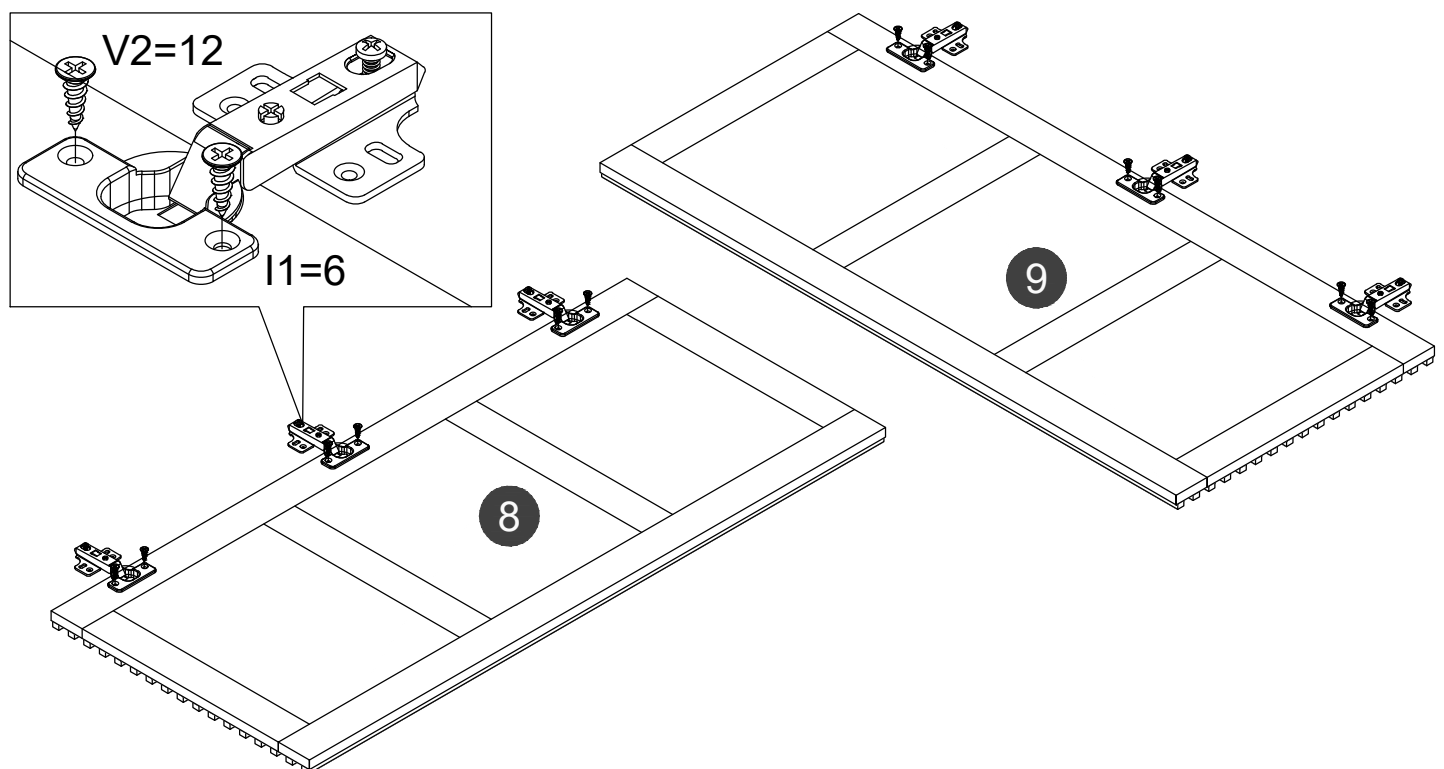


STEP 11

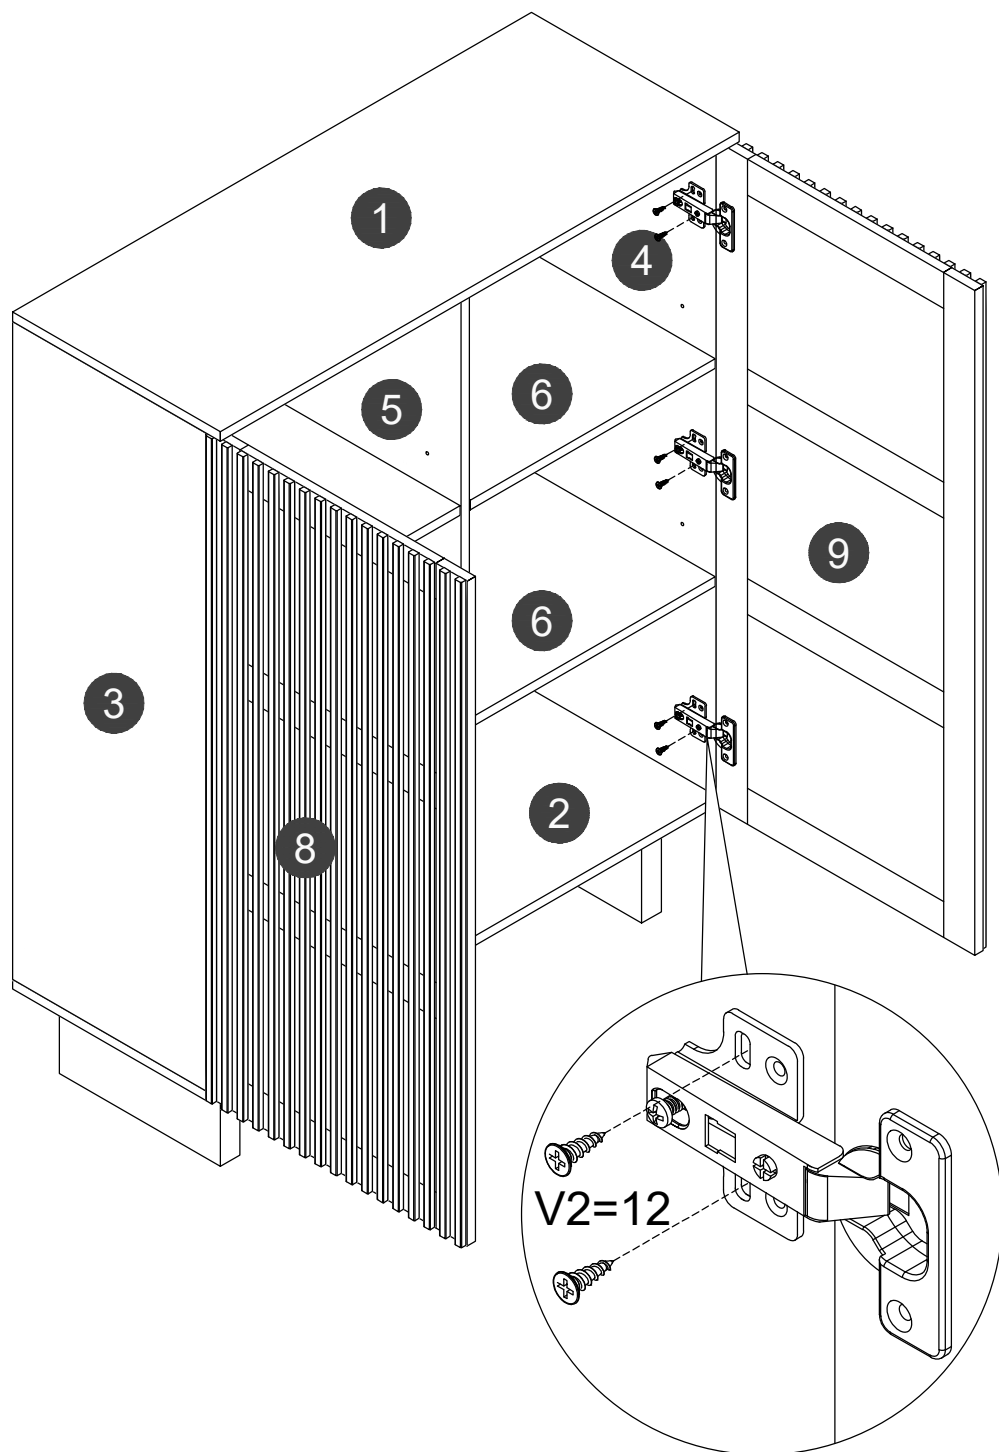


STEP 12

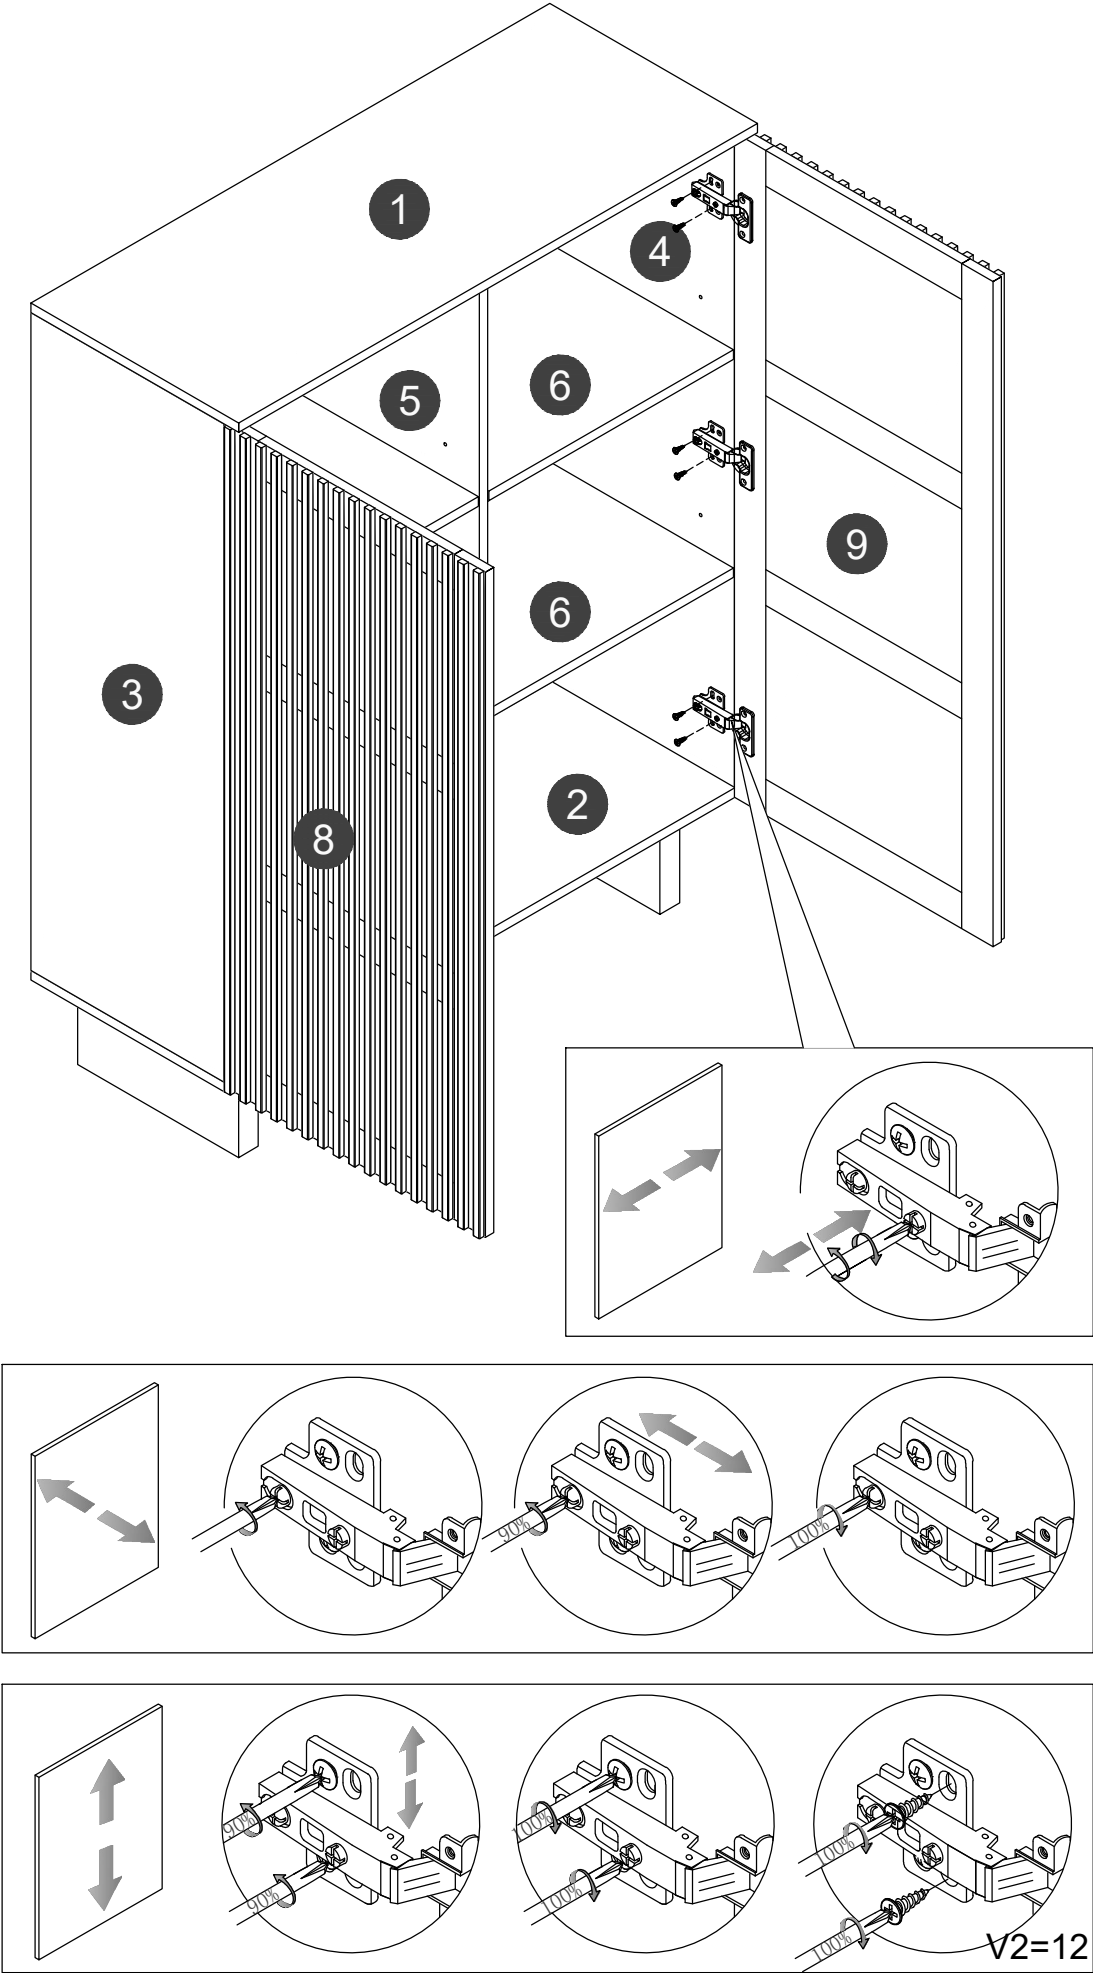


STEP 13

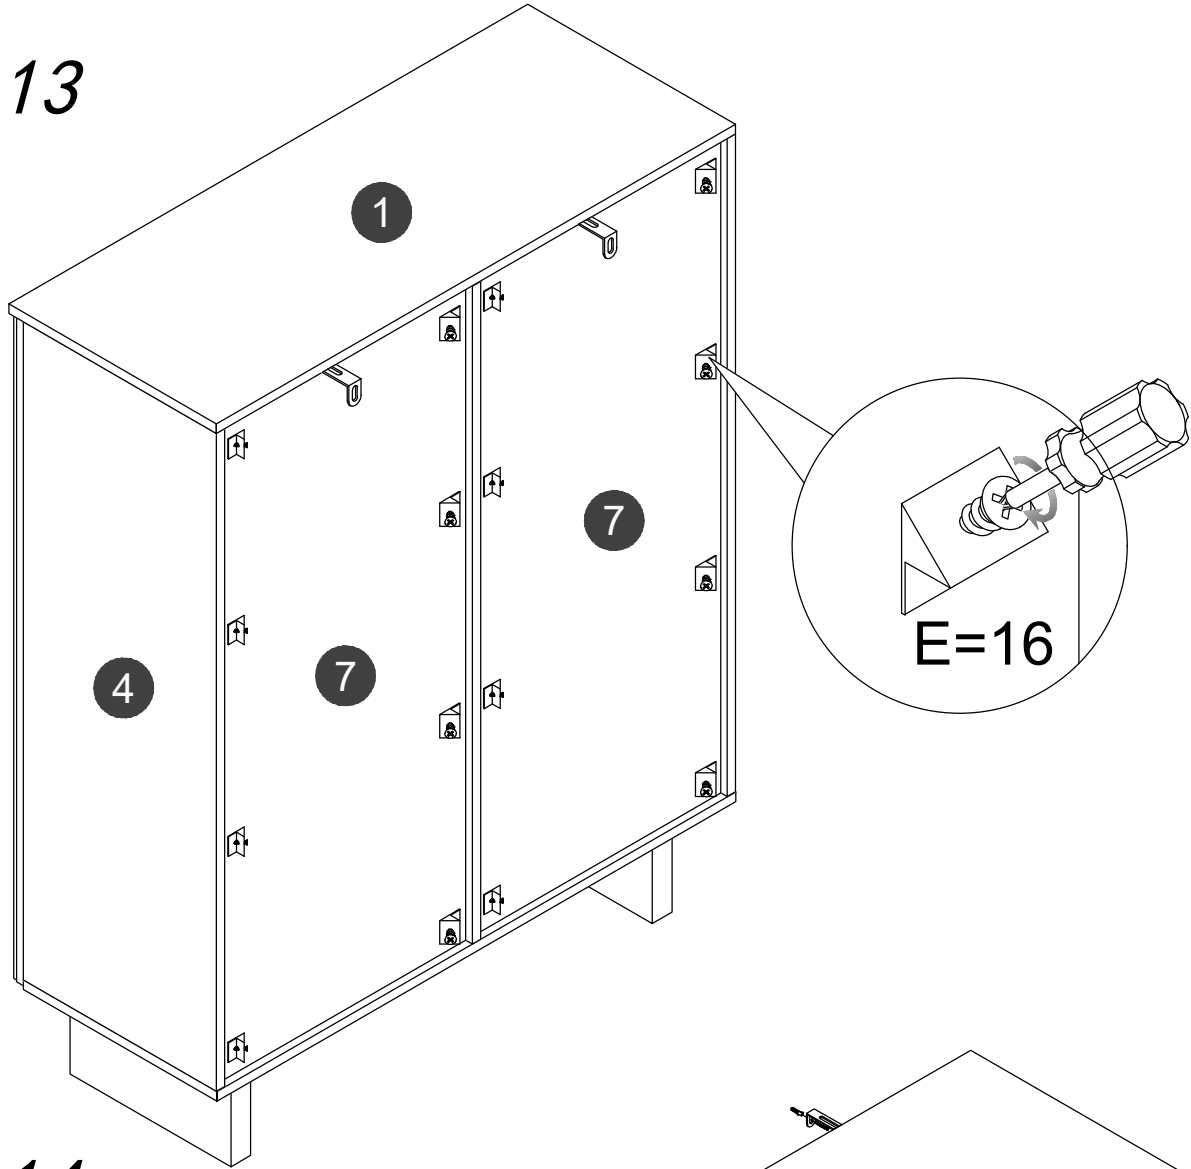

STEP 14

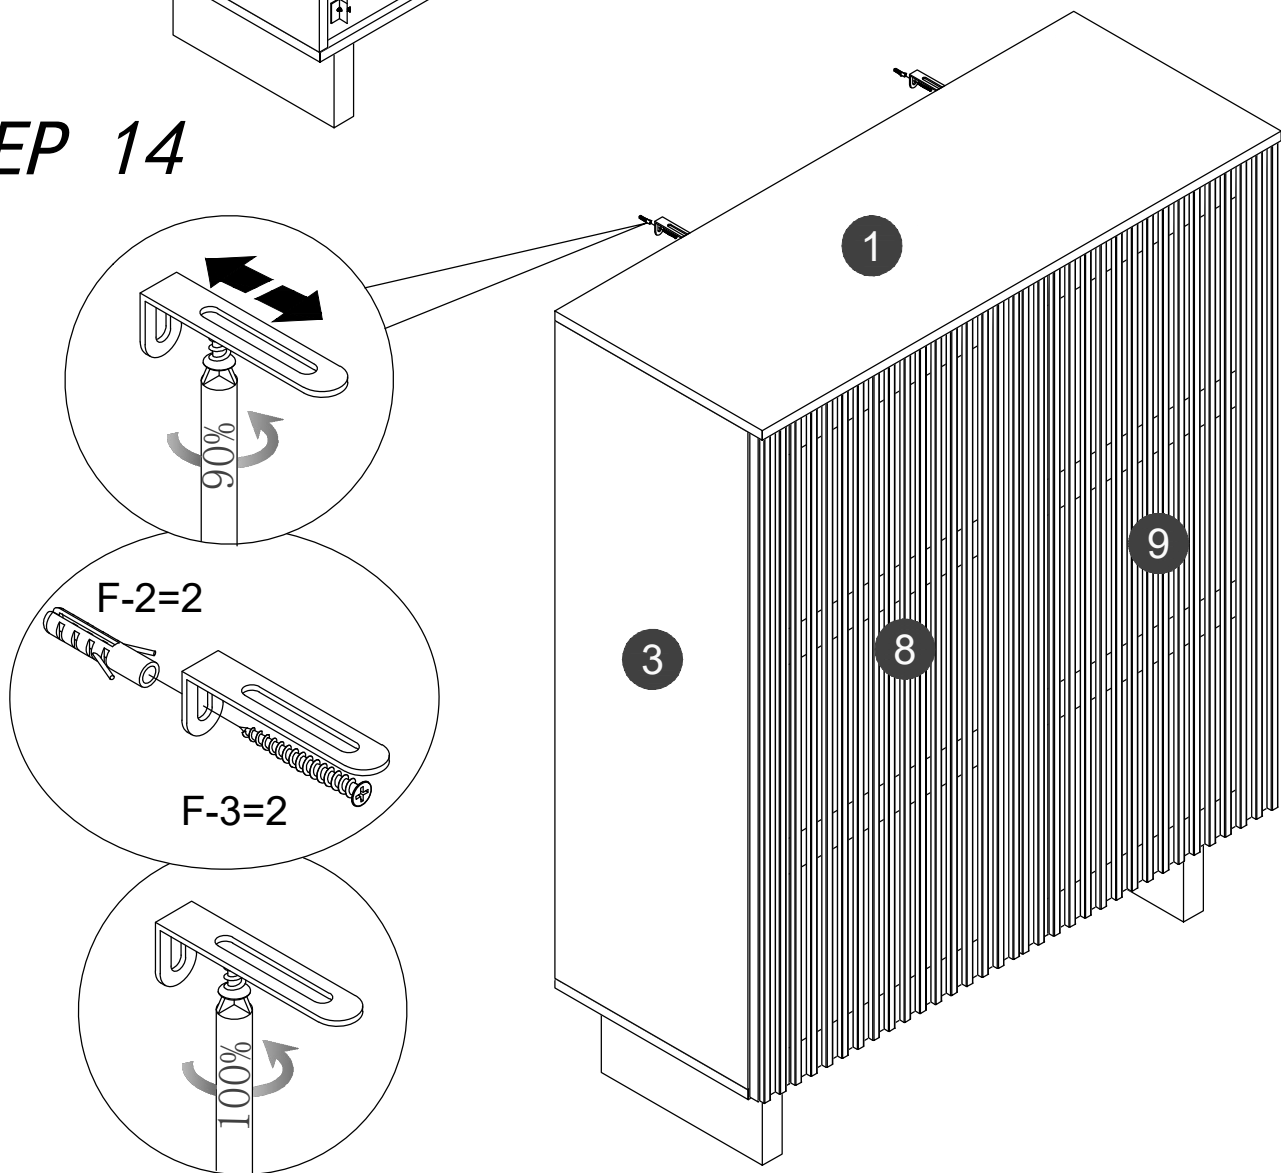

STEP 15

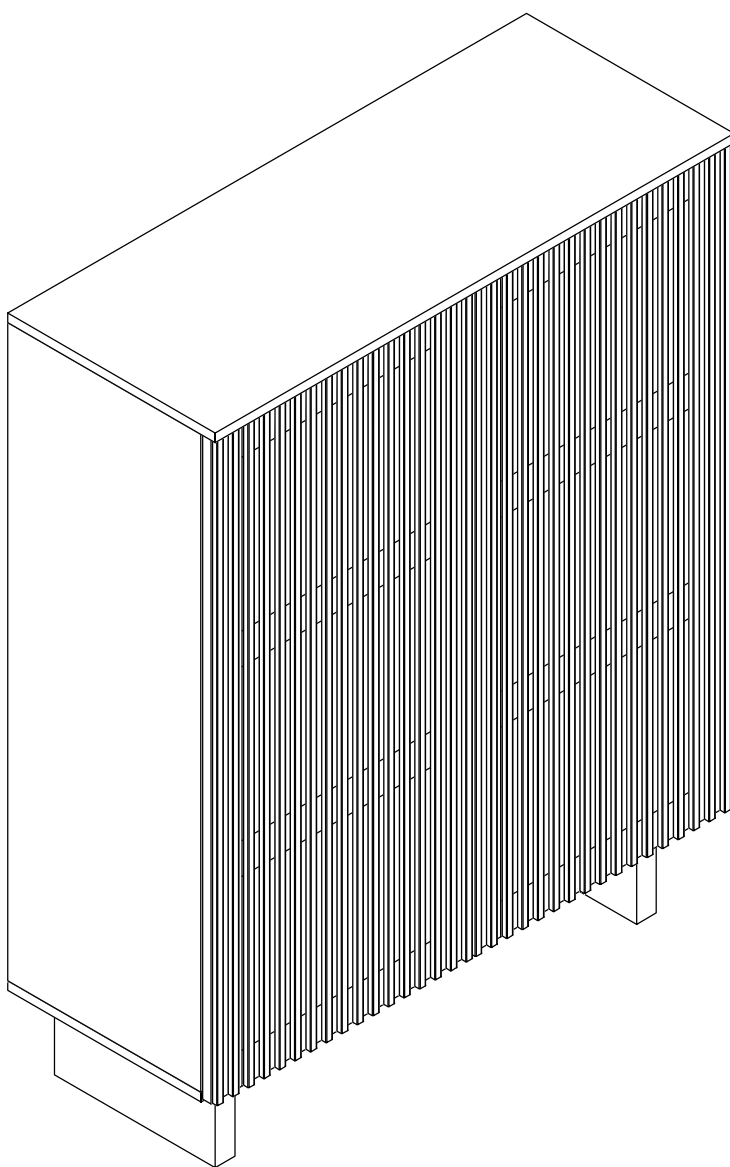

Finish