

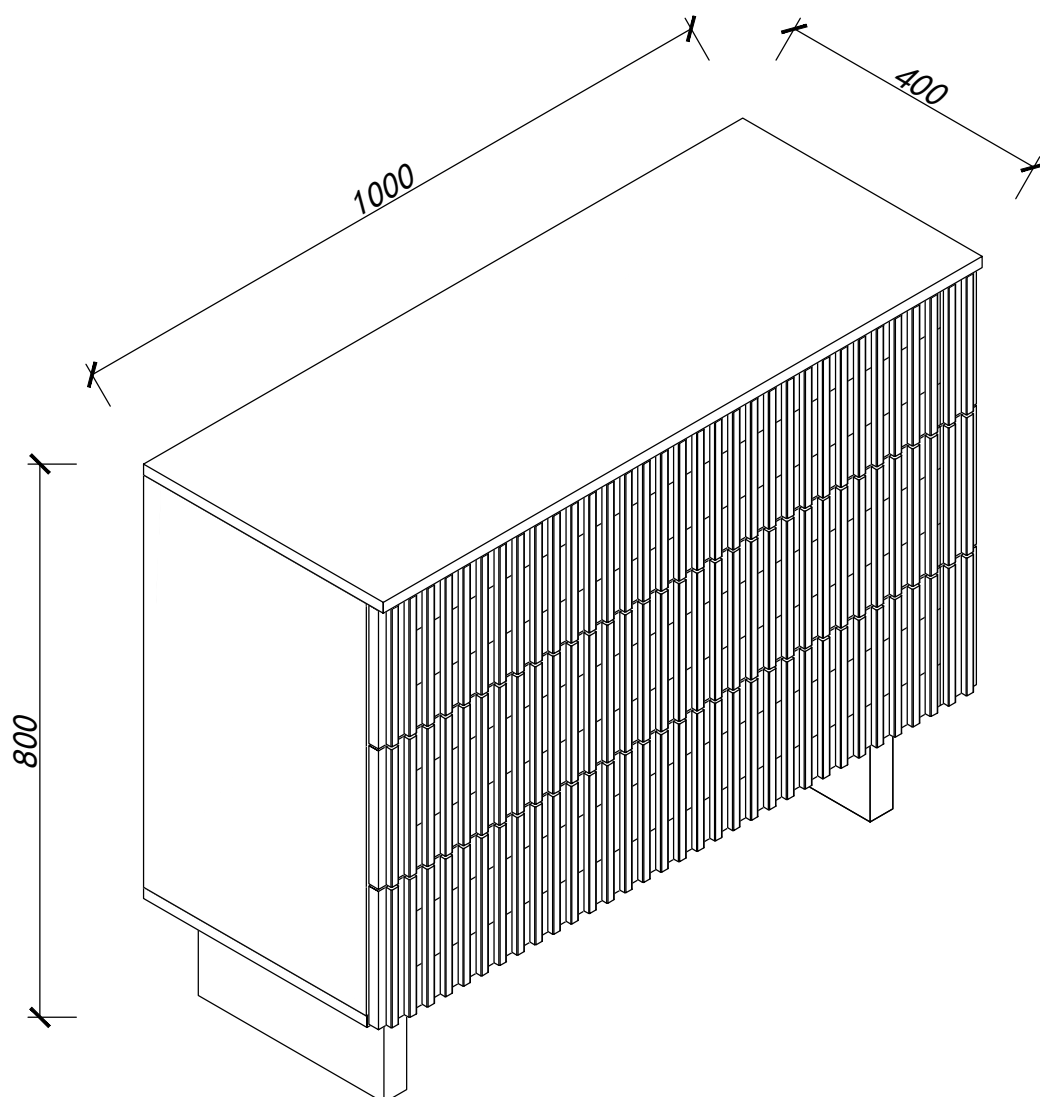
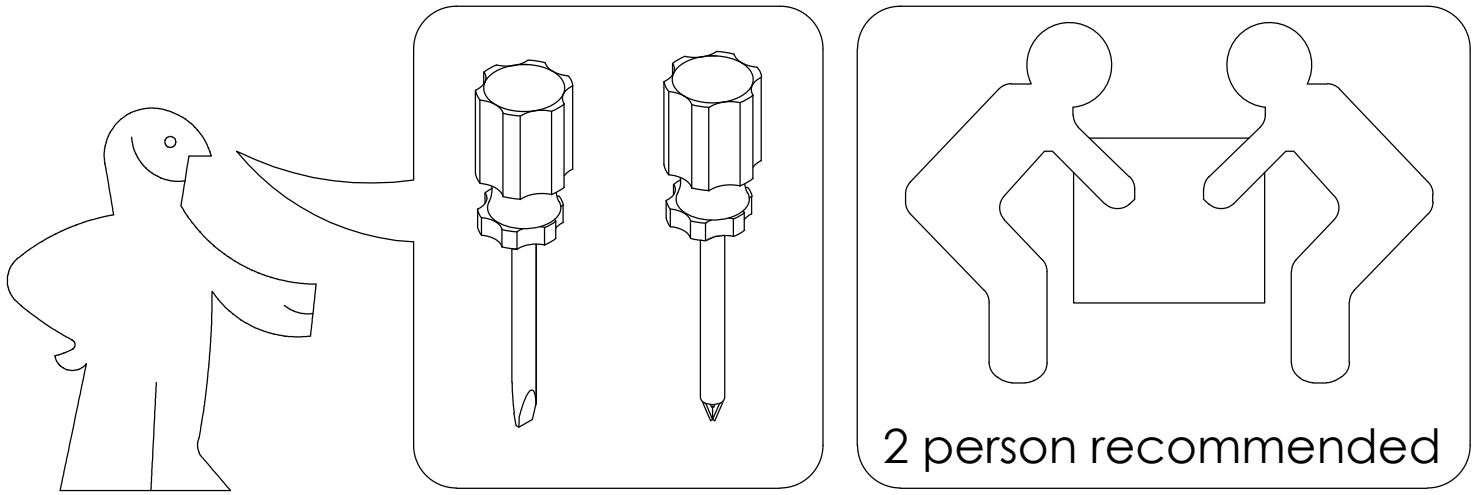
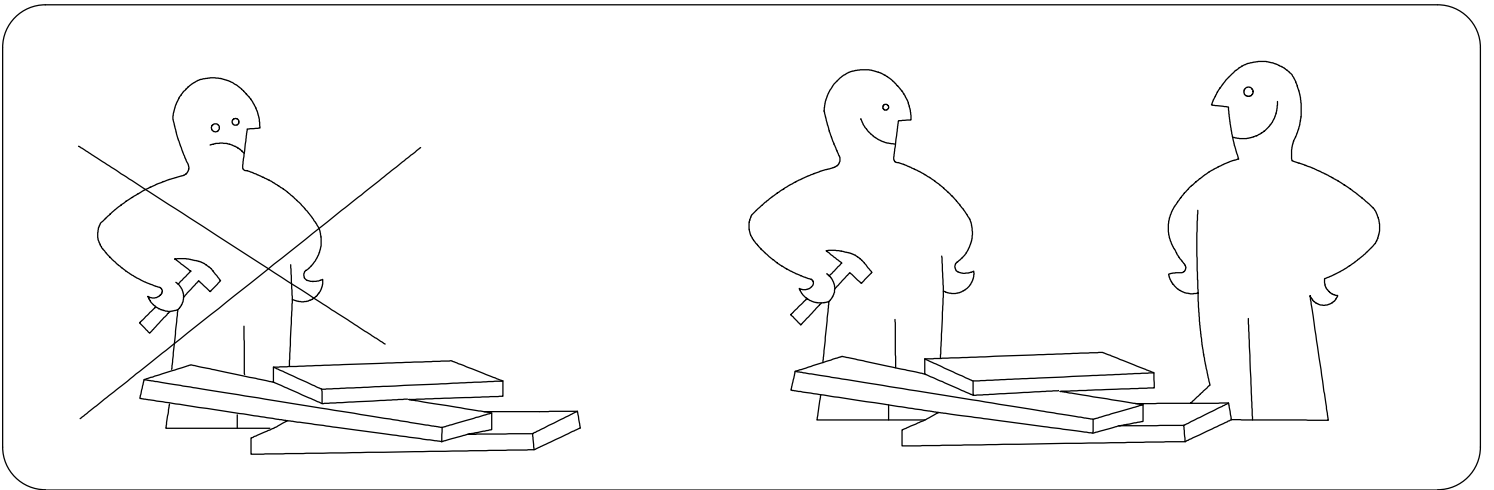


sømcasa


Assembly Instruction

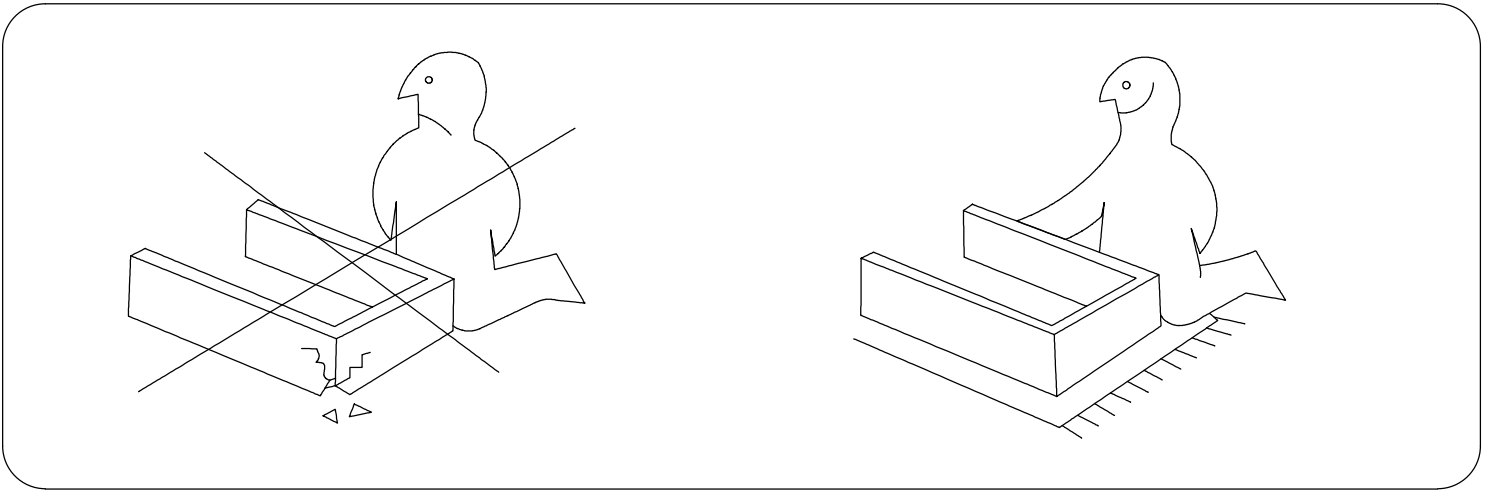

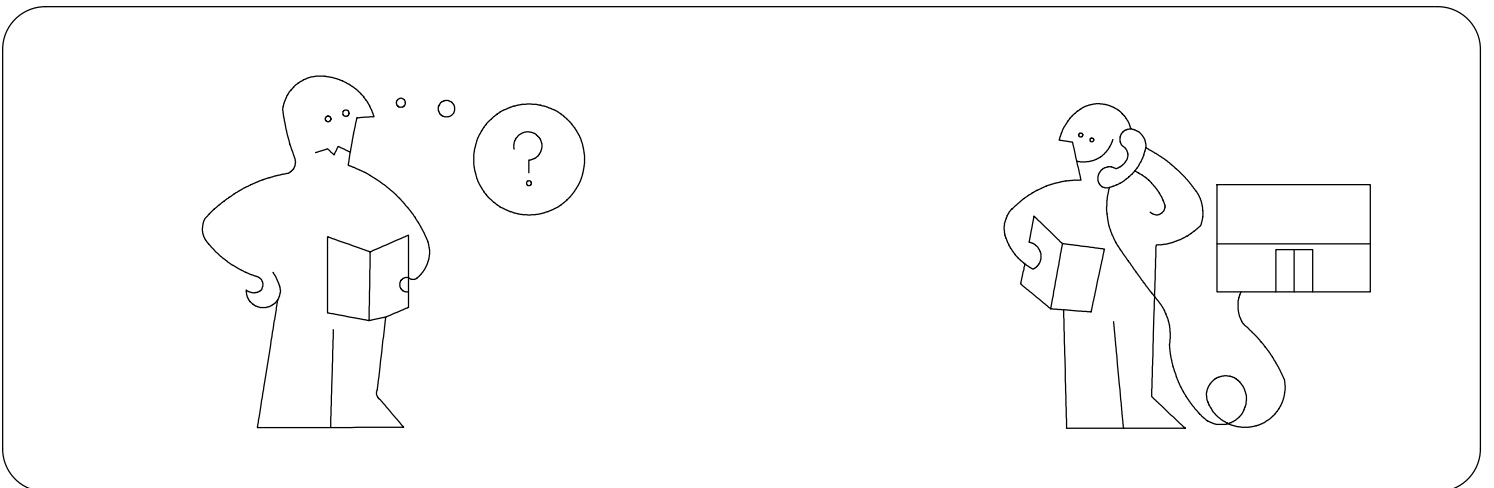

Panel No	Panel Sizes	Quantity
1	1000*400*16	1
2	1000*373*16	1
3	596*372*16	1
4	596*372*16	1
5	596*200*16	1
6	606*393*5	2
7	998*200*25	3

Panel No	Panel Sizes	Quantity
8	922*150*12	3
9	300*150*12	3
10	300*150*12	3
11	932*298*5	3
12	287*100*12	3
13	774*100*16	1
14	170*310*38	2

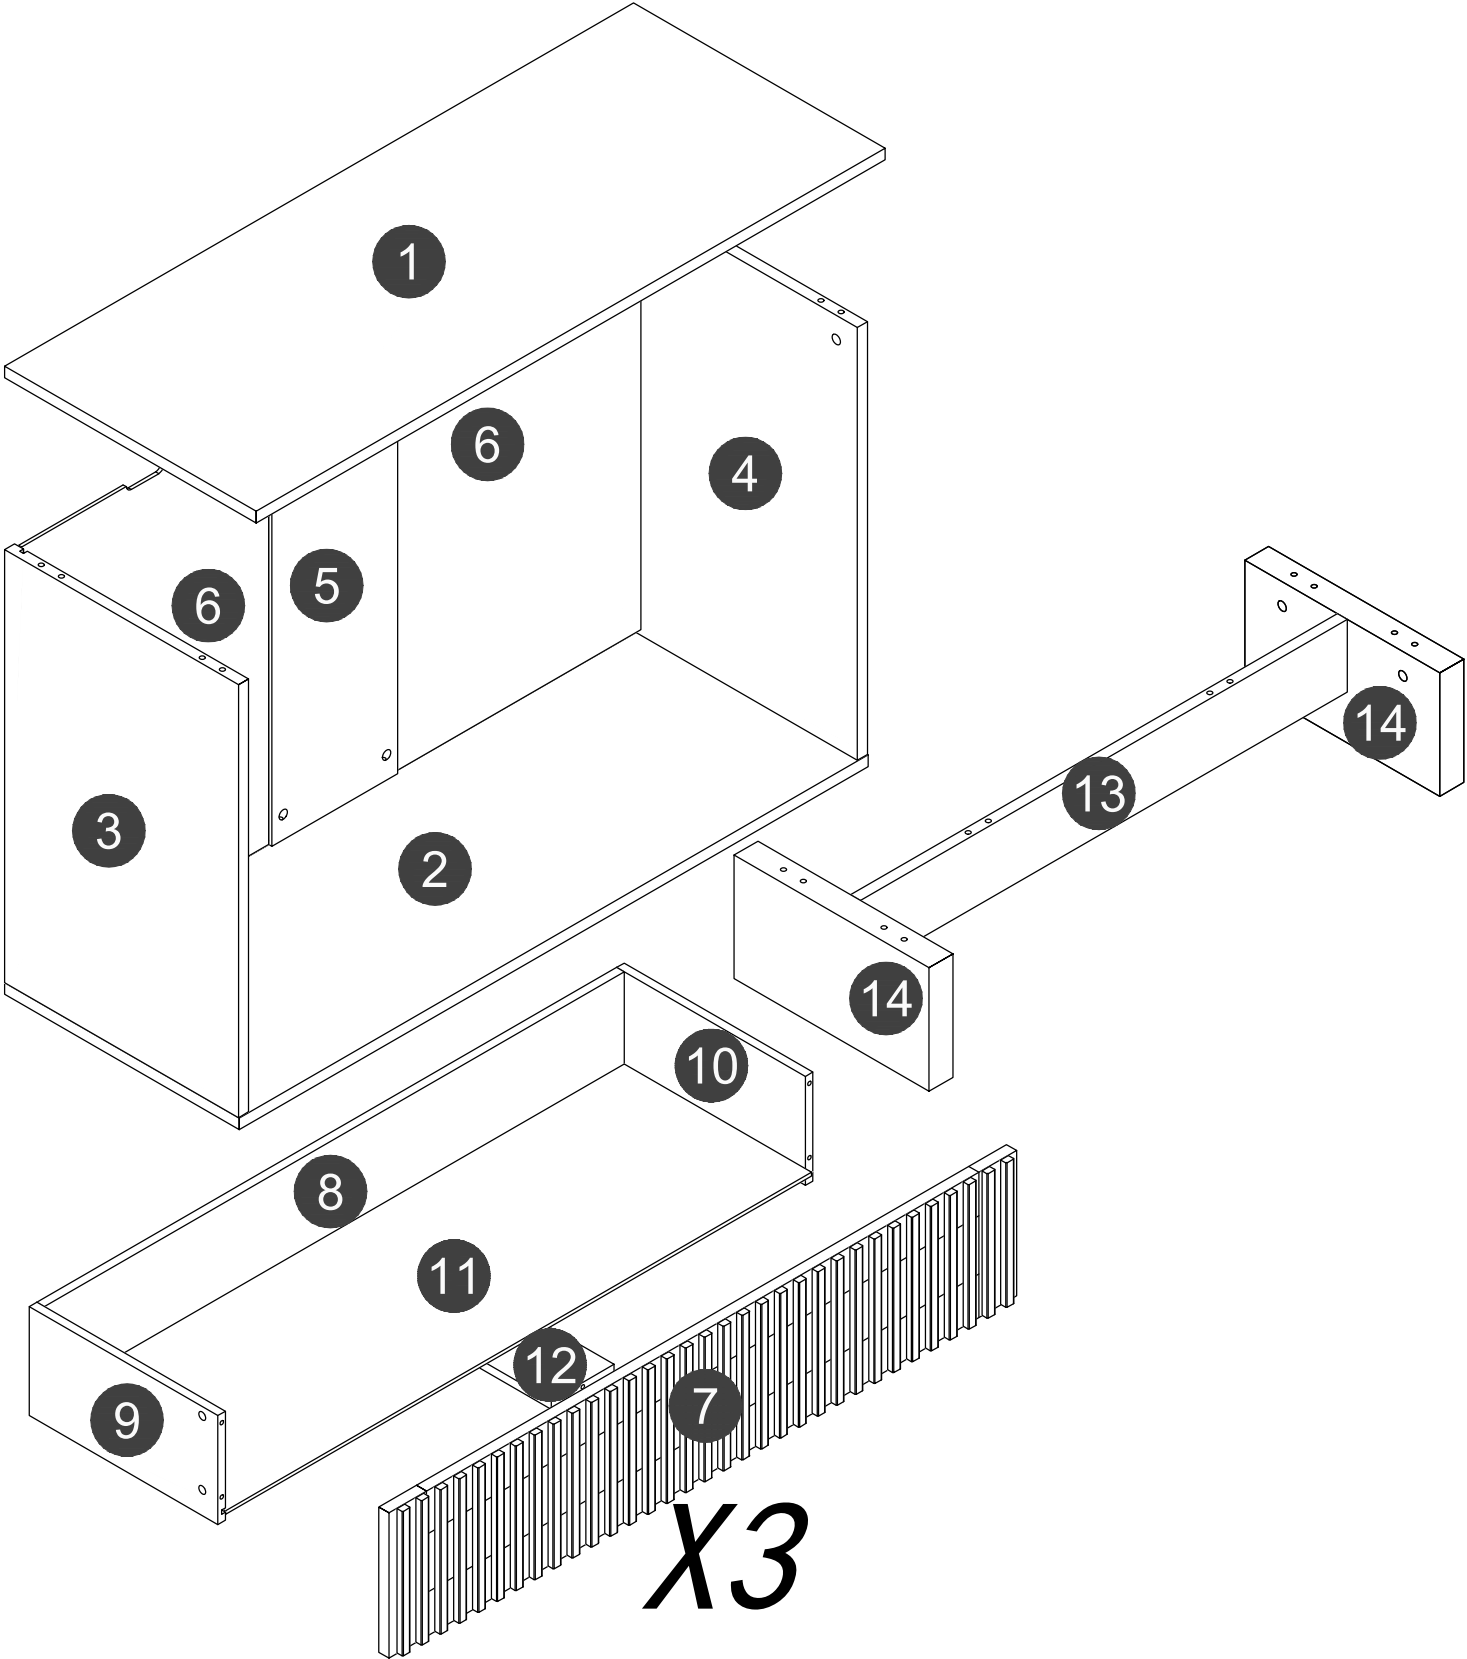


Fittings




M6*40

A=18



$\Phi 8*30$

B=16

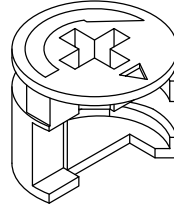


$\Phi 15*12$

C=18




$\Phi 21$


D=48

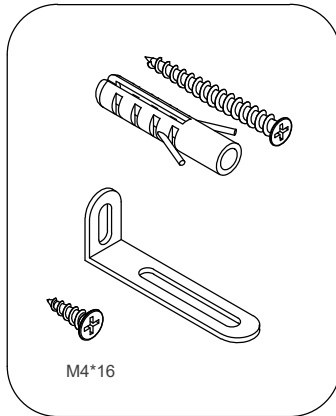


F=2

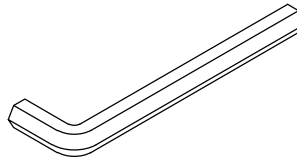

H = 1

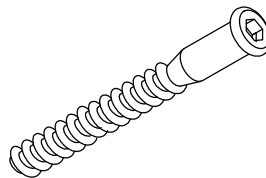


Q=4

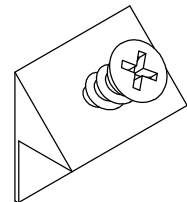


E=12




O = 30

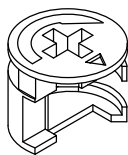

P = 30



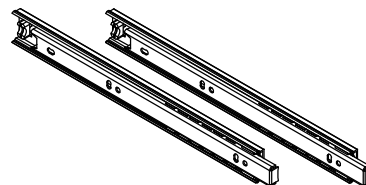


N=3

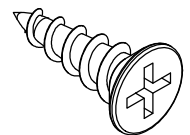



V1=24

STEP 1

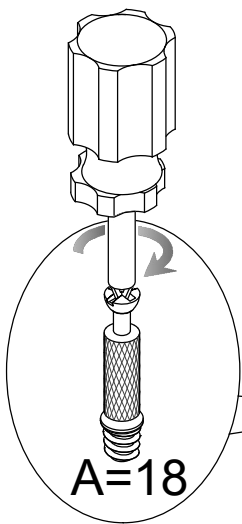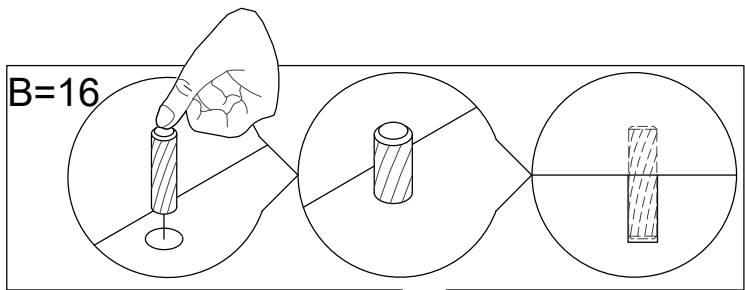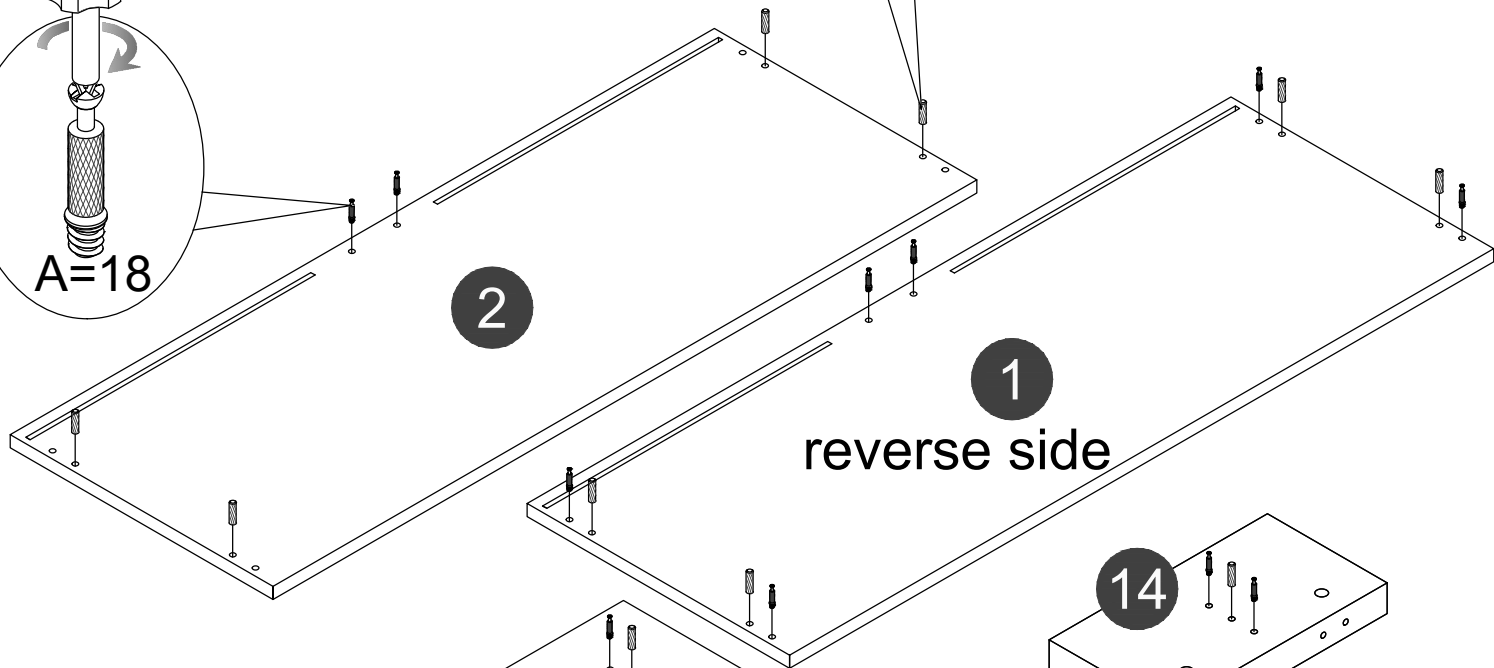


x2


STEP 2

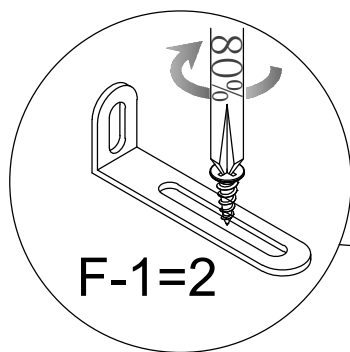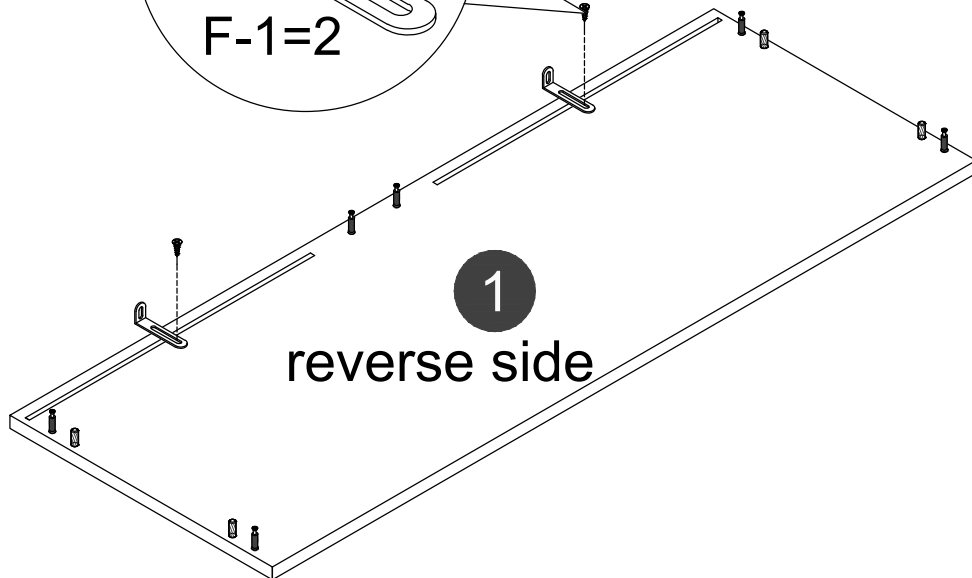


STEP 3

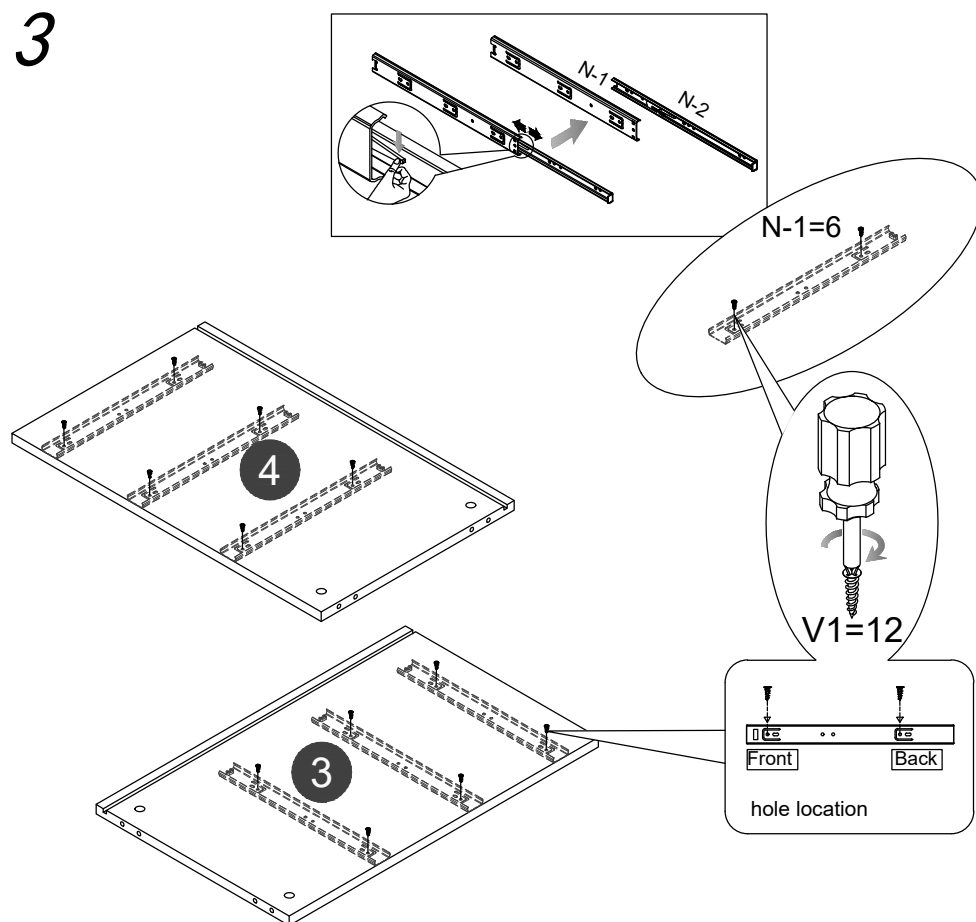


STEP 4

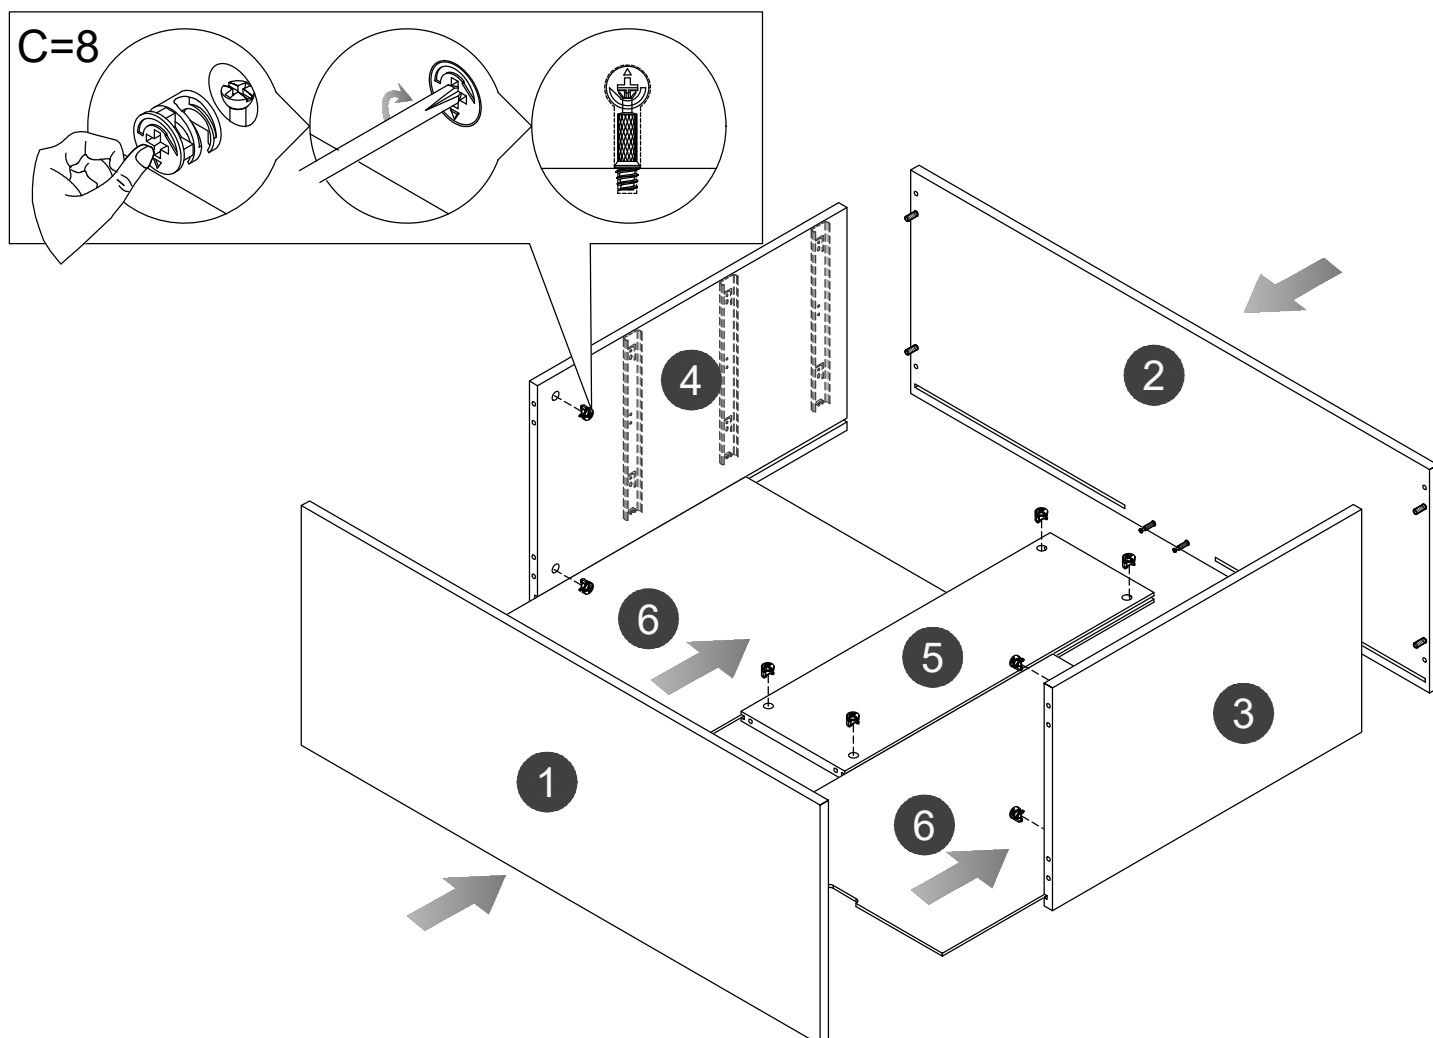


STEP 5

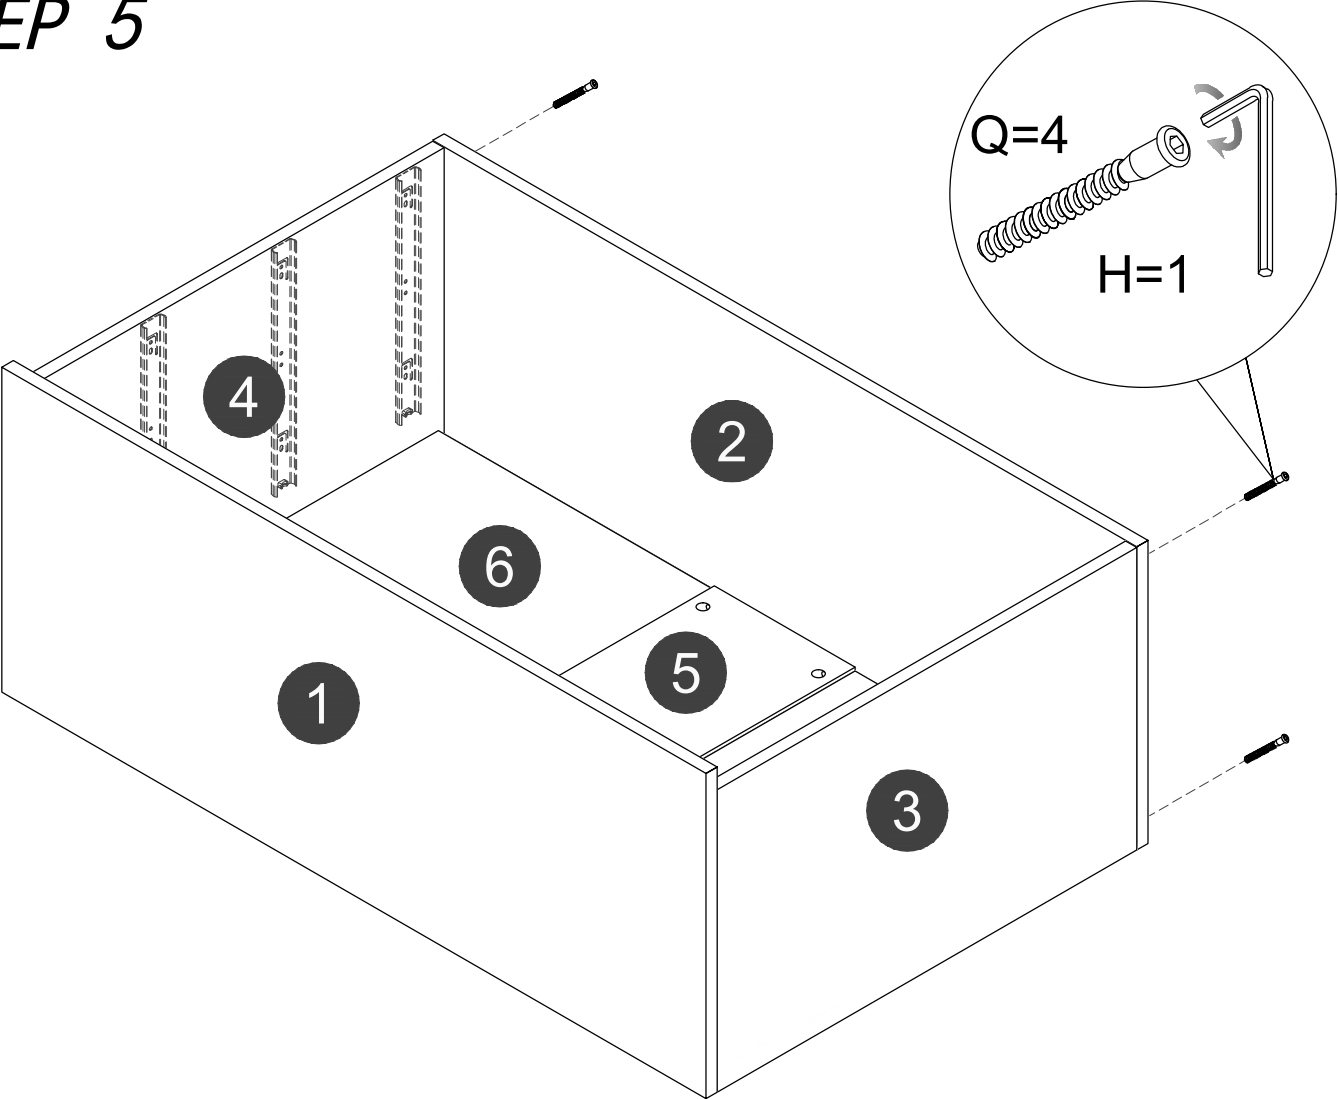


STEP 6

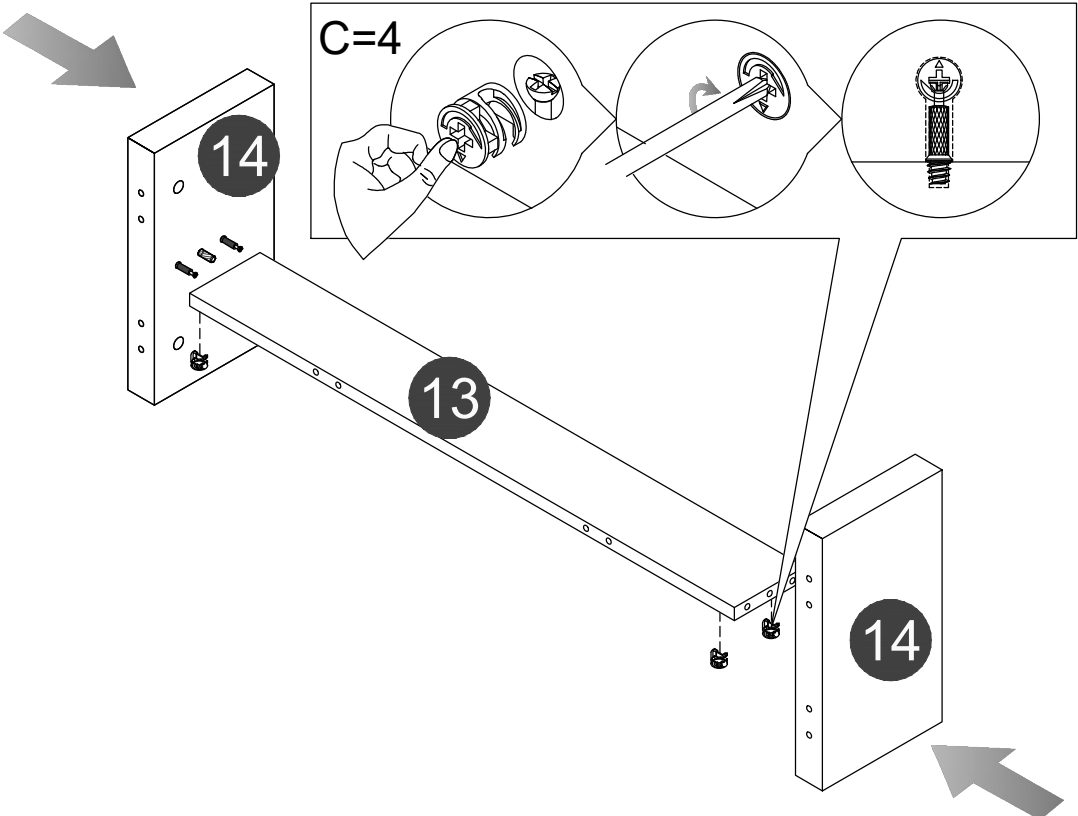


STEP 7

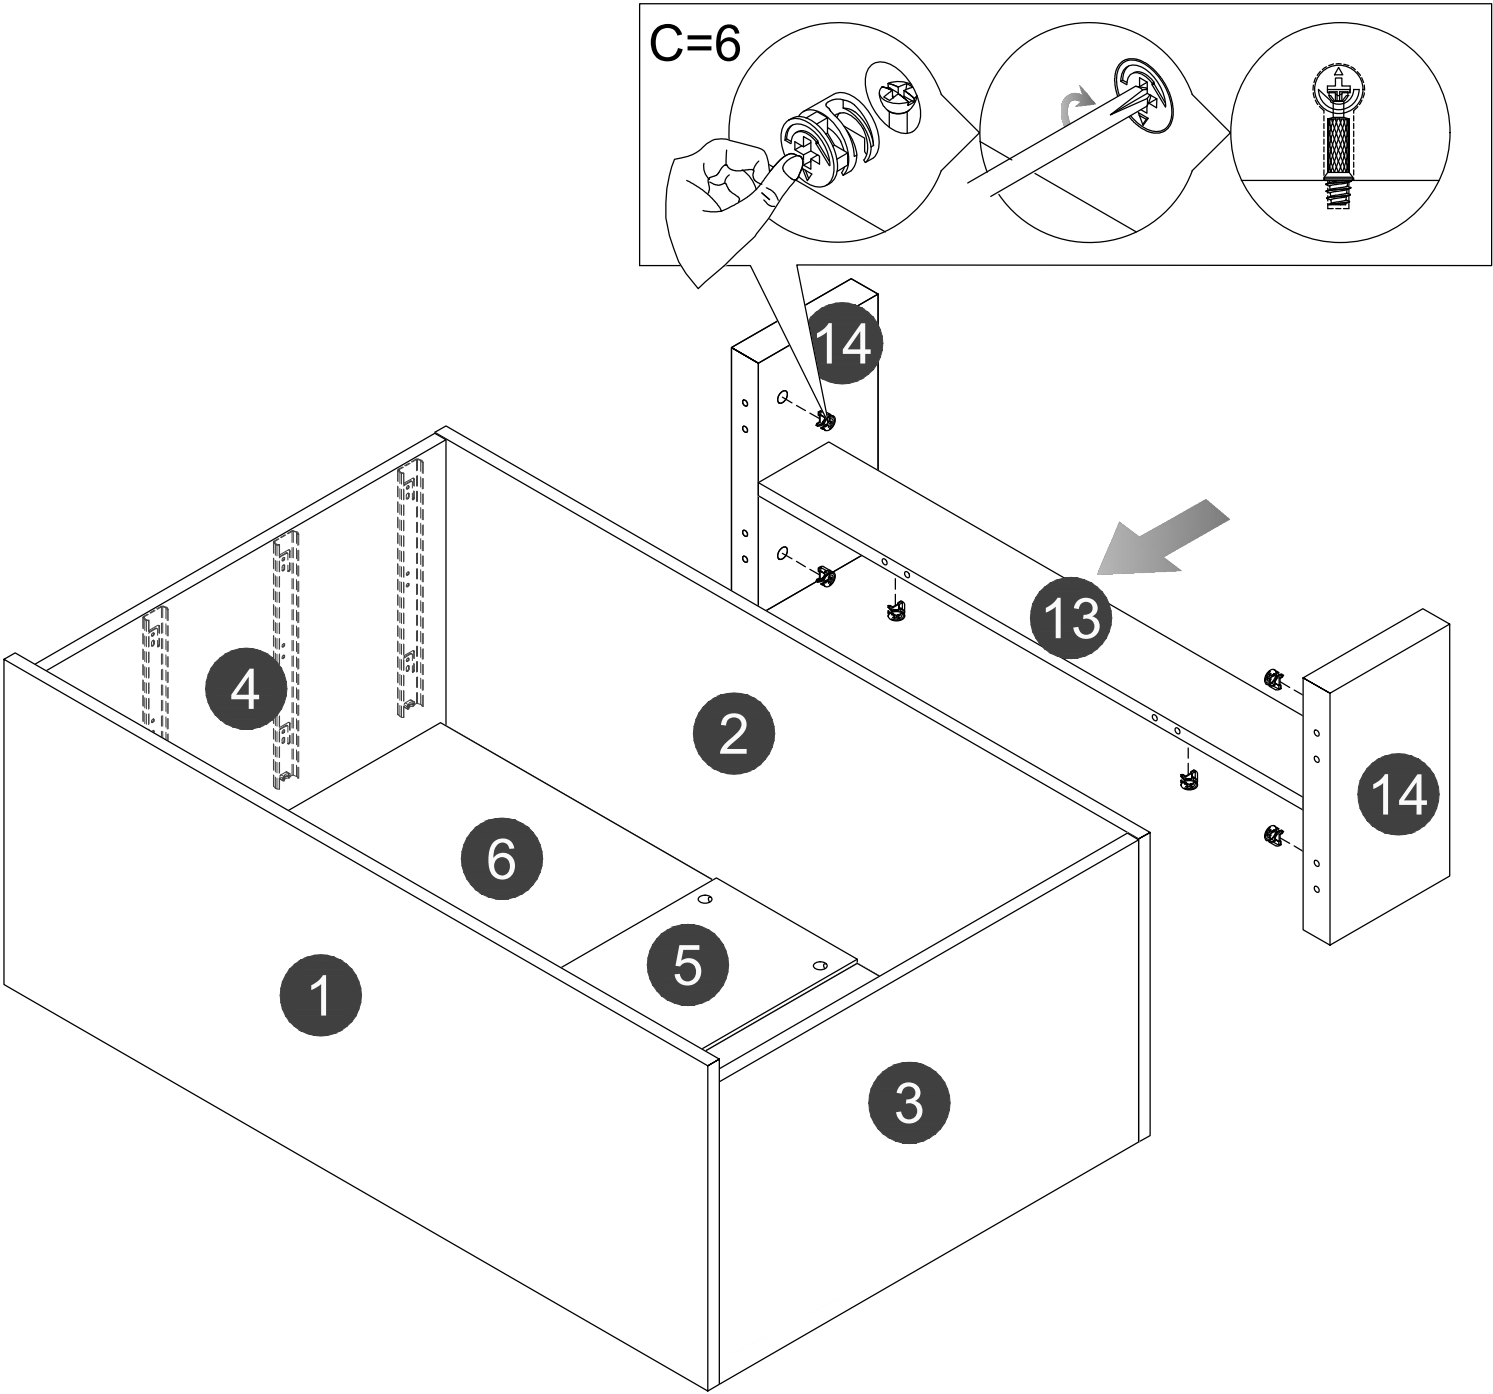


STEP 8

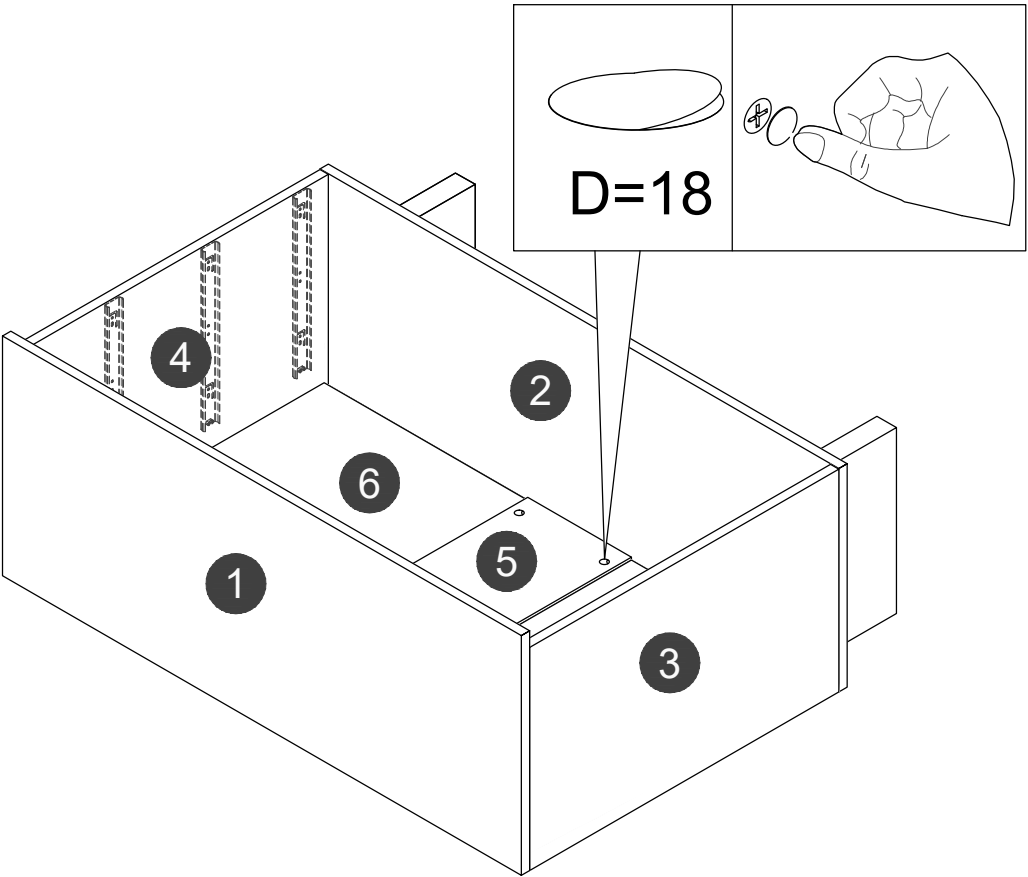


STEP 9

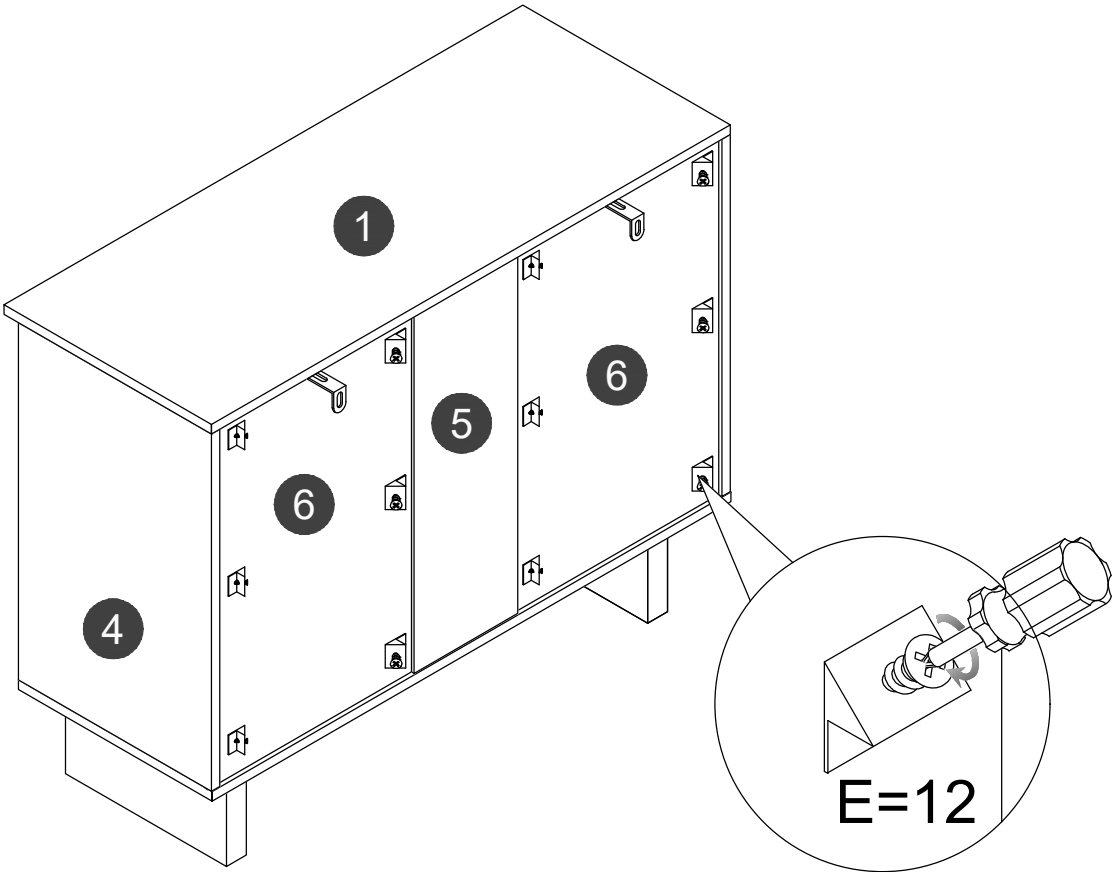


STEP 10

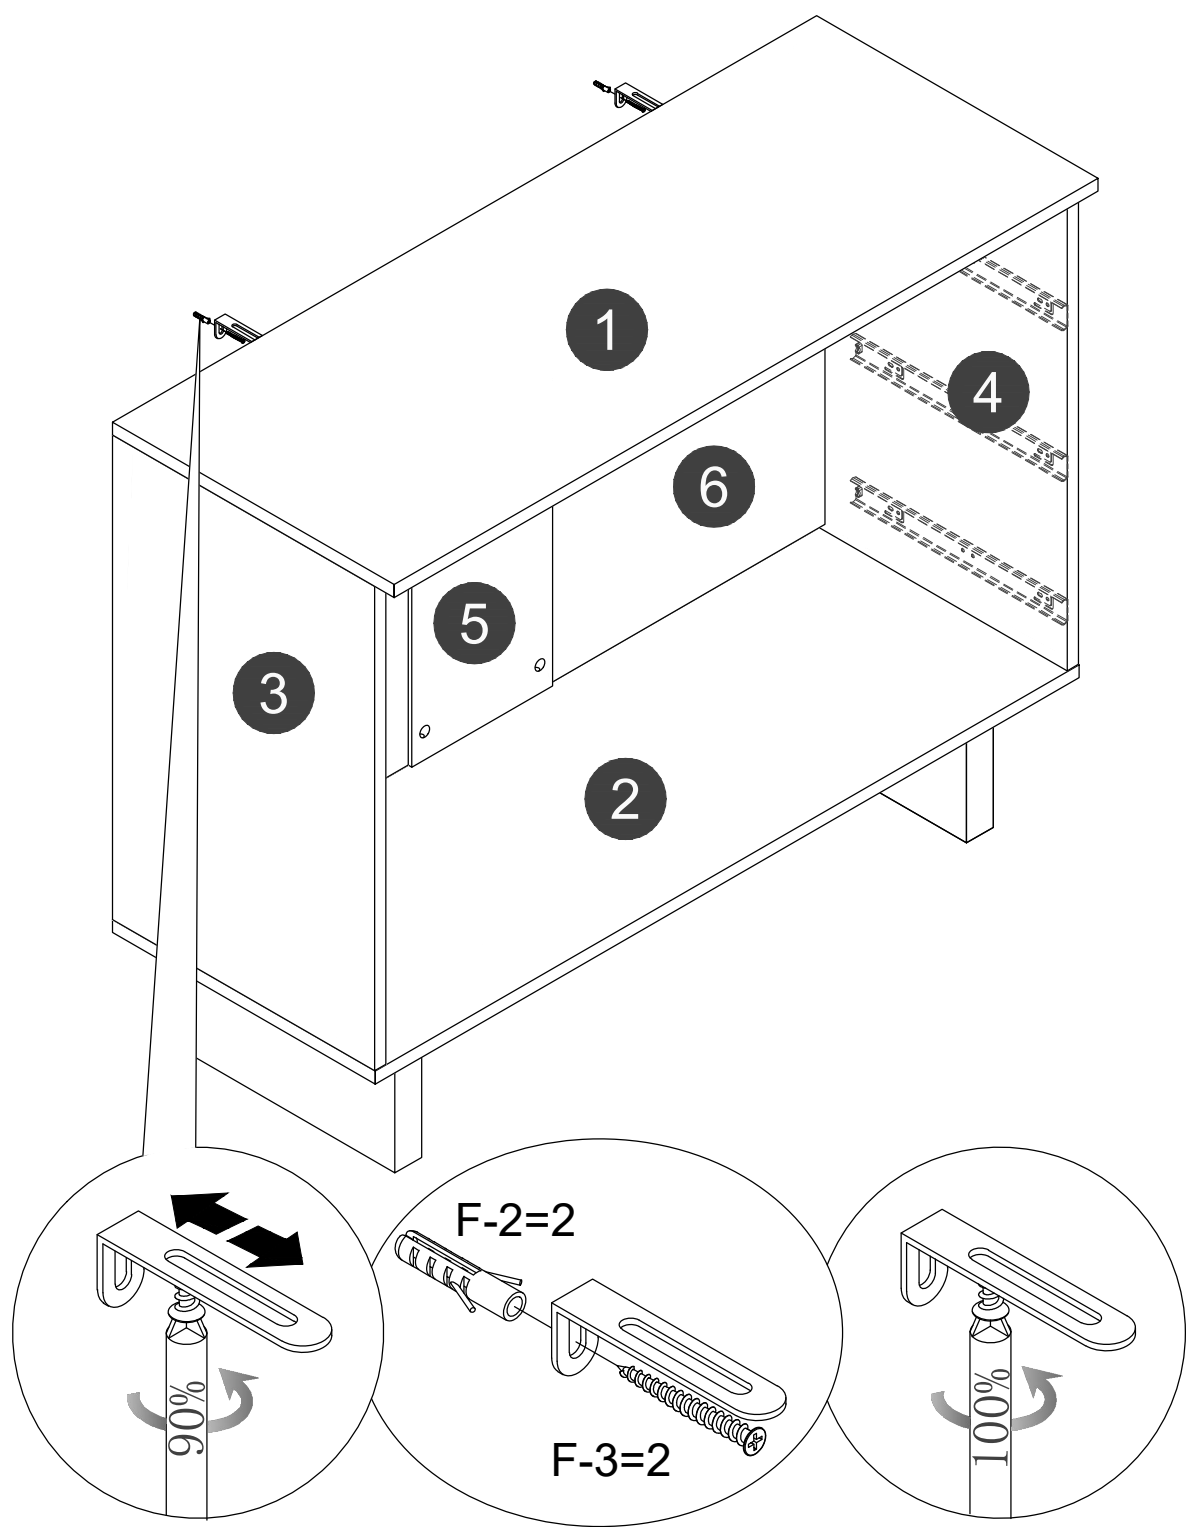


STEP 11

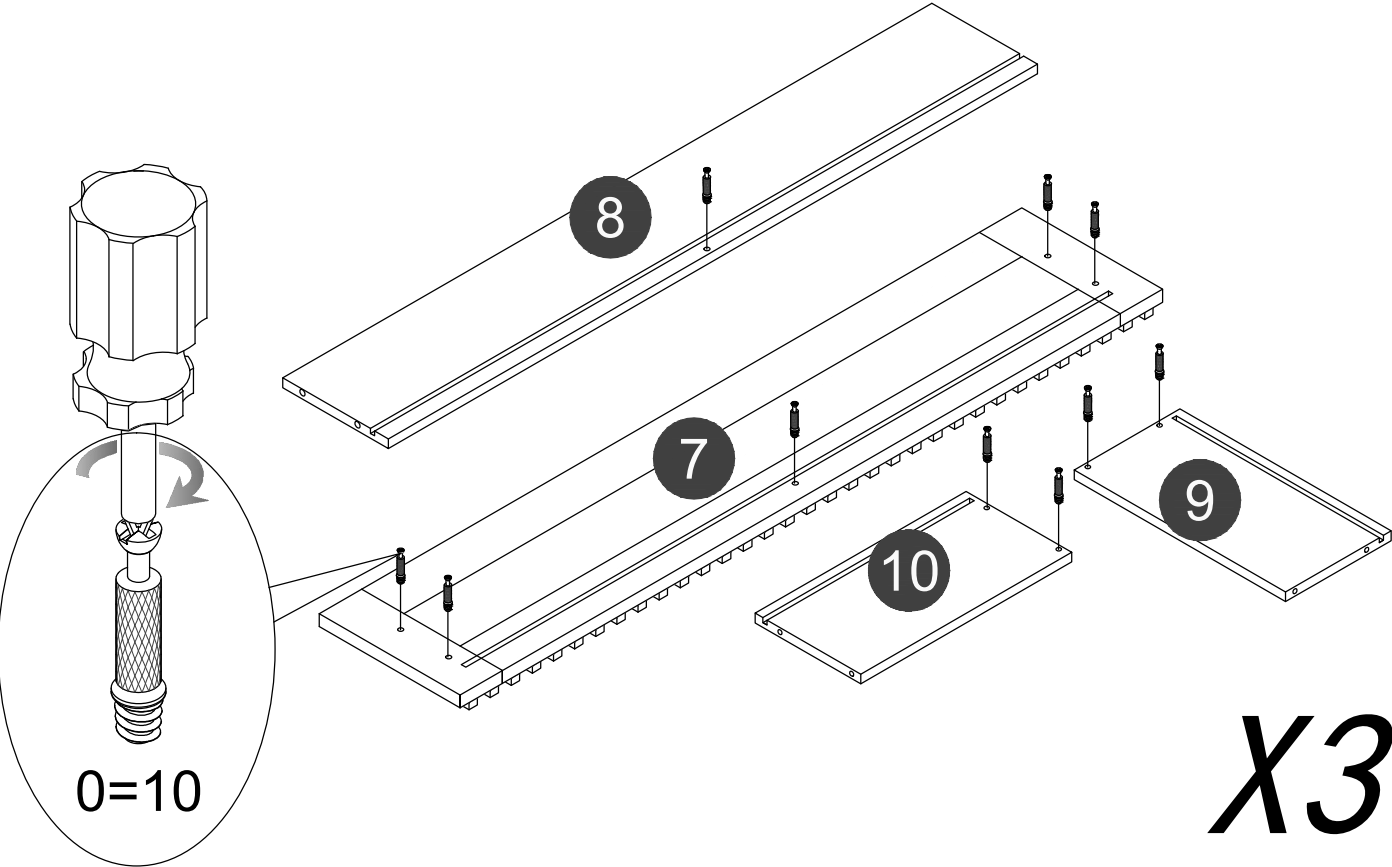

STEP 12

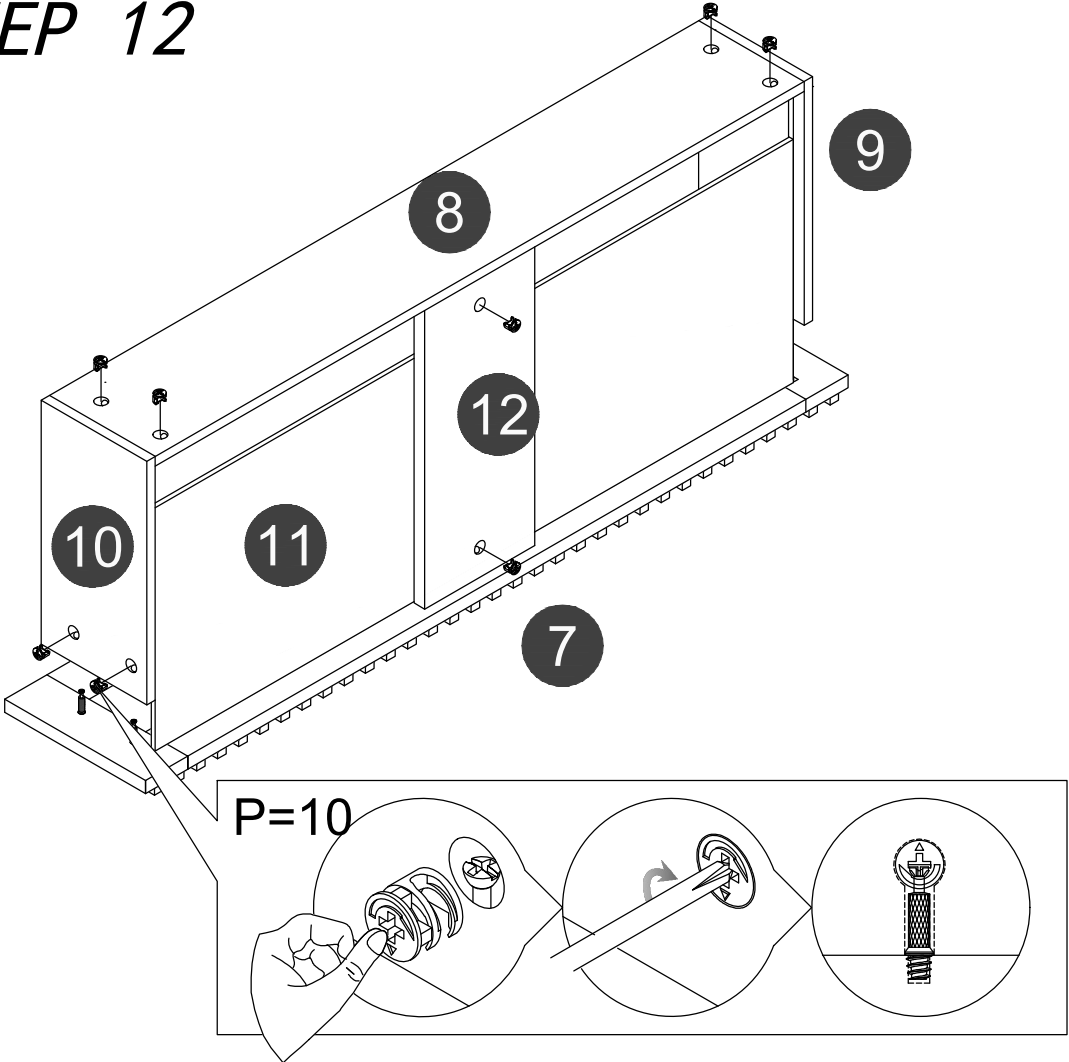


STEP 13

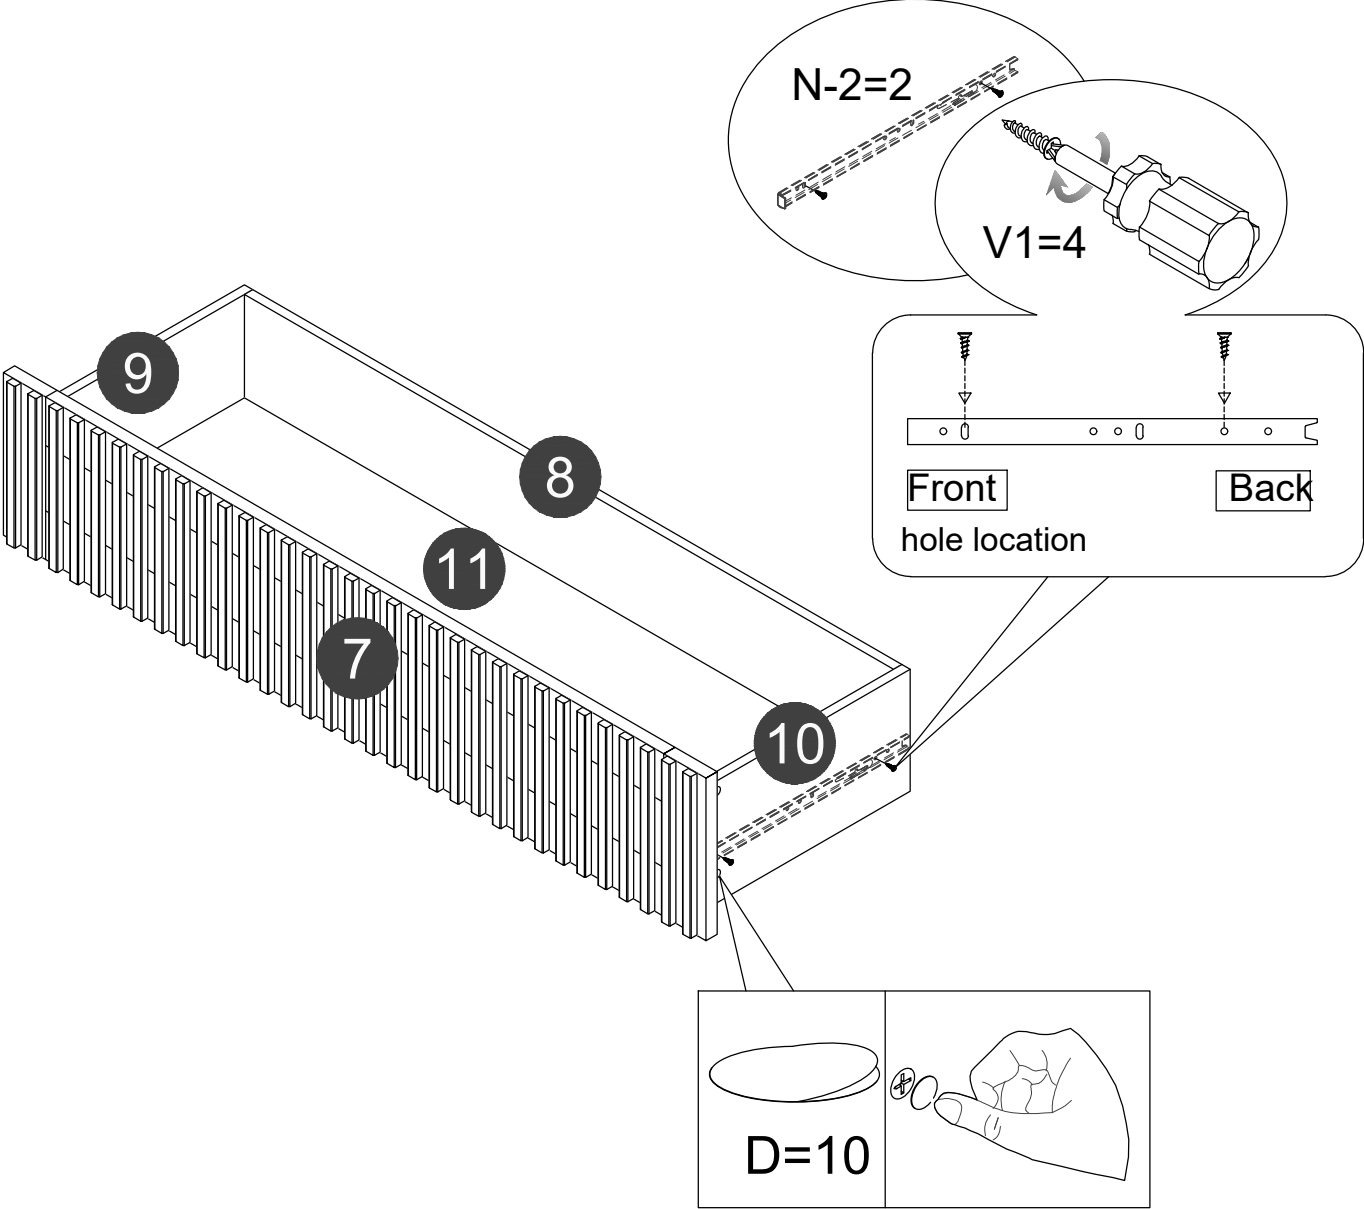


X3


STEP 14

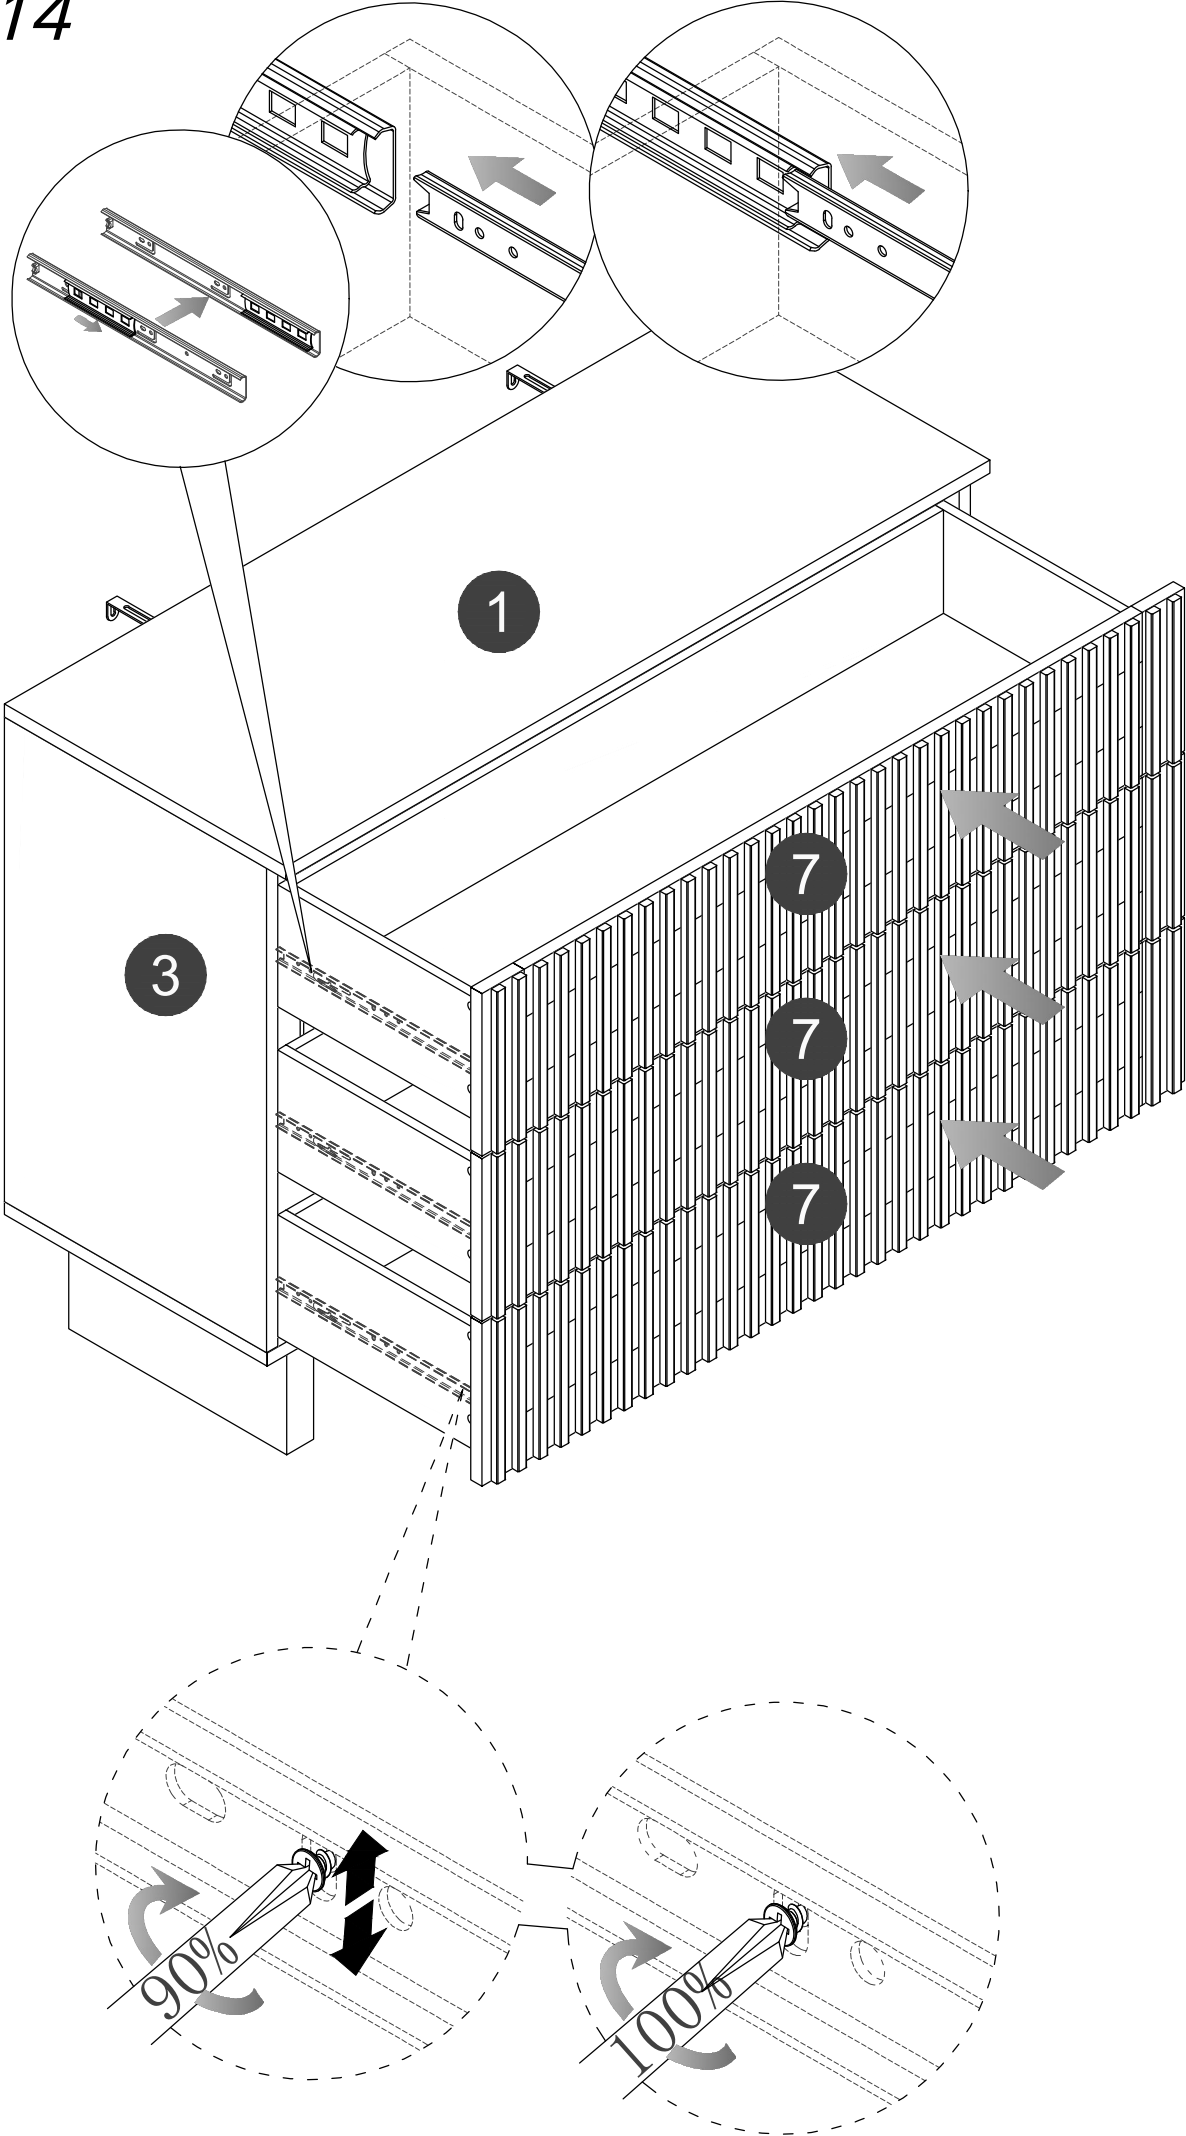

STEP 15

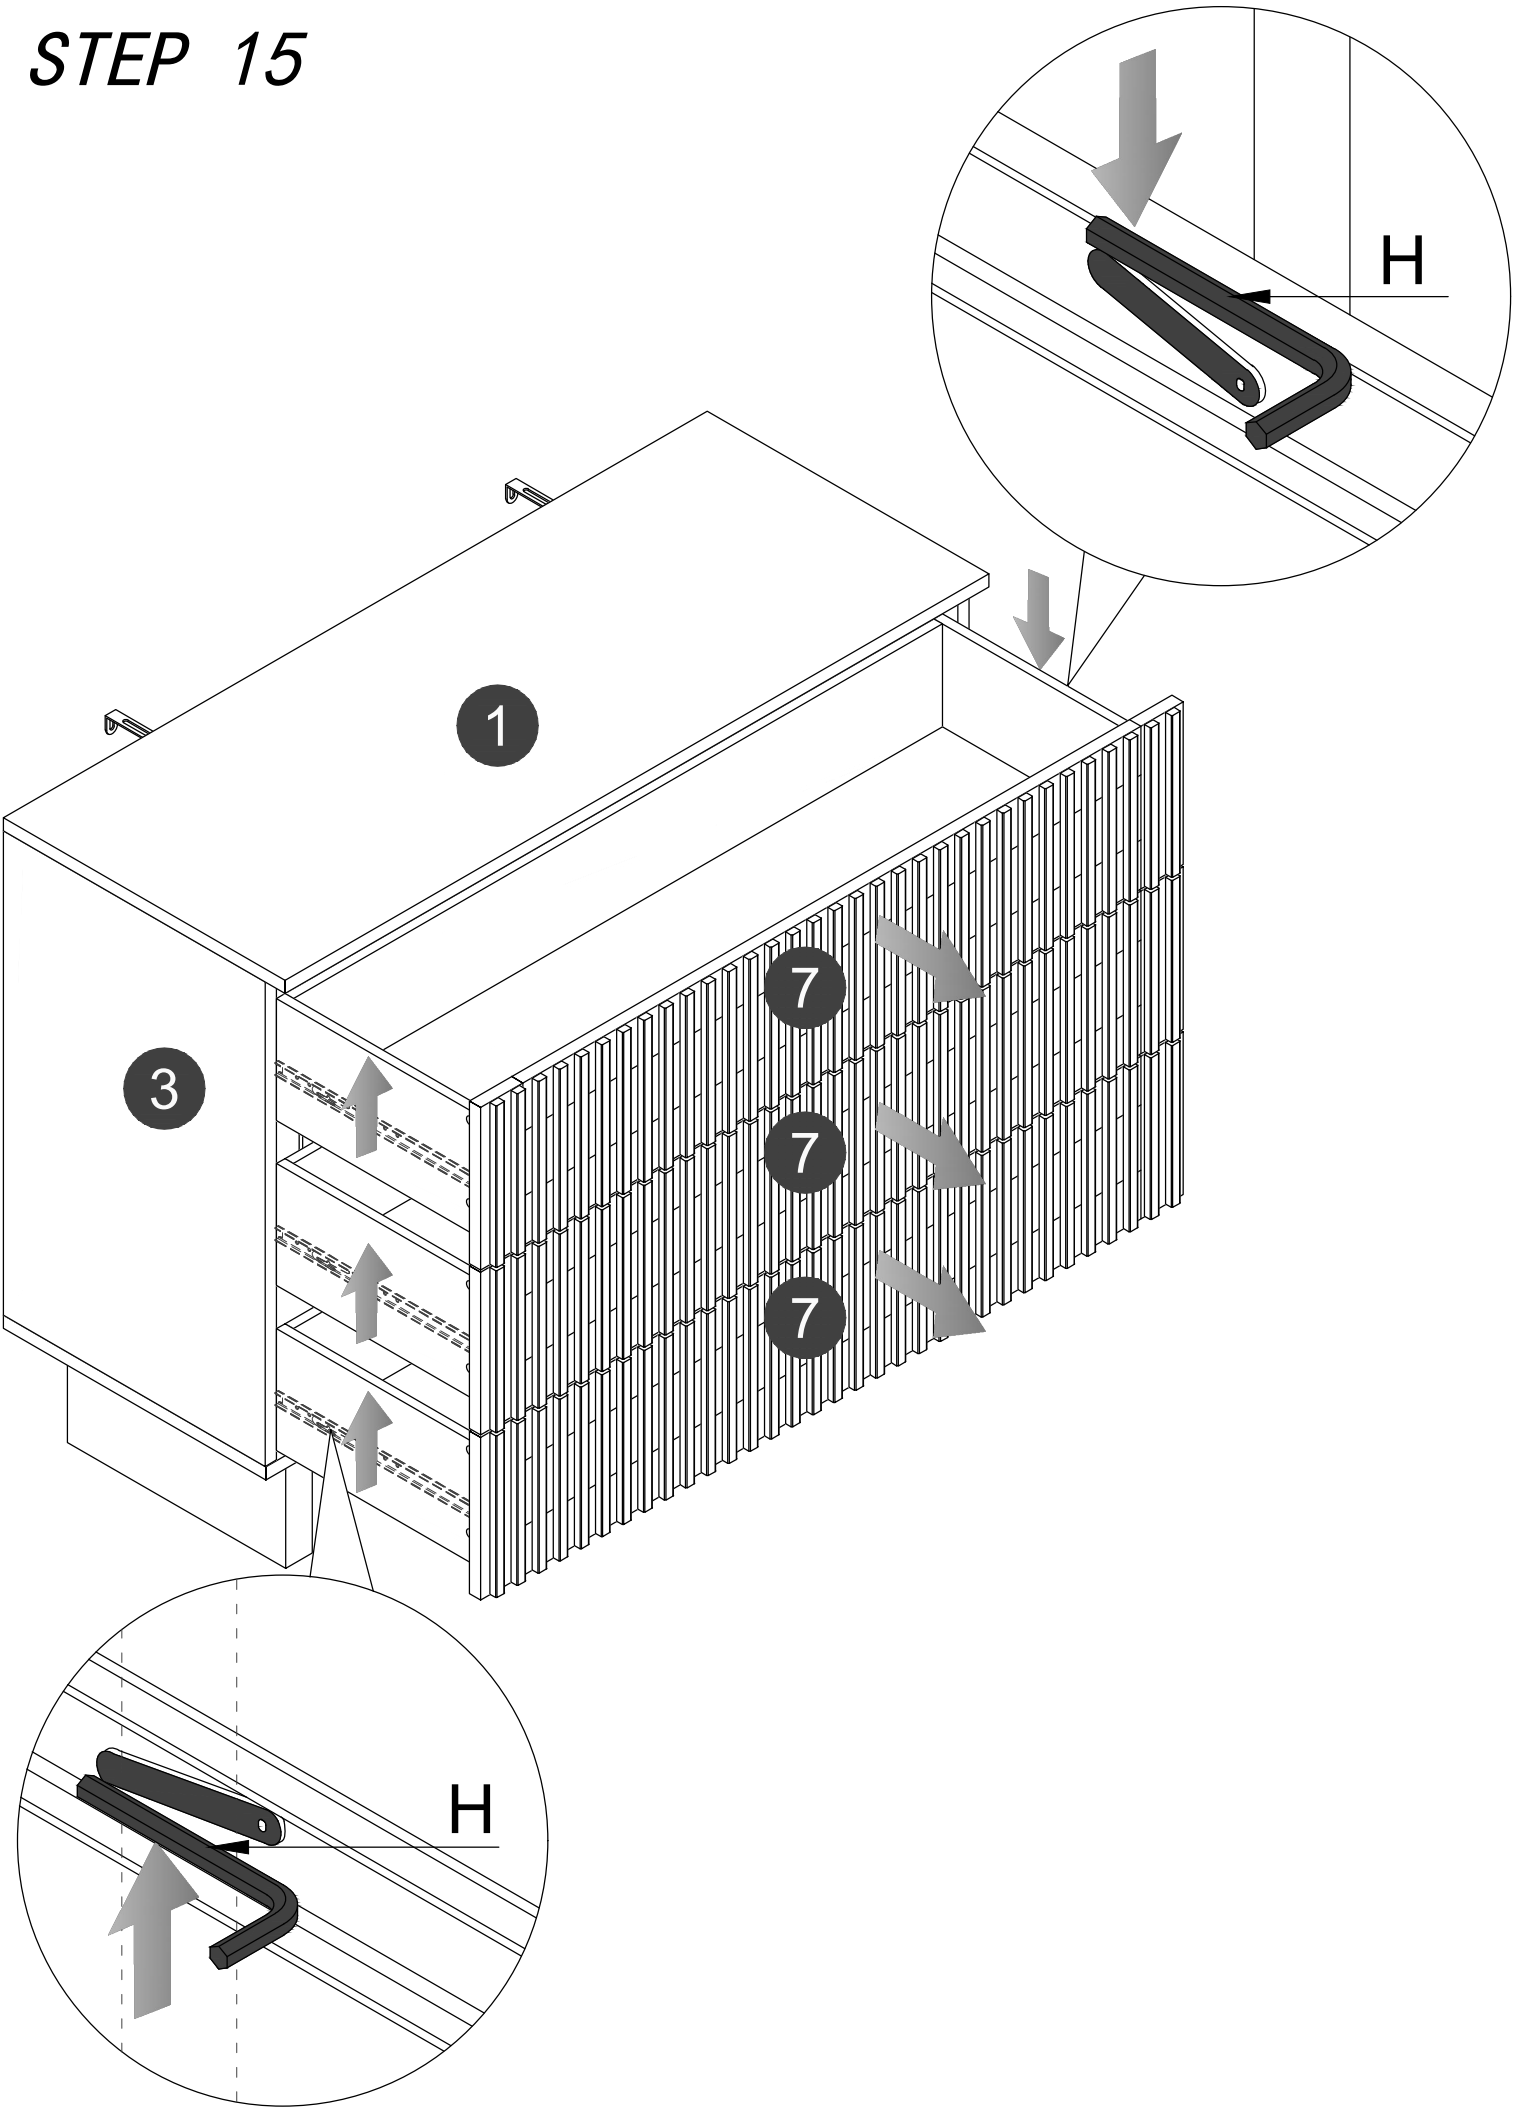

STEP 16

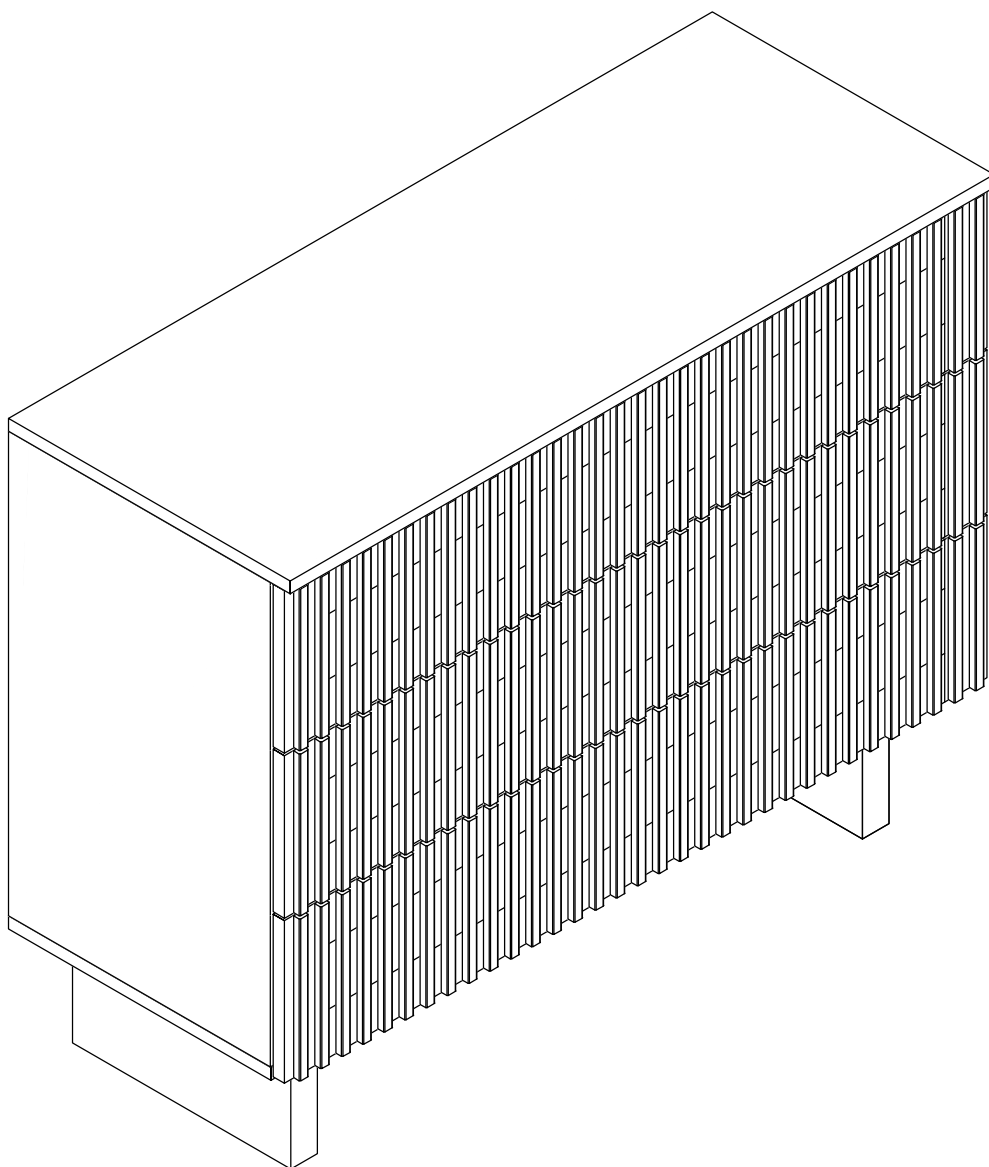

Finish