

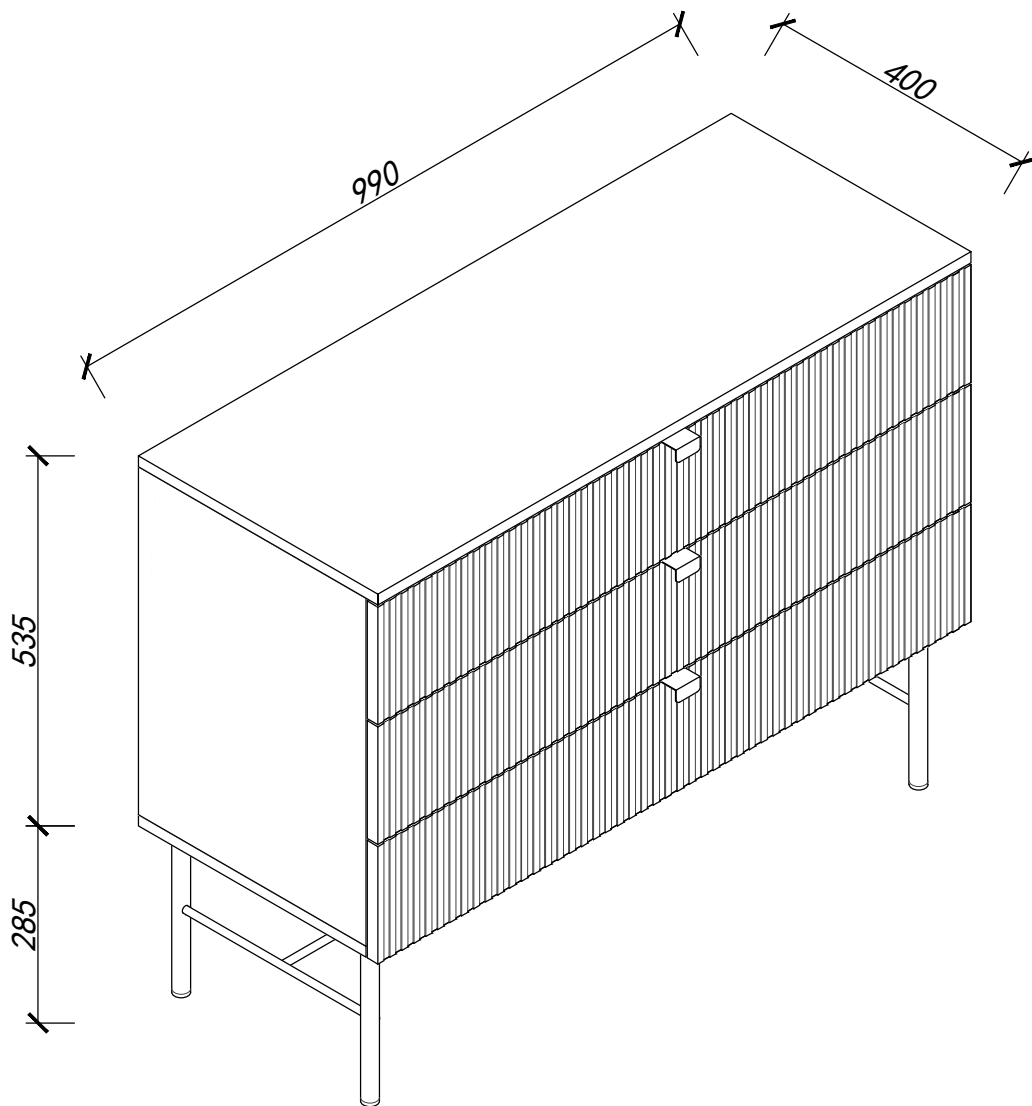
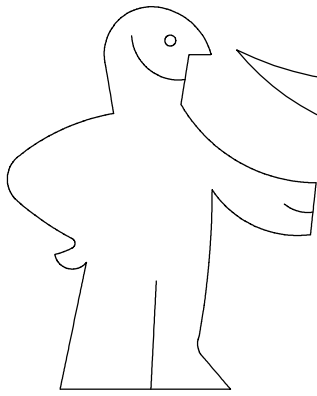








sømcasa

Assembly Instruction

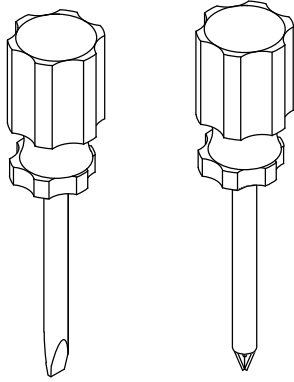

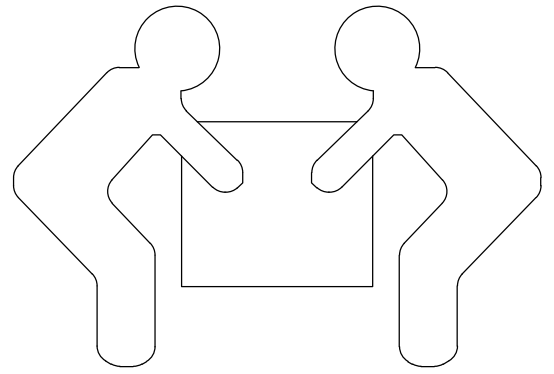


2 person recommended

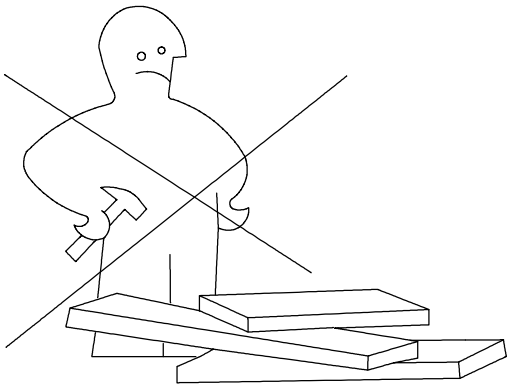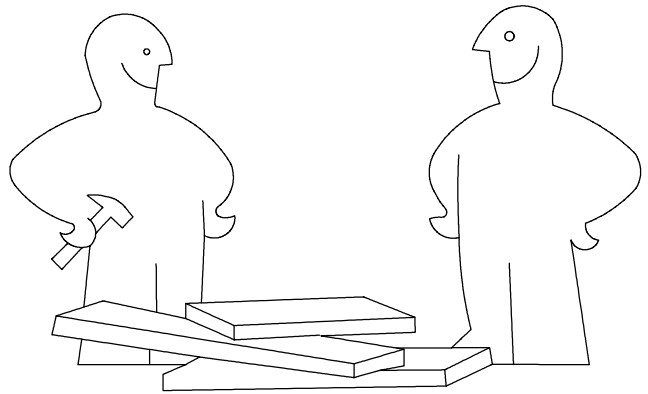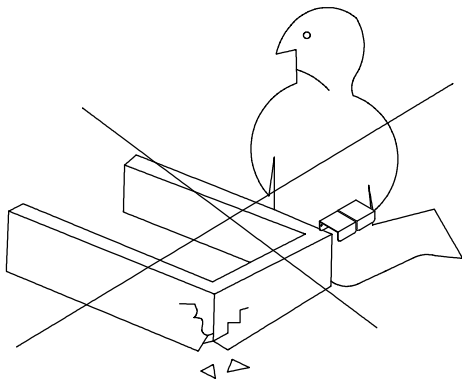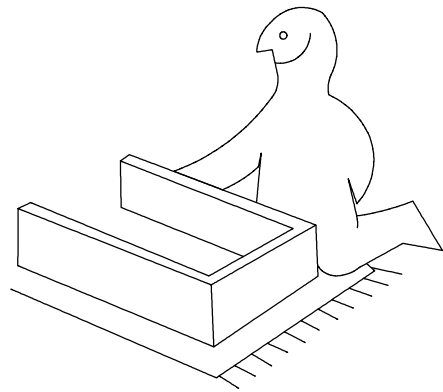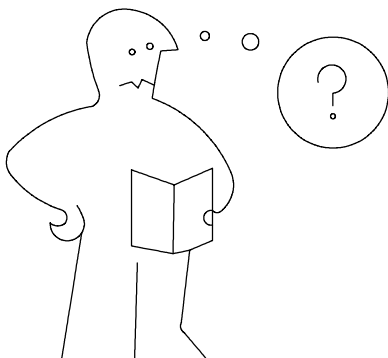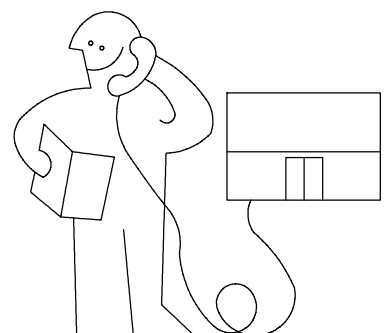

Panel No	Panel Sizes	Quantity
1	990*400*16	1
2	990*380*16	1
3	503*380*16	1
4	503*380*16	1
5	503*200*16	1
6	513*388*5	2

Panel No	Panel Sizes	Quantity
7	170*990*18	3
8	912*120*12	3
9	350*120*12	3
10	350*120*12	3
11	922*348*5	3
12	337*100*12	3

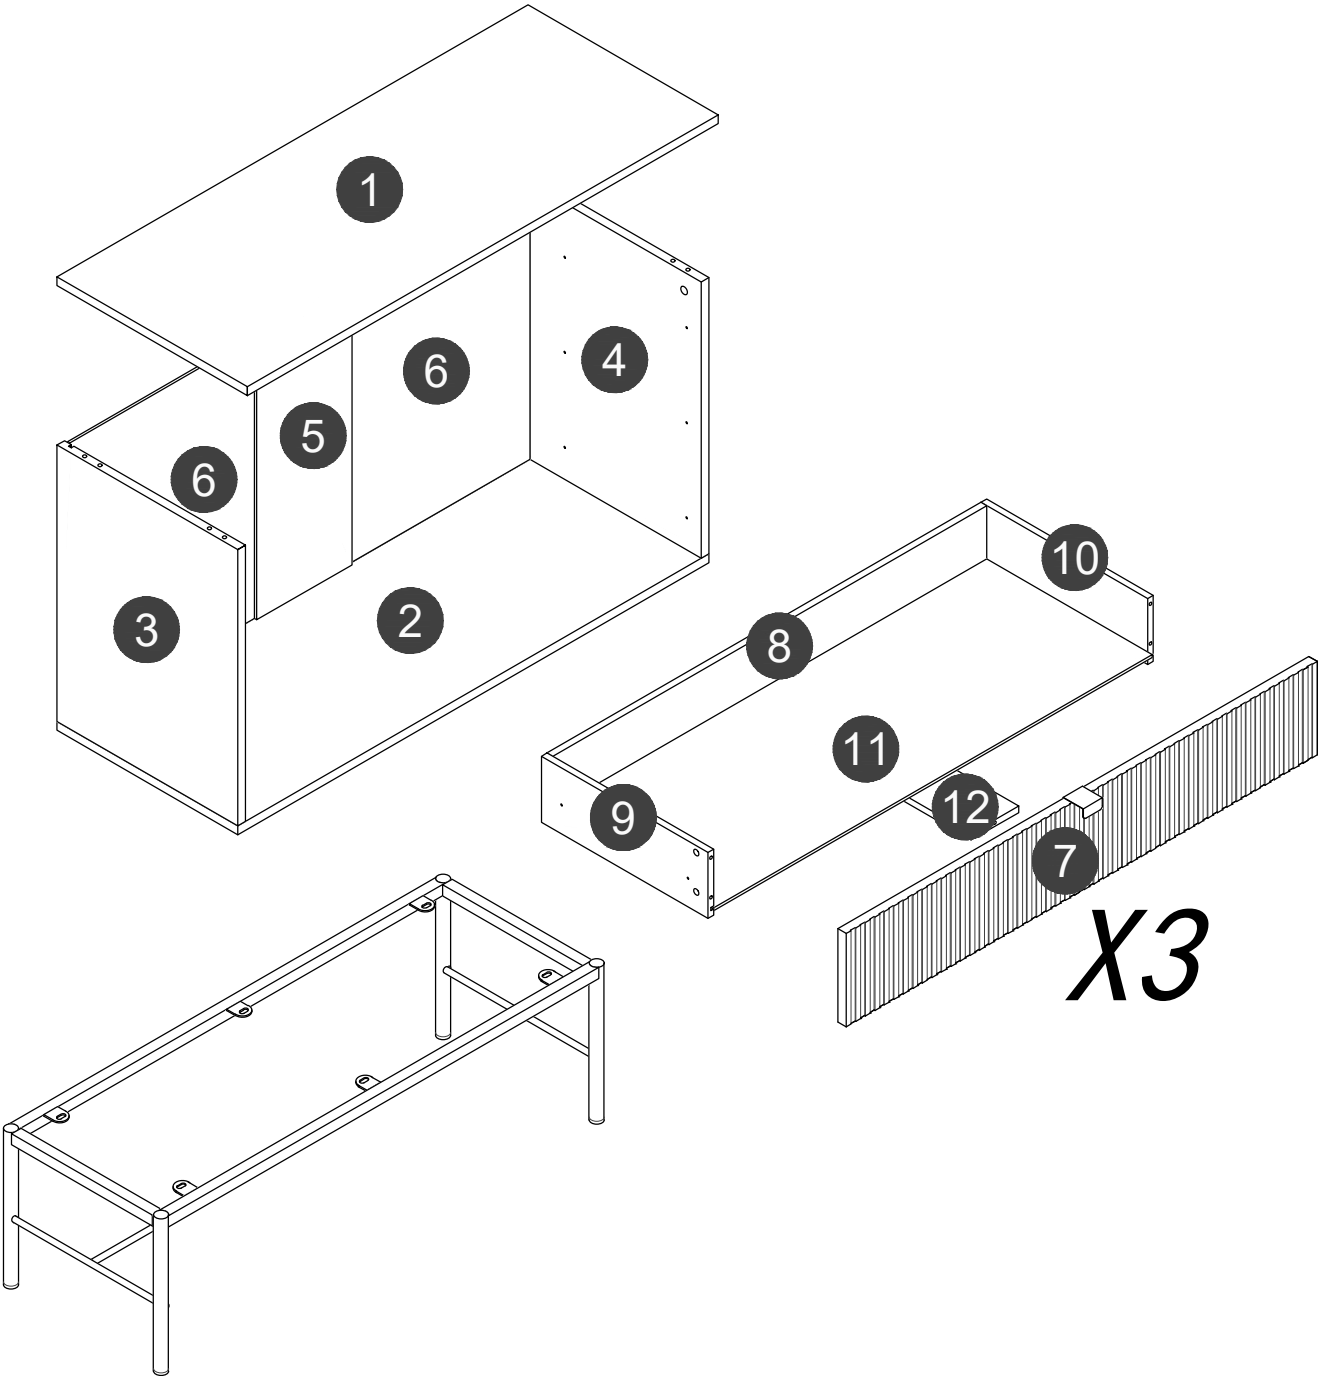


Fittings




M6*40

A=6



Φ8*30

B=8

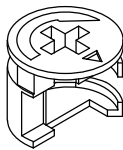

Φ15*12

C=6




Φ21

D=36



E=16

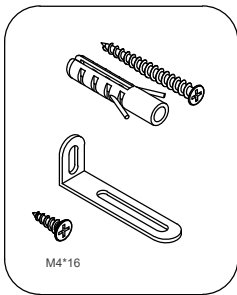


M4*16

F=2




M6*16


G1=10



H =1

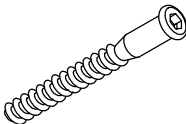

Q=6

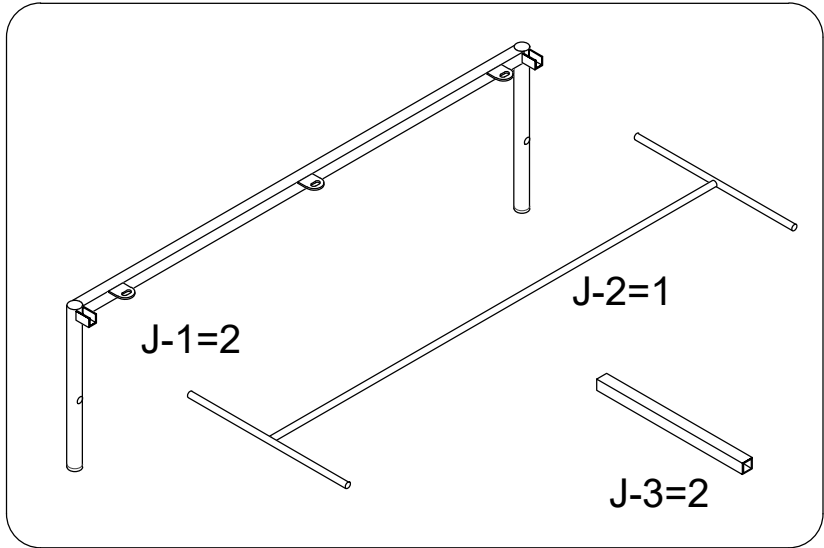


J=1




O =30




P =30

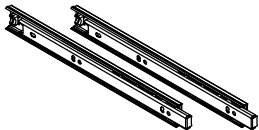

N=3

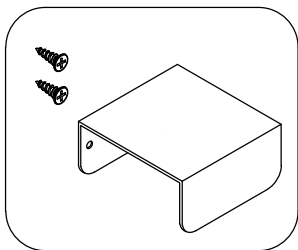

U=3



V1=24




Z1=6




Z2=6


STEP 1

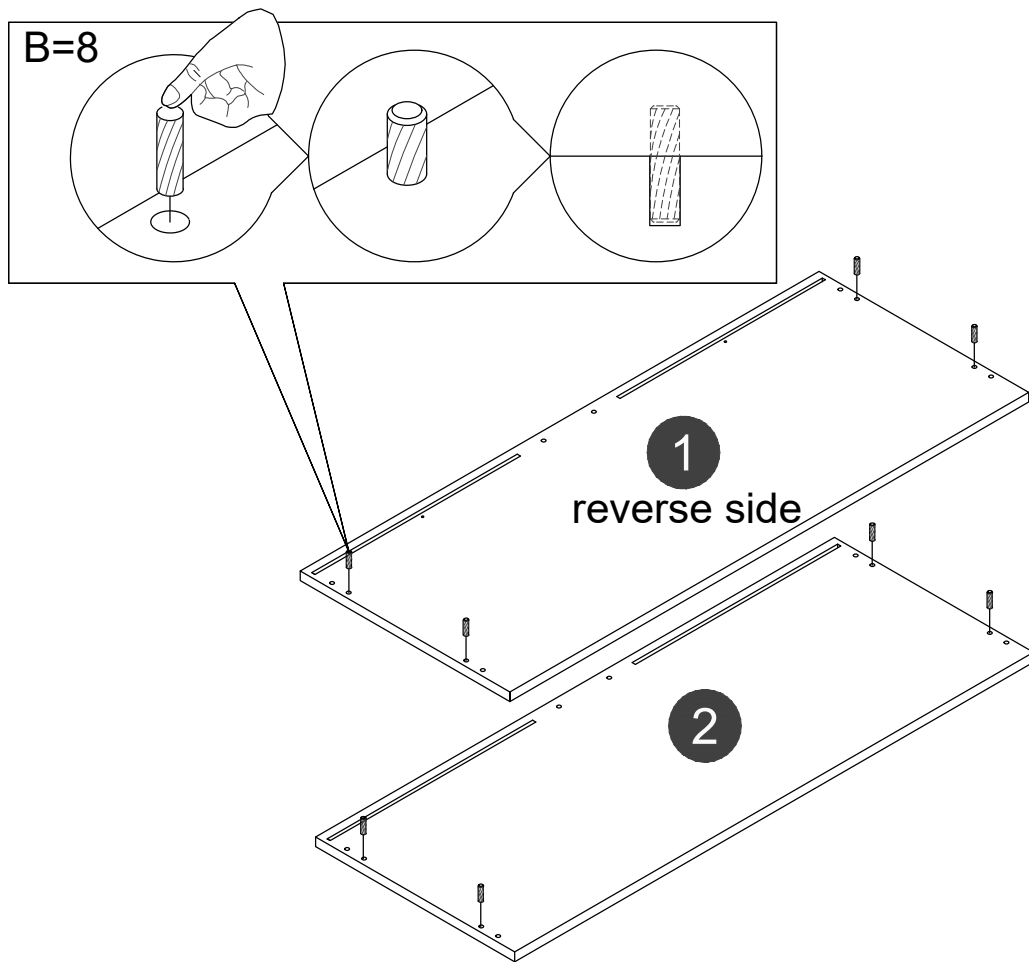


STEP 2

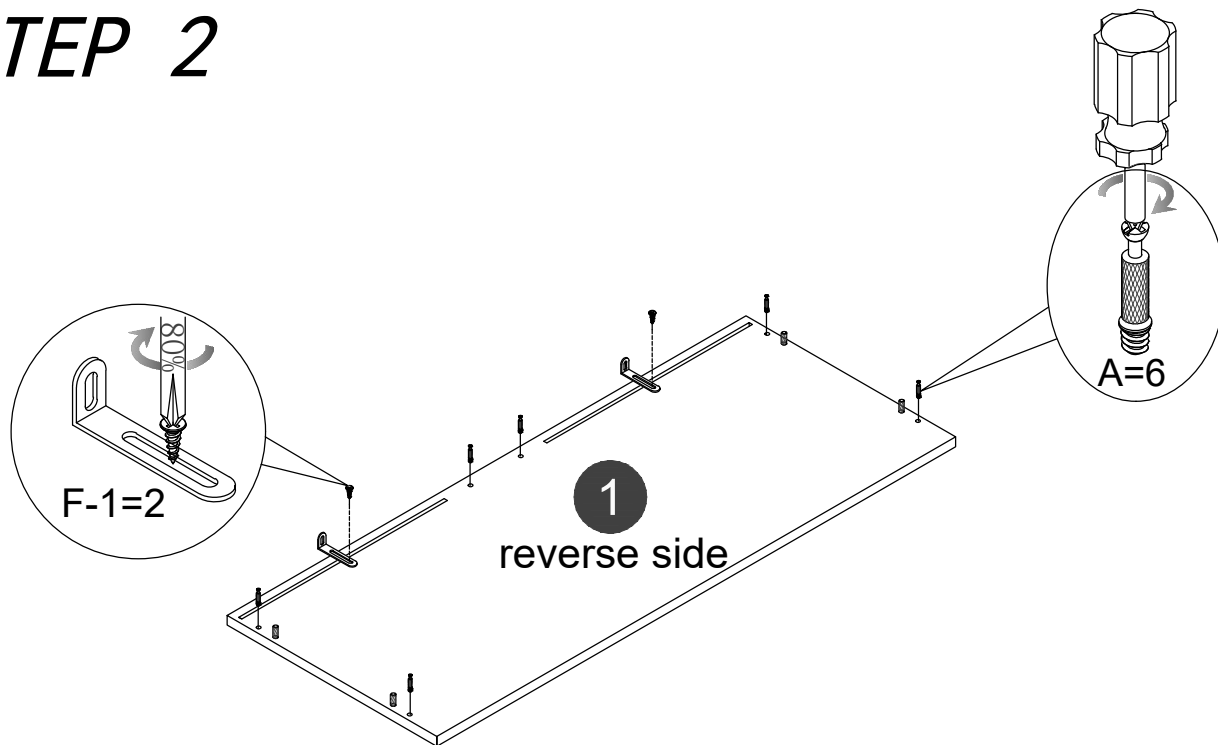


STEP 3

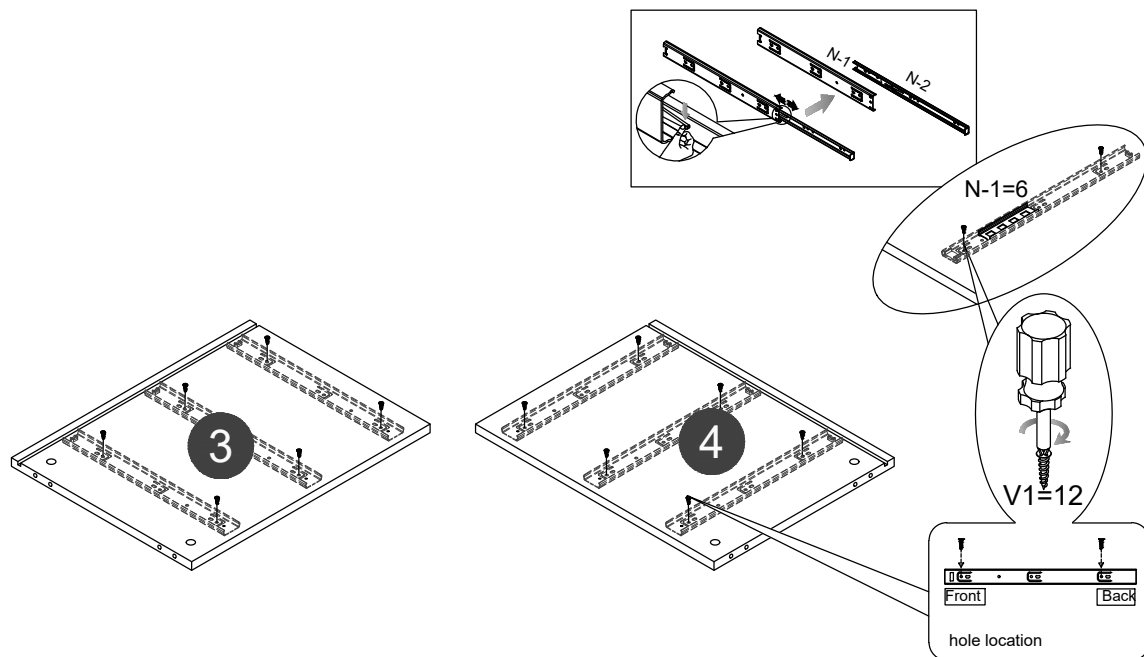


STEP 4

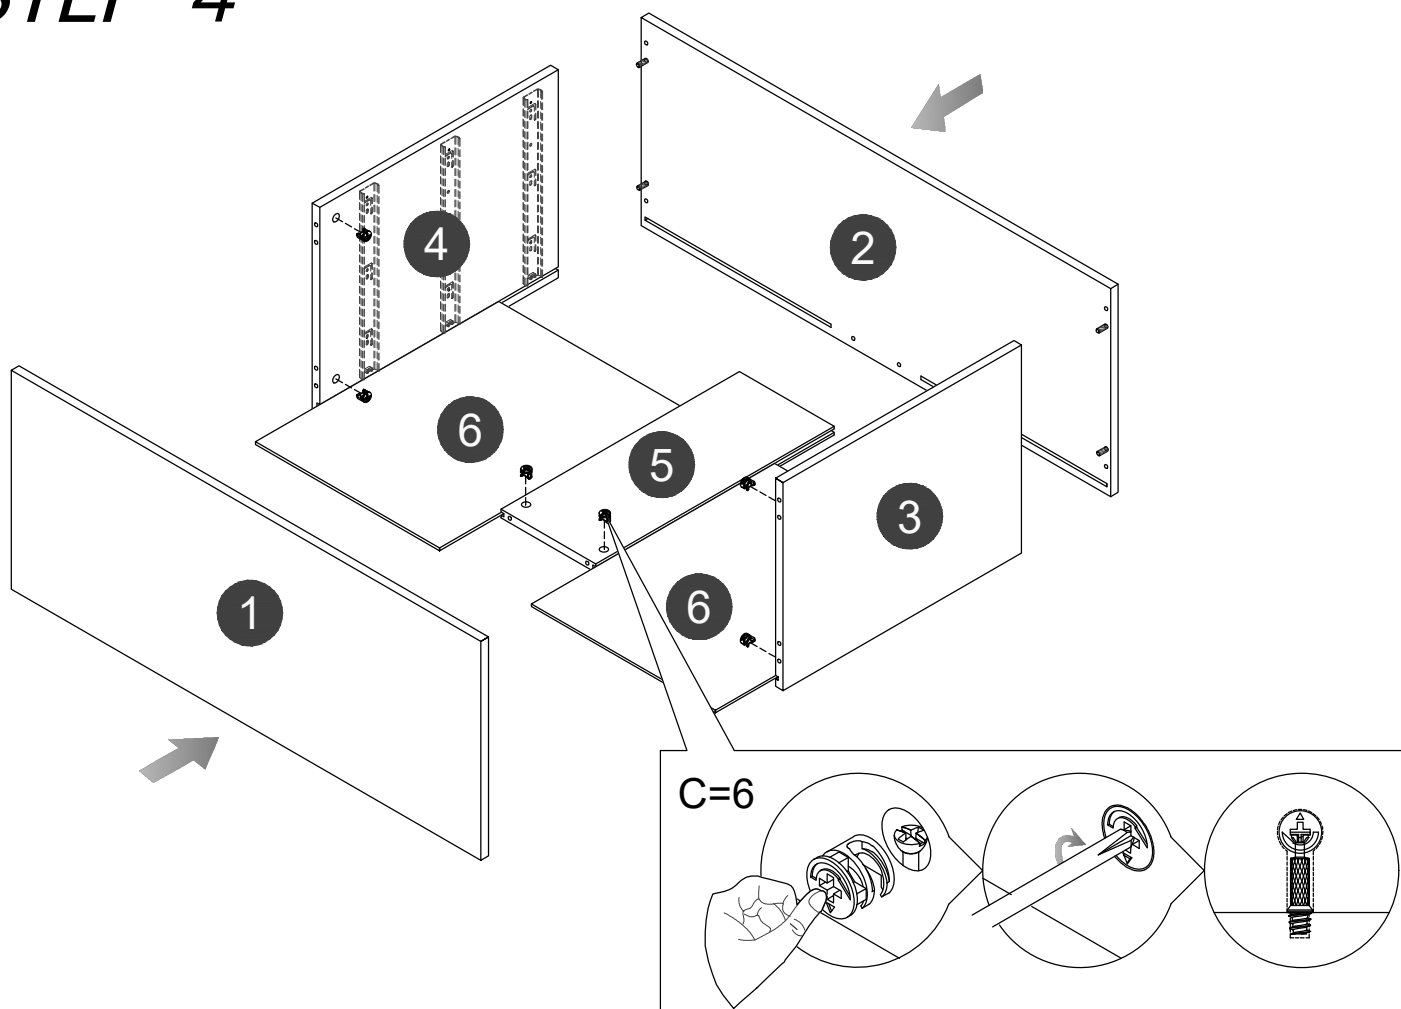


STEP 5

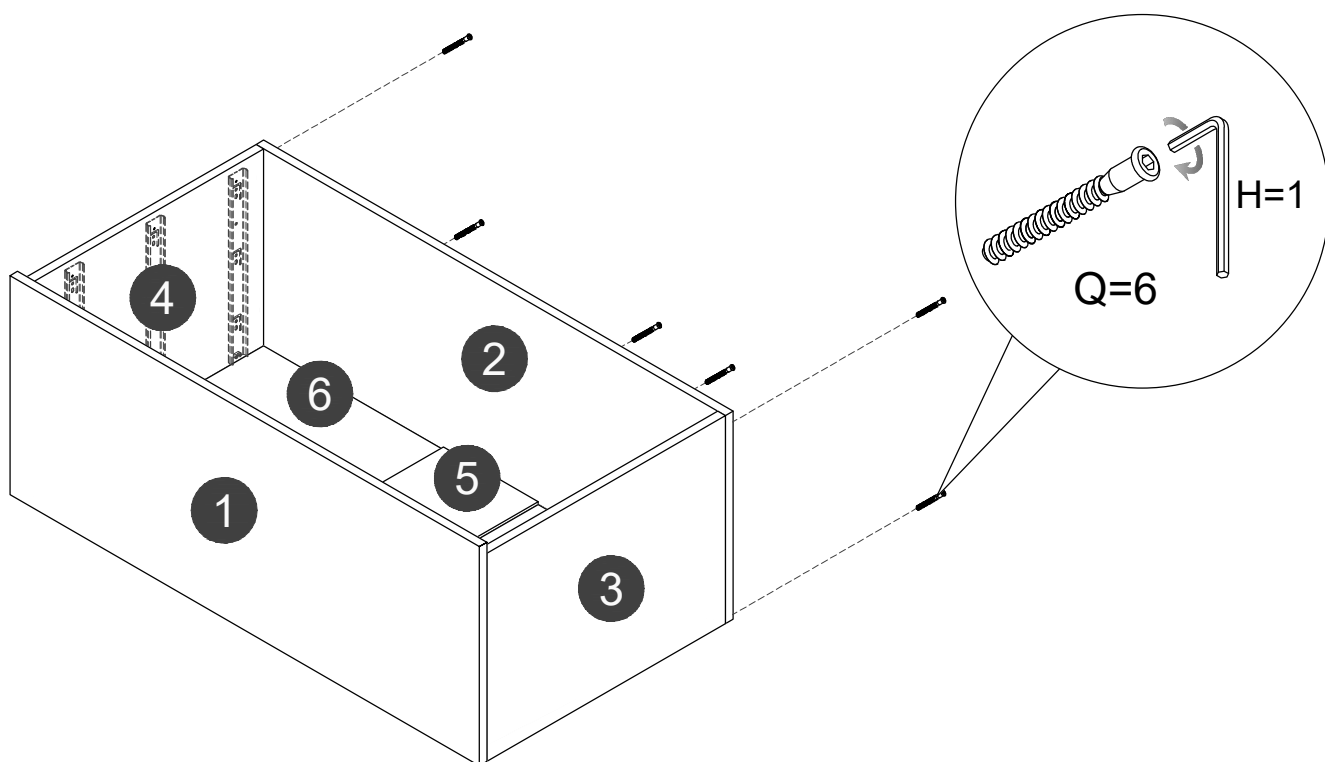


STEP 6

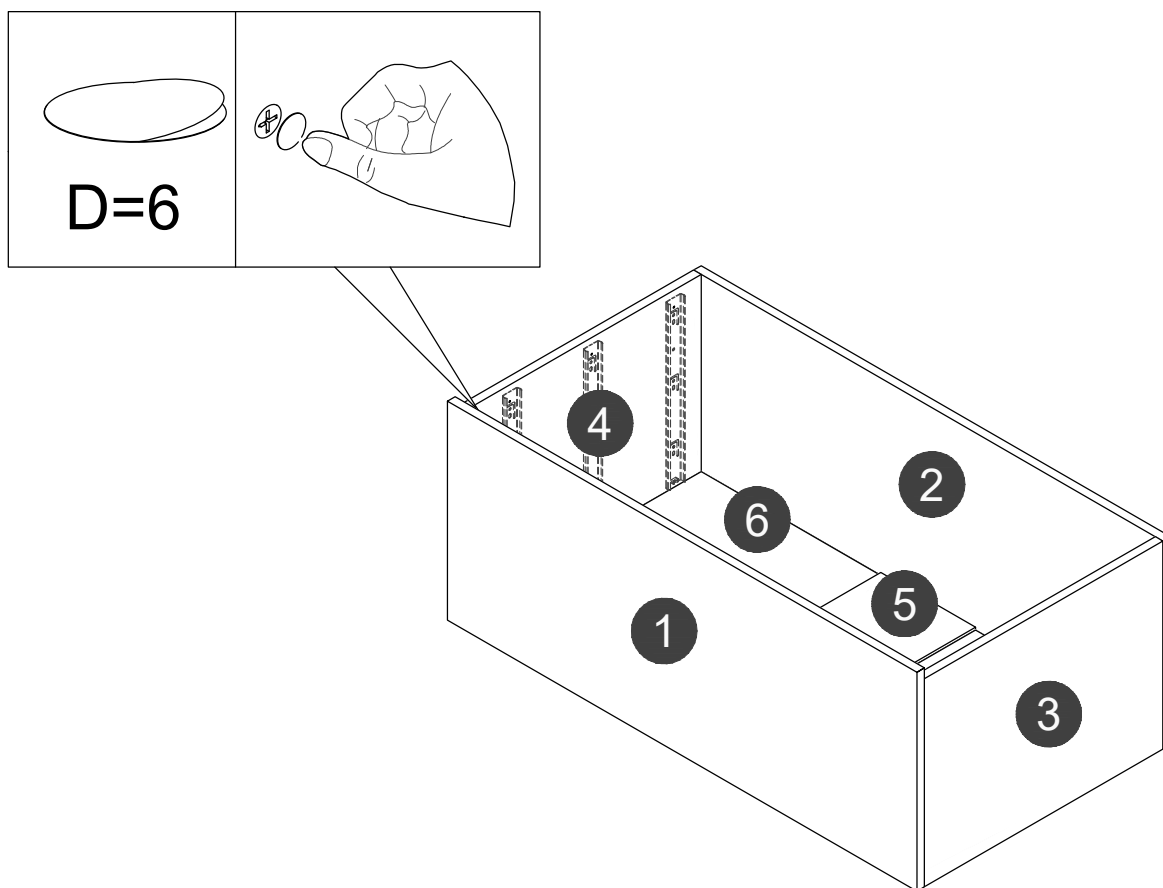


STEP 7

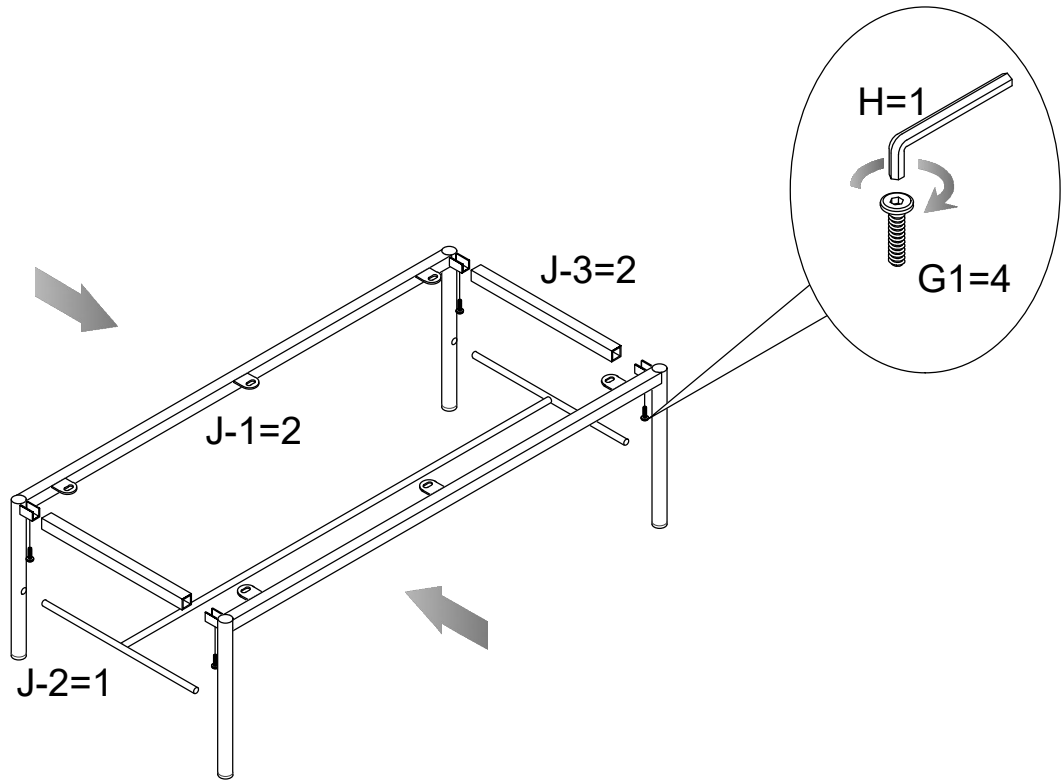


STEP 8

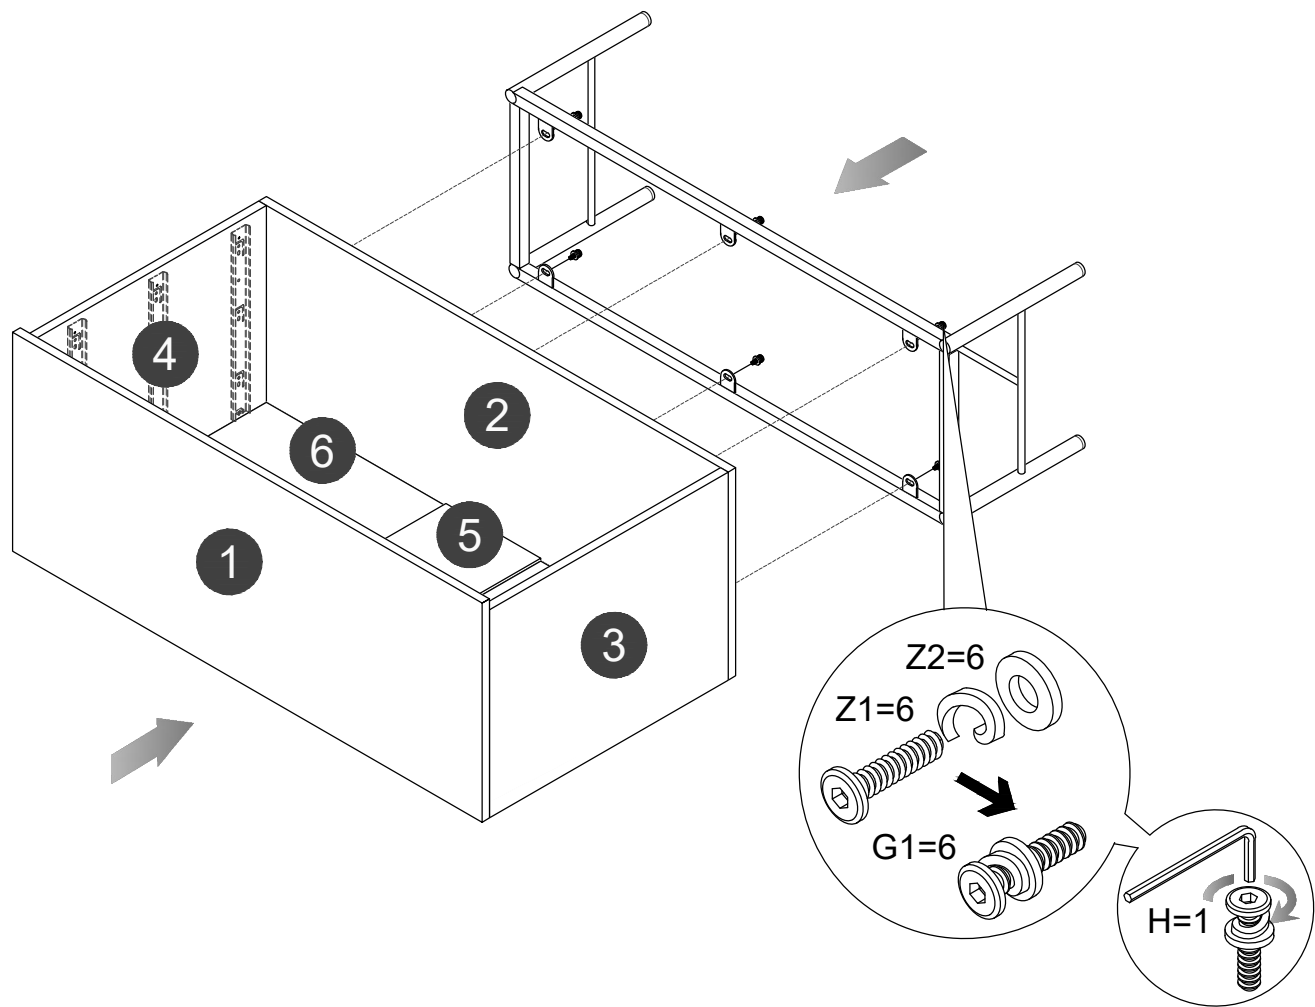


STEP 9

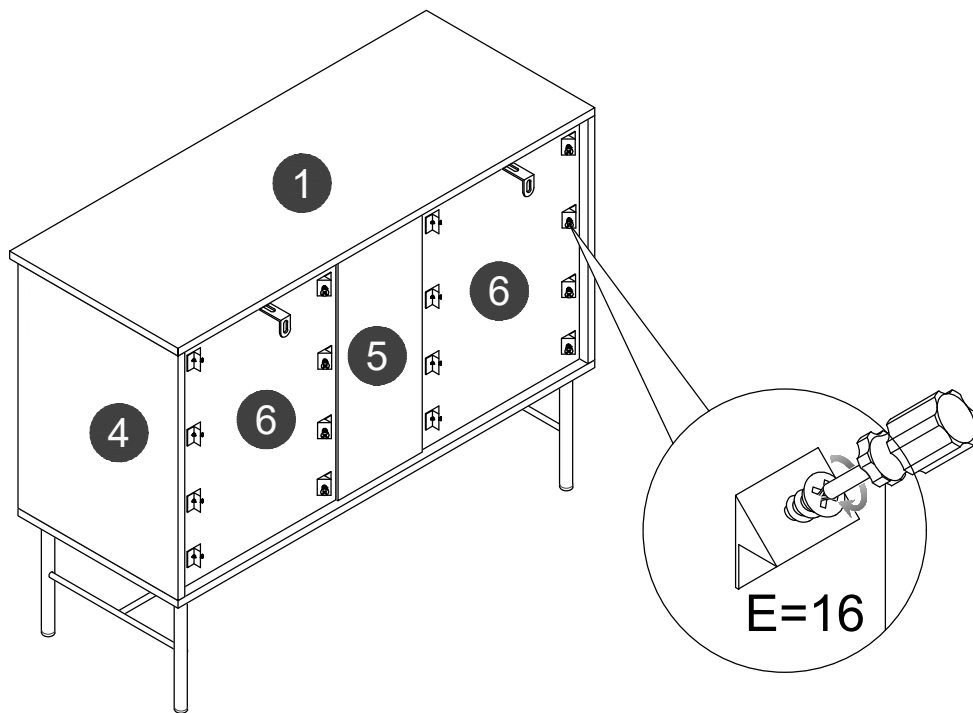

STEP 10

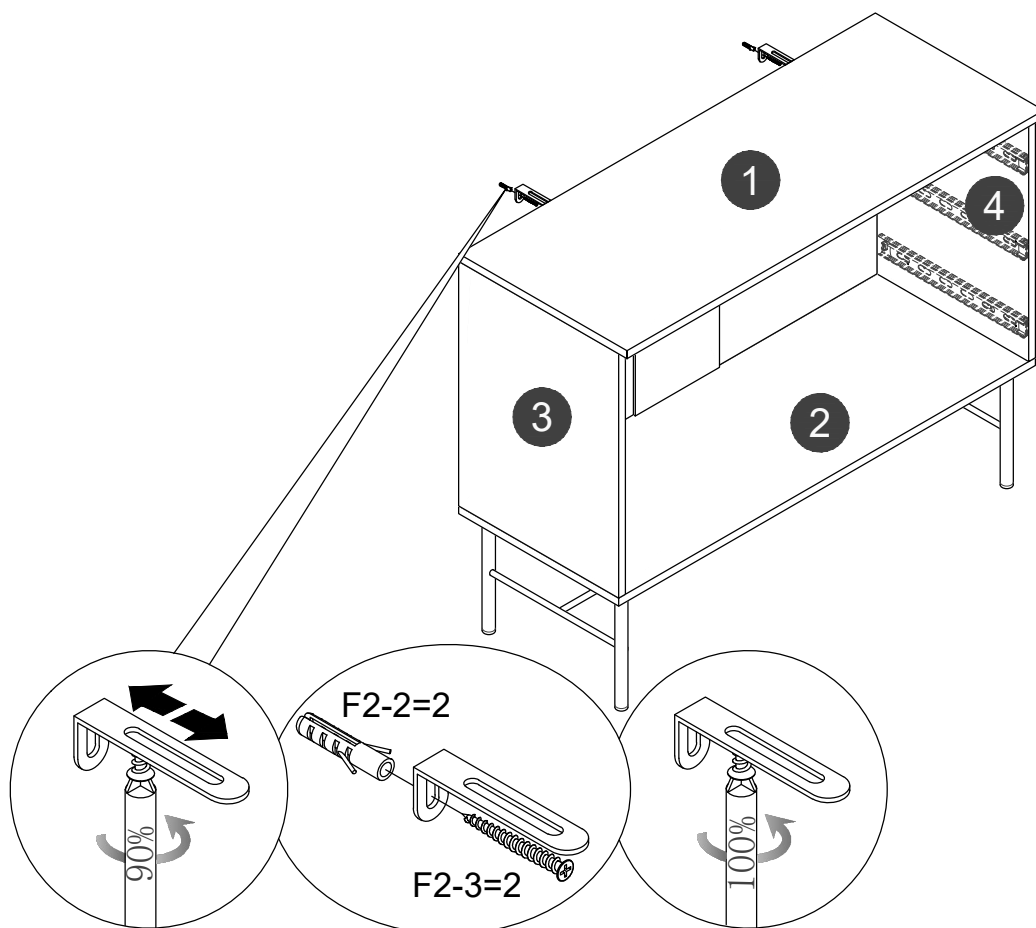


STEP 11

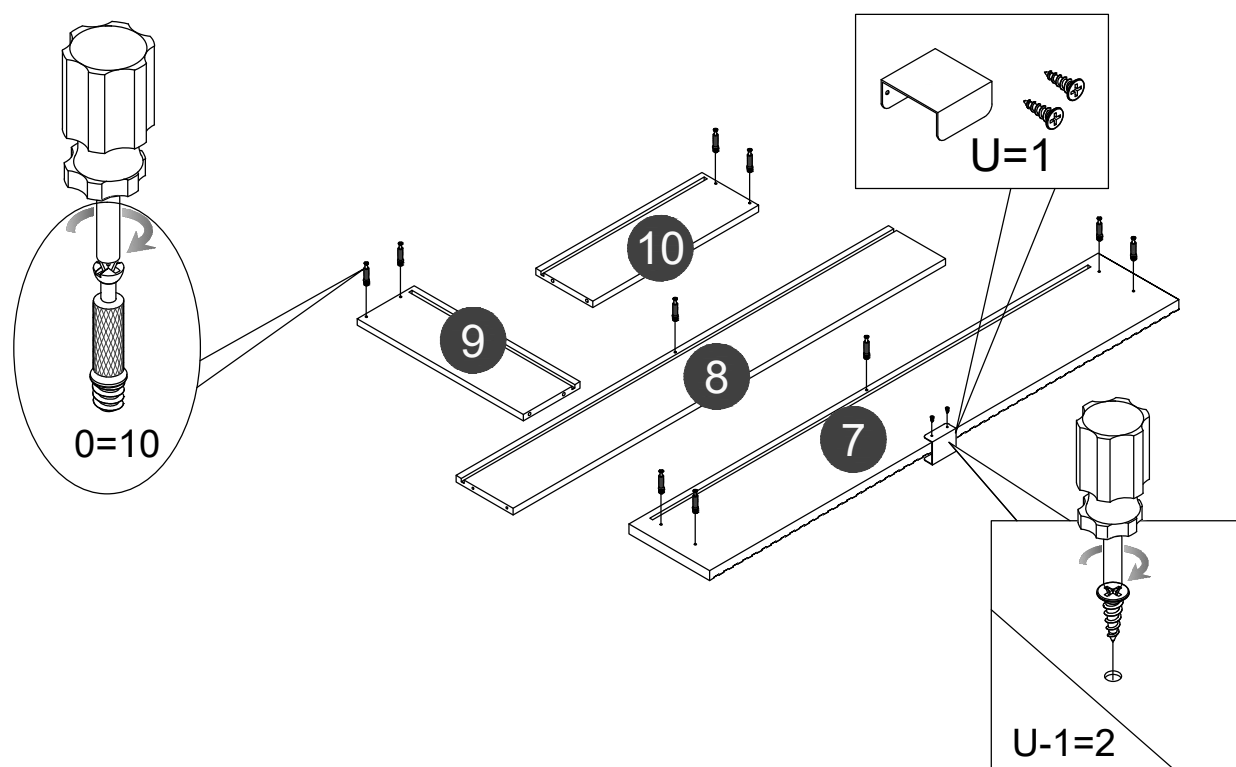


X3

STEP 12

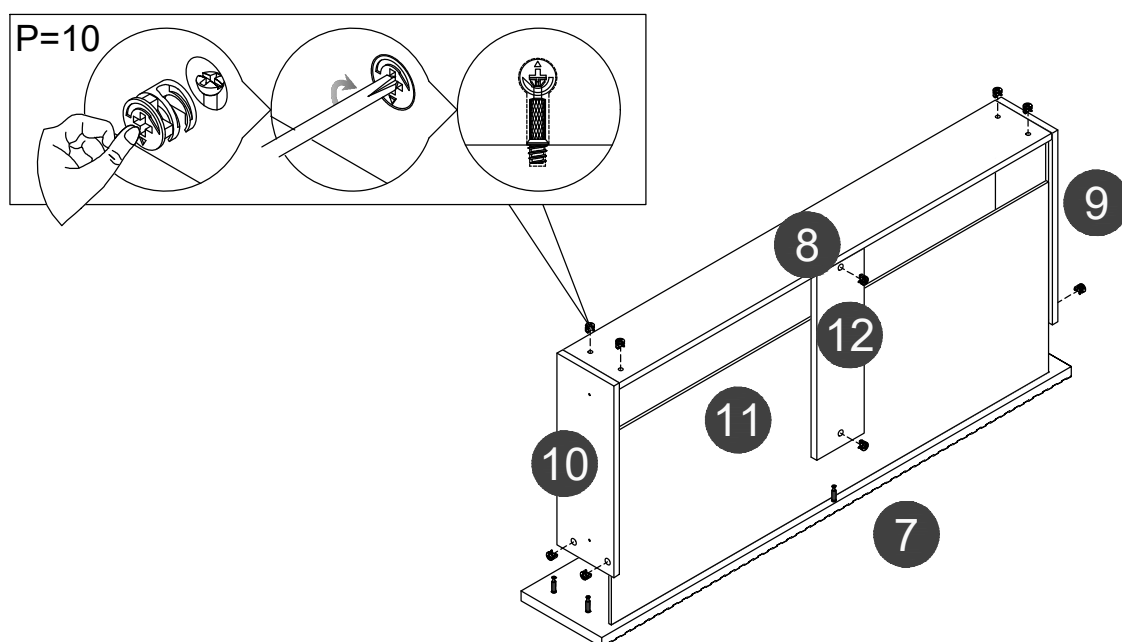


X3

STEP 13

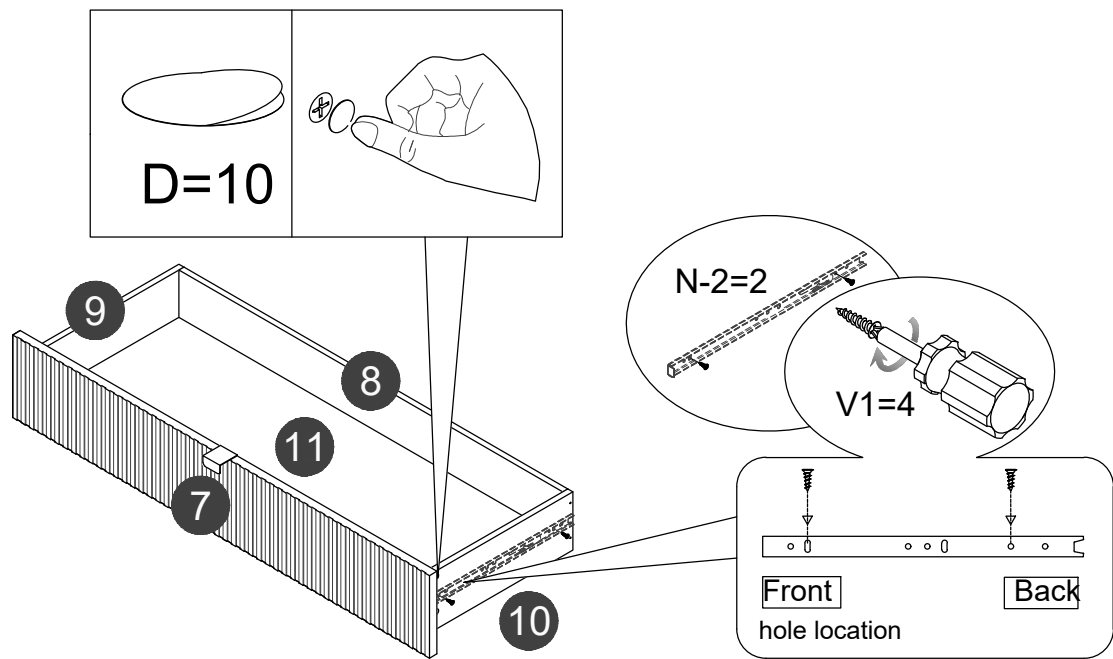


X3


STEP 14

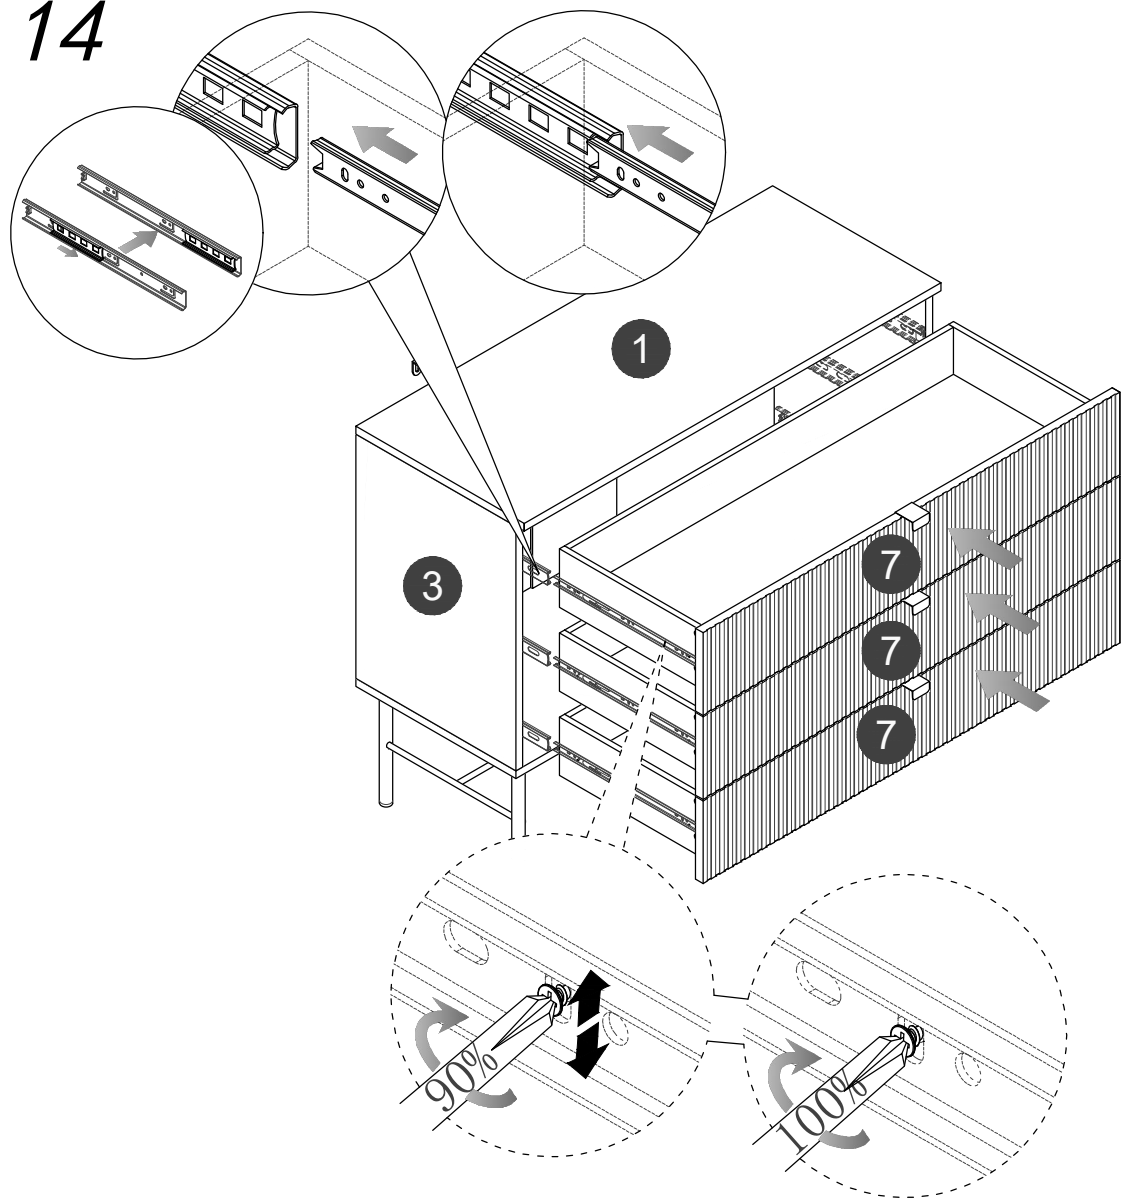

STEP 15

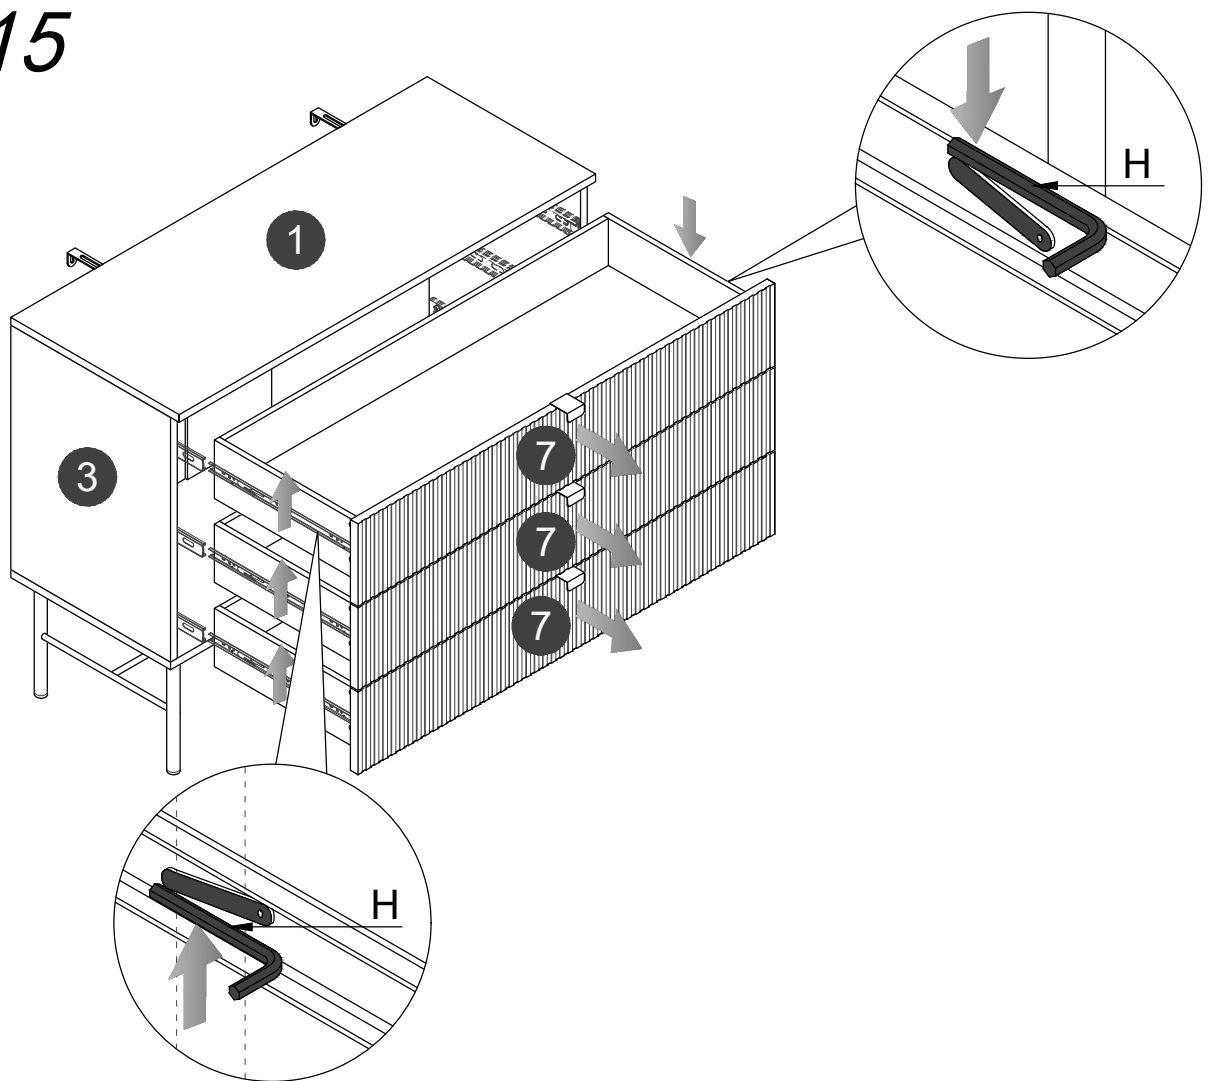

STEP 16

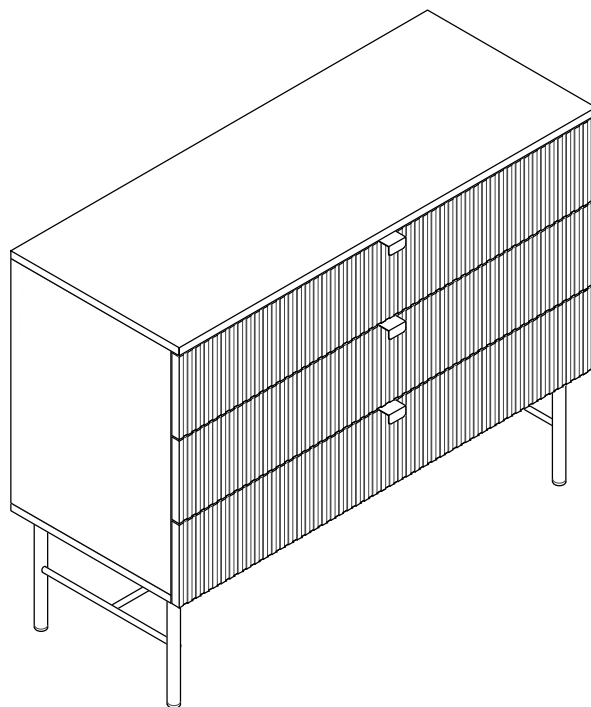

Finish