

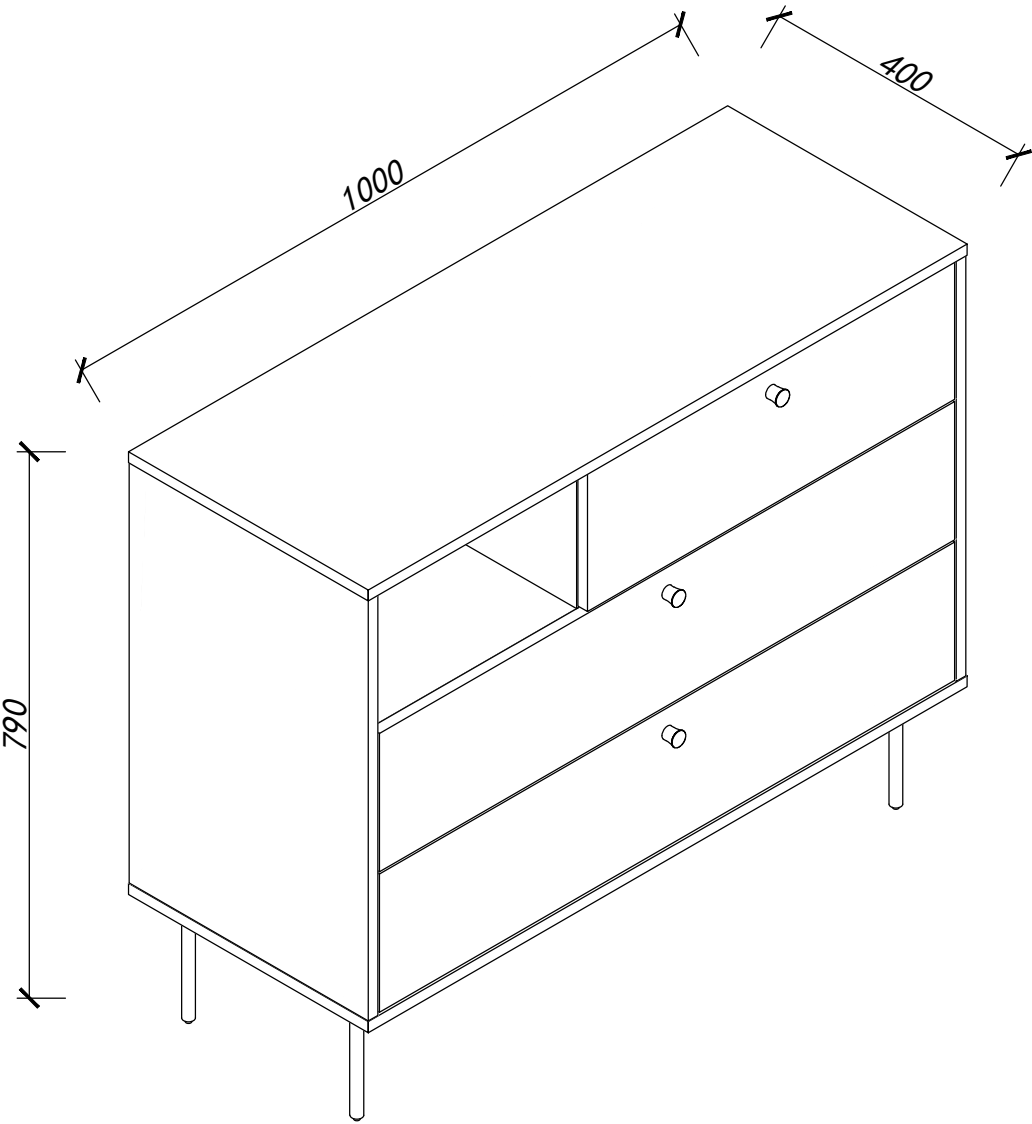
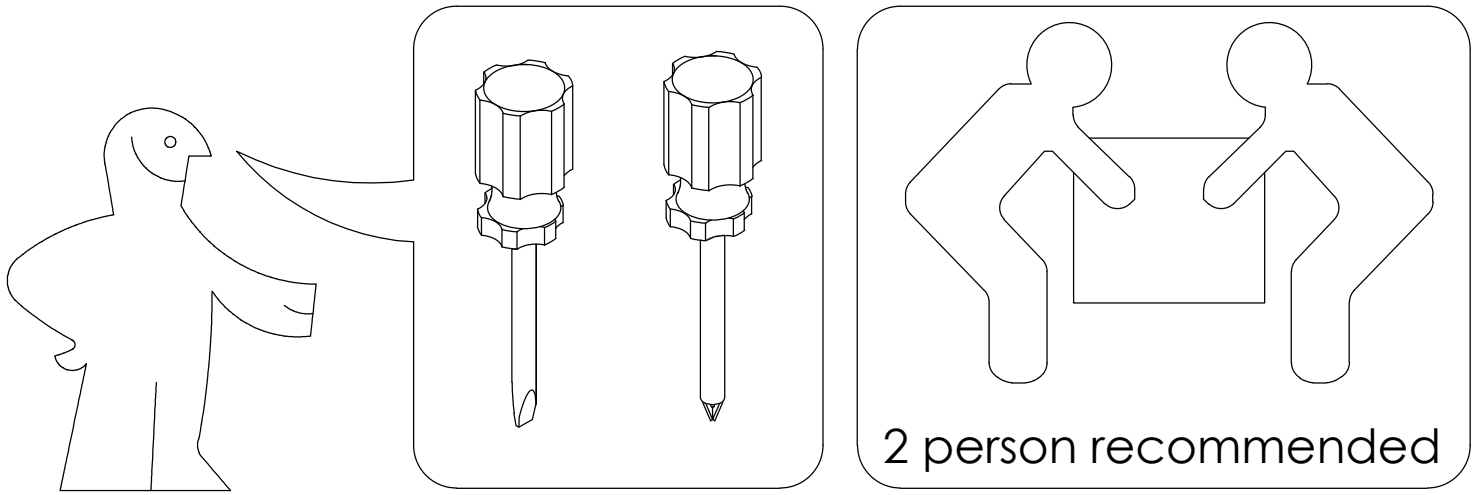
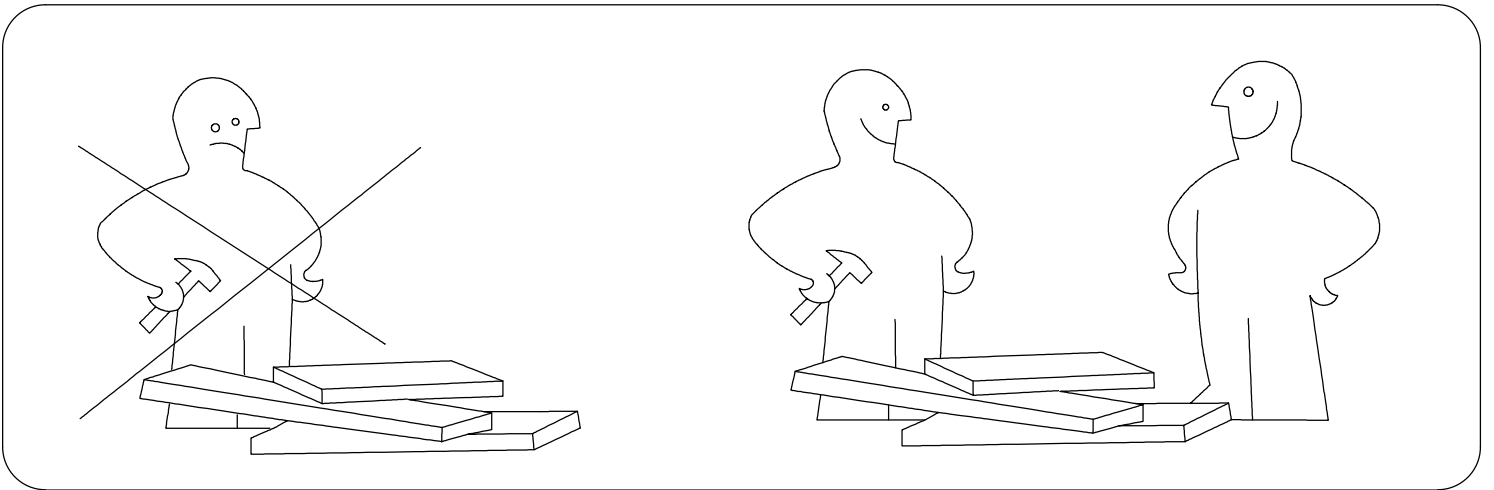


sømcasa


Assembly Instruction

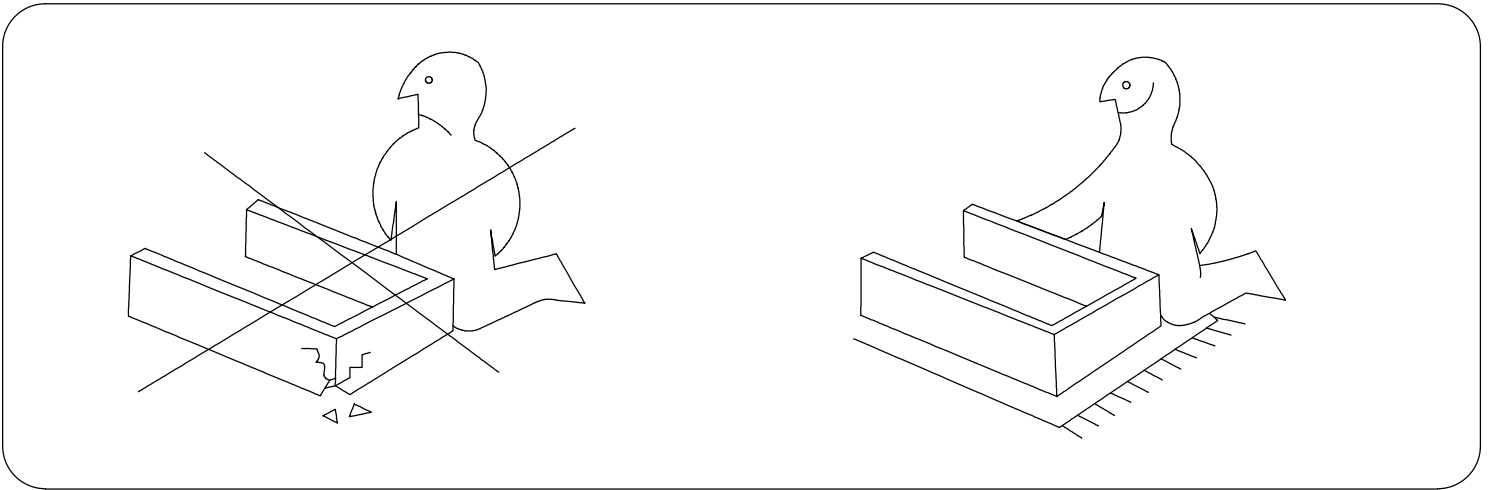

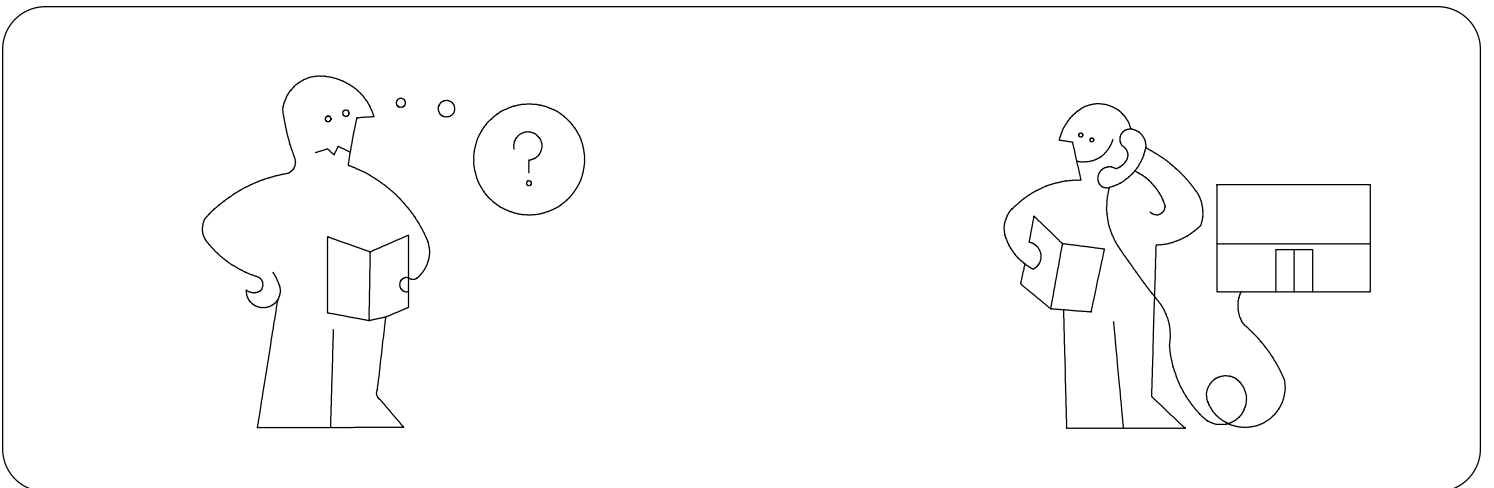

Panel No	Panel Sizes	Quantity
1	1000*400*16	1
2	1000*400*16	1
3	608*399*16	1
4	608*399*16	1
5	204*362*16	1
6	966*381*16	1
7	976*214*5	1
8	976*398*5	1

Panel No	Panel Sizes	Quantity
9	613*200*16	1
10	556*150*12	1
11	960*200*16	2
12	922*150*12	2
13	350*150*12	3
14	350*150*12	3
15	566*348*5	1
16	932*348*5	2
17	337*100*12	2

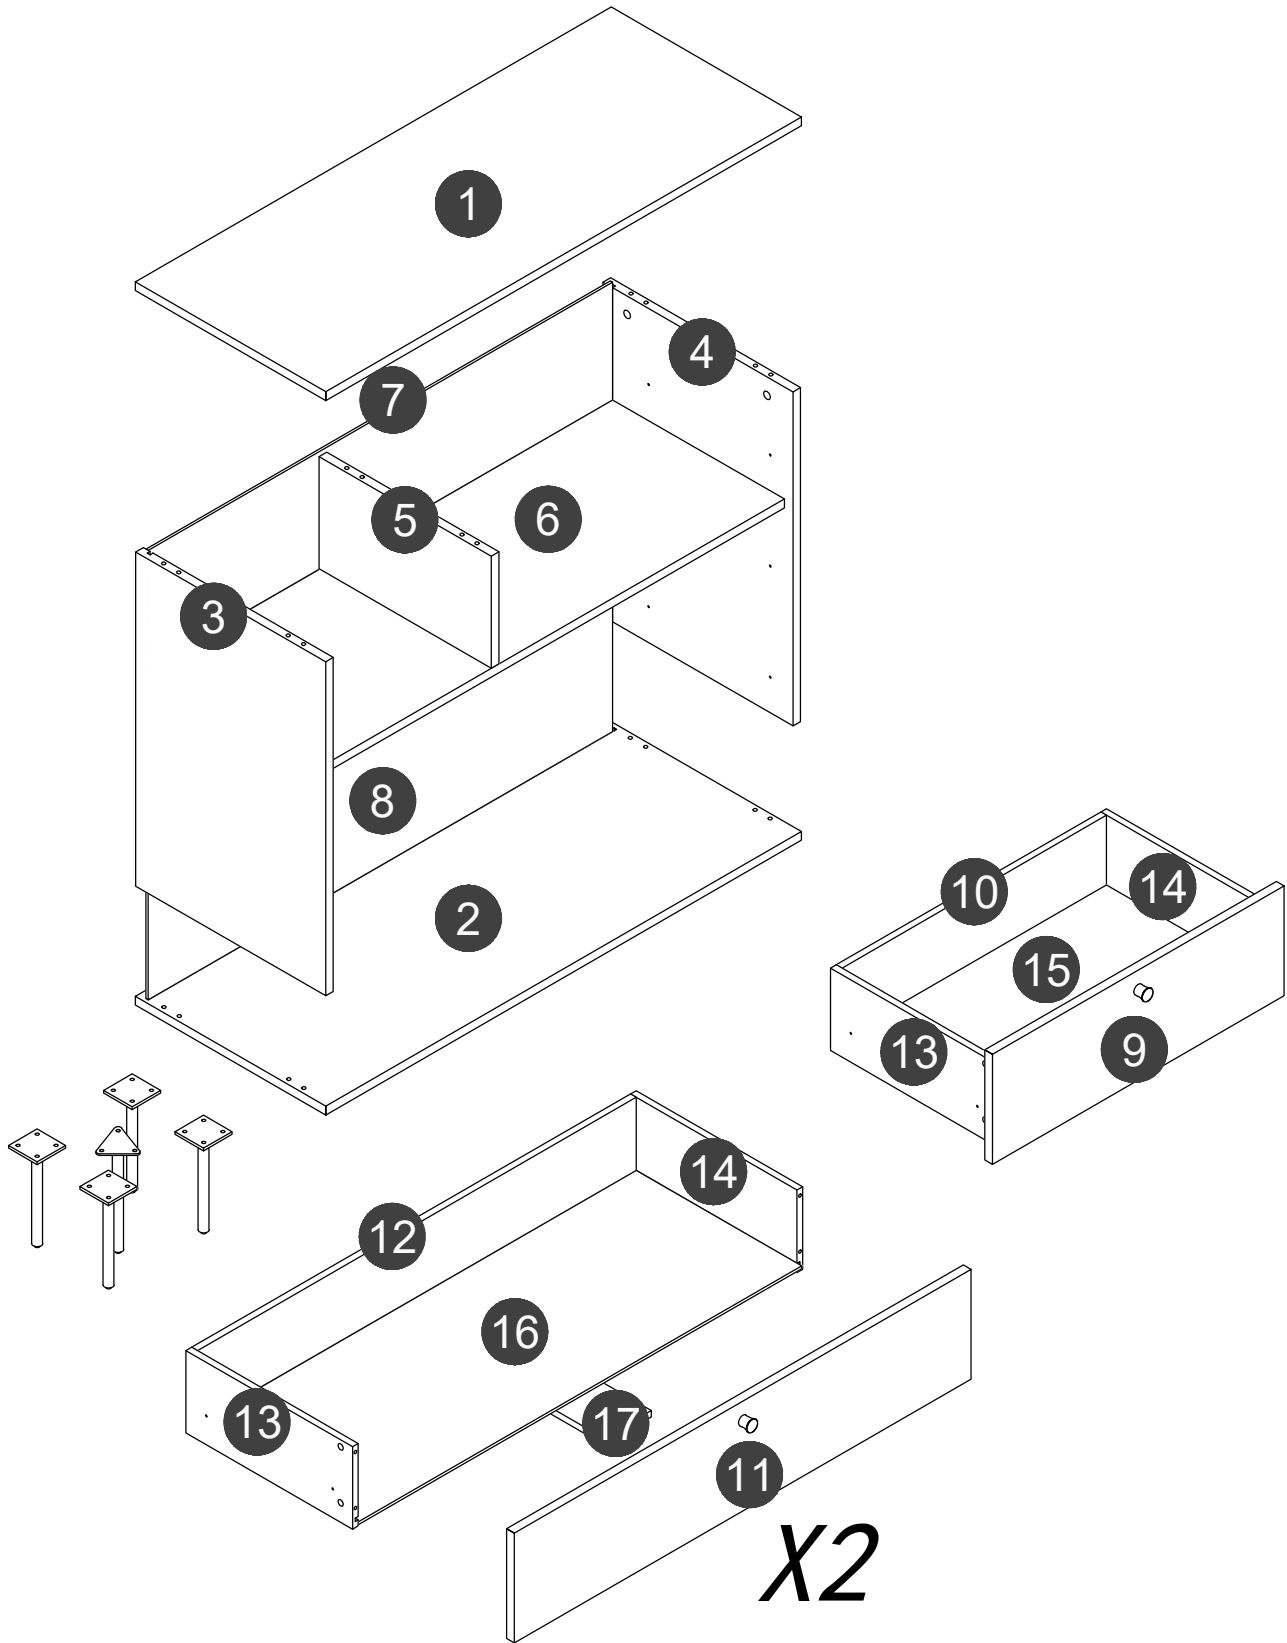


Fittings




M6*40

A=10



Φ8*30

B=16

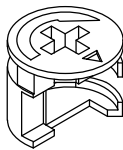

Φ15*12

C=10




Φ21

D=38



E=14

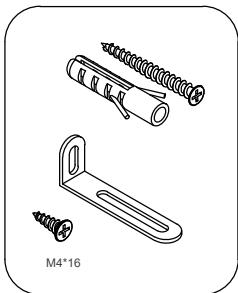


M4*16

F=2




M6*16


G1=19



H =1



J-1=4




J-2=1




O =28




P =28

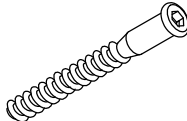


Q=6

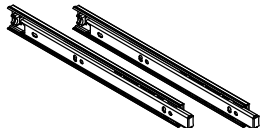

N=3

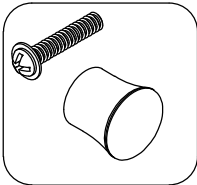

U=3



V1=24




Z1=19




Z2=19


STEP 1

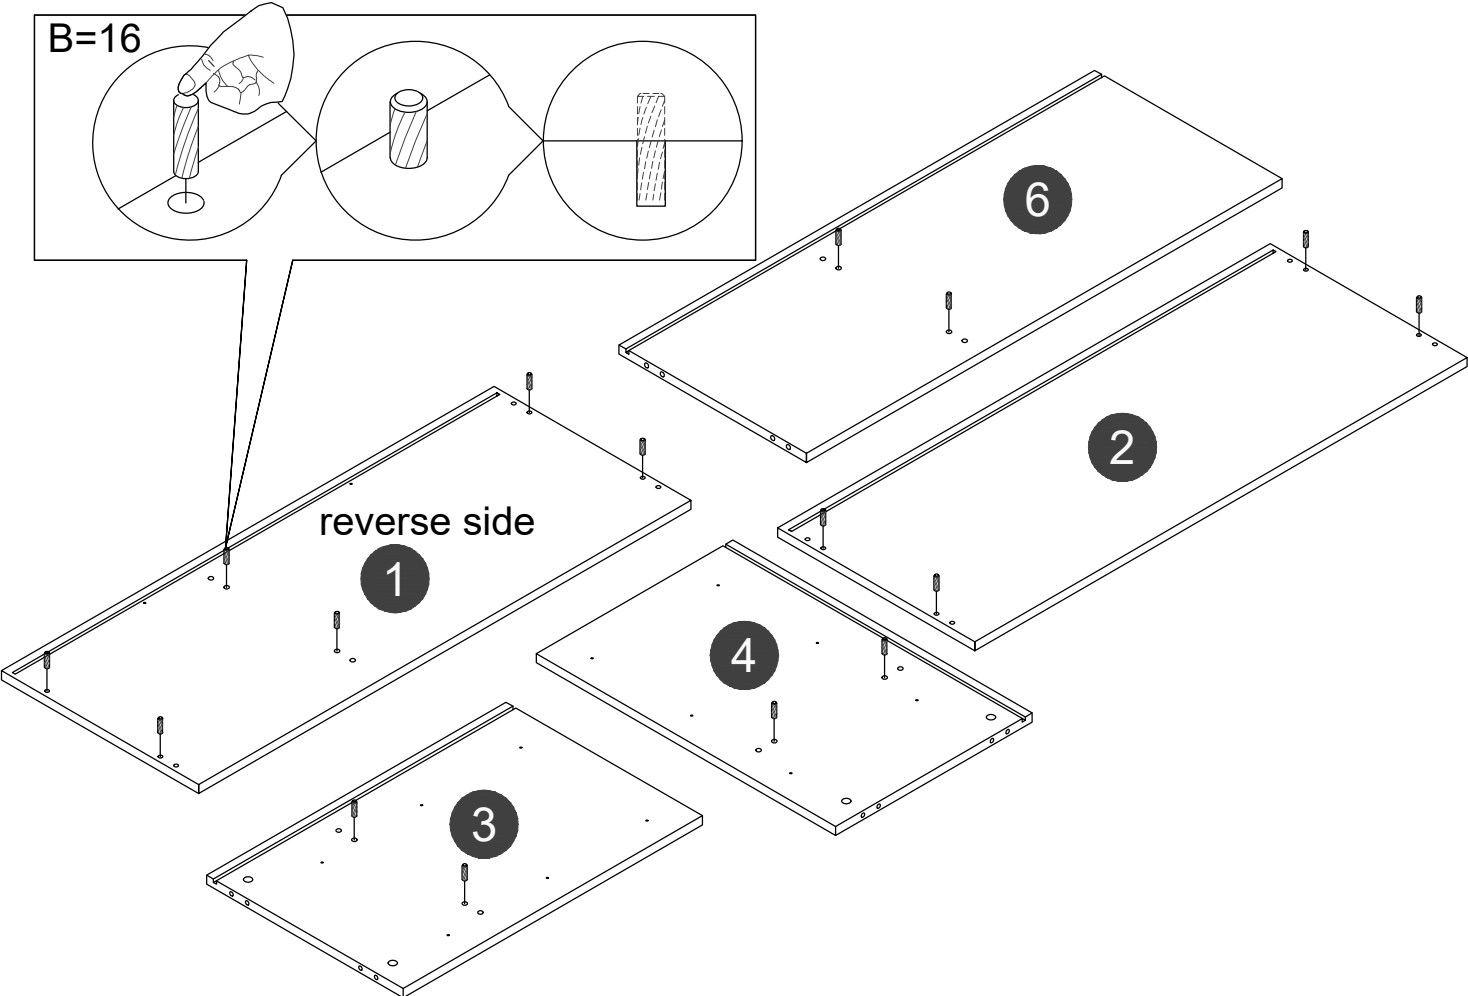


STEP 2

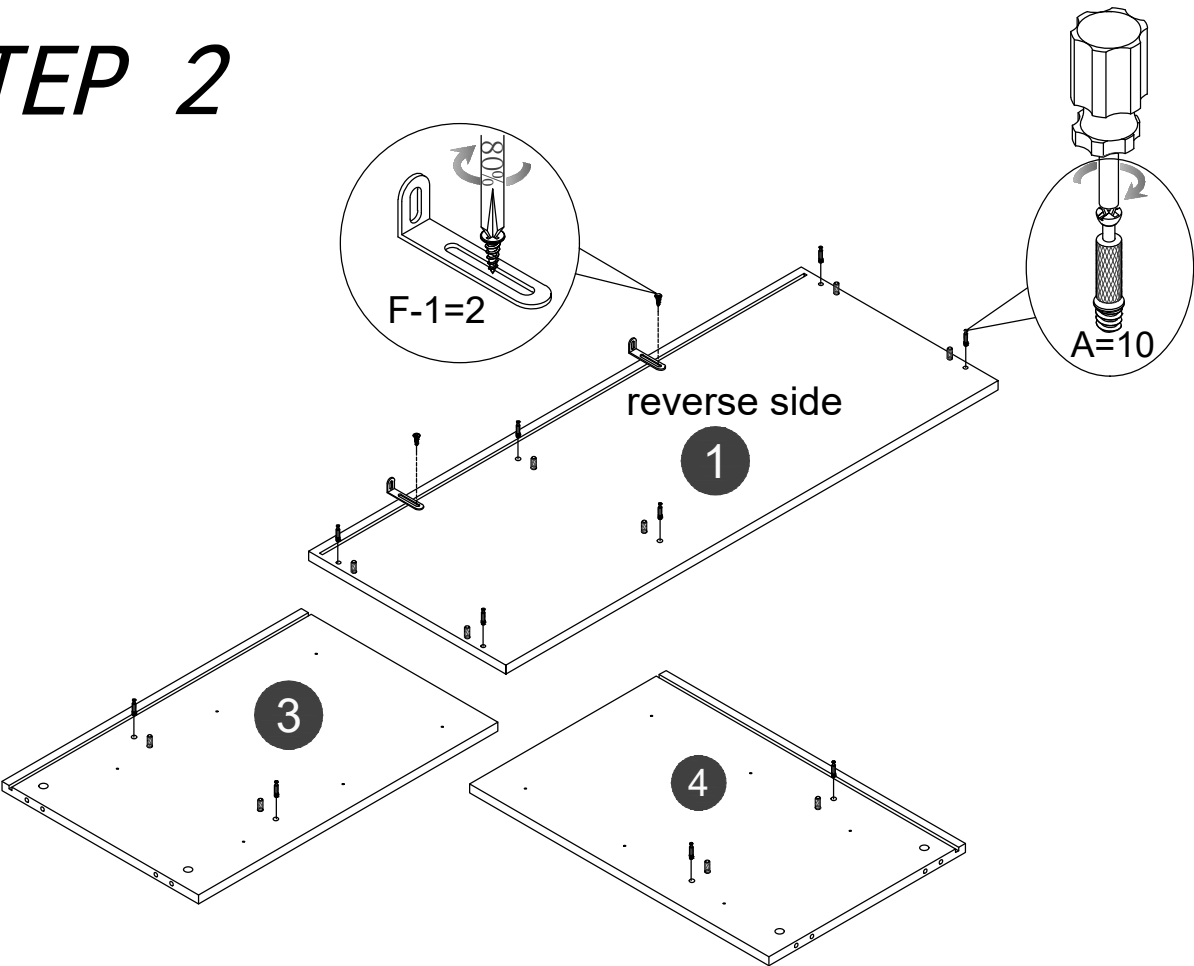


STEP 3

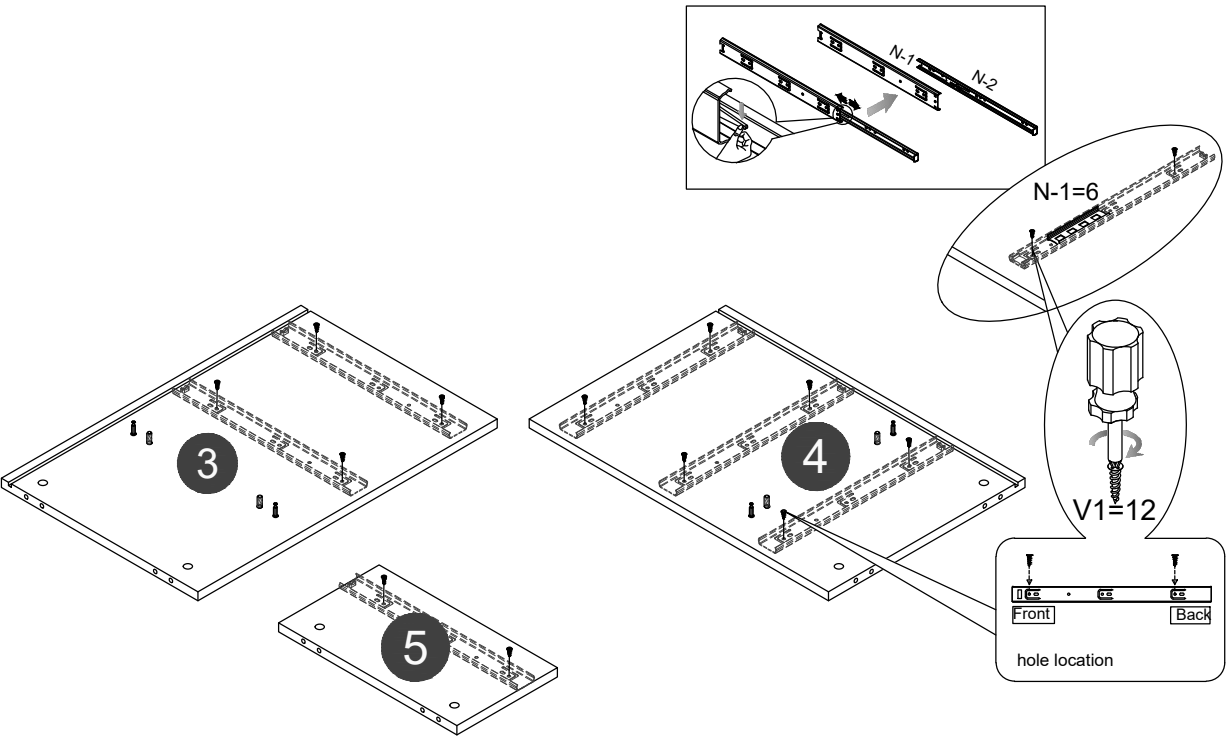


STEP 4

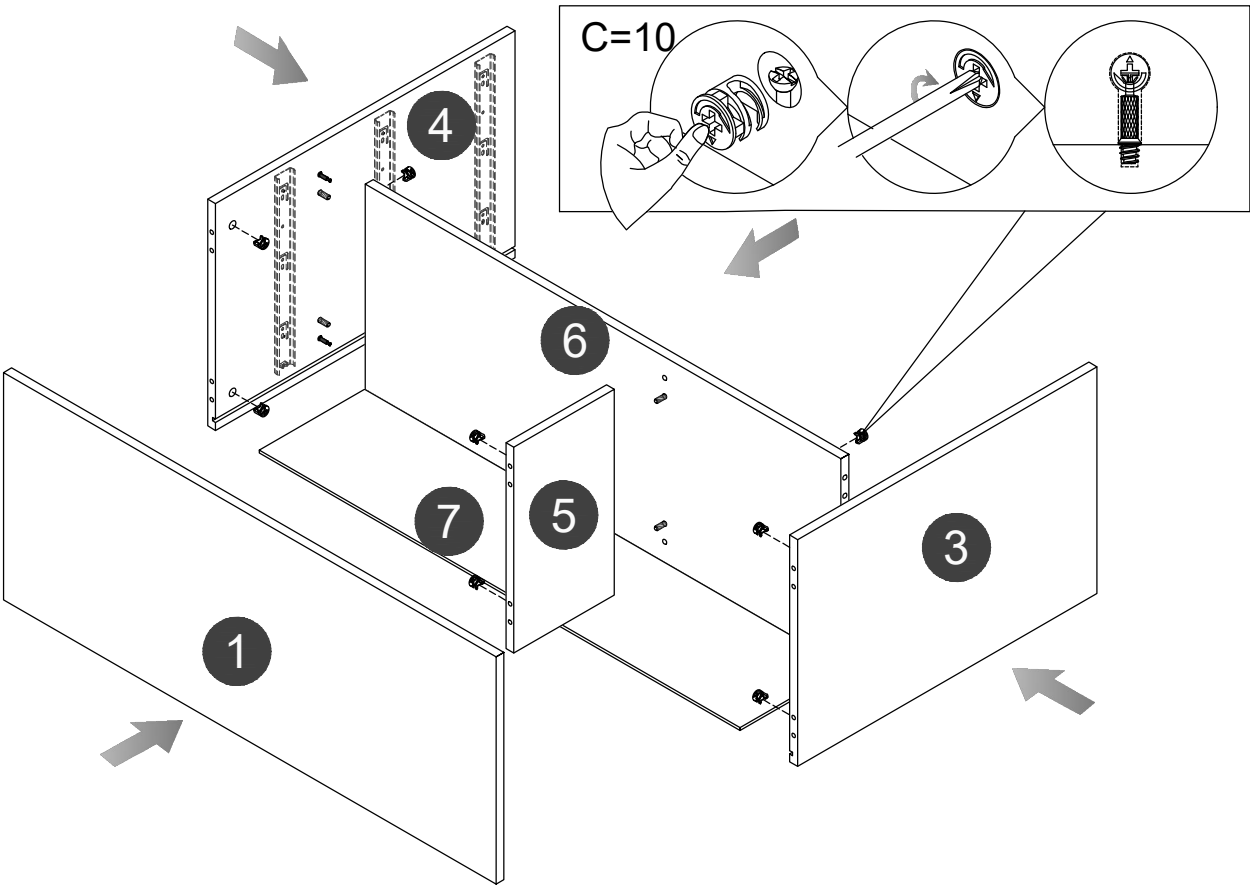


STEP 5

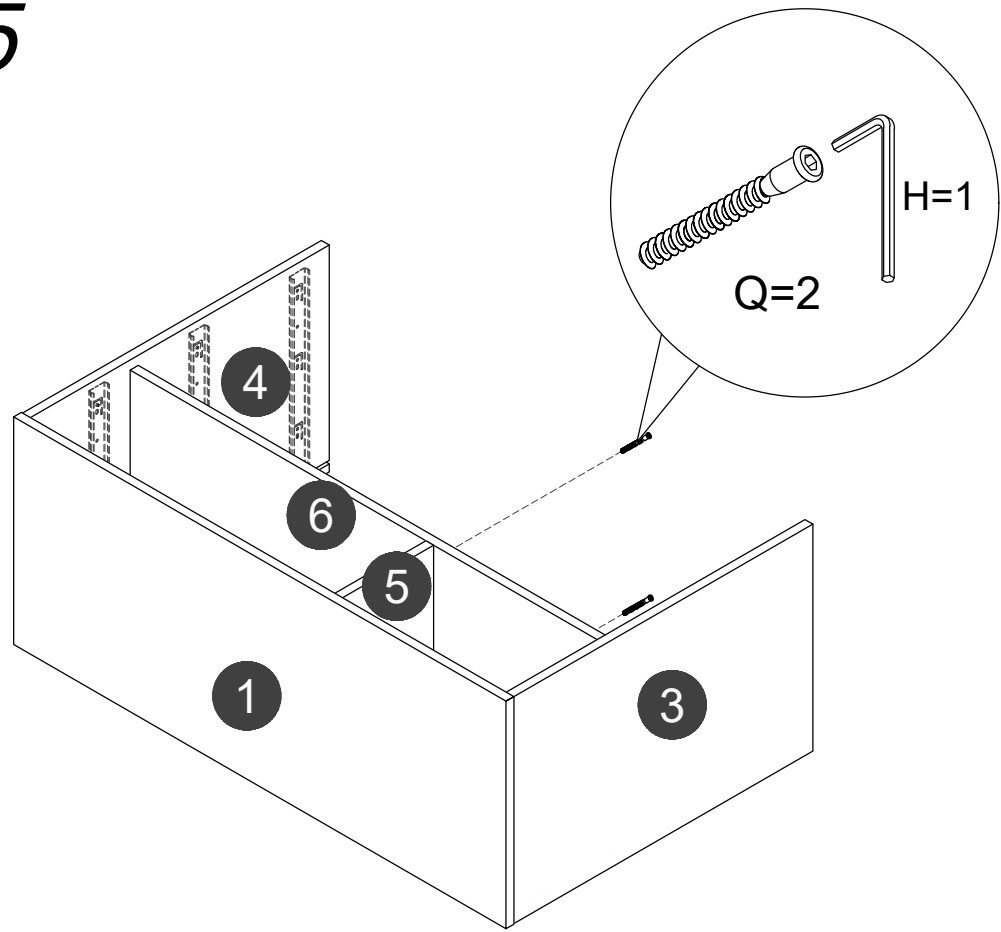


STEP 6

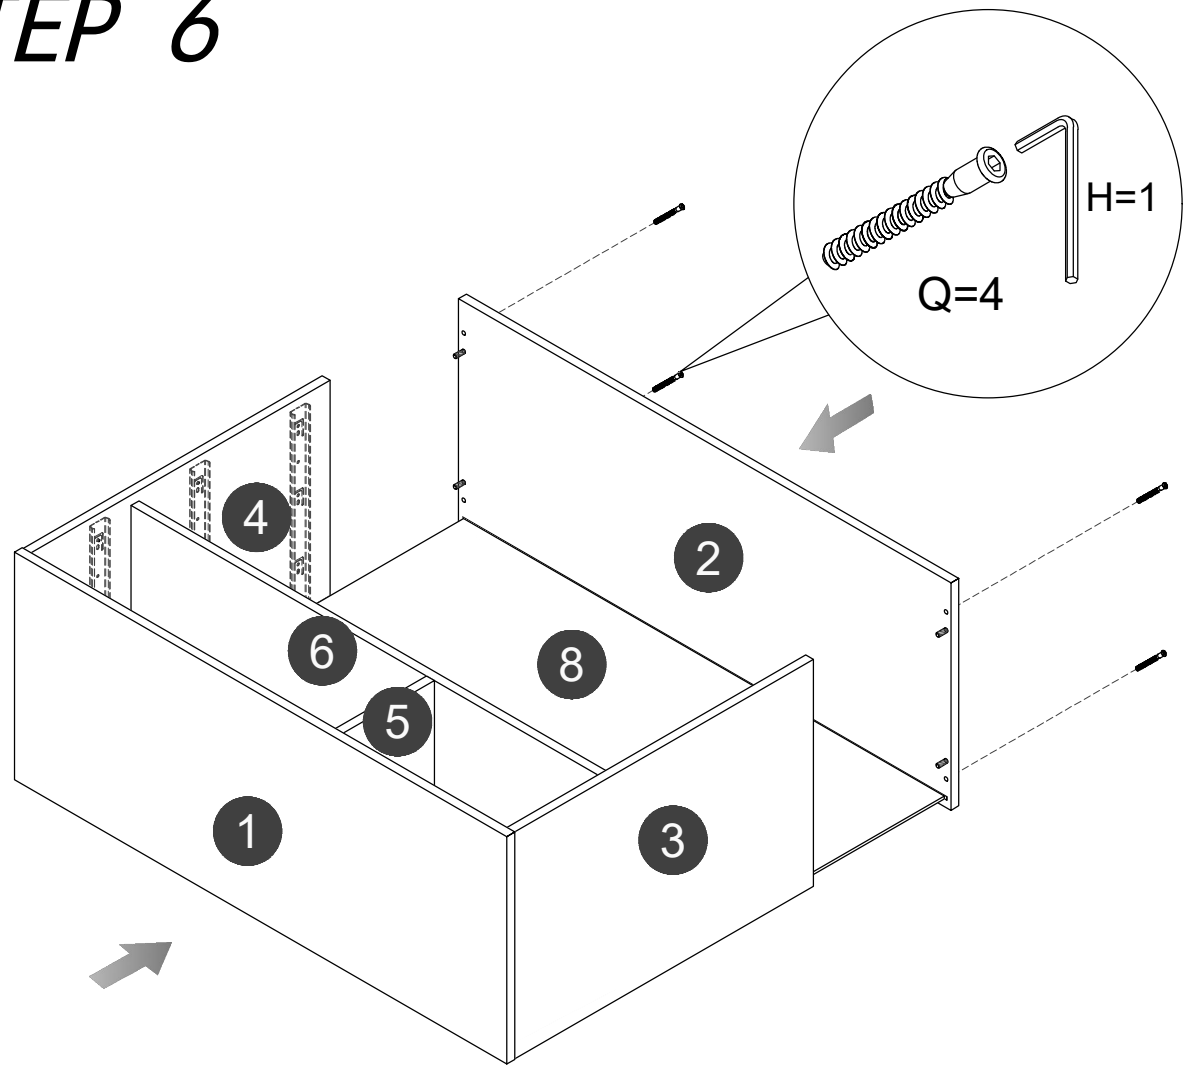


STEP 7

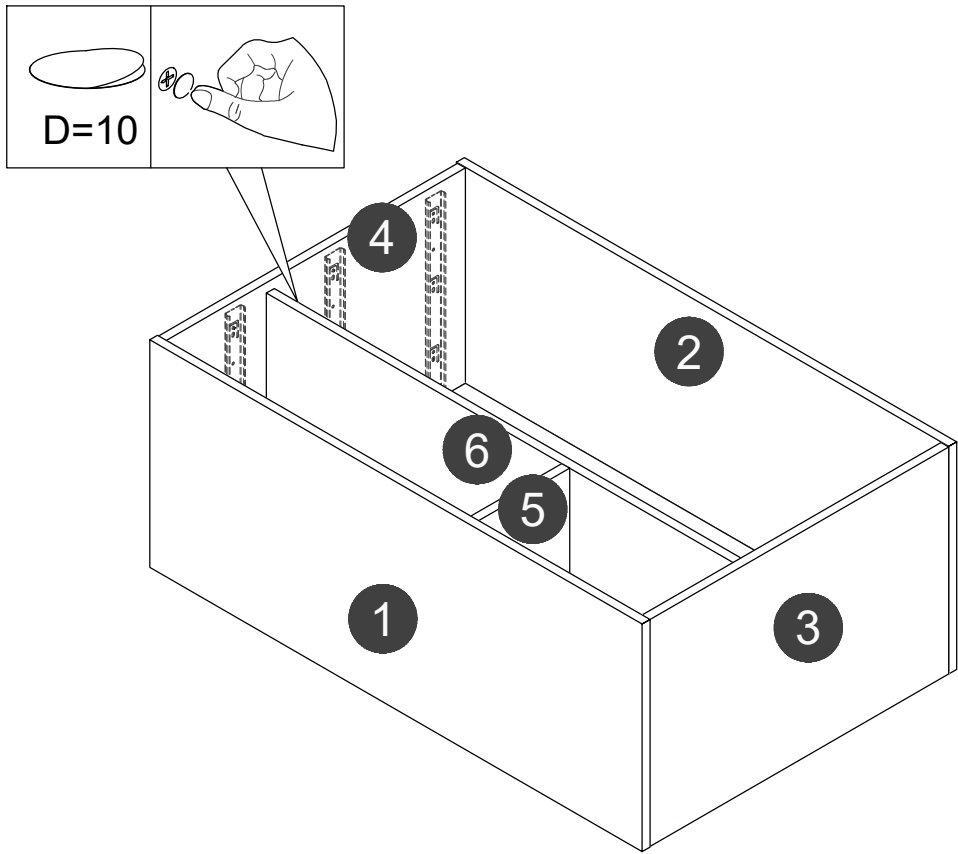


STEP 8

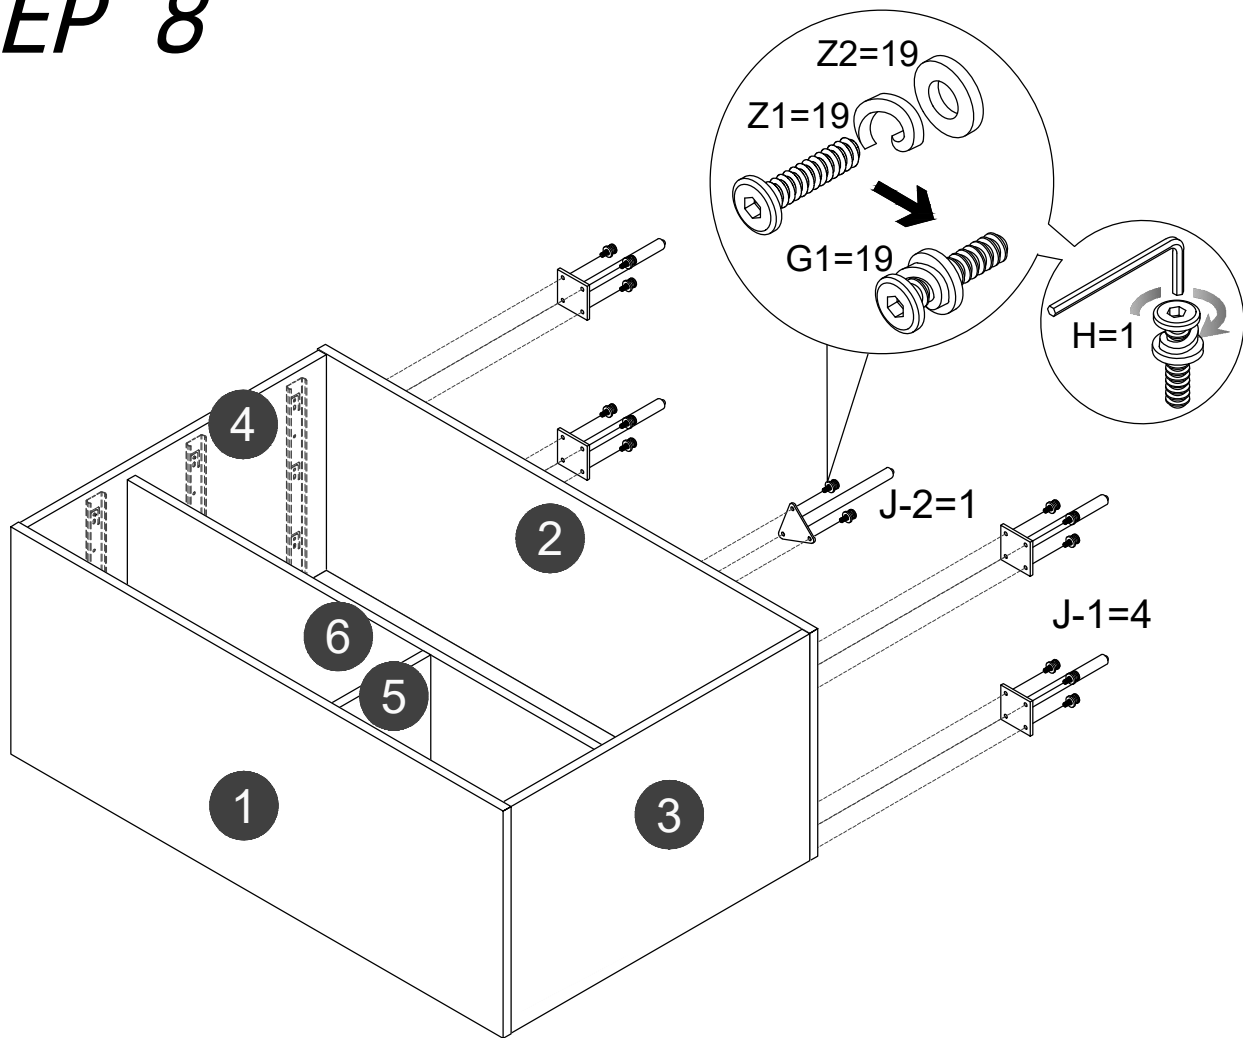


STEP 9

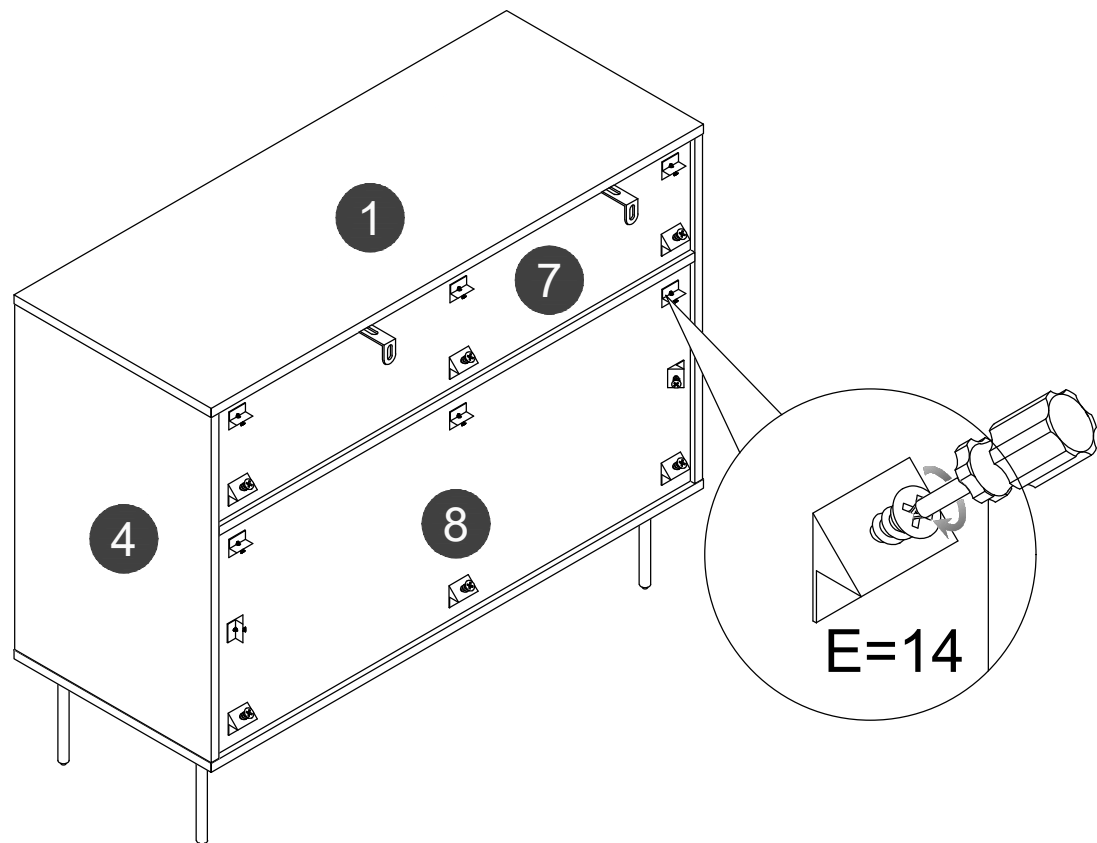



STEP 10

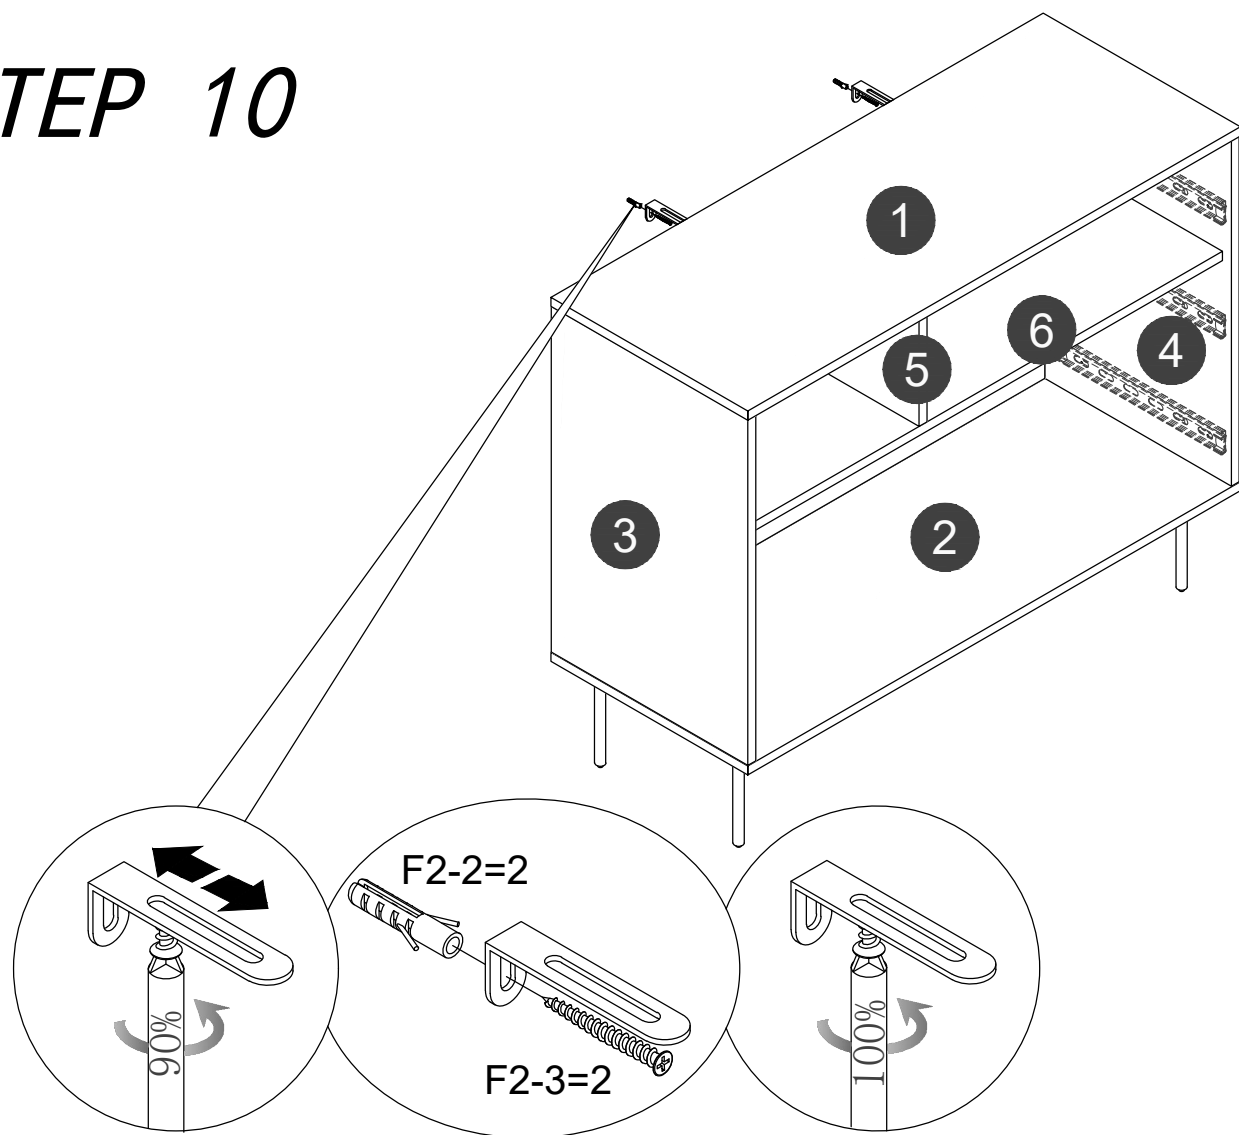


STEP 11

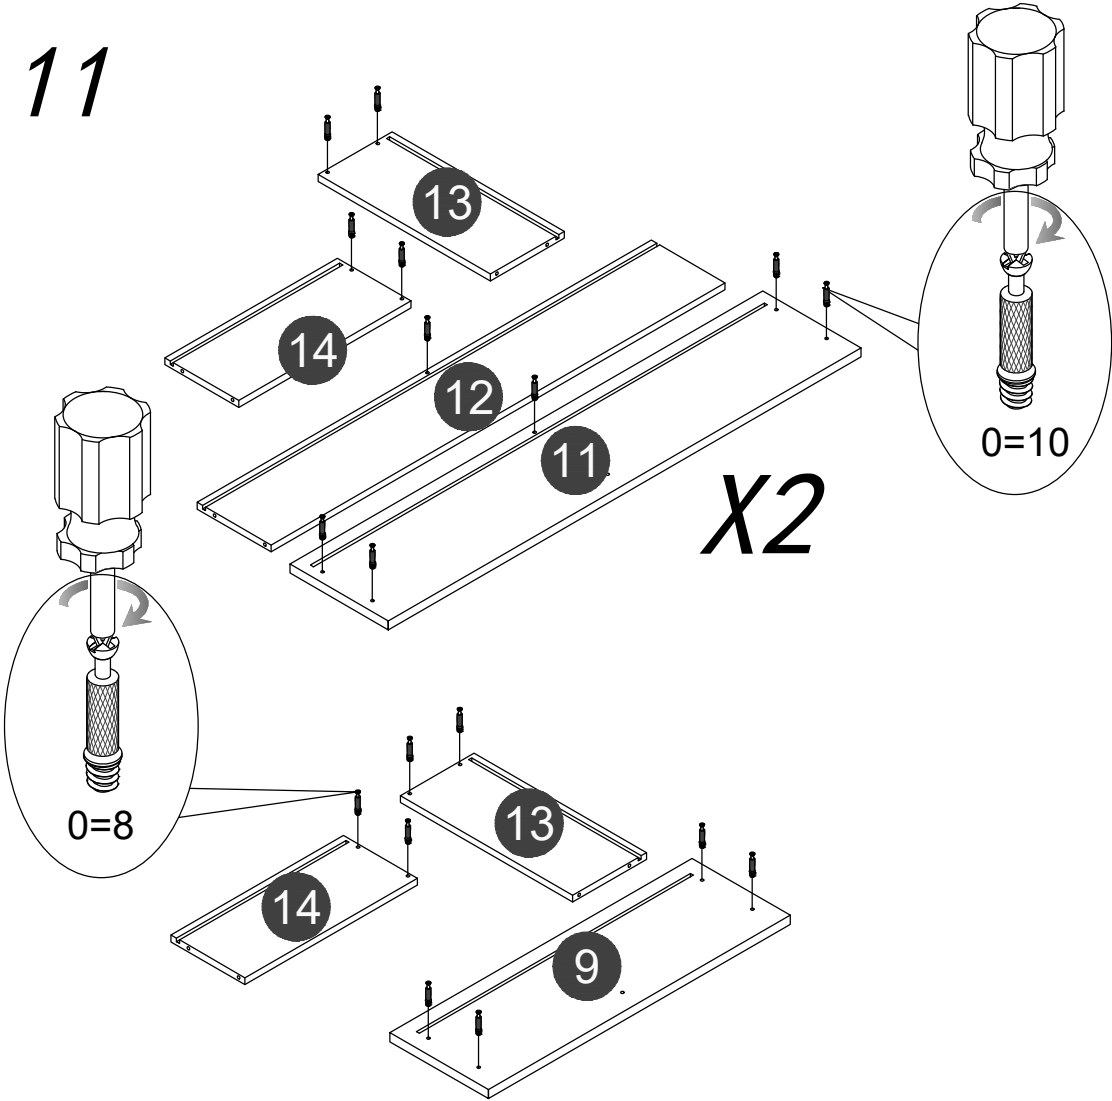


STEP 12

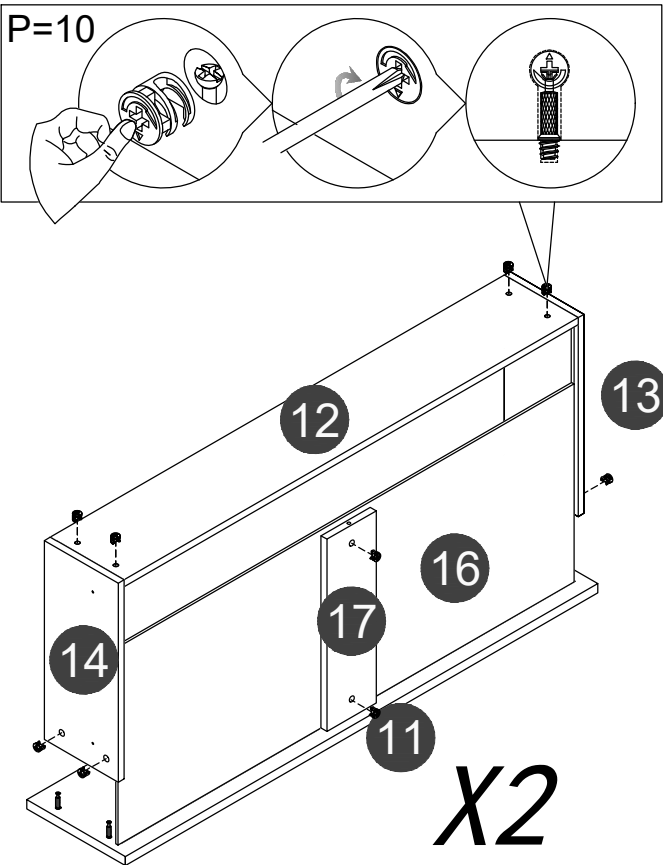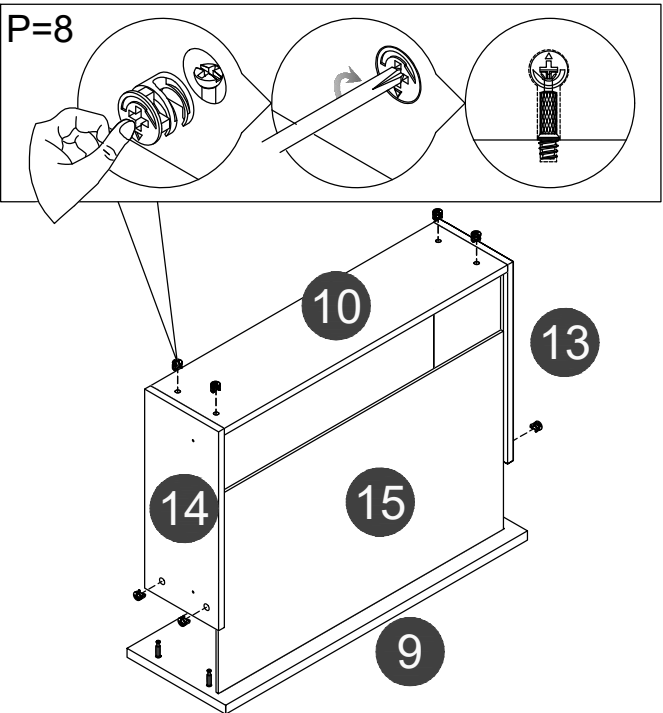


STEP 13

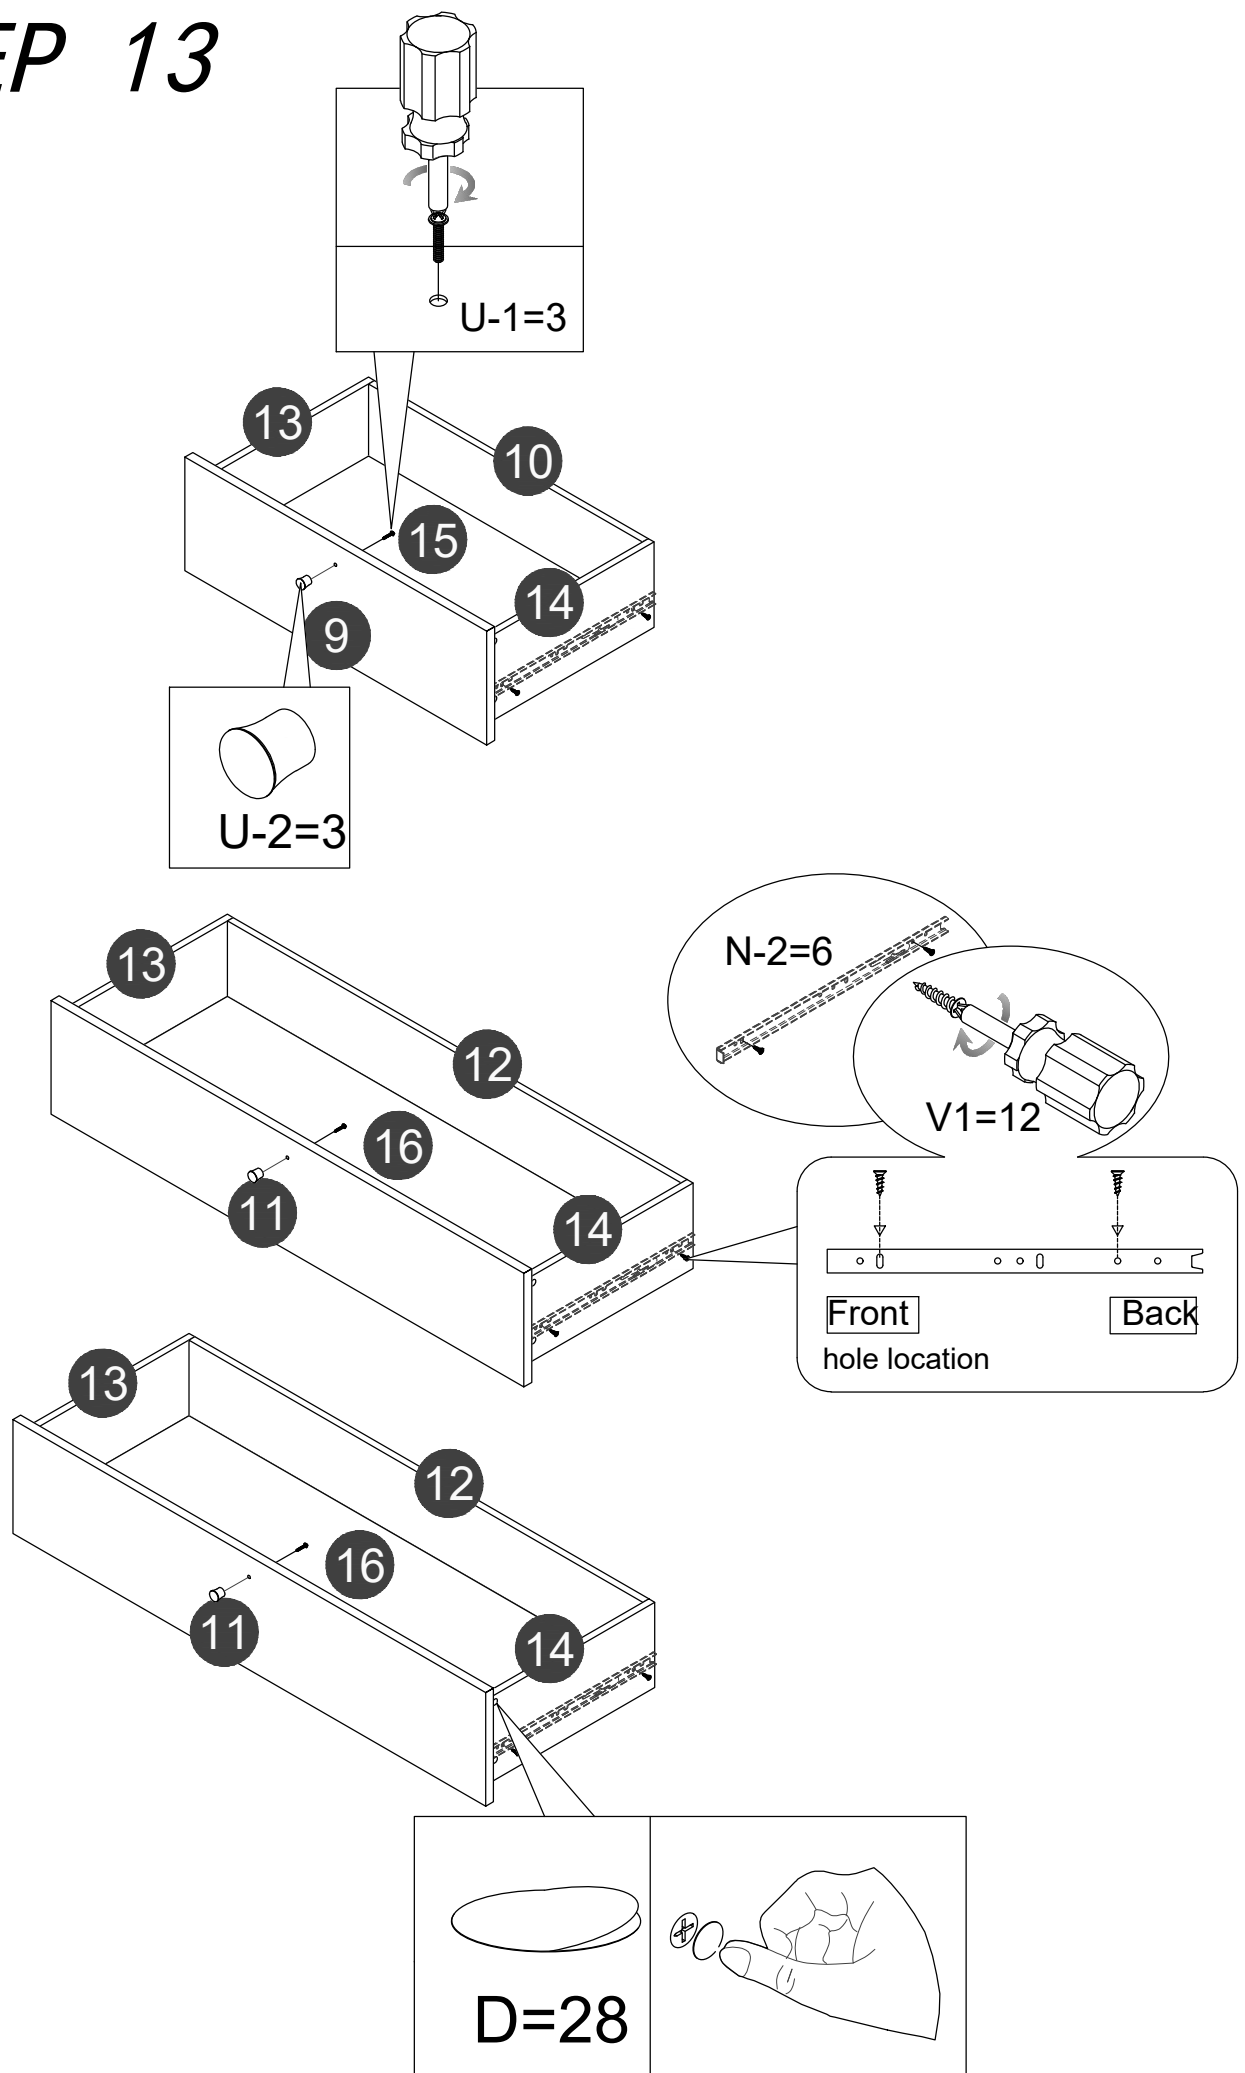


STEP 14

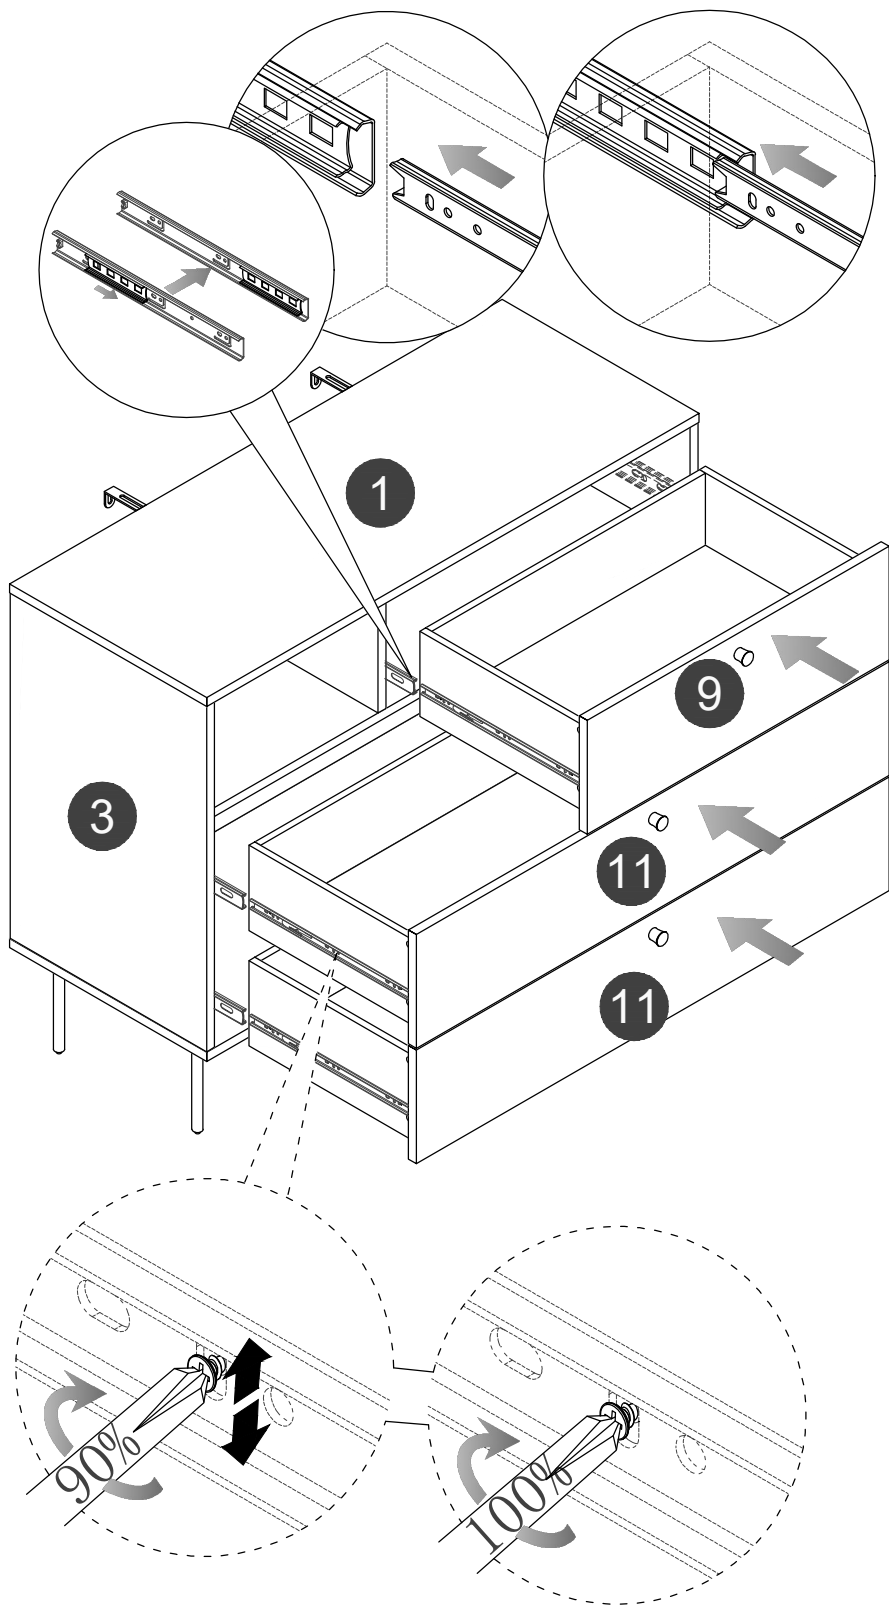

STEP 15

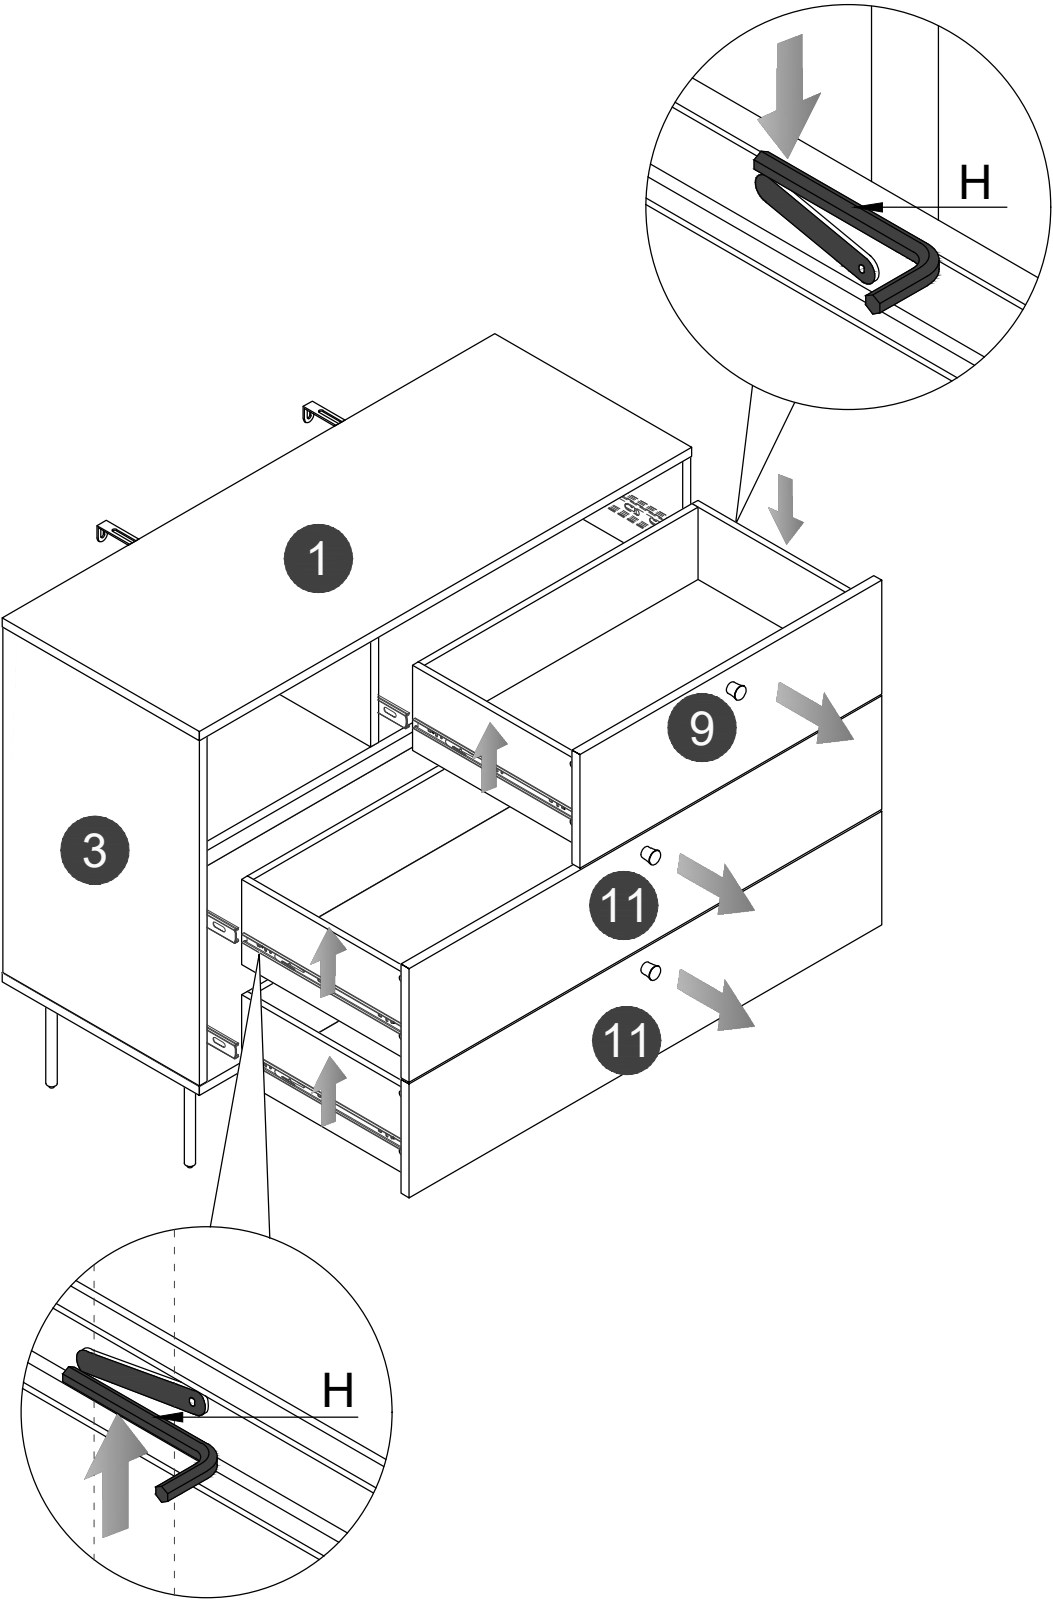

STEP 16

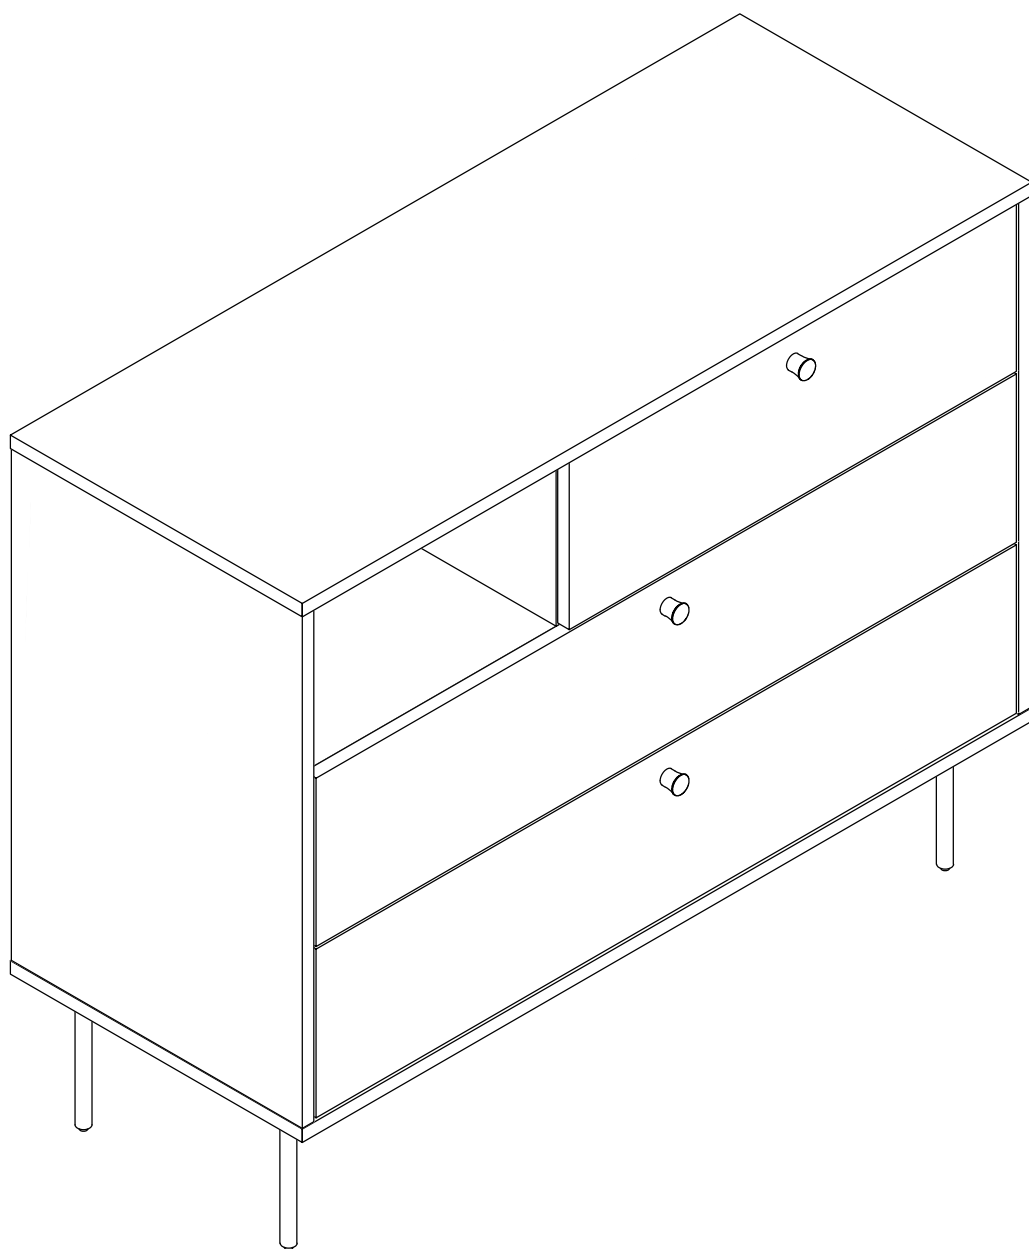

Finish