

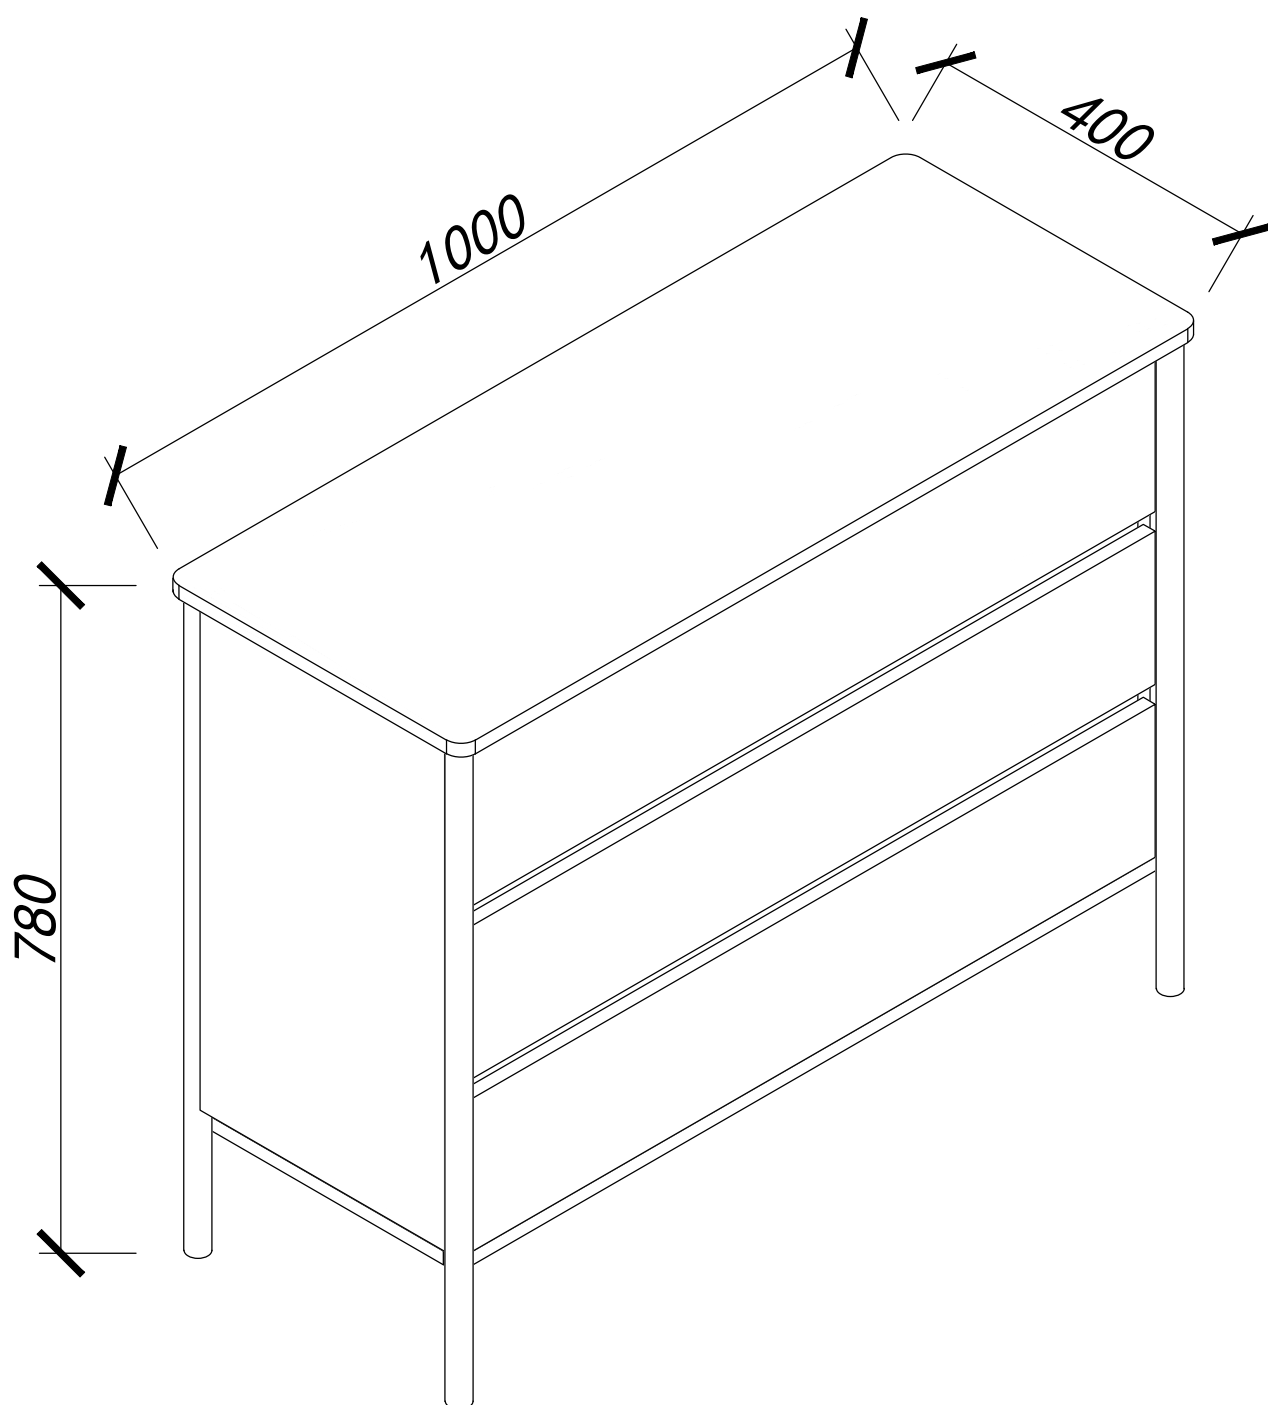
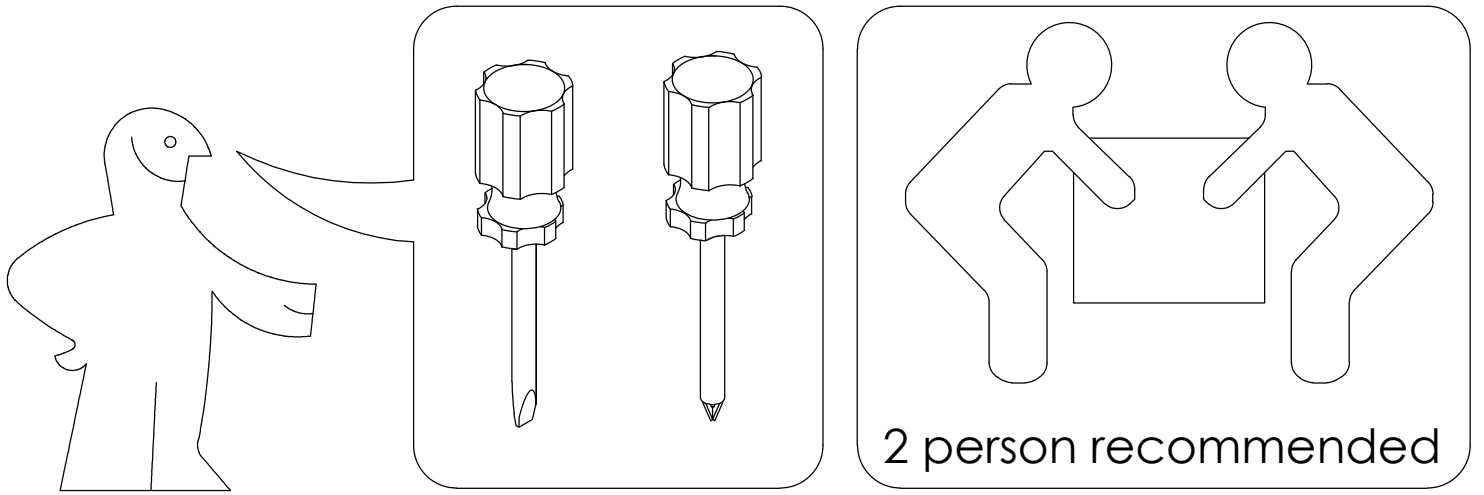
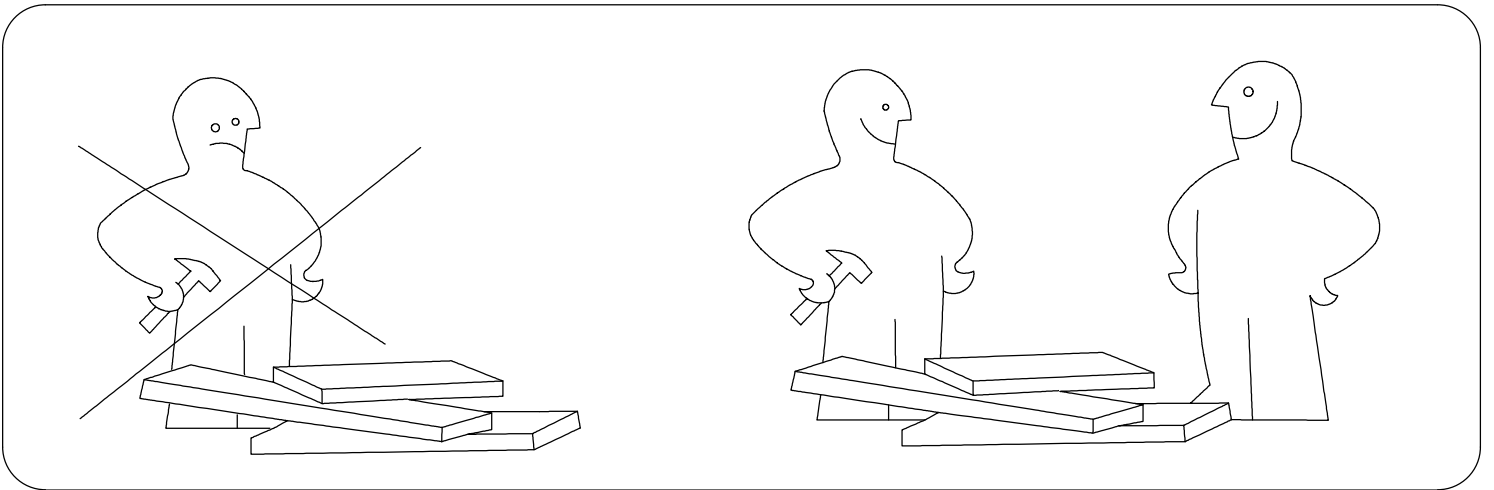


sømcasa


Assembly Instruction

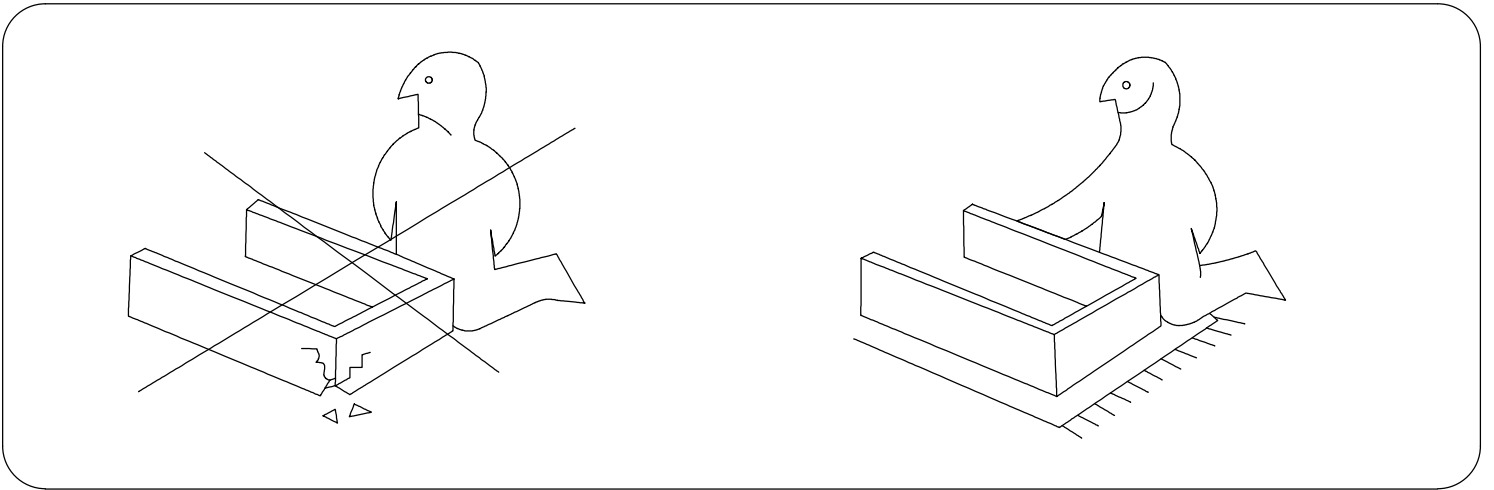

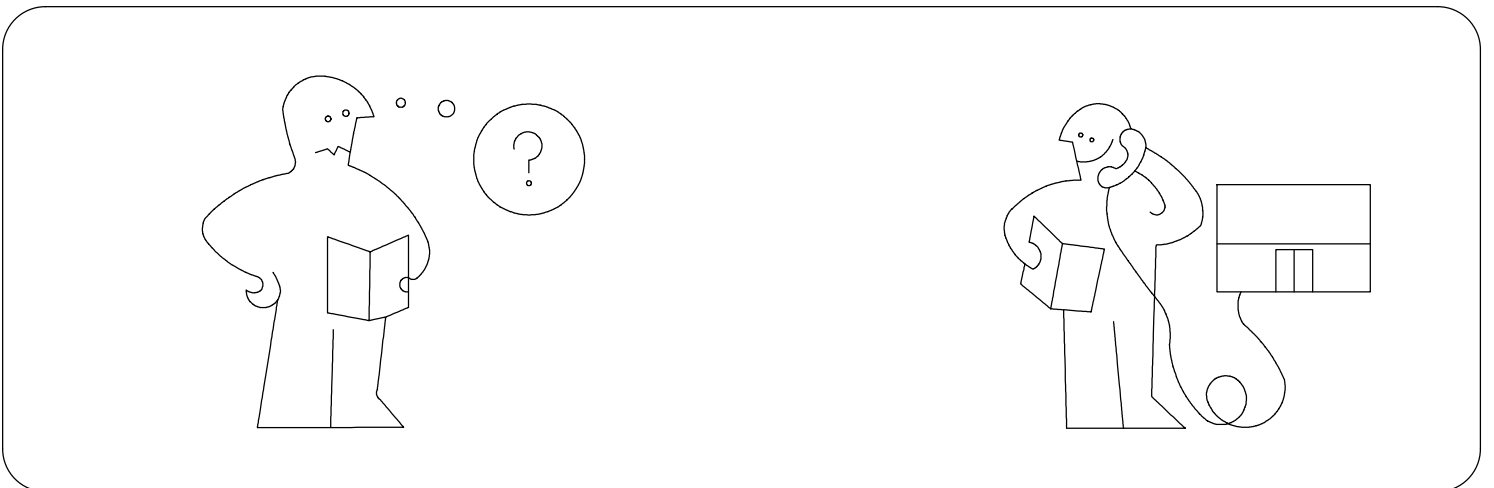

Panel No	Panel Sizes	Quantity
1	1000*400*16	1
2	979*379*16	1
3	766*396*35	1
4	766*396*35	1
5	926*45*16	2
6	591*200*16	1

Panel No	Panel Sizes	Quantity
7	601*380*5	2
8	920*179*16	3
9	883*120*12	3
10	300*120*12	3
11	300*120*12	3
12	893*298*5	3
13	287*100*12	3

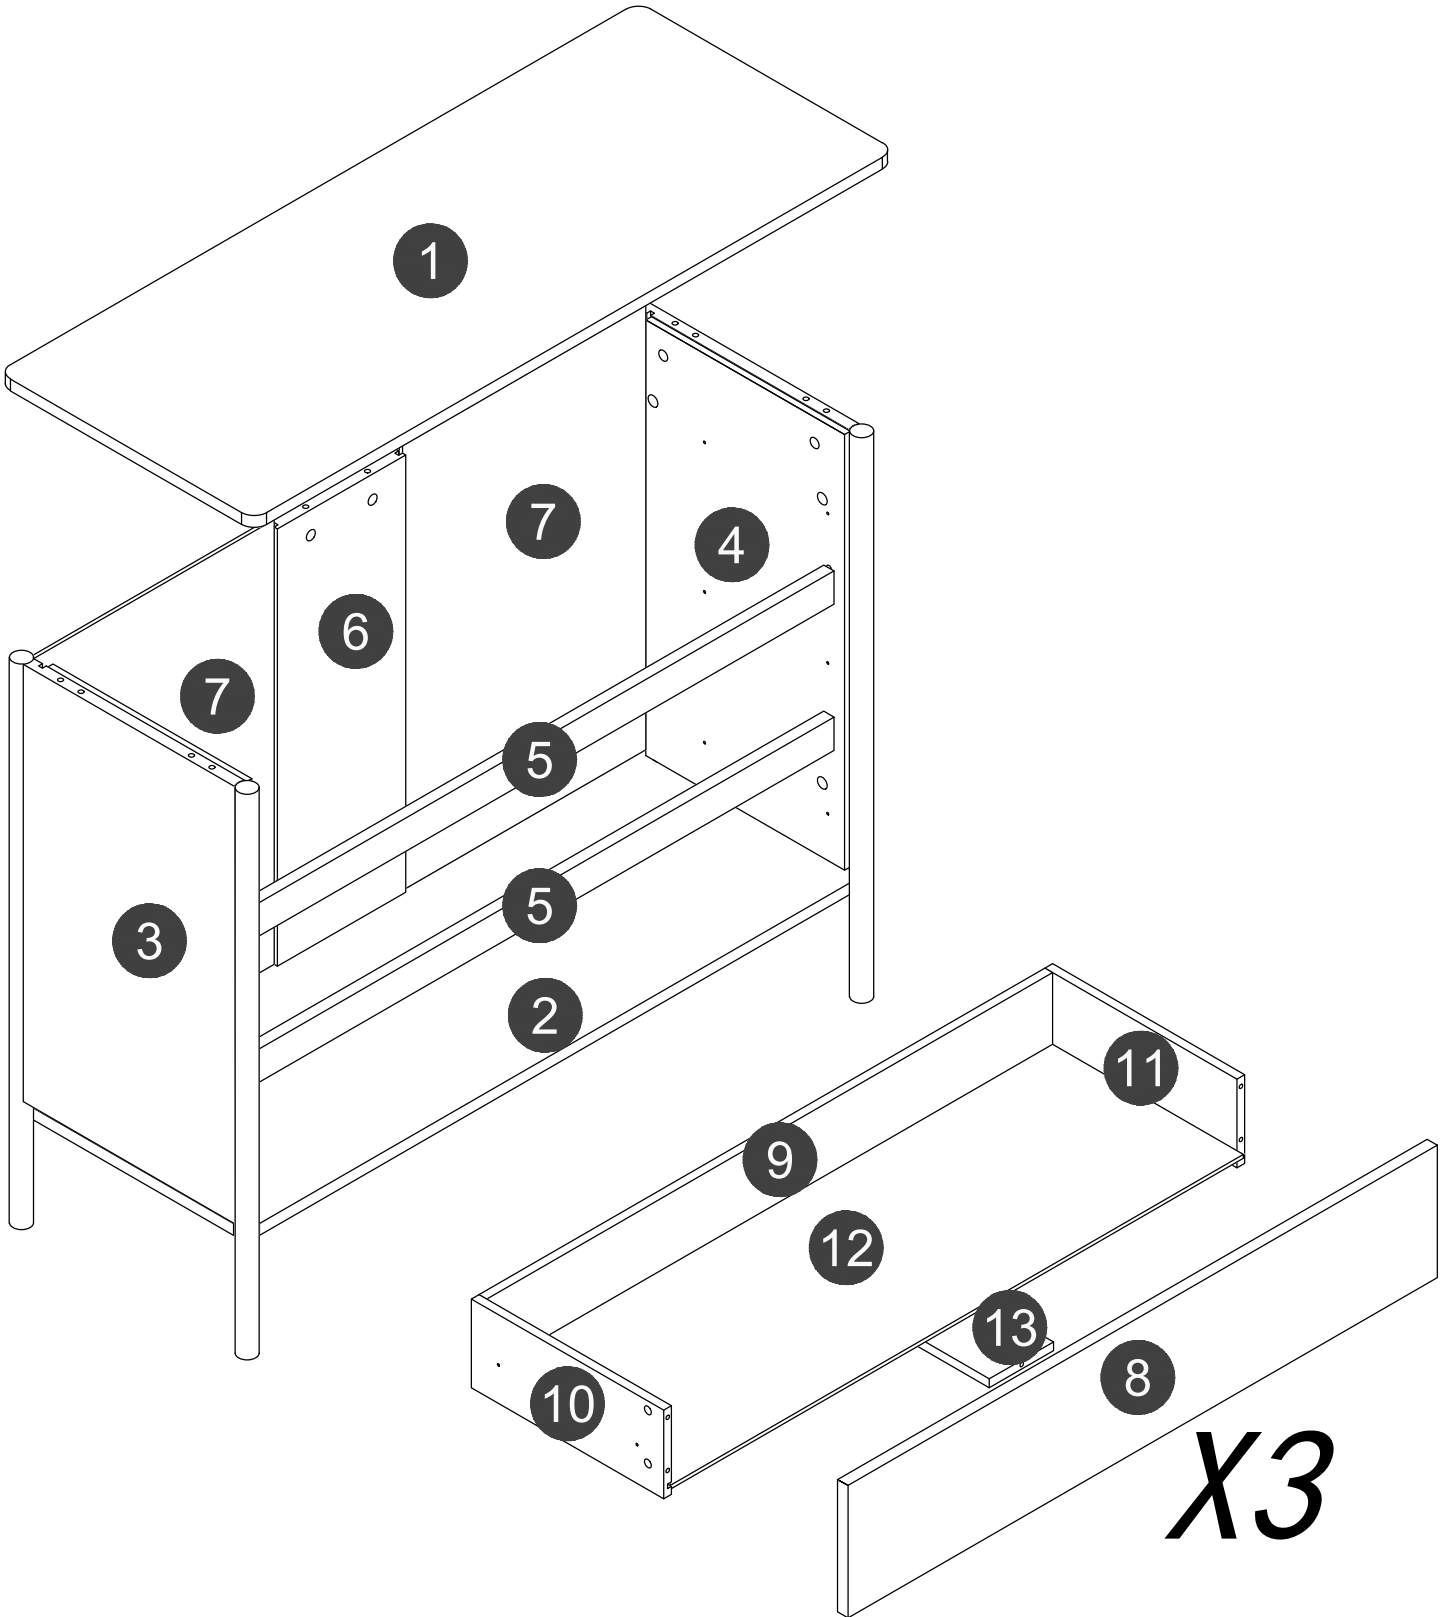

Fittings




M6*40

A=10



Φ8*30

B=12

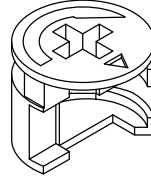


Φ15*12

C=10




Φ21

D=40

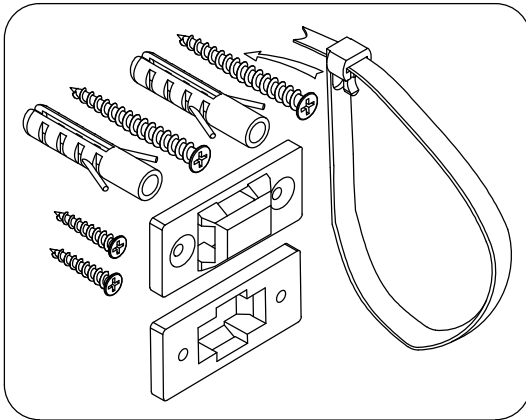


F=1

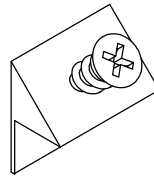

E=16




O =30

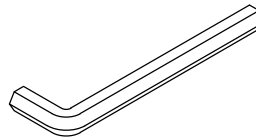


H =1




P =30

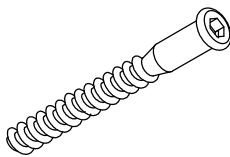

Q=6


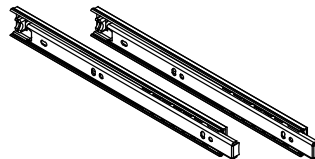


N=3






V1=24


STEP 1

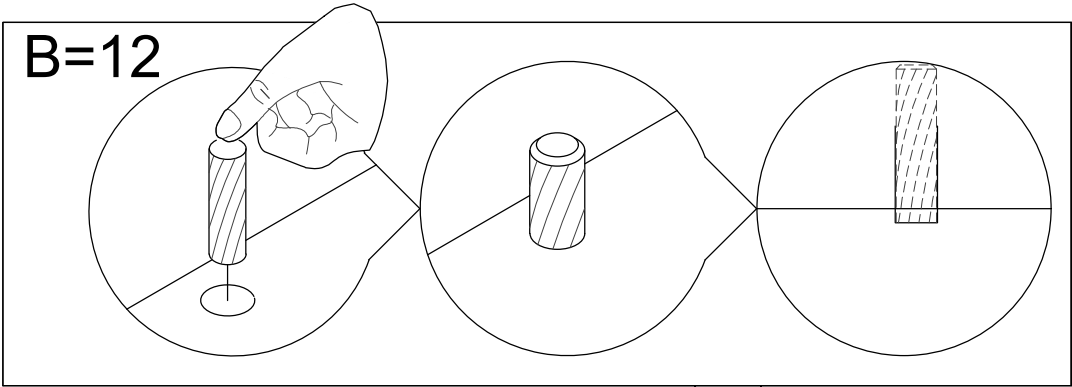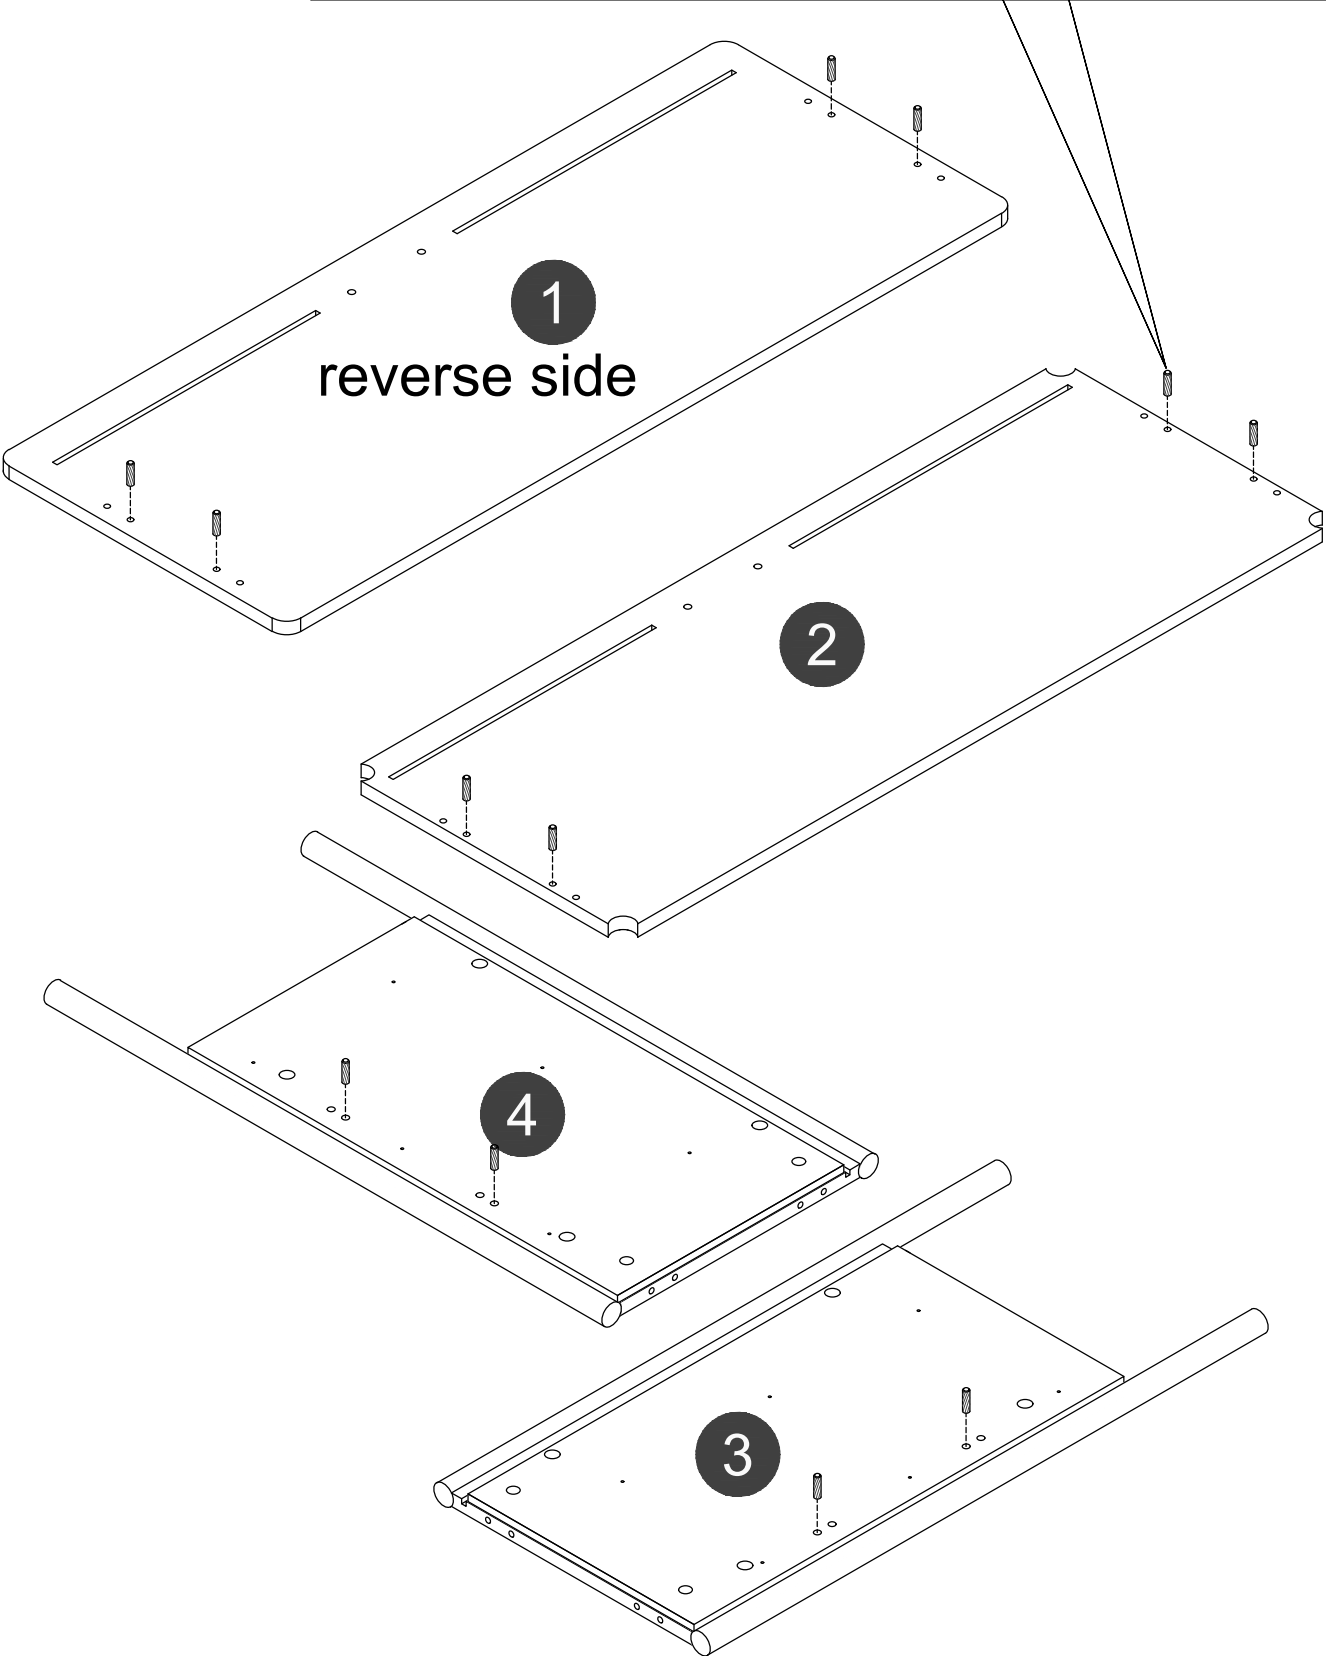


STEP 2

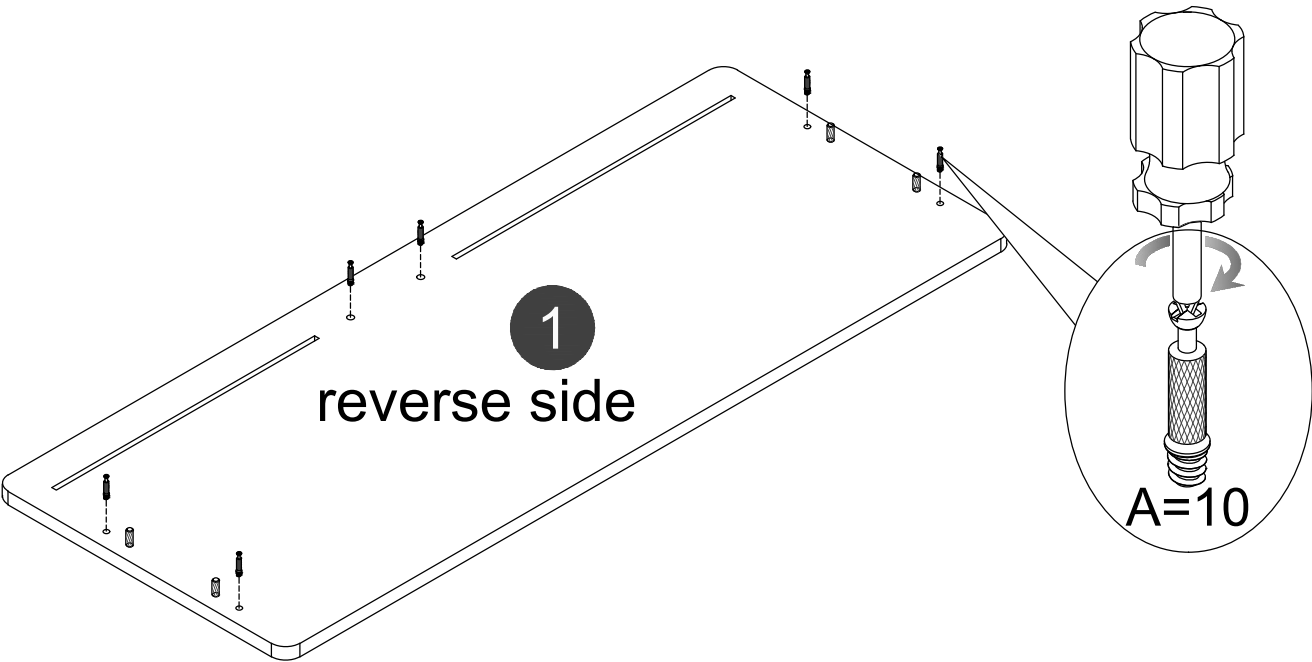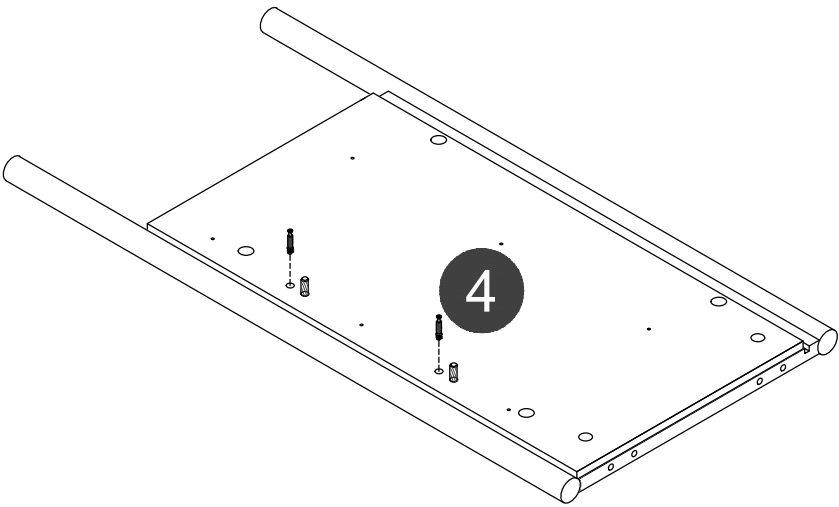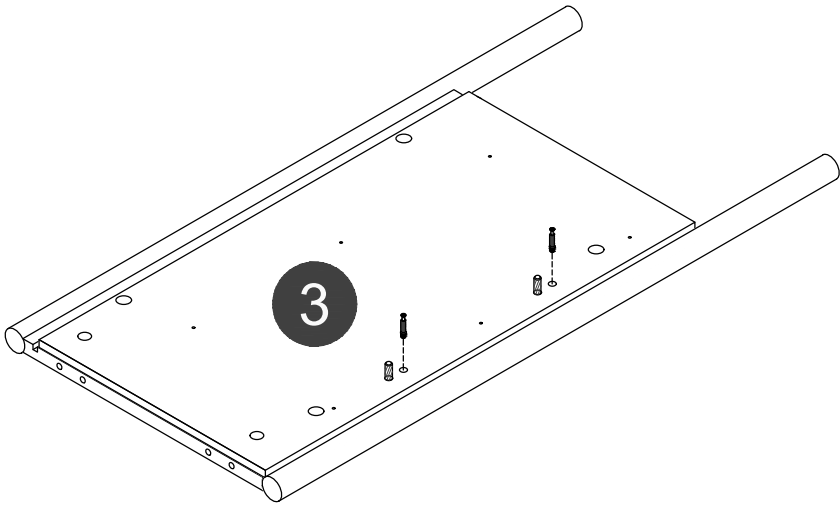



STEP 3

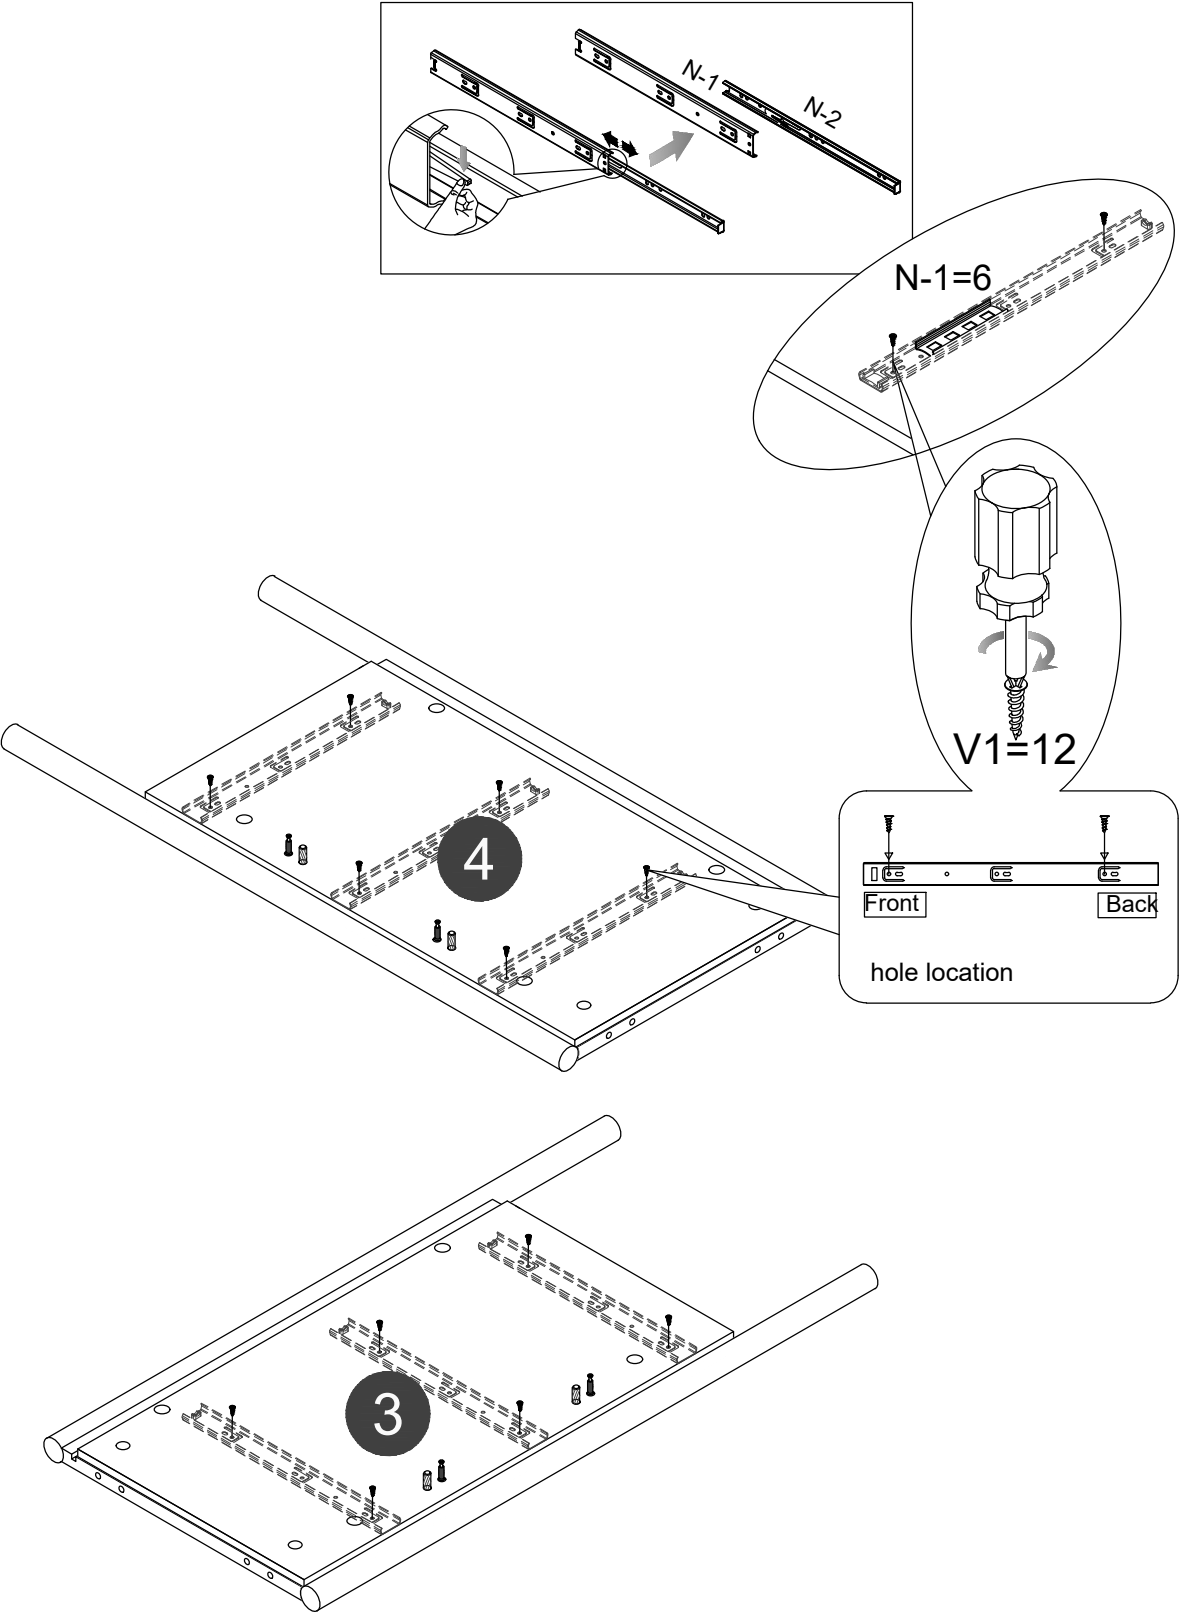


STEP 4

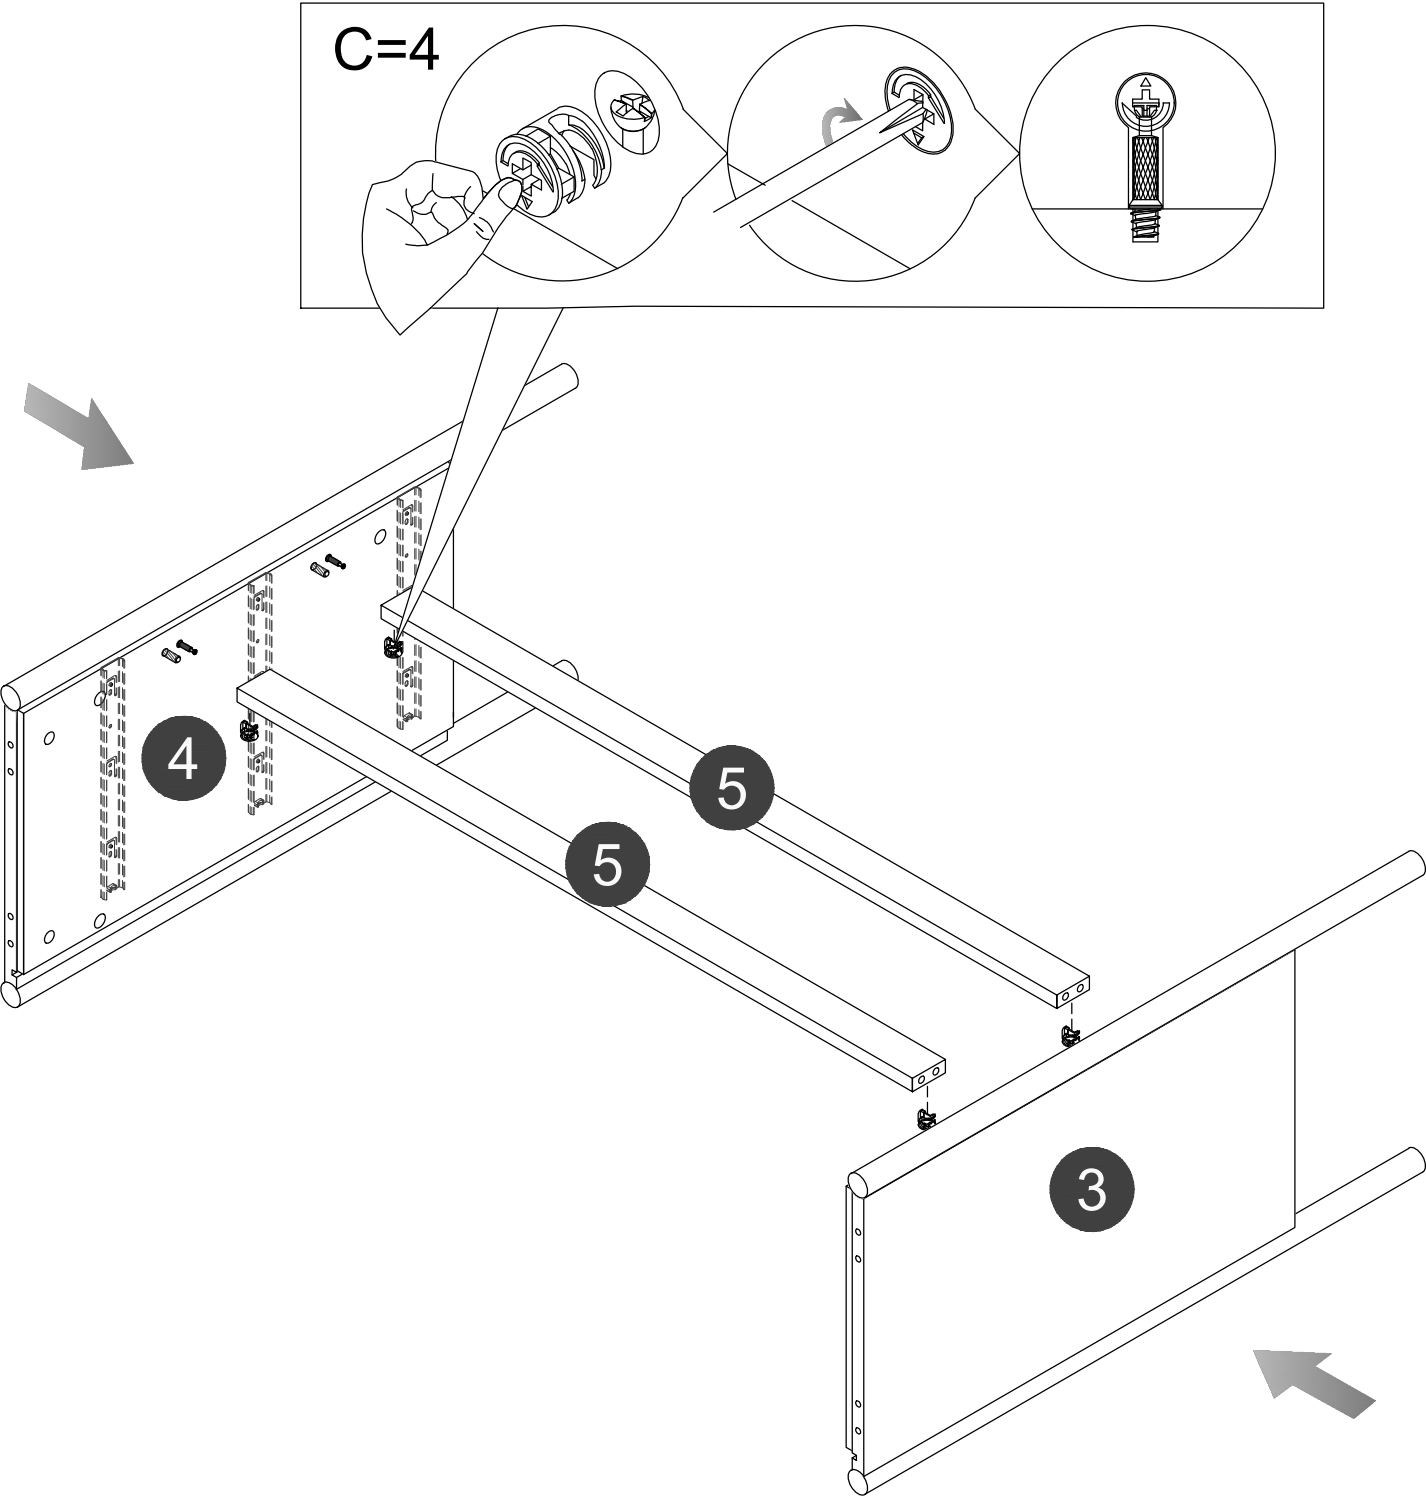


STEP 5

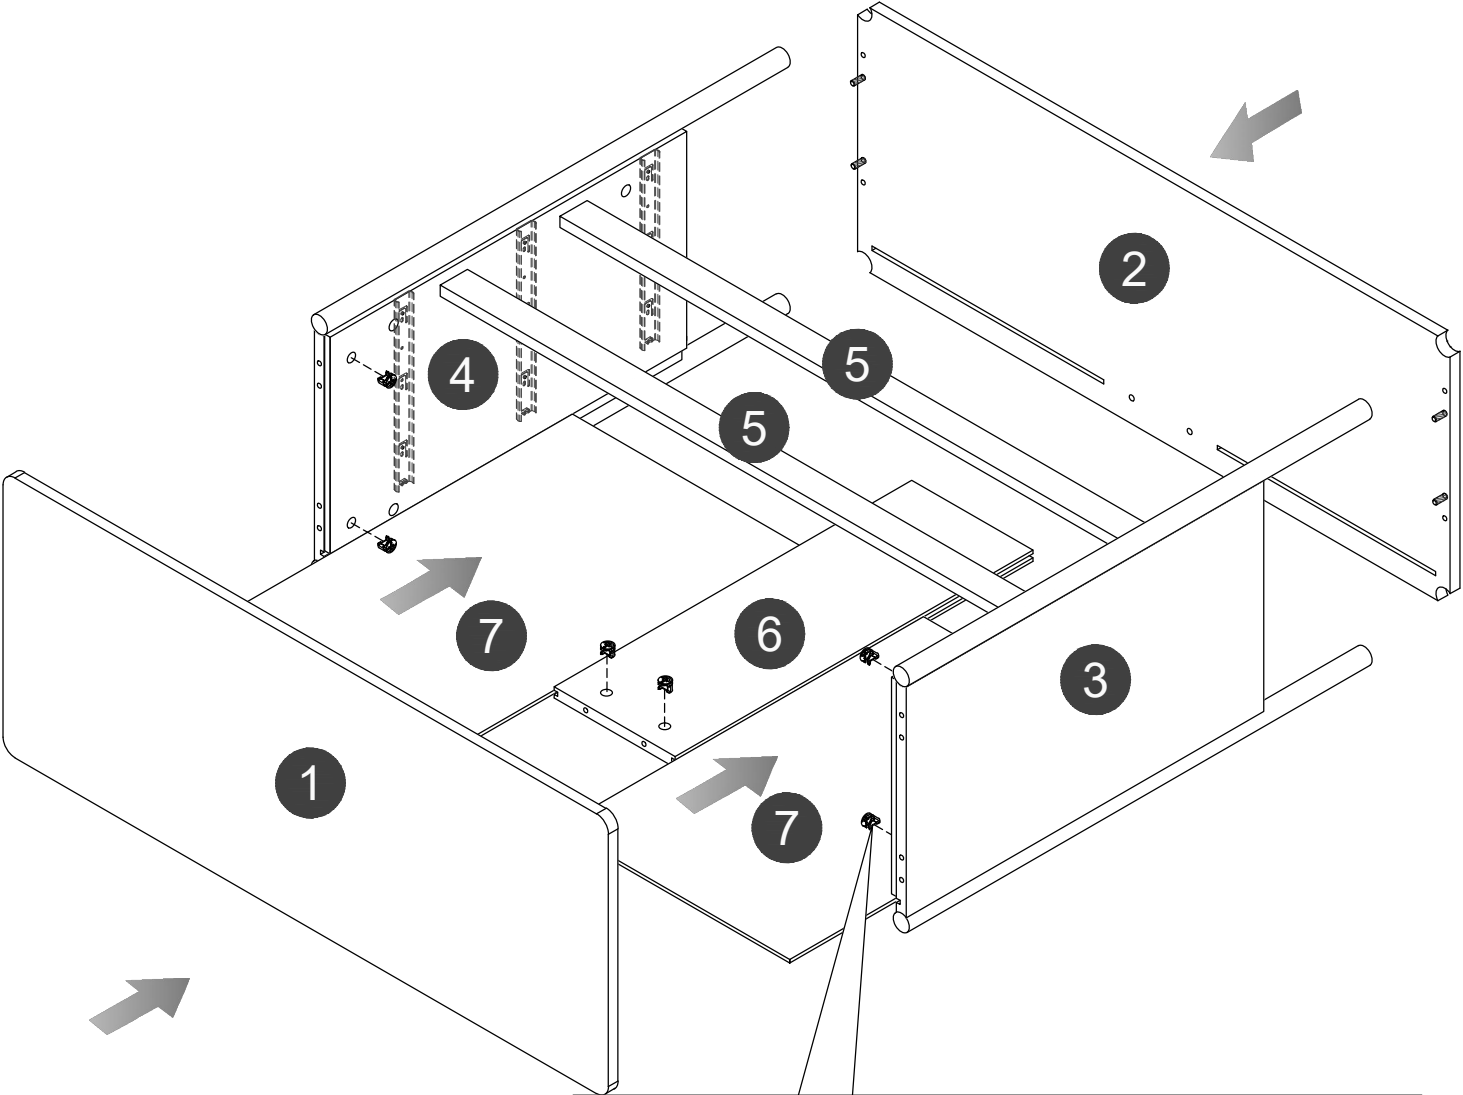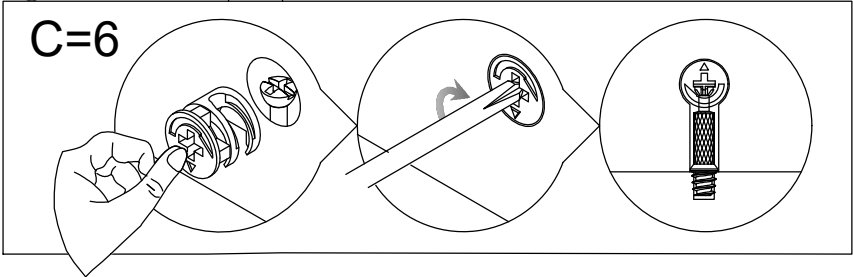


STEP 6

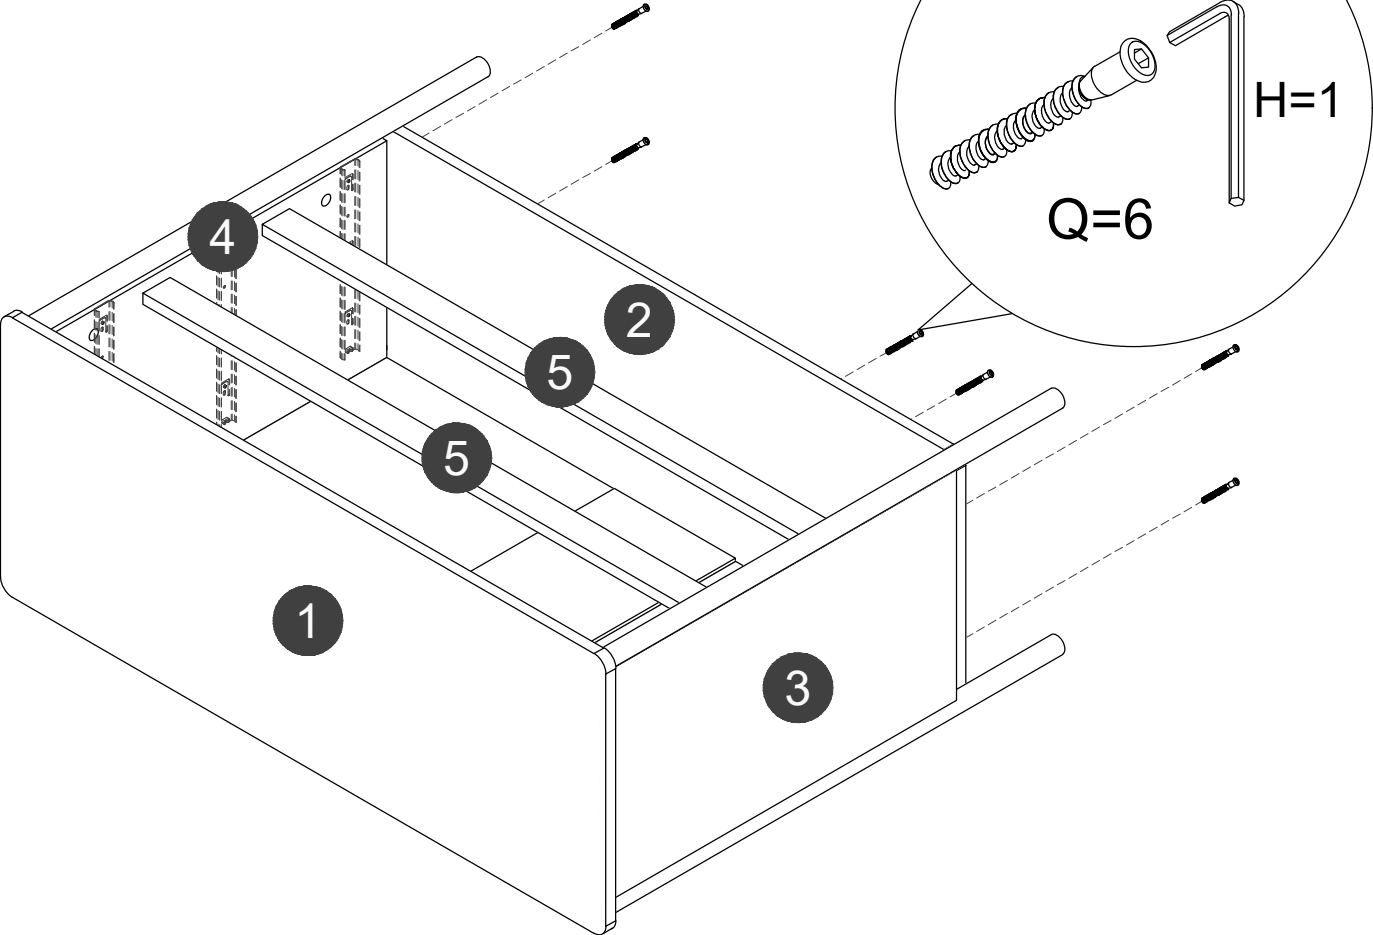


STEP 7

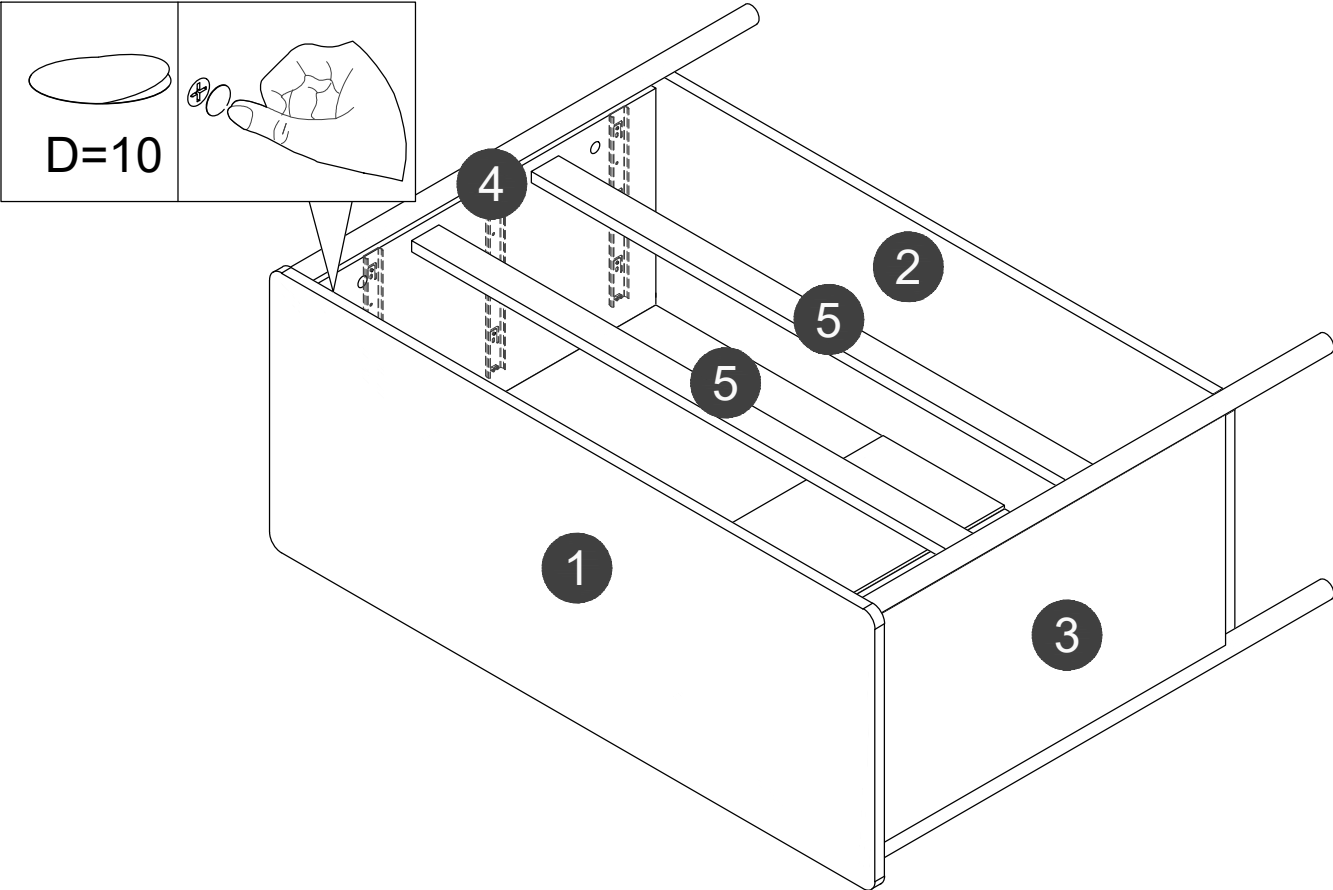


STEP 8

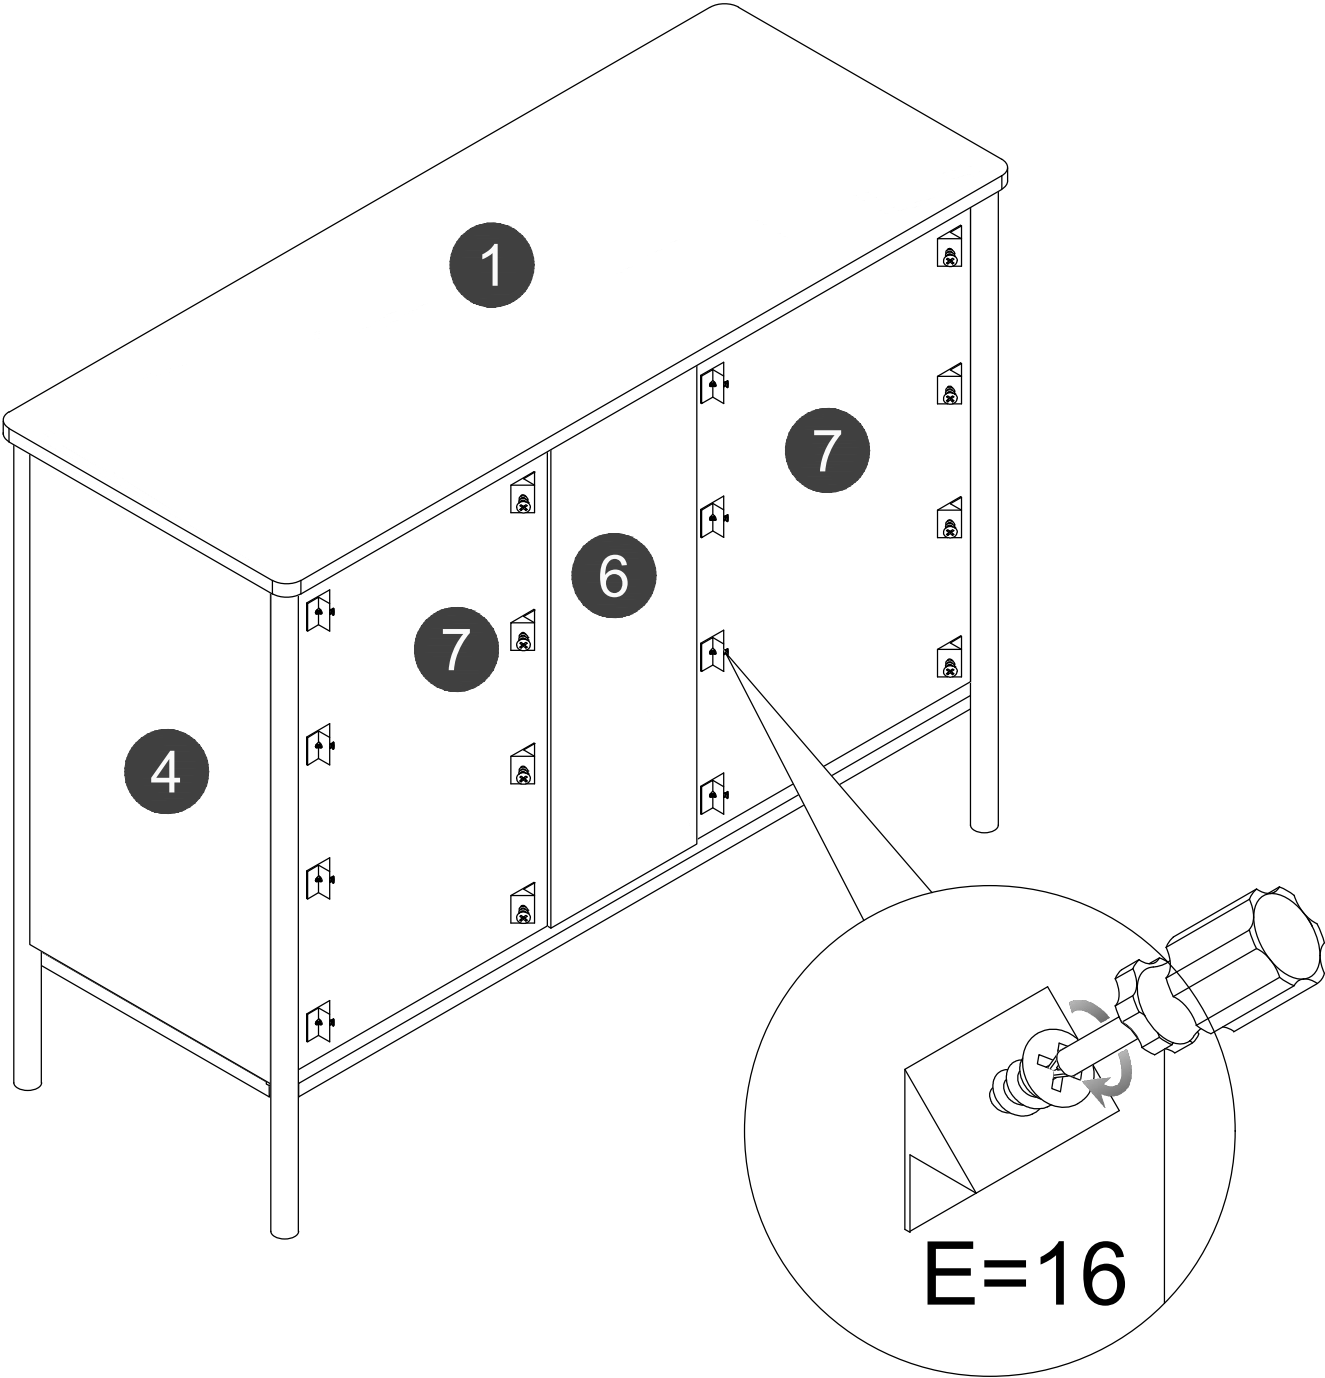


STEP 9

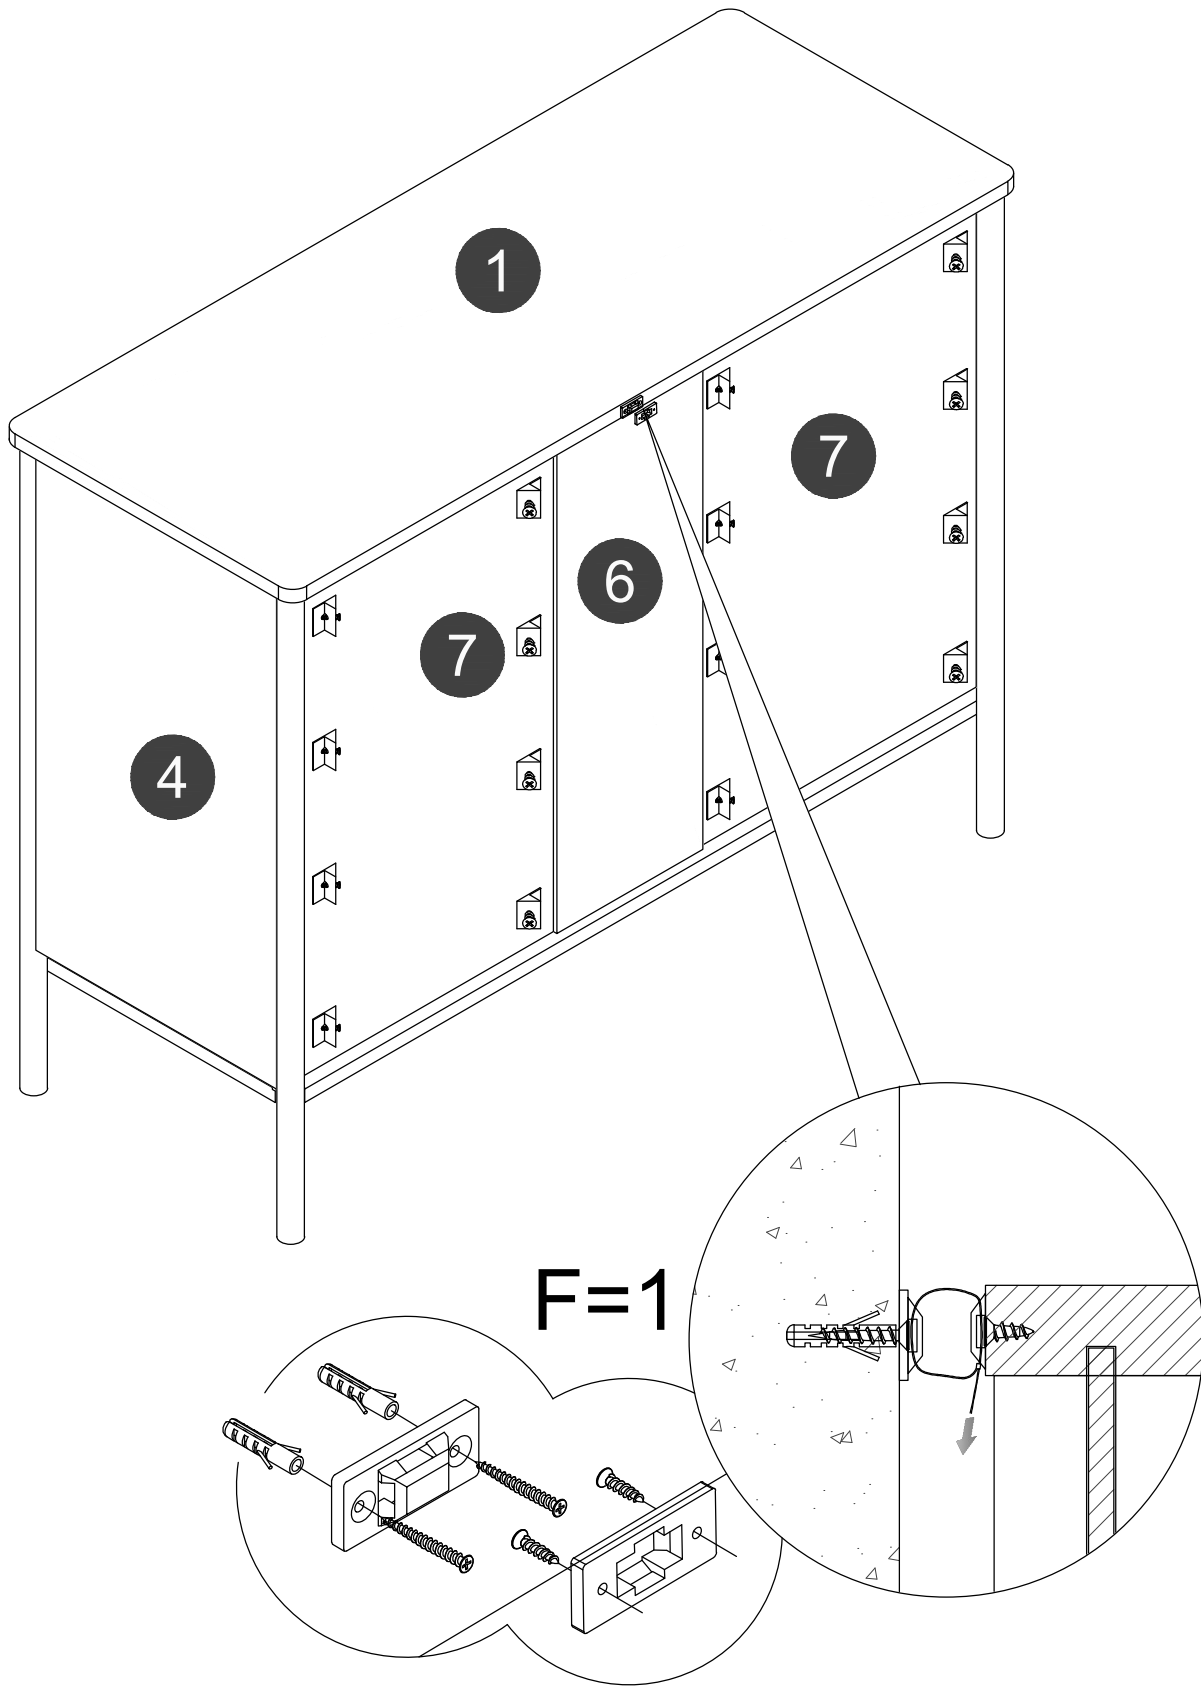


STEP 10

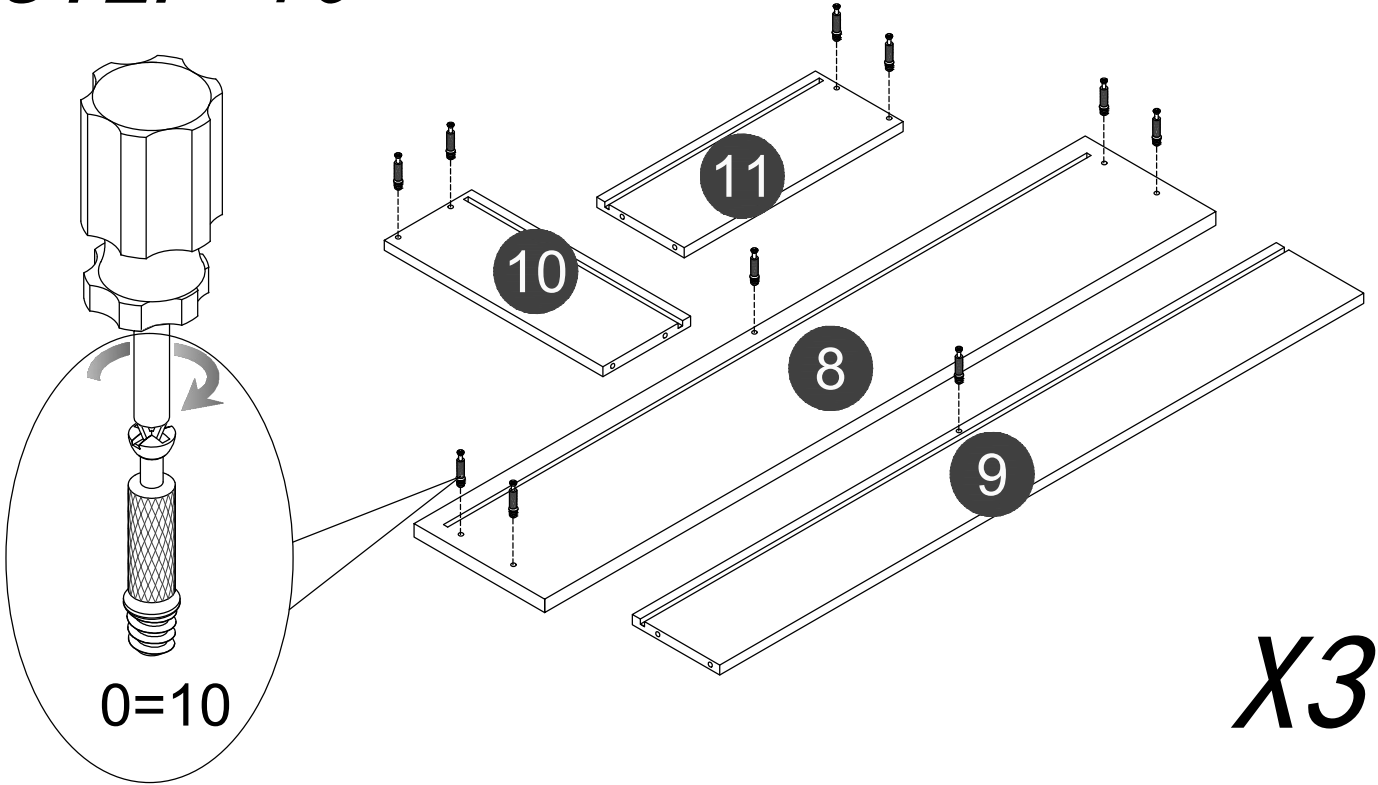

STEP 11

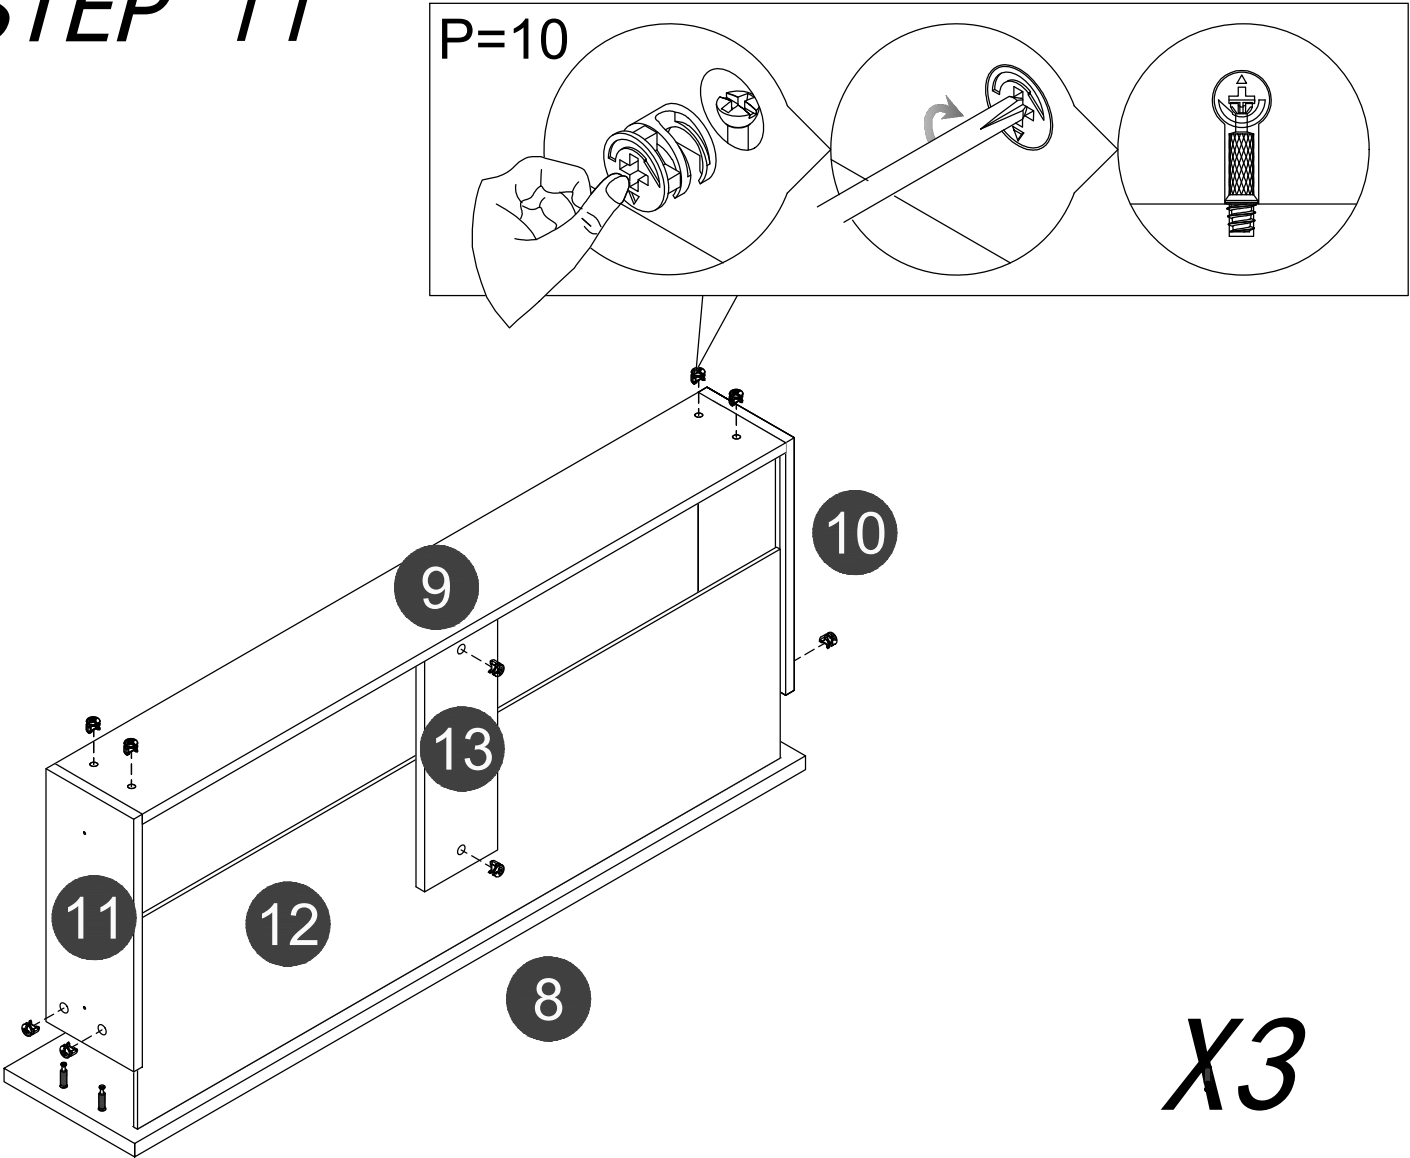


STEP 12

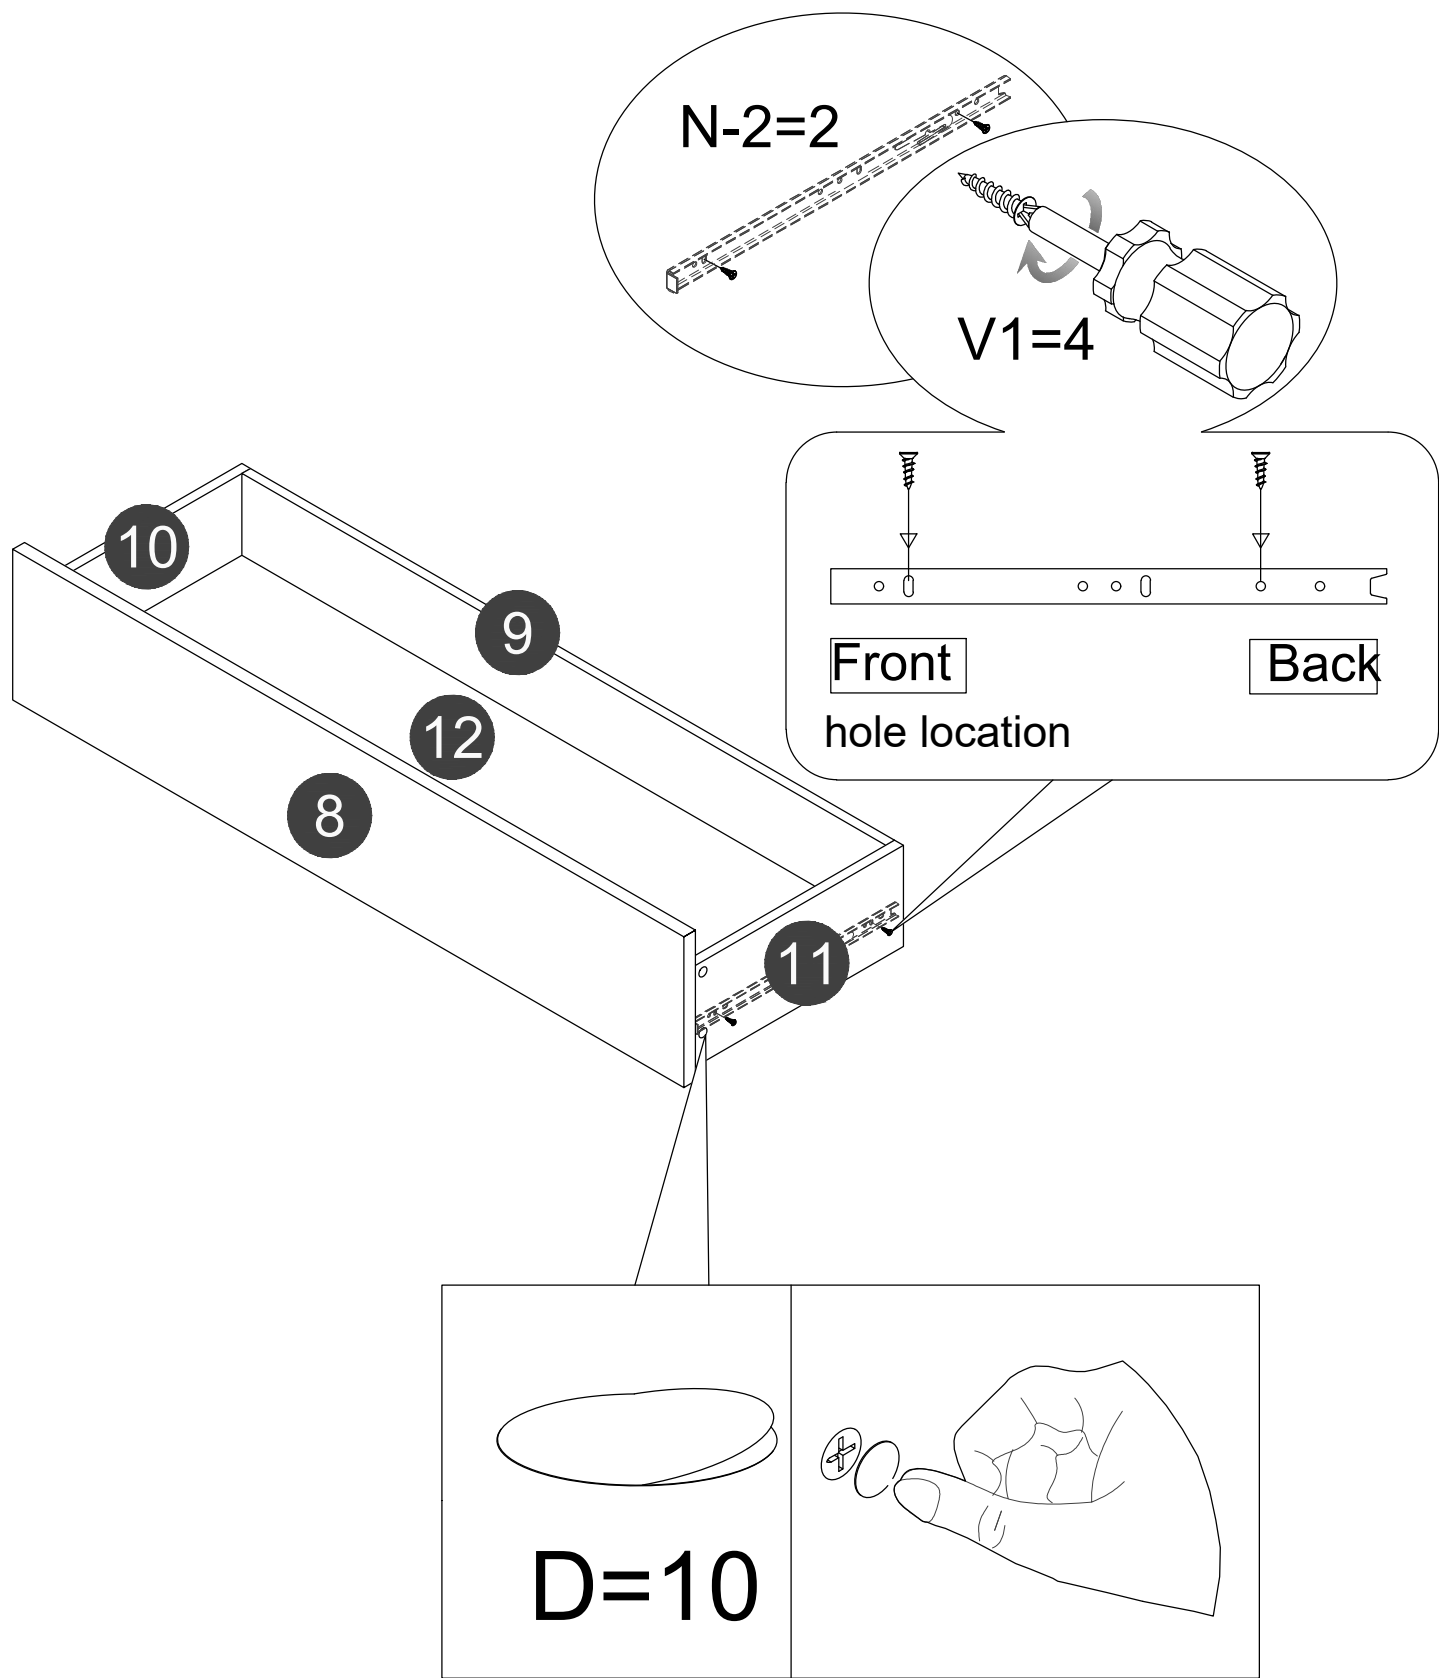


X3


STEP 13

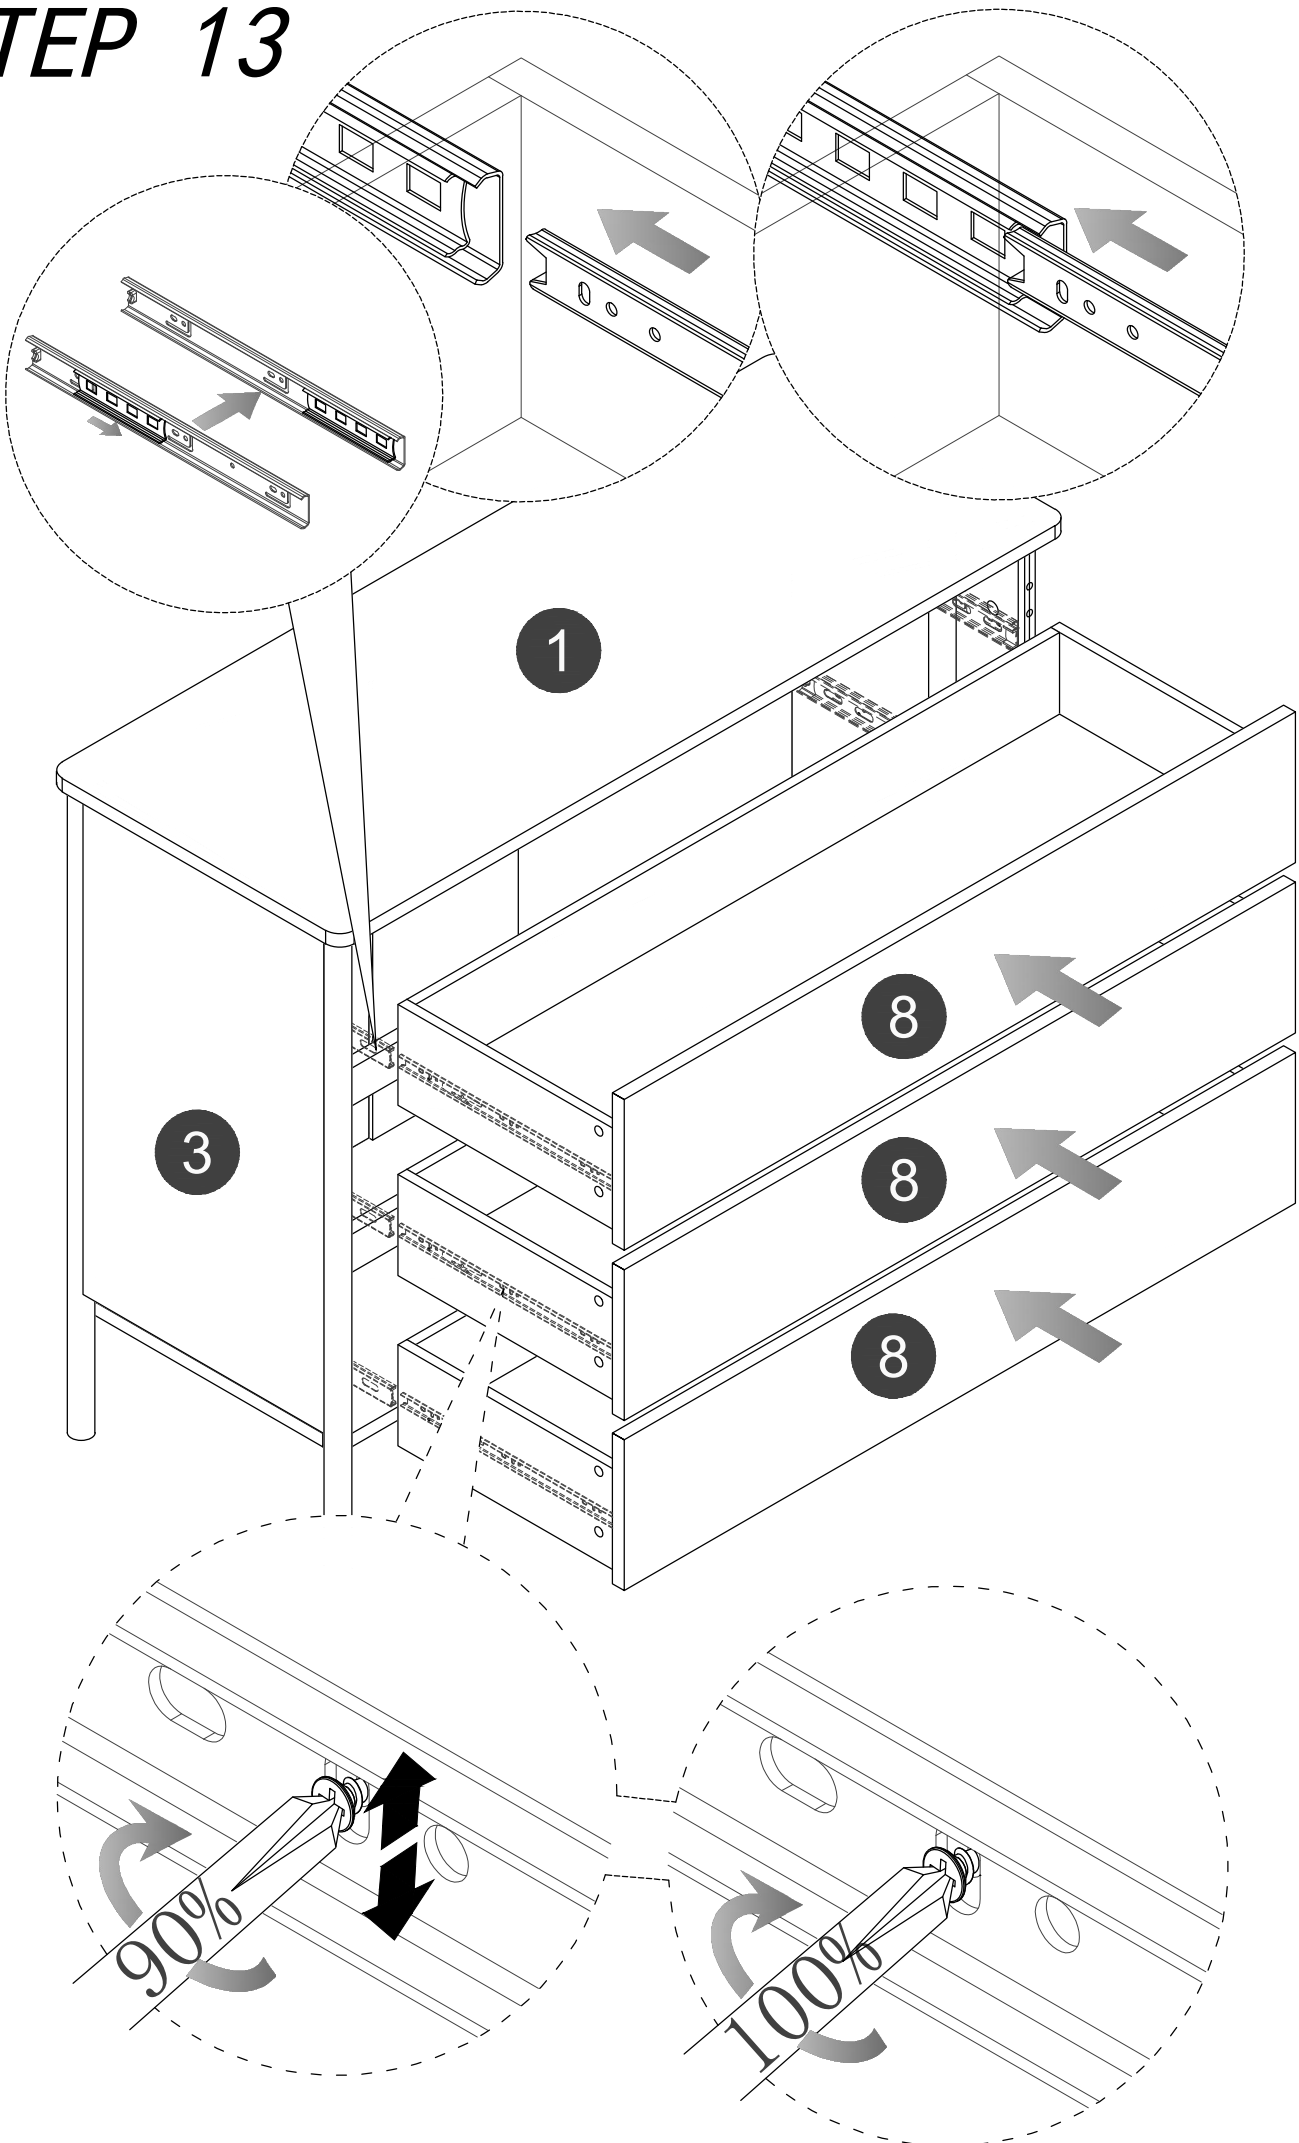

STEP 14

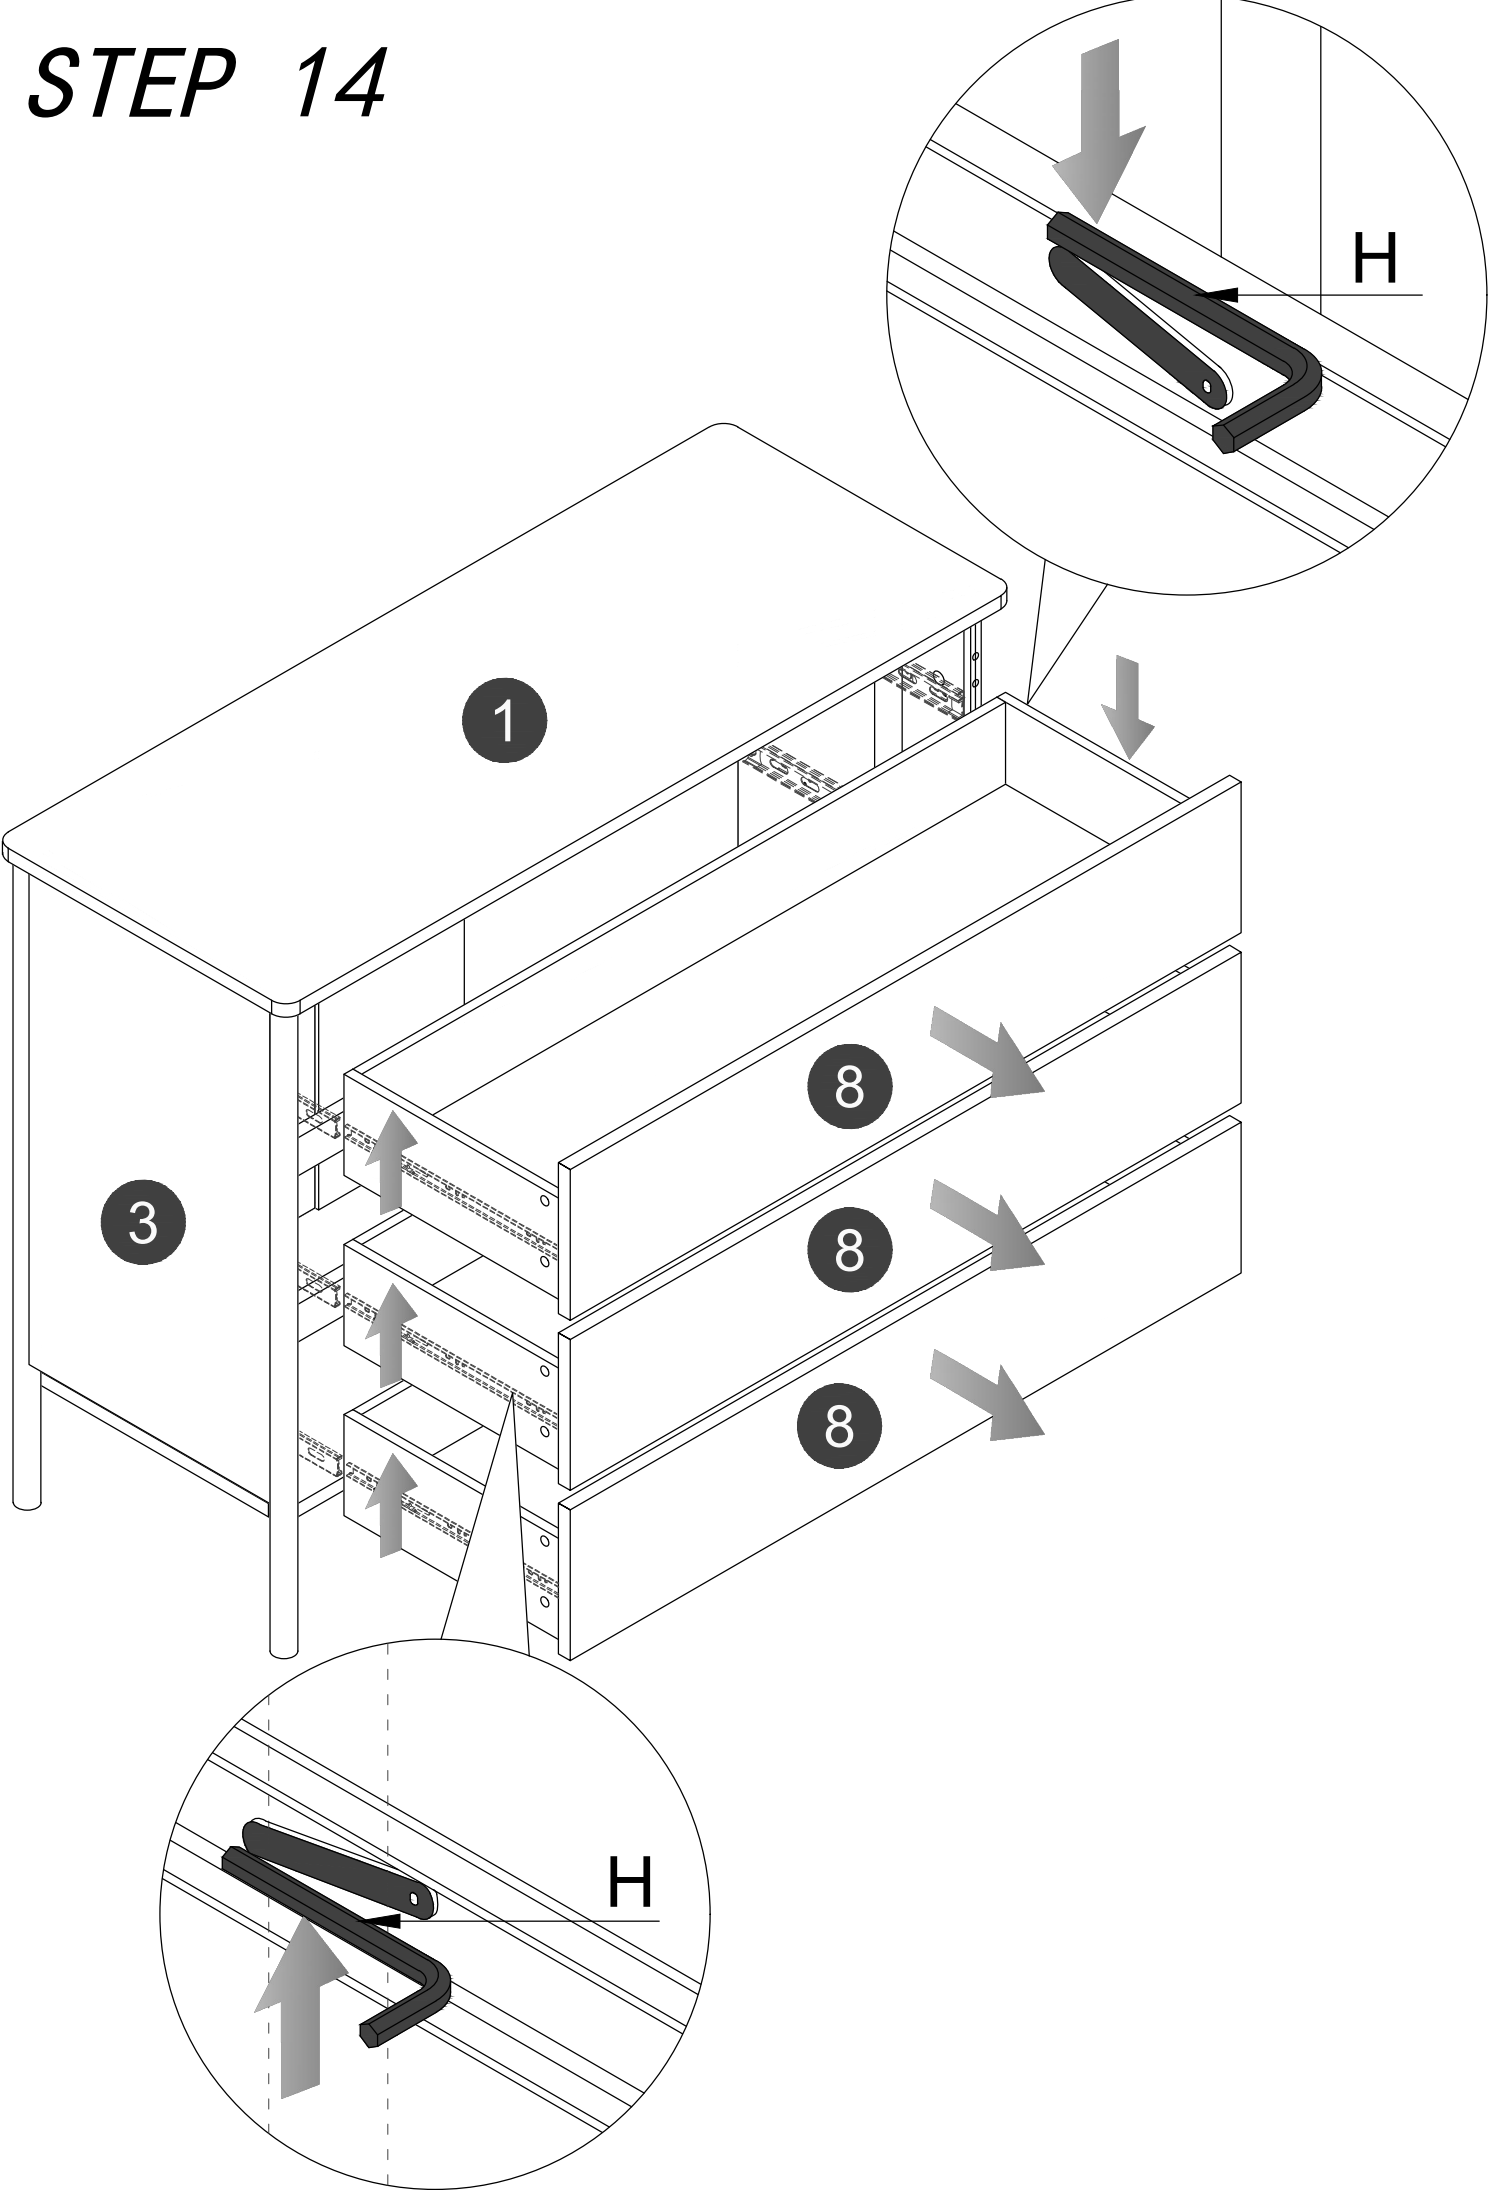

STEP 15

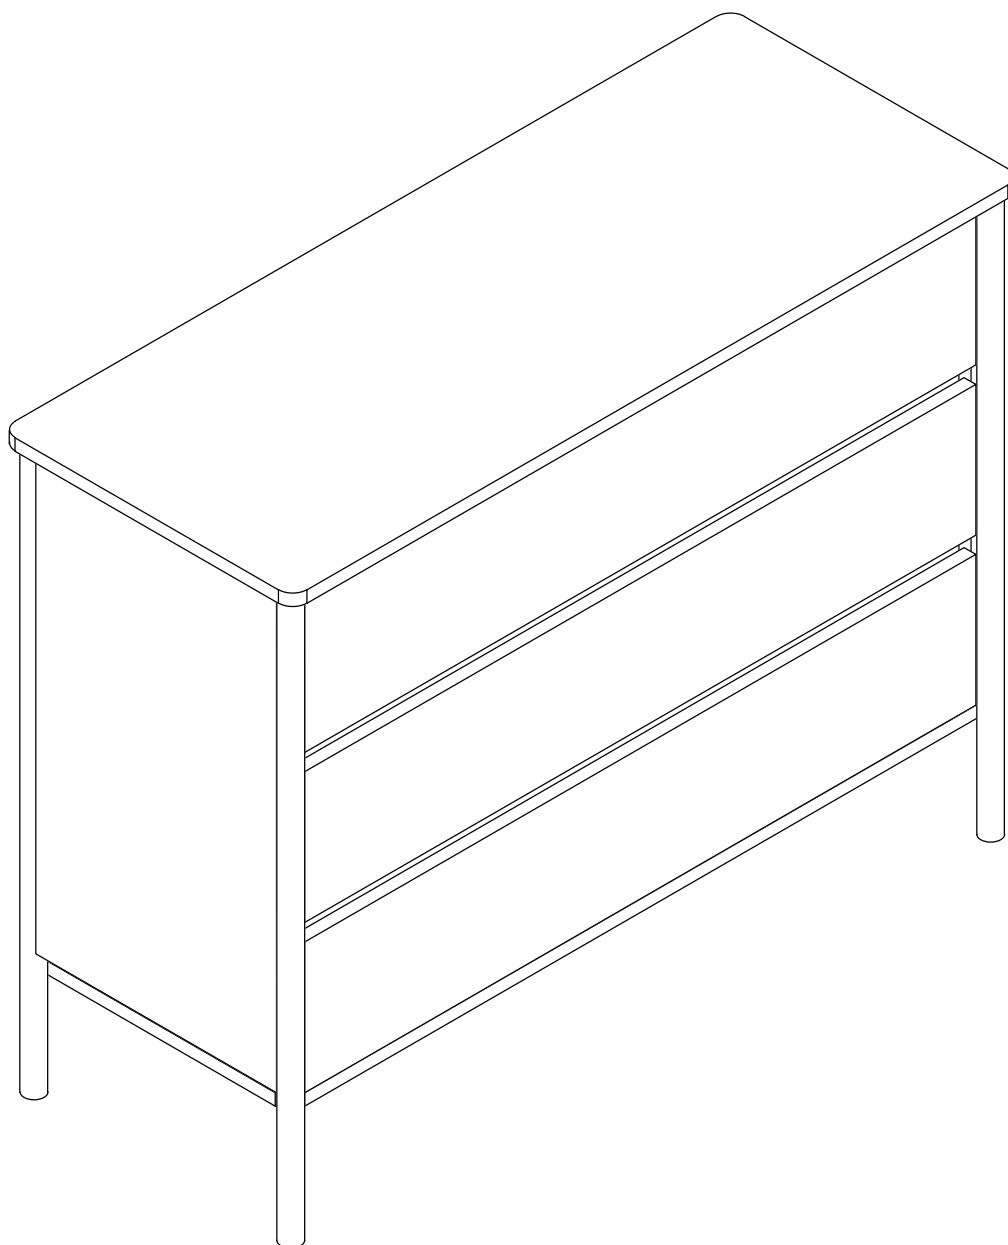

Finish