


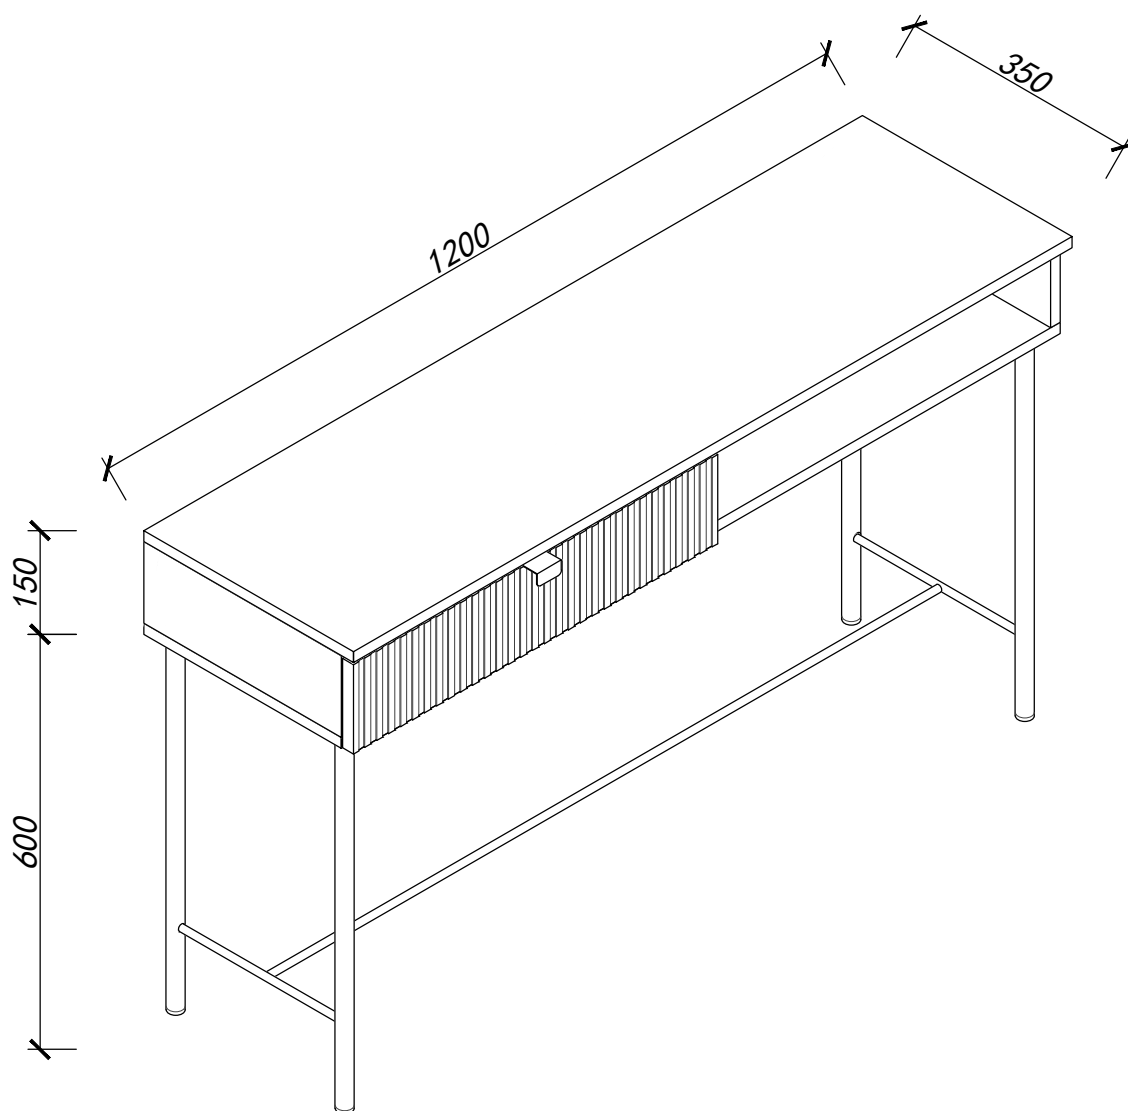
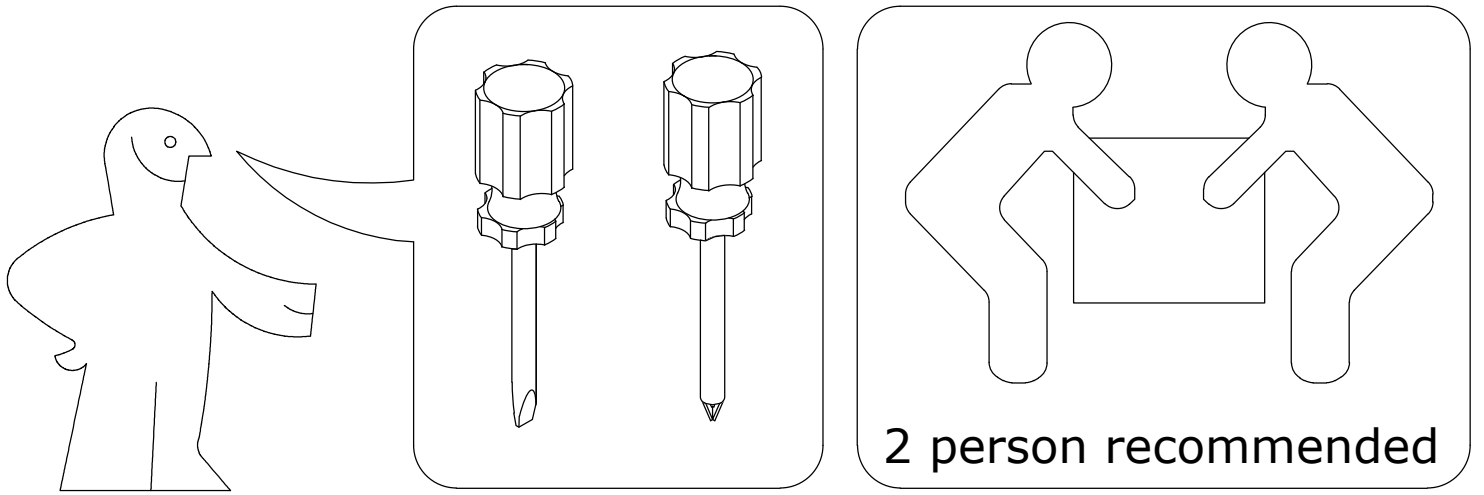
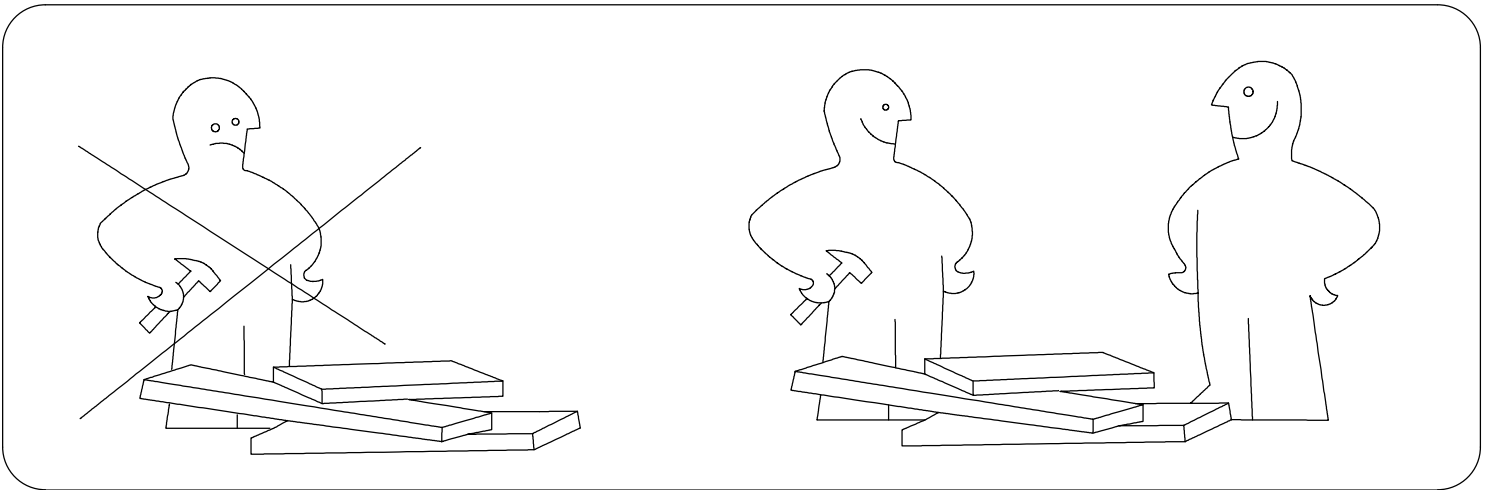
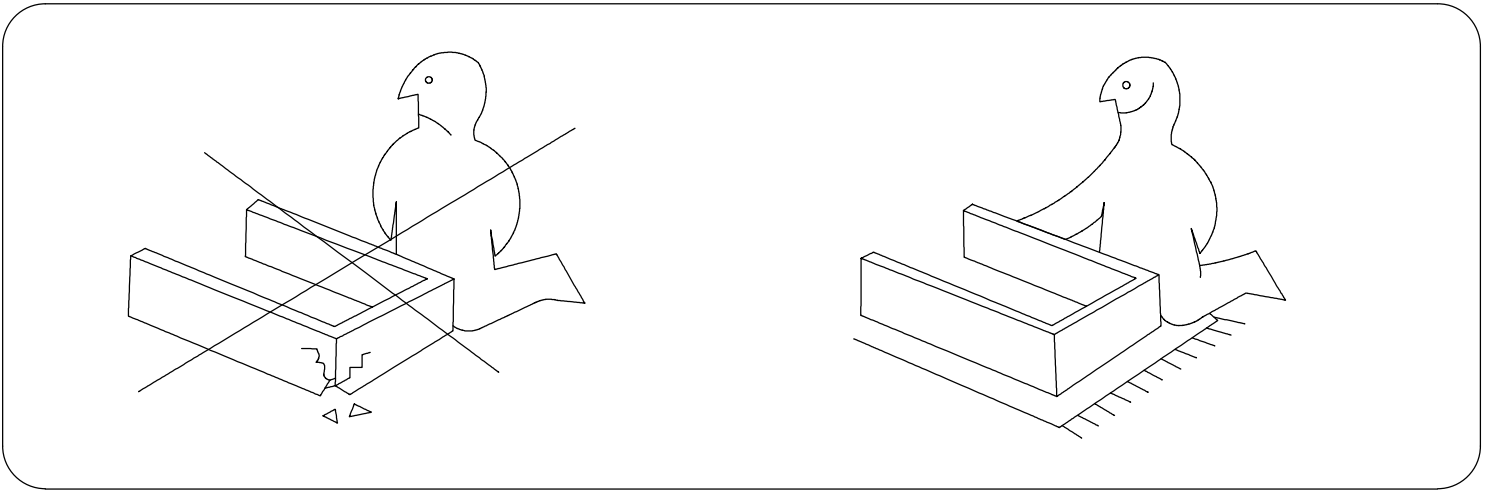


sømcasa


Assembly Instruction

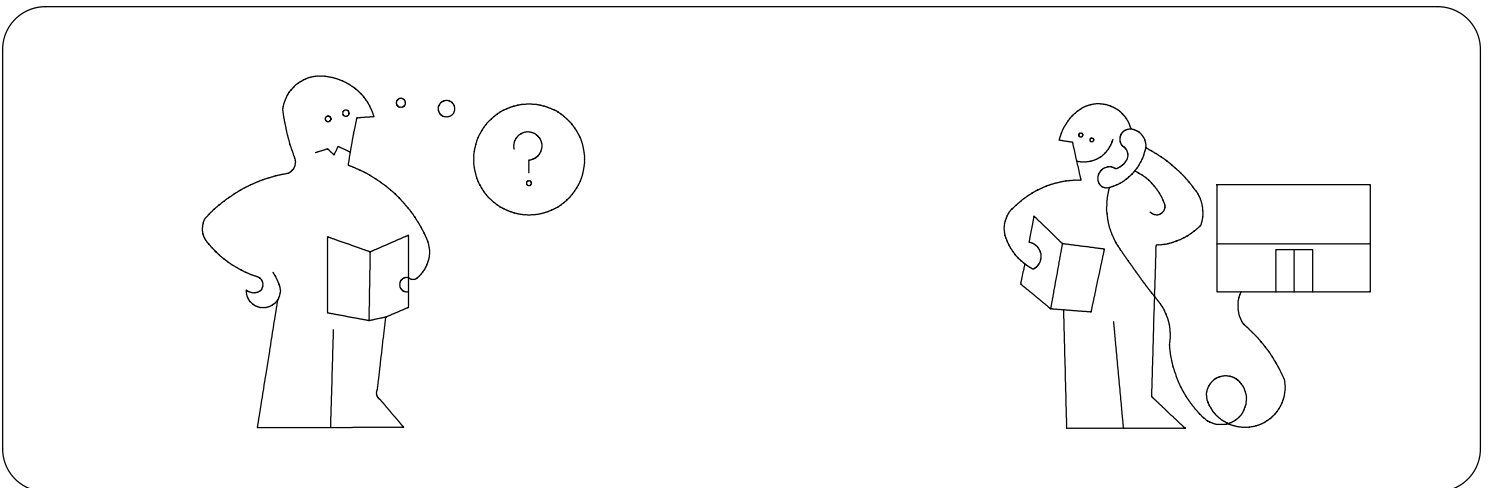

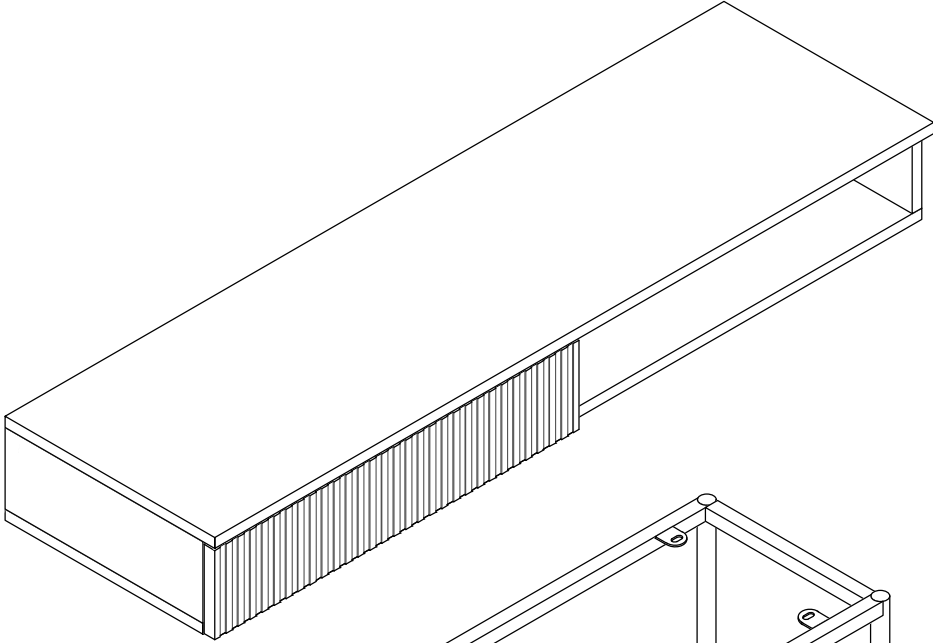

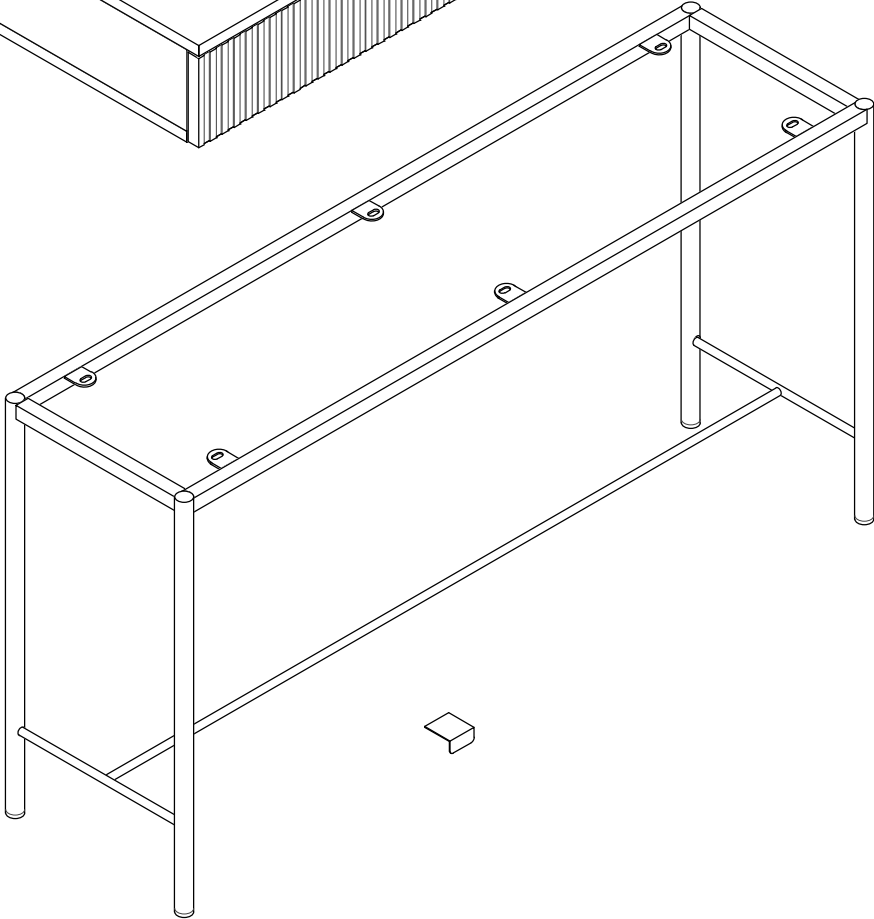

Fittings

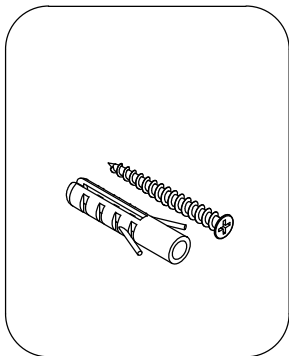

F=1




M6*16

G1=10





M6*8

G2=4

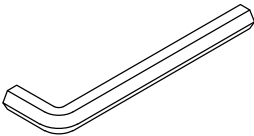

H =1

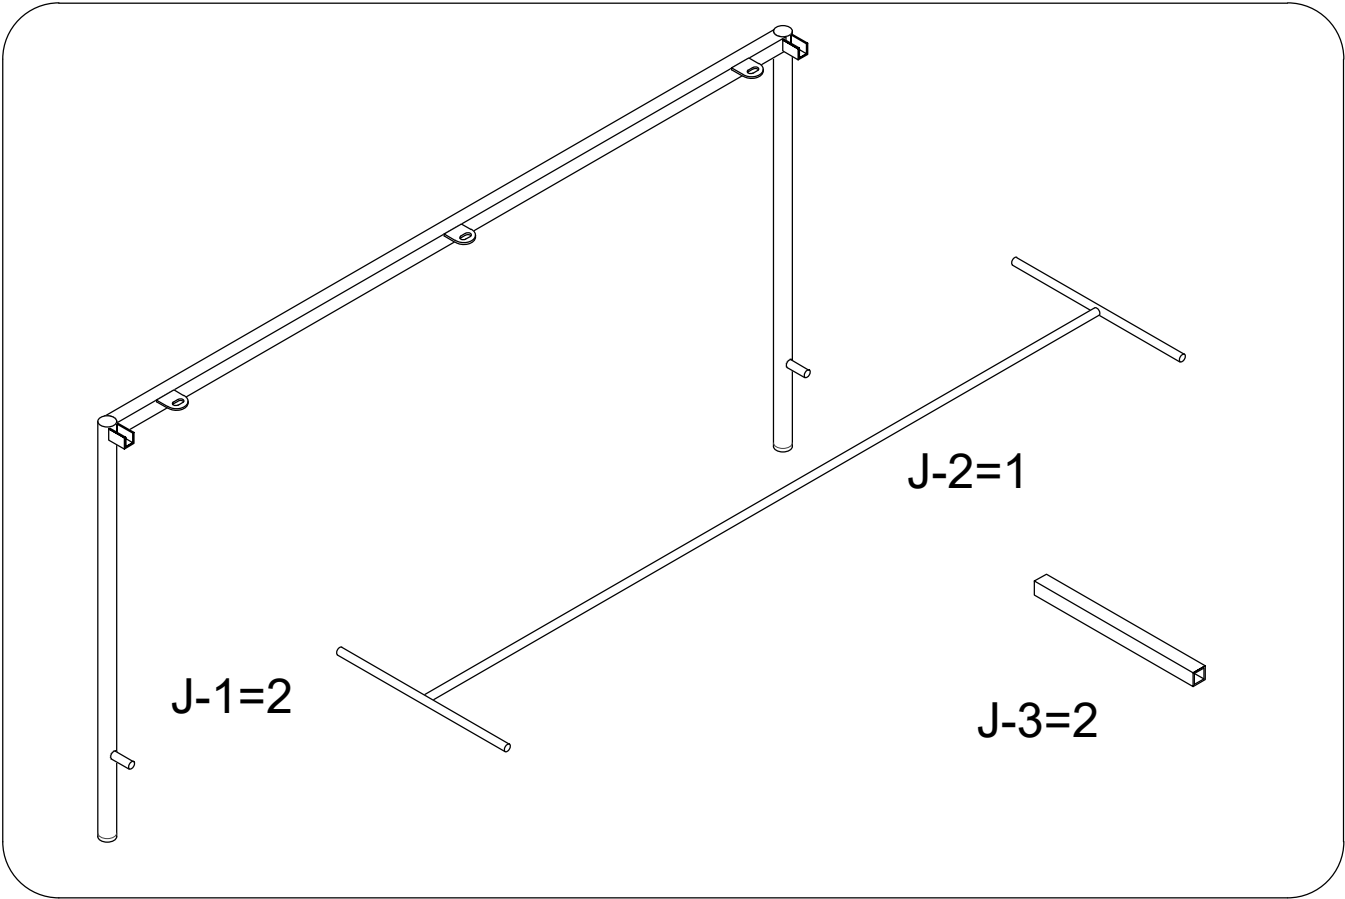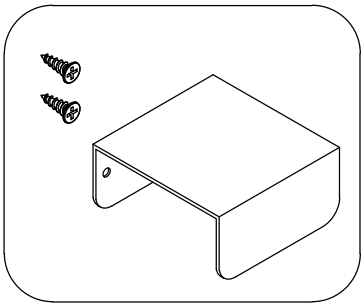


U=1

J=1




Z1=6




Z2=6


STEP 1

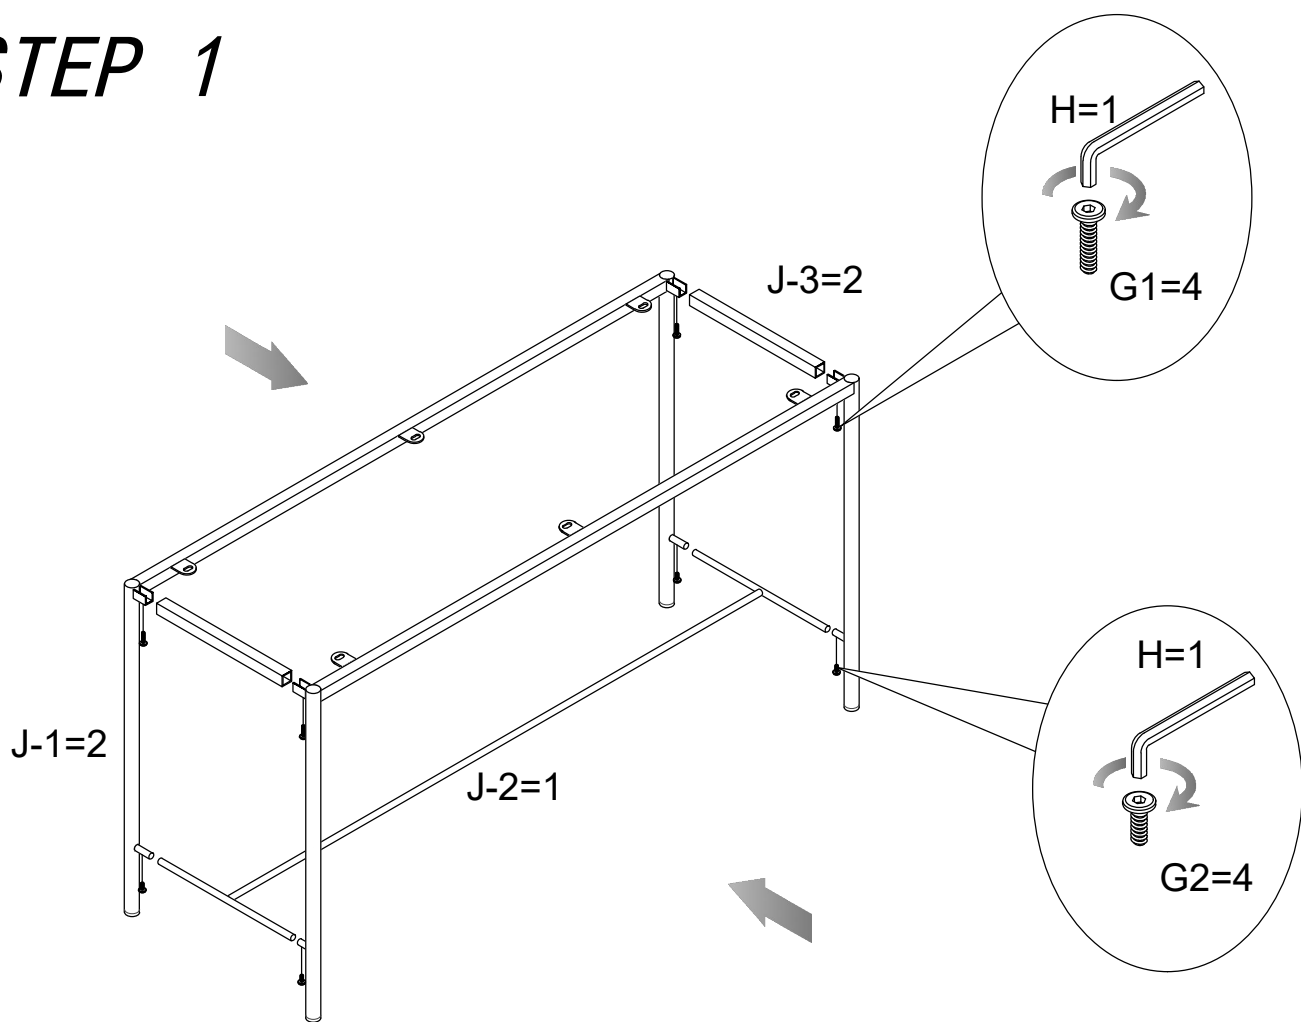


STEP 2

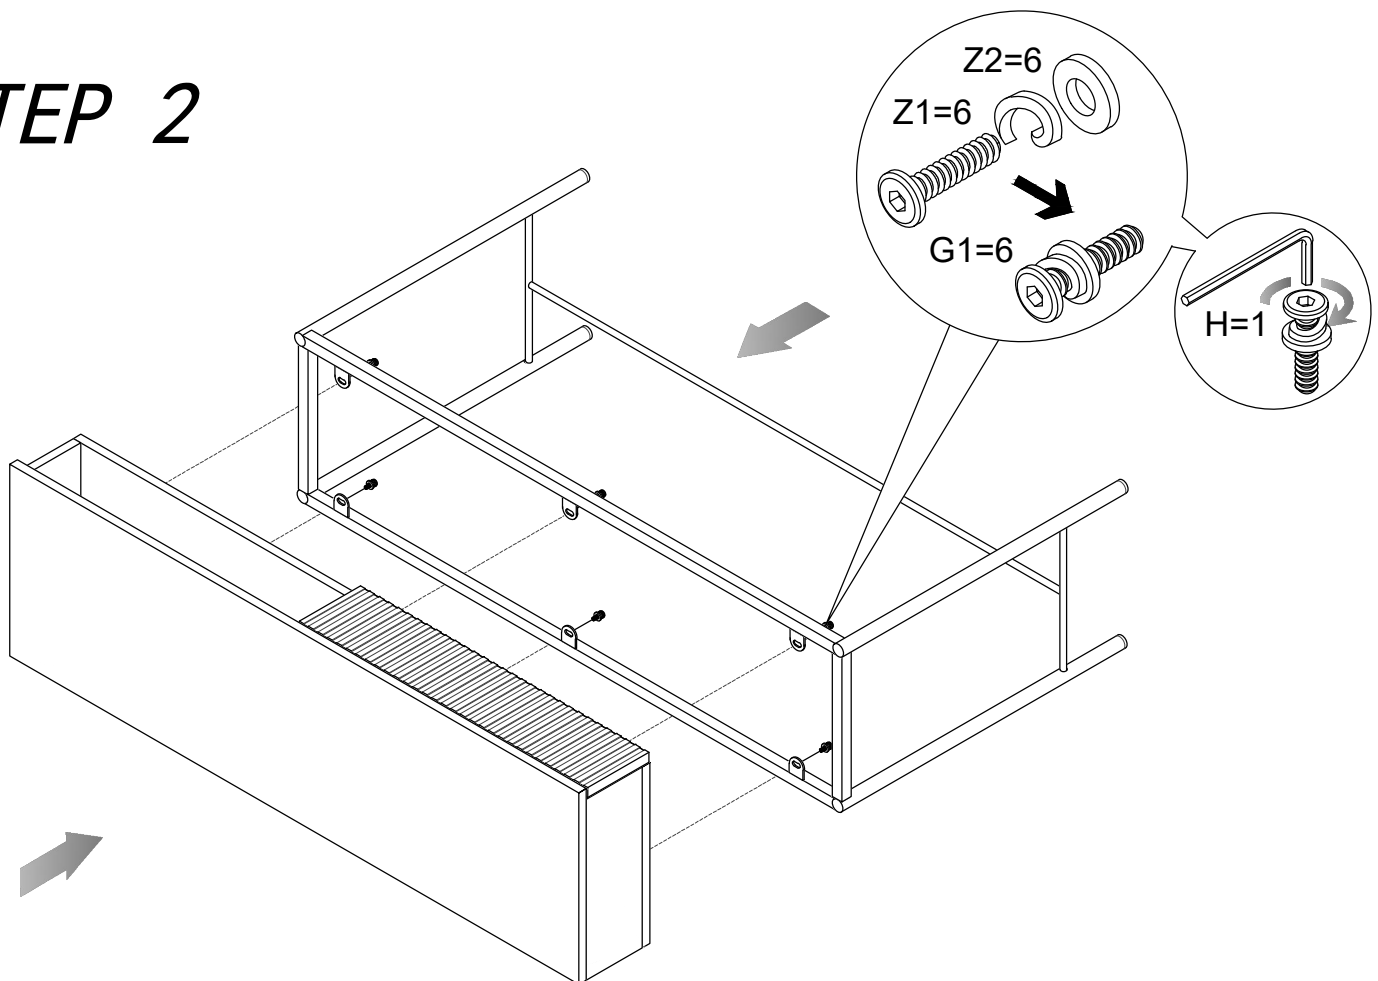


STEP 3

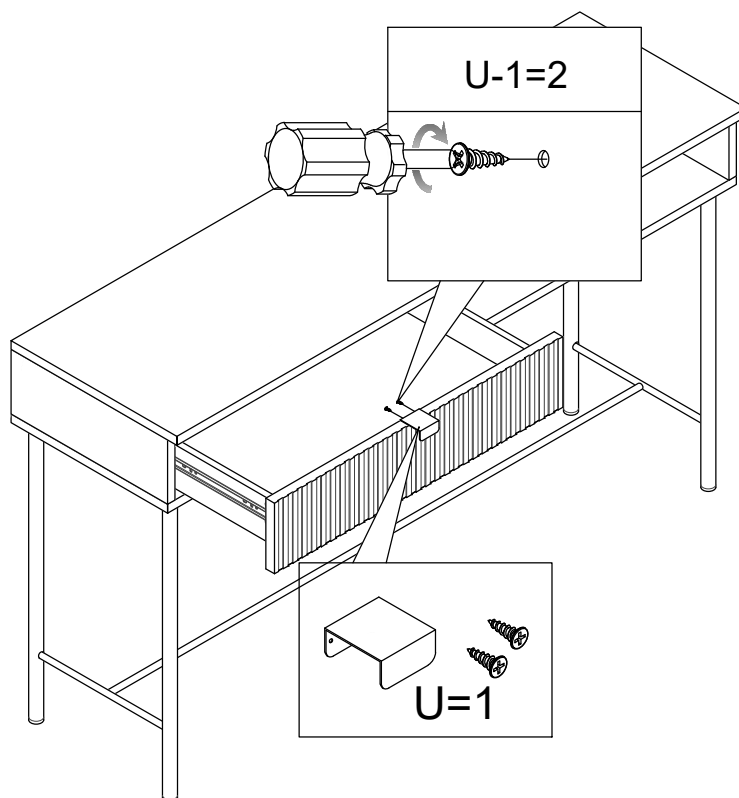

STEP 4

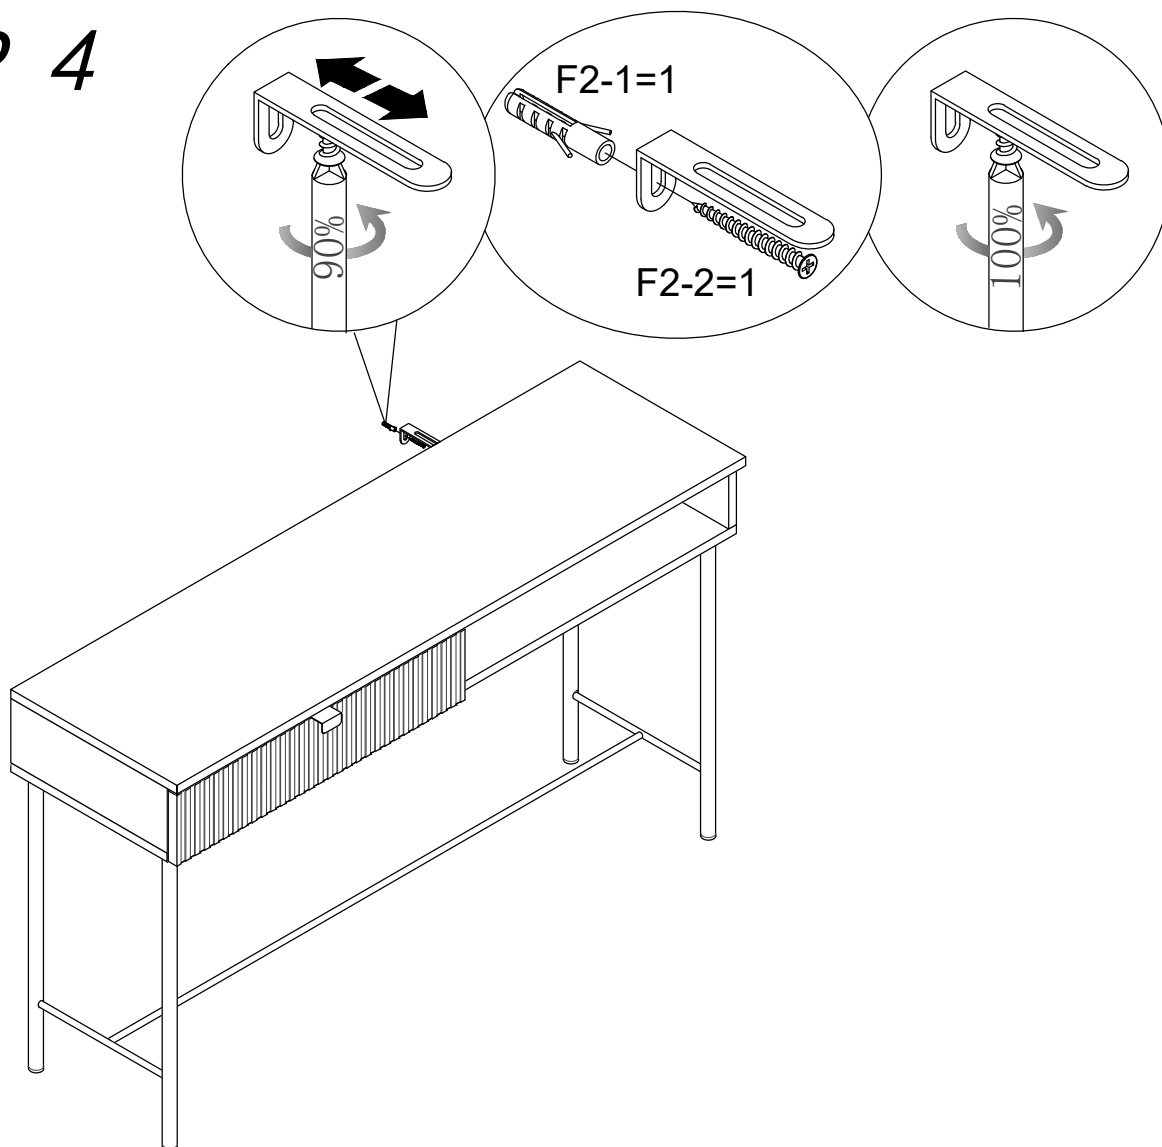

STEP 5

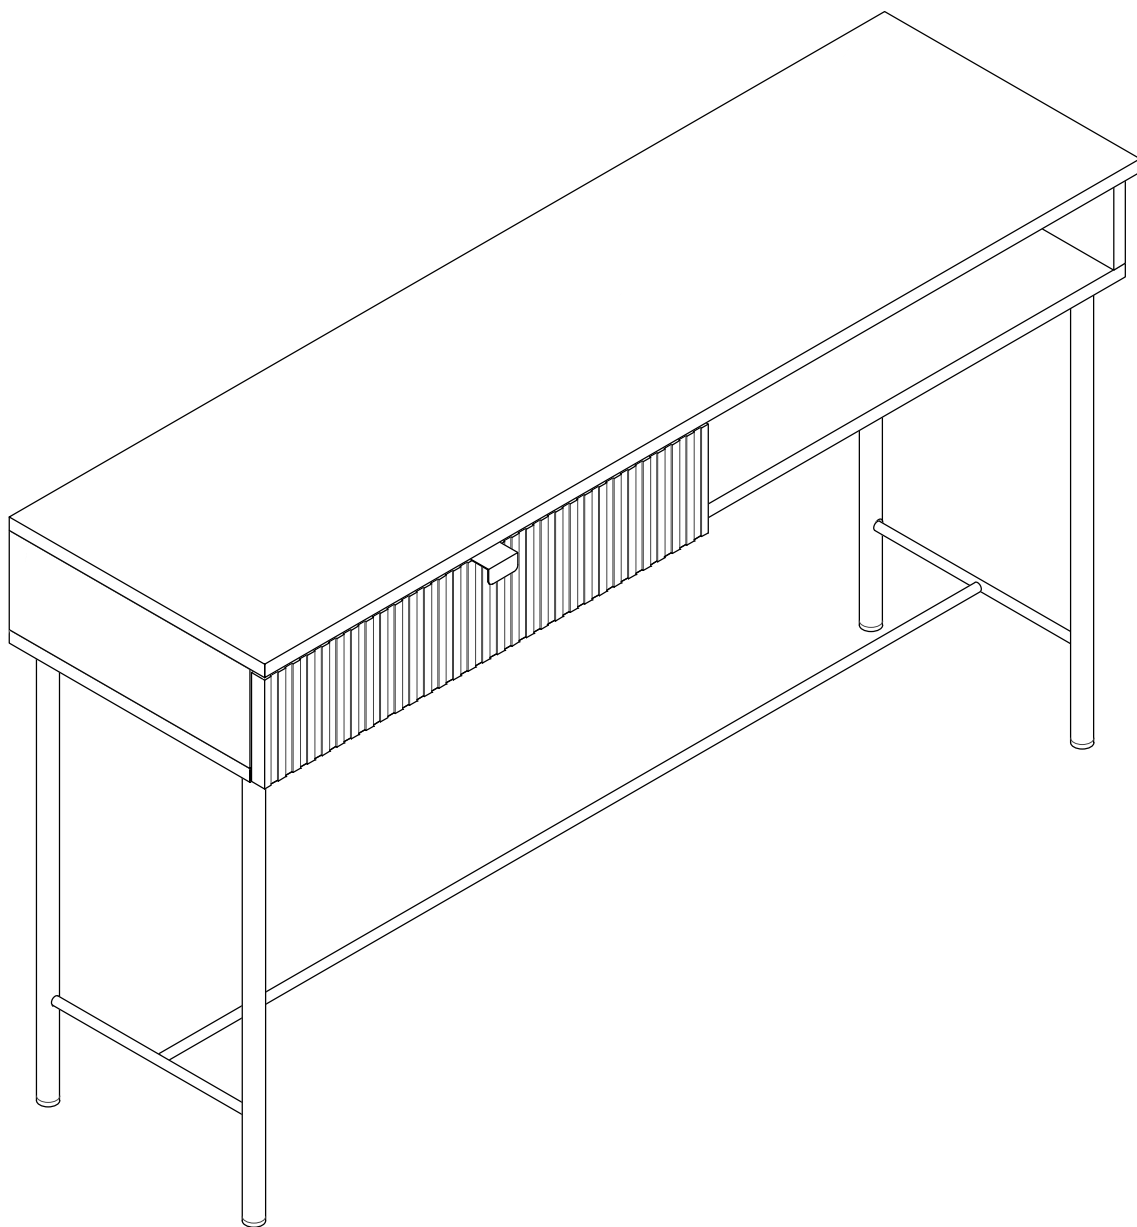

Finish