


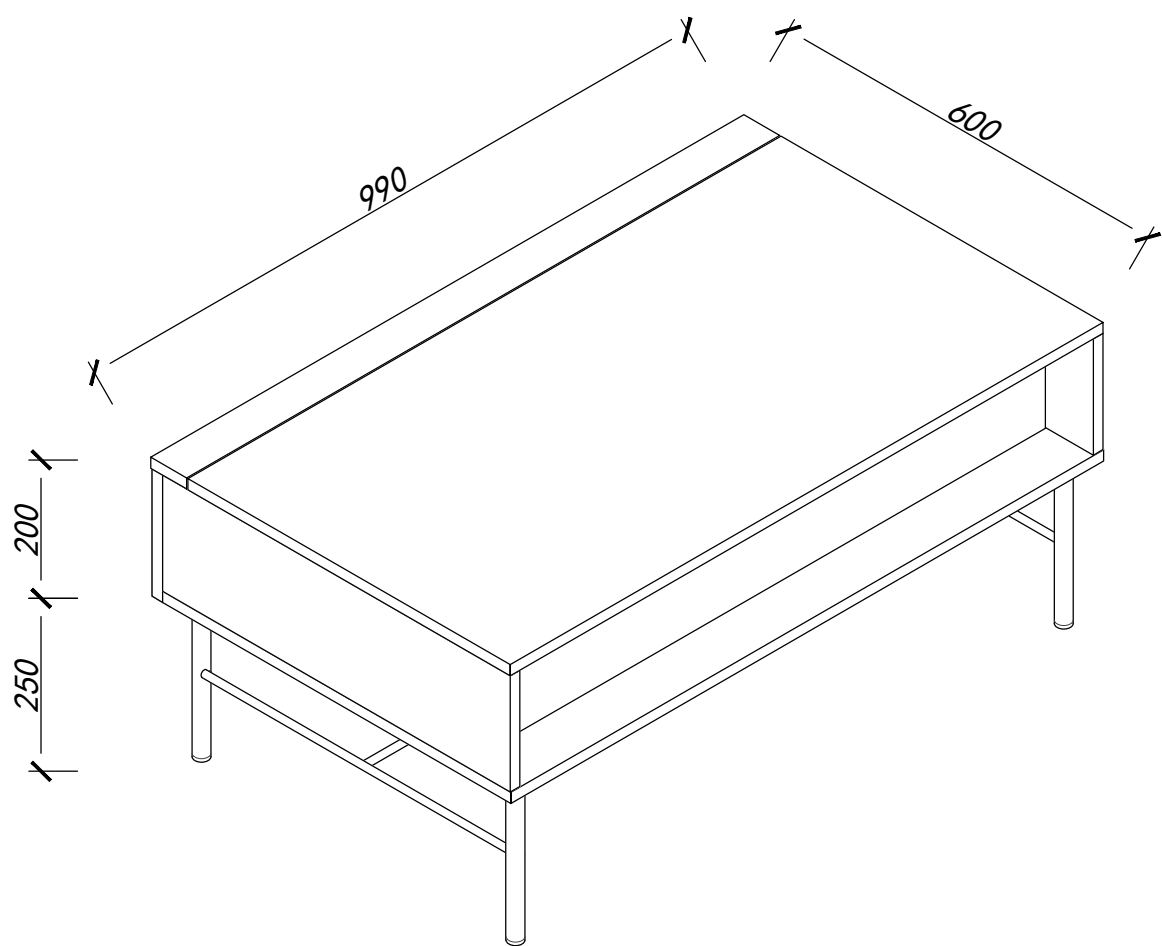
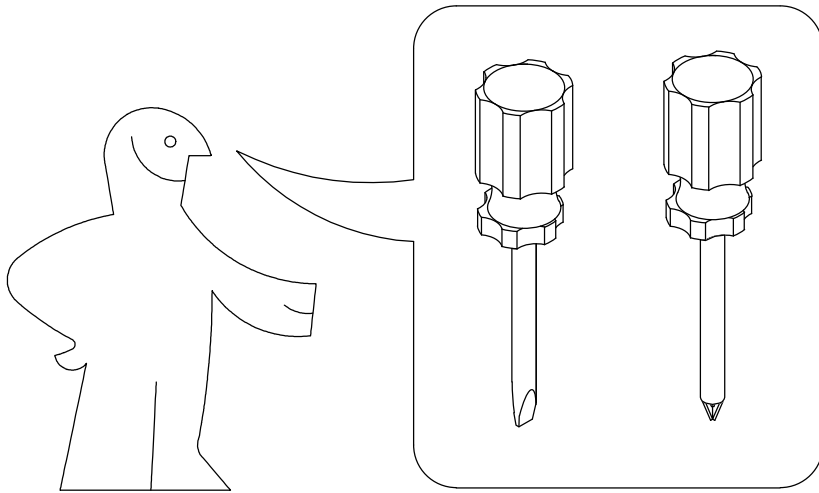
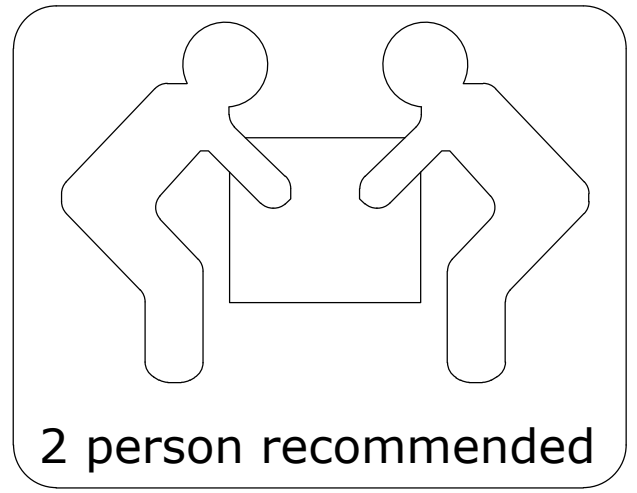
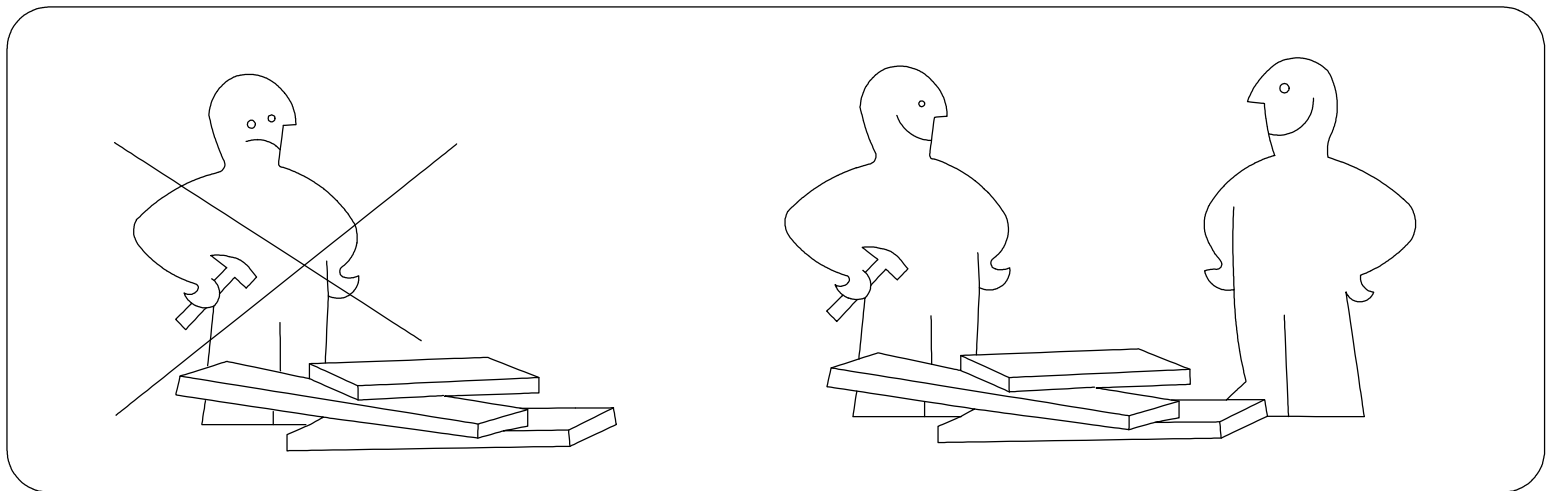
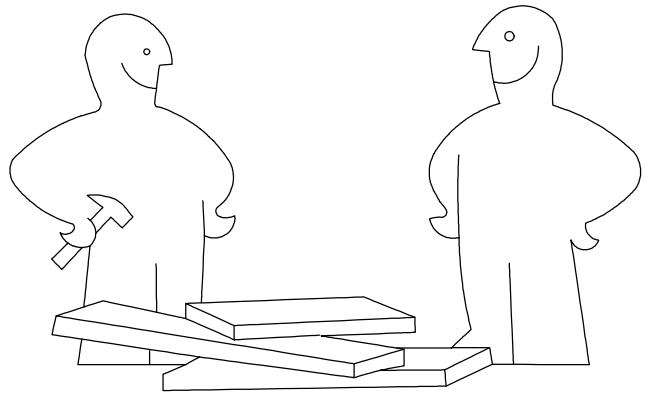
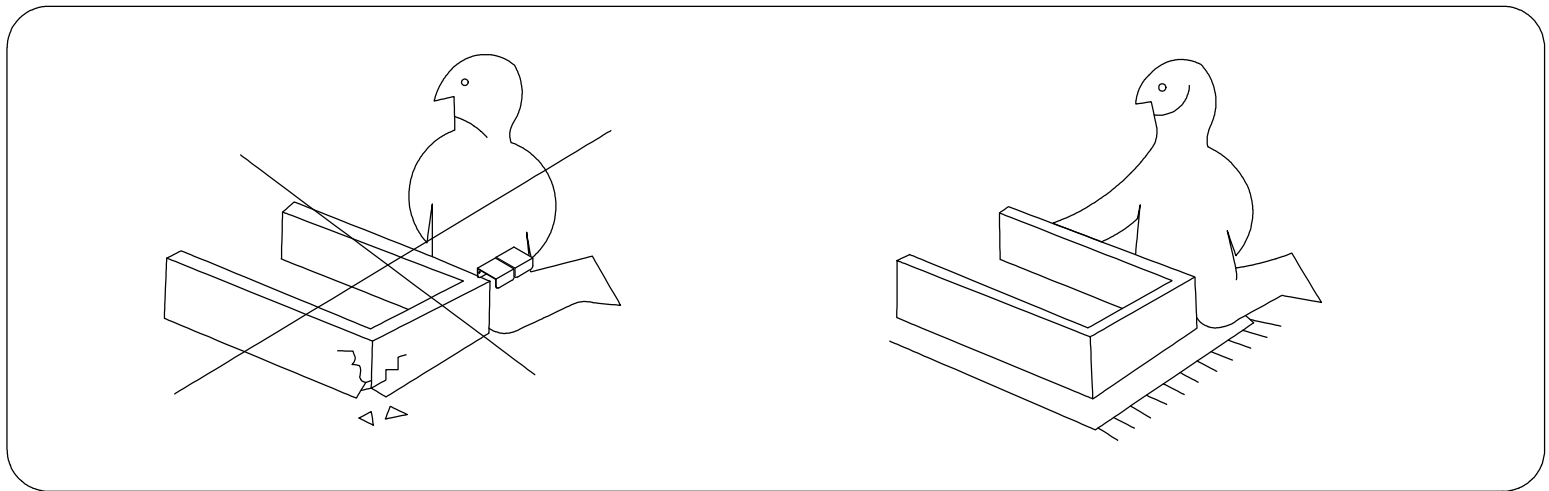


Assembly Instruction

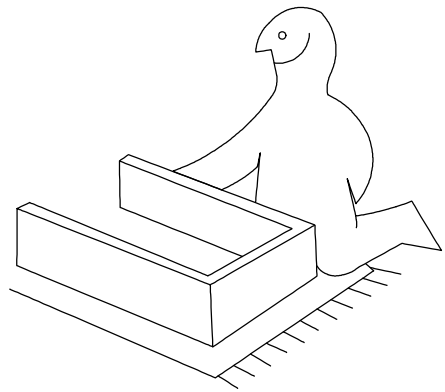

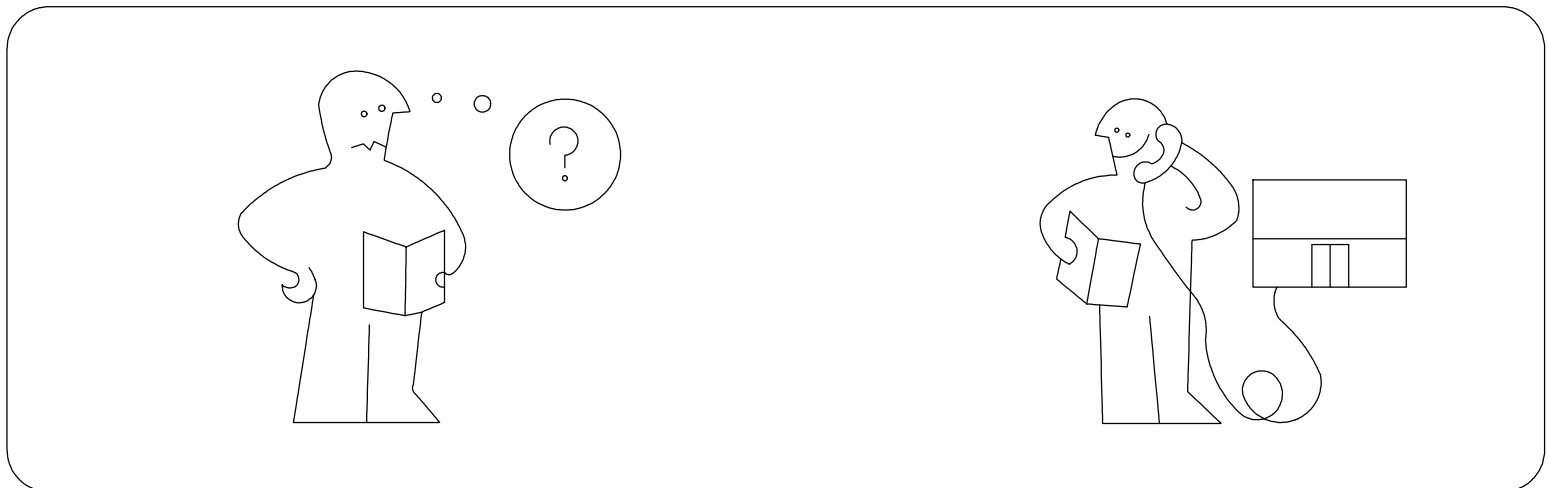


Fittings

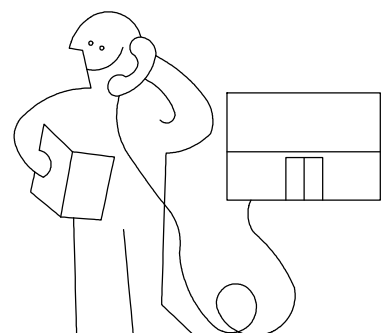


M6*40

A=6



Φ8*30

B=15

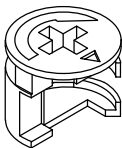


Φ15*12

C=6



Φ21

D=6



H =1




M6*16

G1=10



M6*12

G2=24

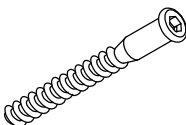


Q=6




Z1=6



Z2=6

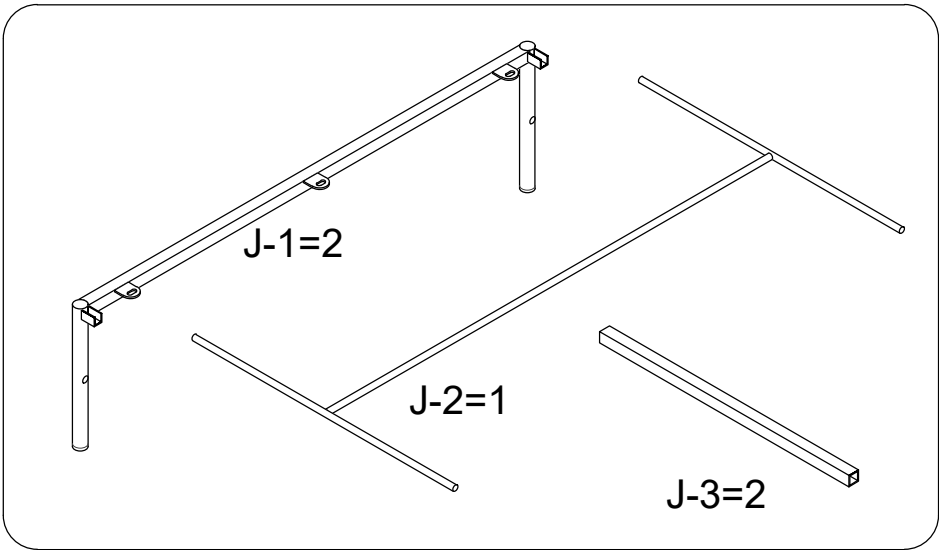


J=1

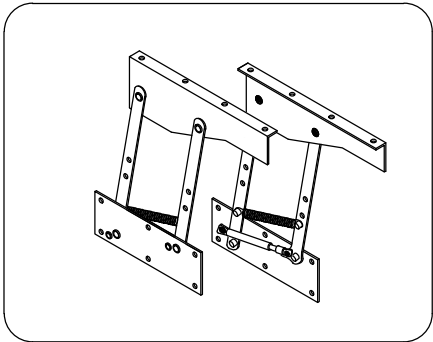


S=1

Panel No	Panel Sizes	Quantity
1	990*60*16	1
2	990*538*16	1
3	990*581*16	1
4	168*580*16	1


Panel No	Panel Sizes	Quantity
5	168*580*16	1
6	956*168*16	1
7	184*990*18	1
8	930*80*16	1

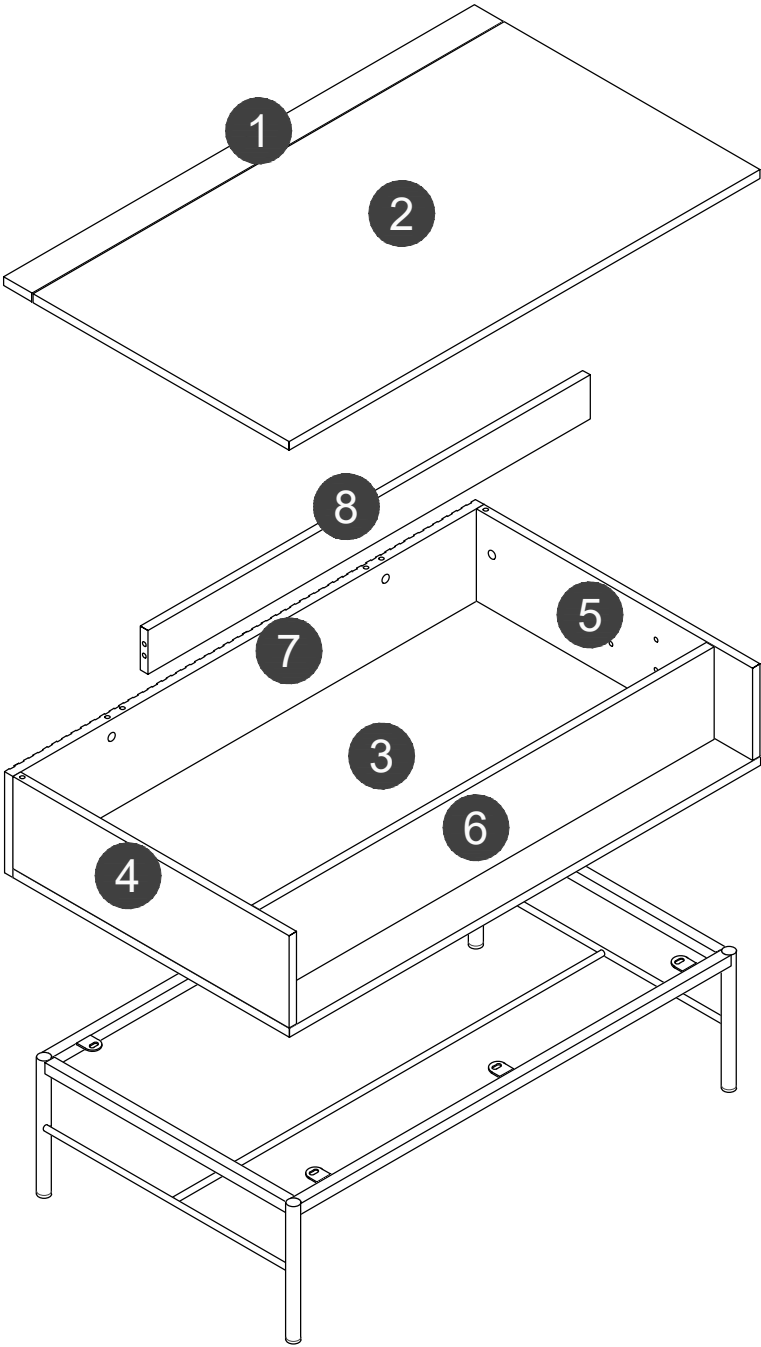


STEP 1

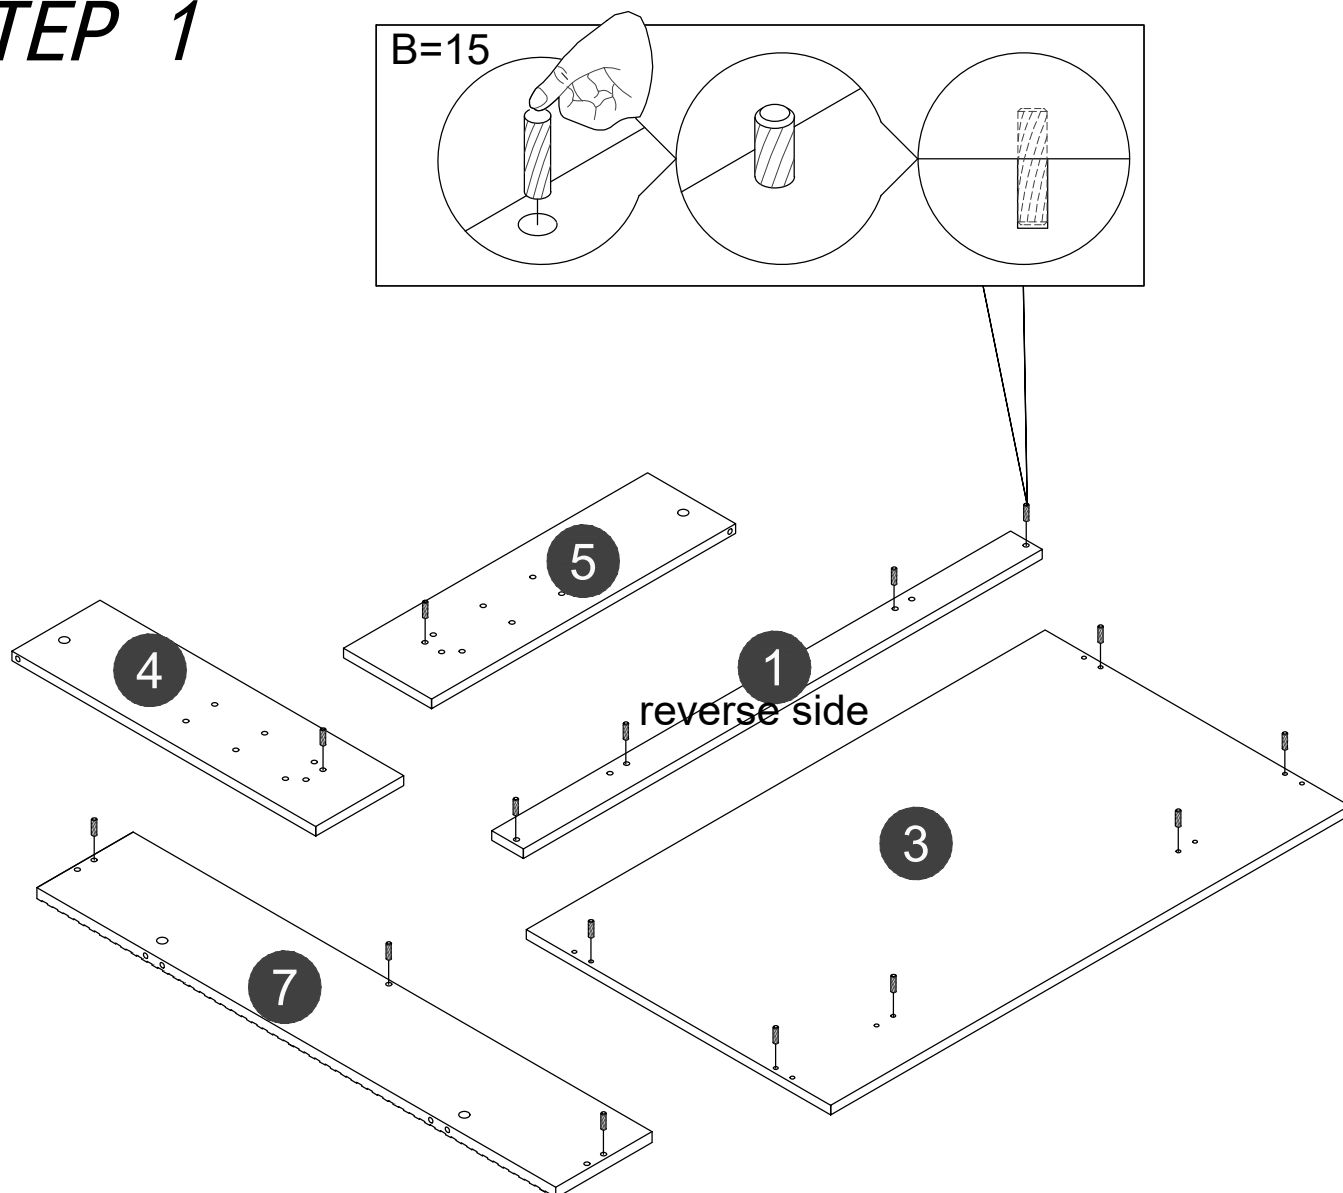


STEP 2

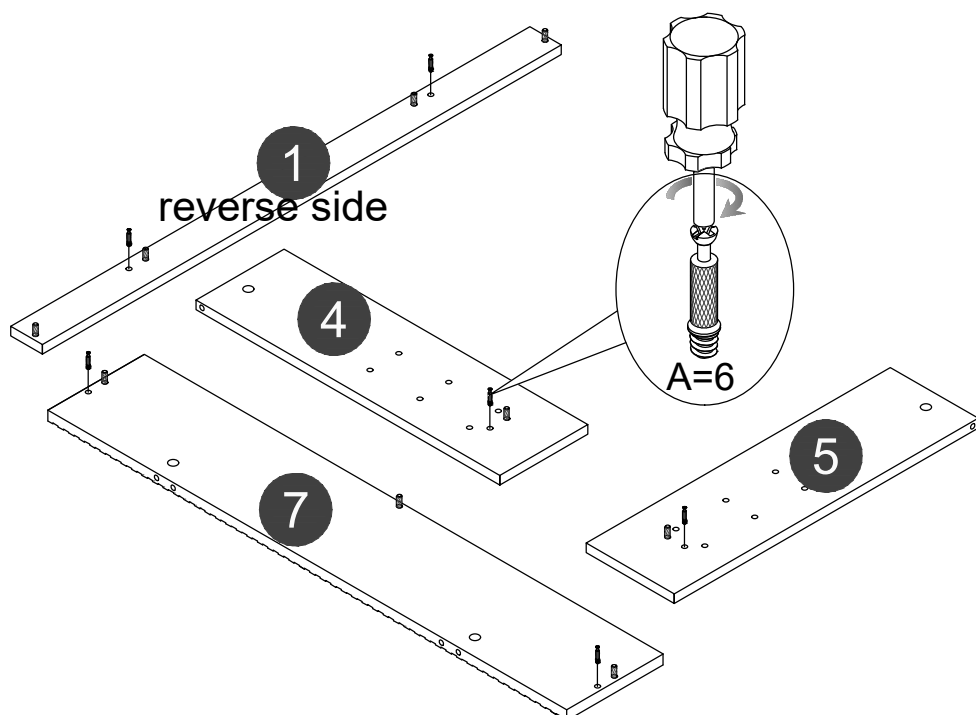


STEP 3

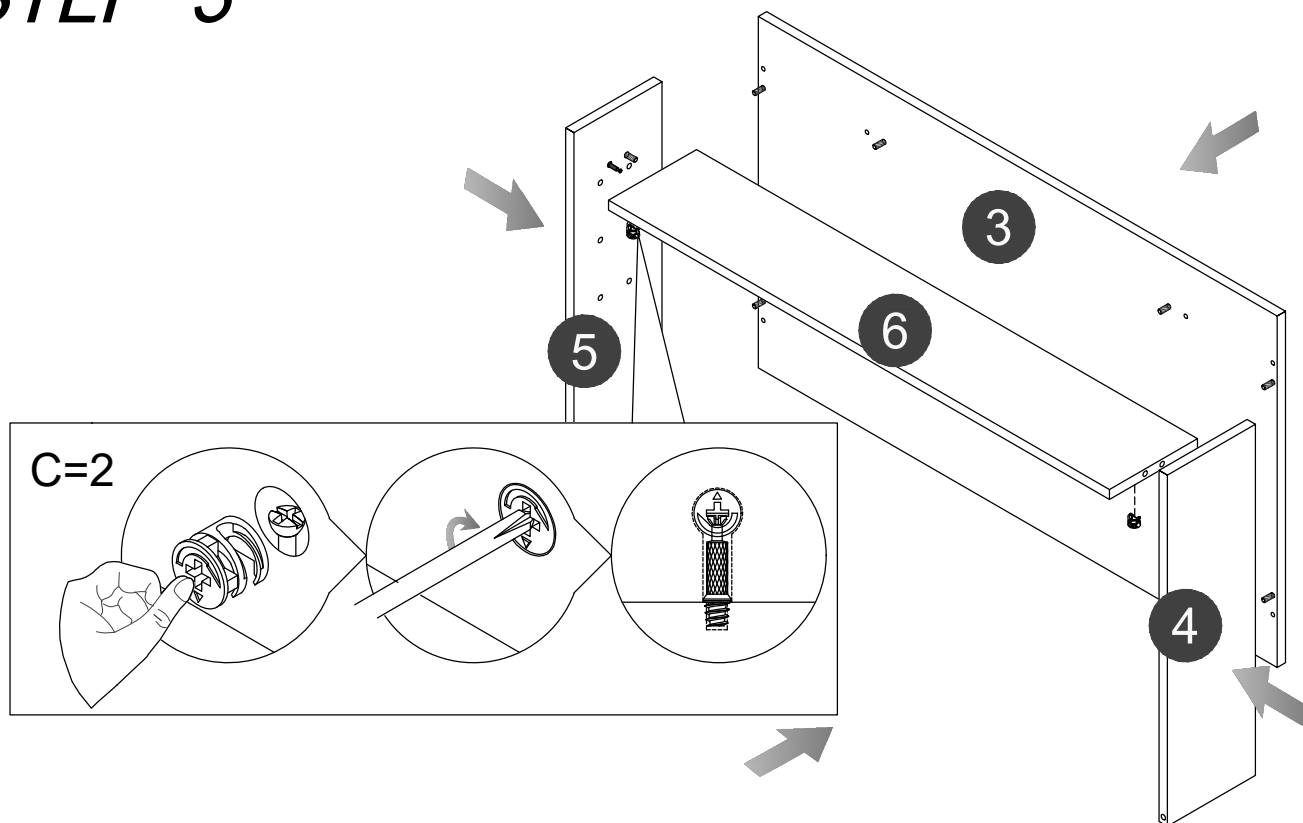


STEP 4

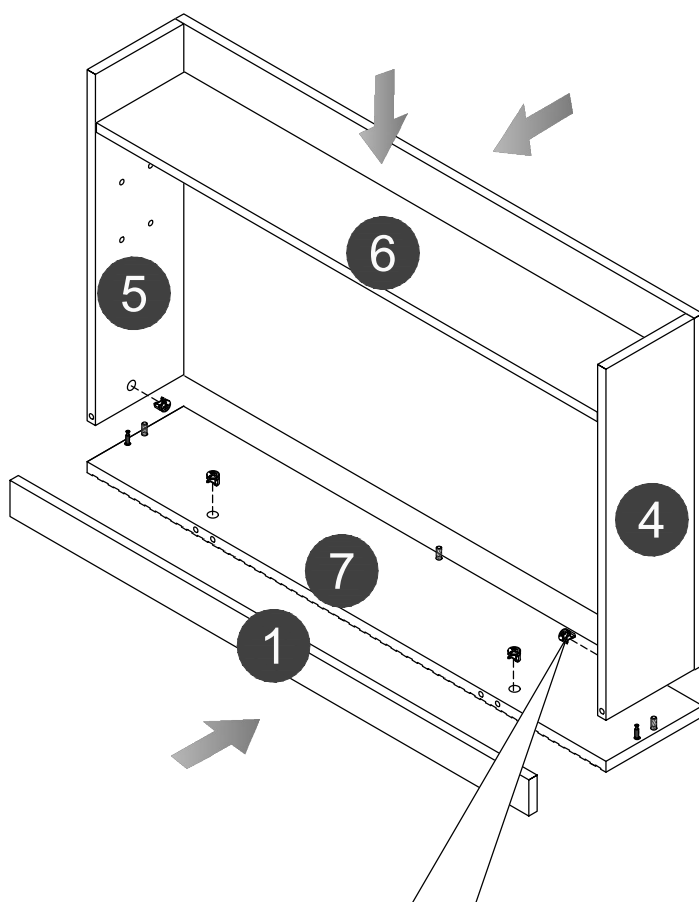


STEP 5

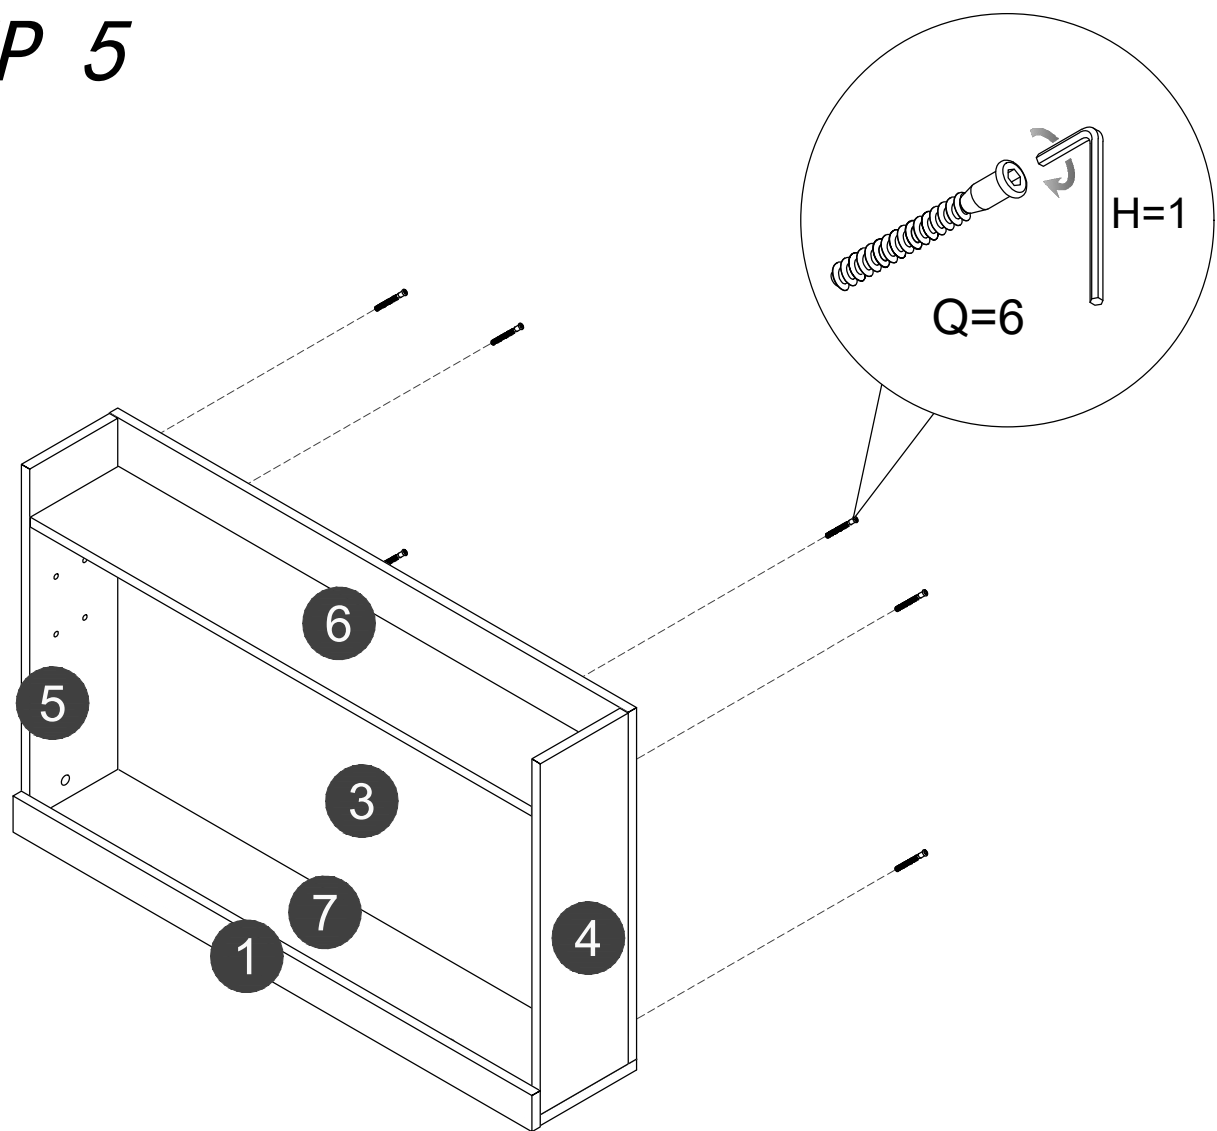


STEP 6

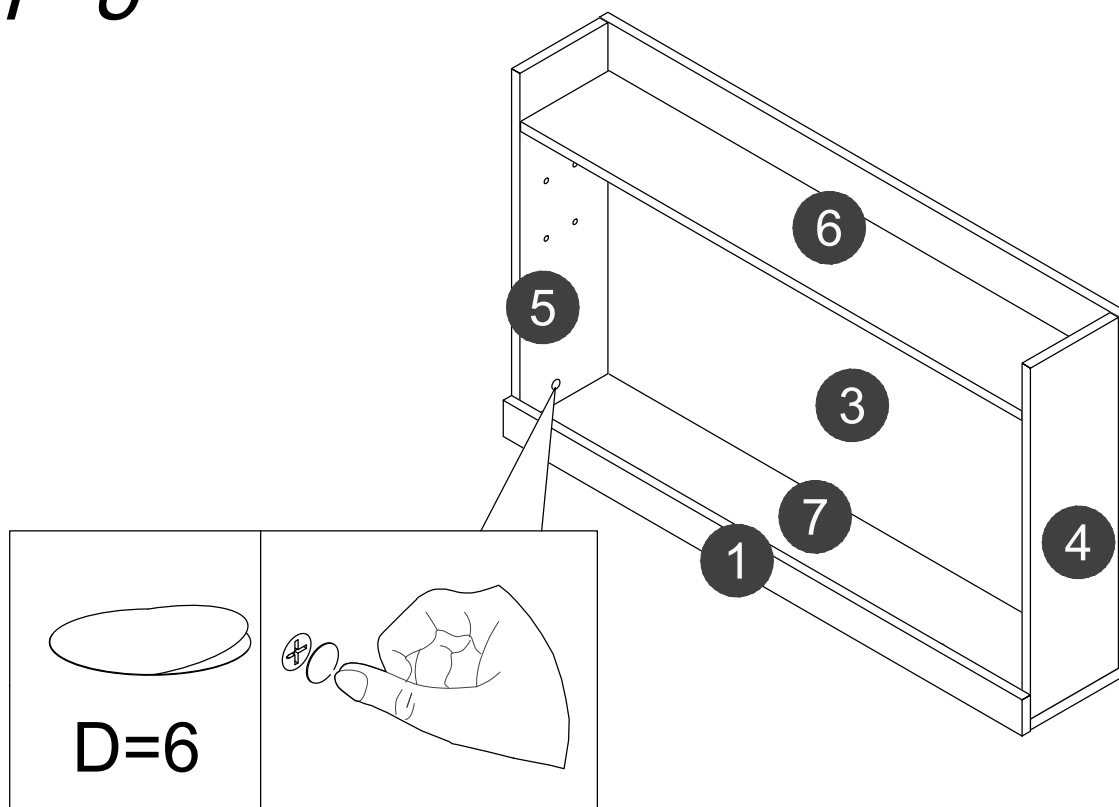


STEP 7

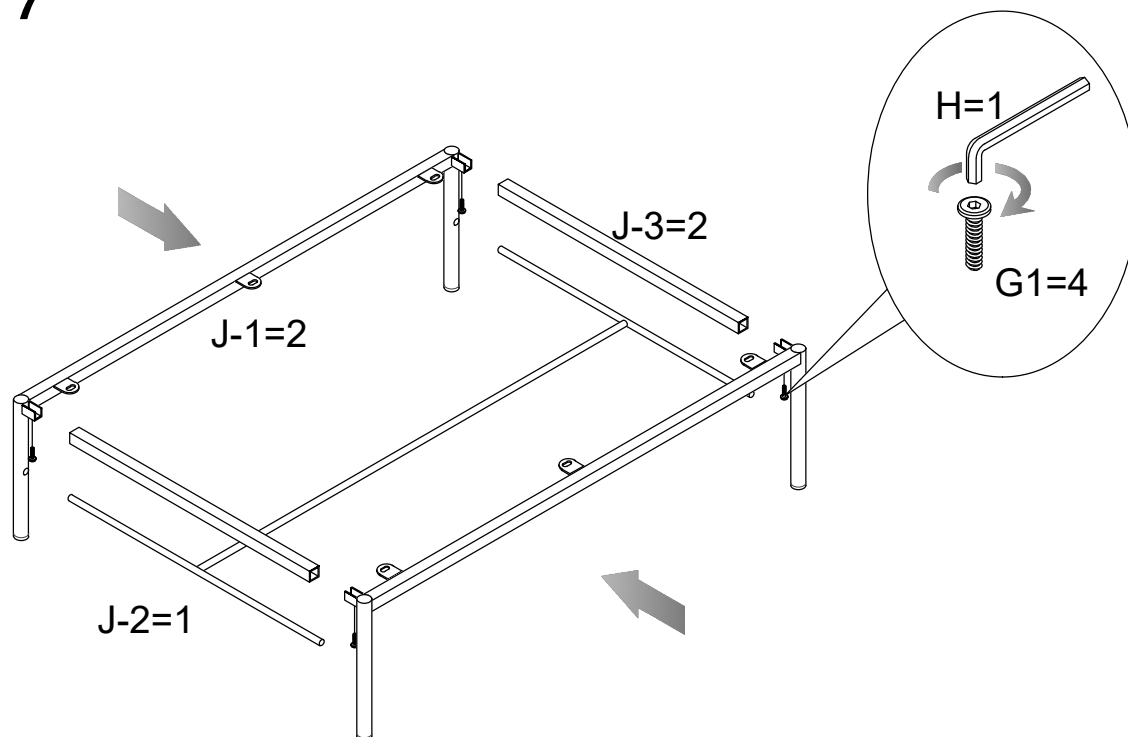


STEP 8

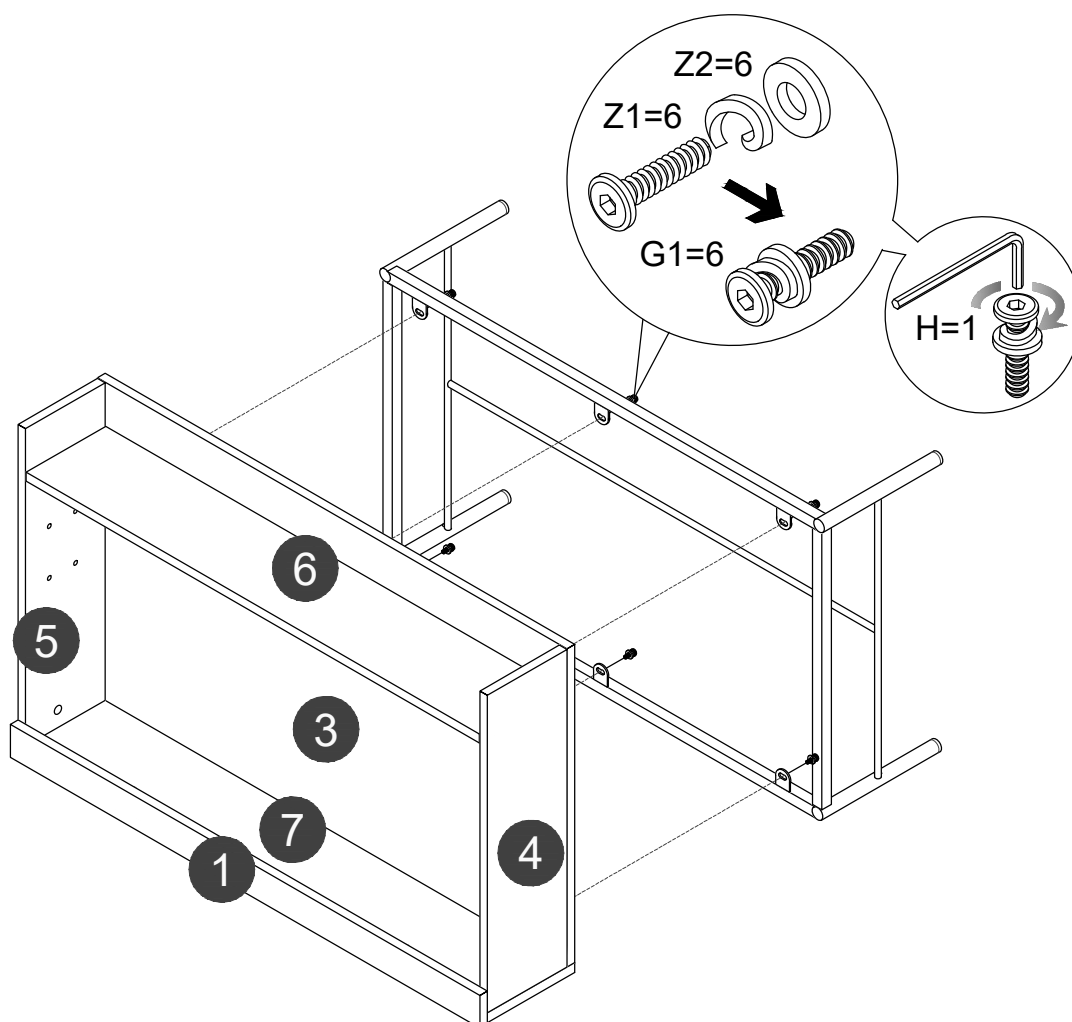


STEP 9

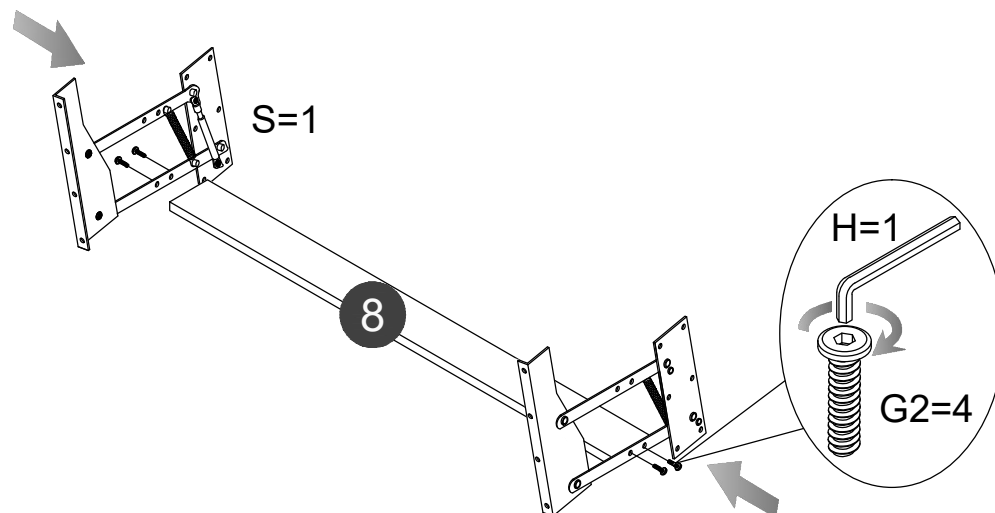


STEP 10

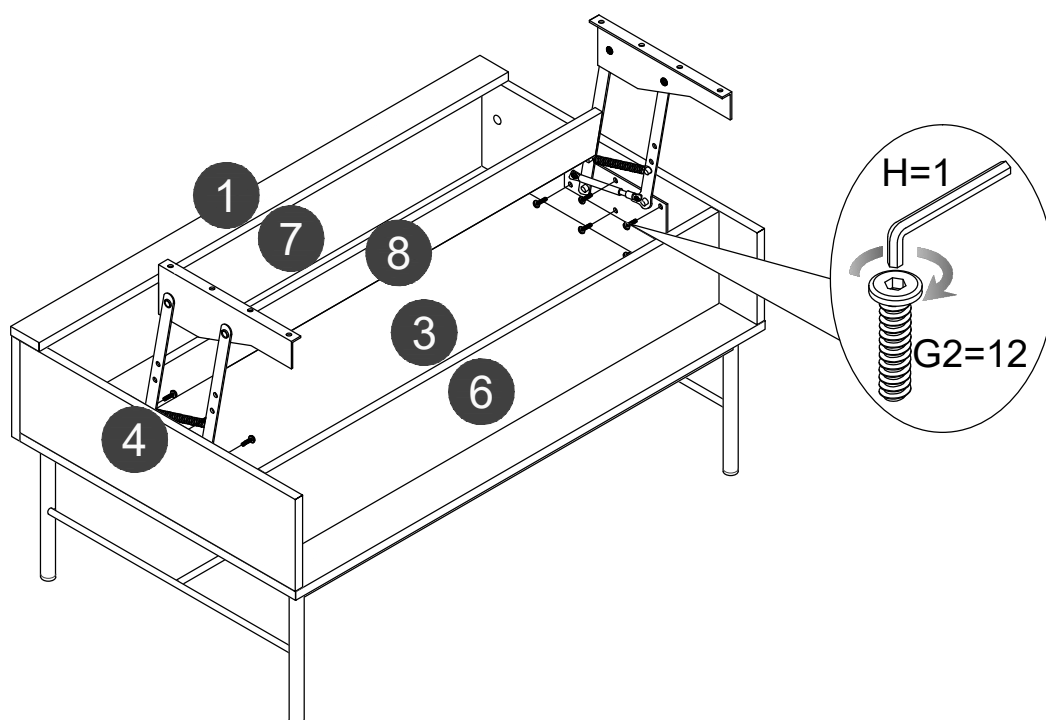


STEP 11

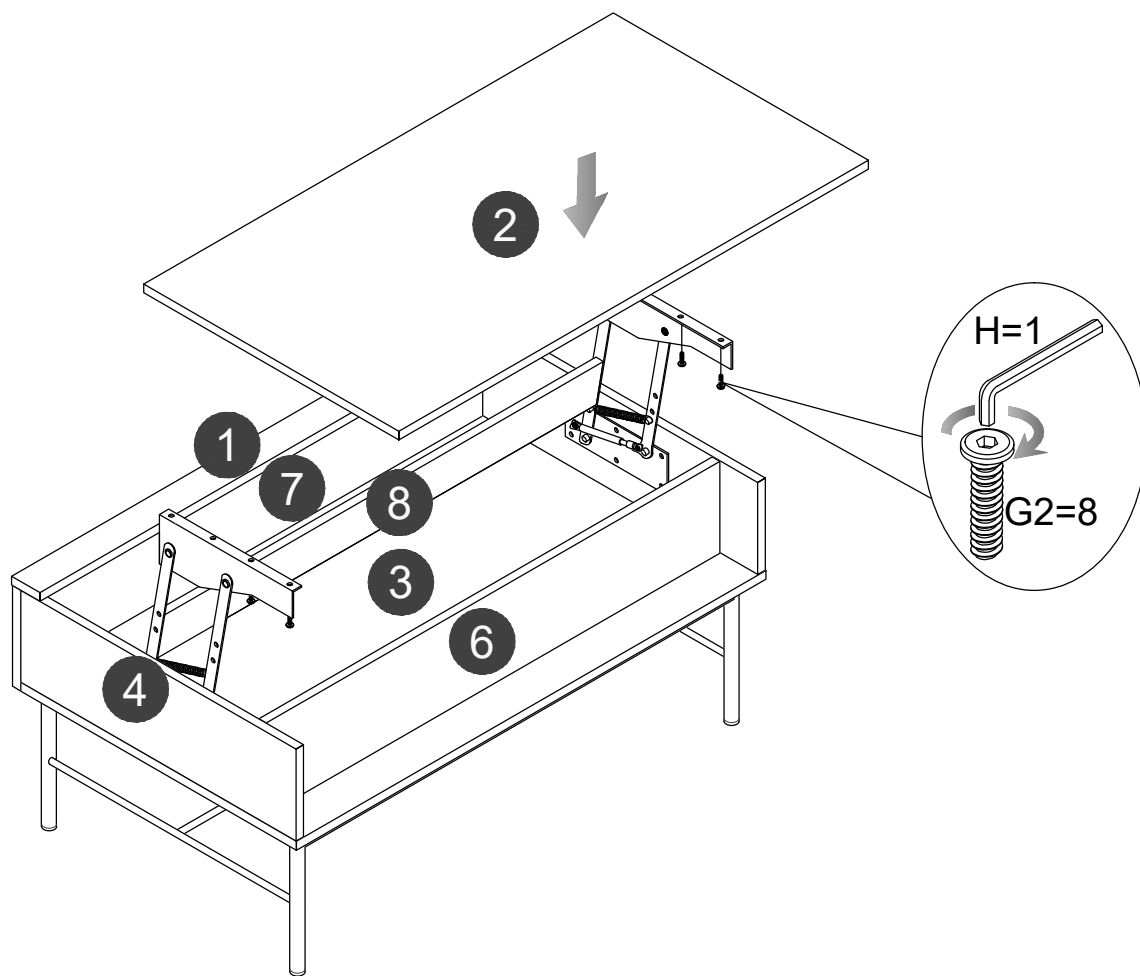


STEP 12

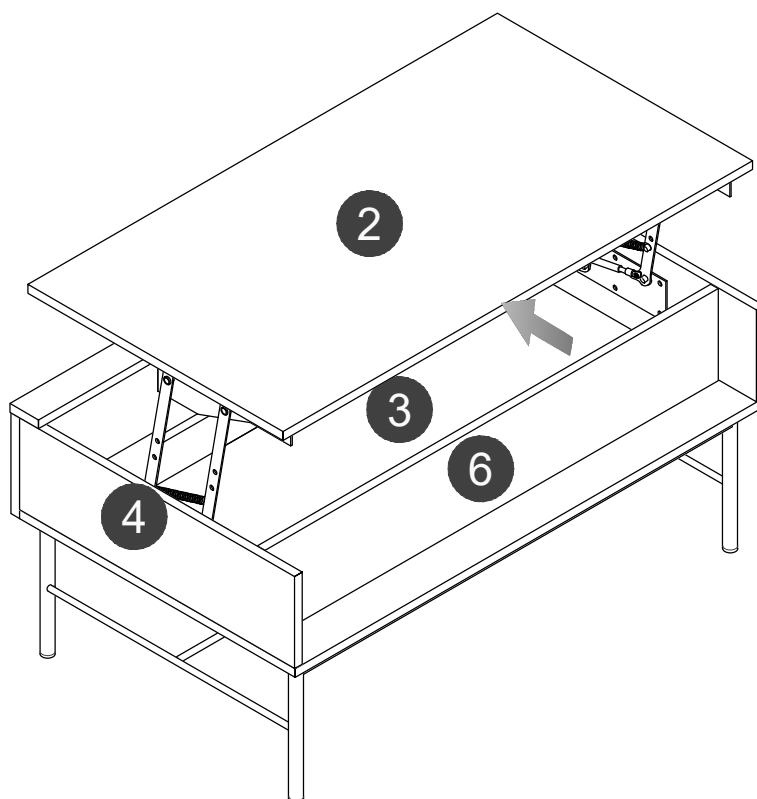

STEP 13

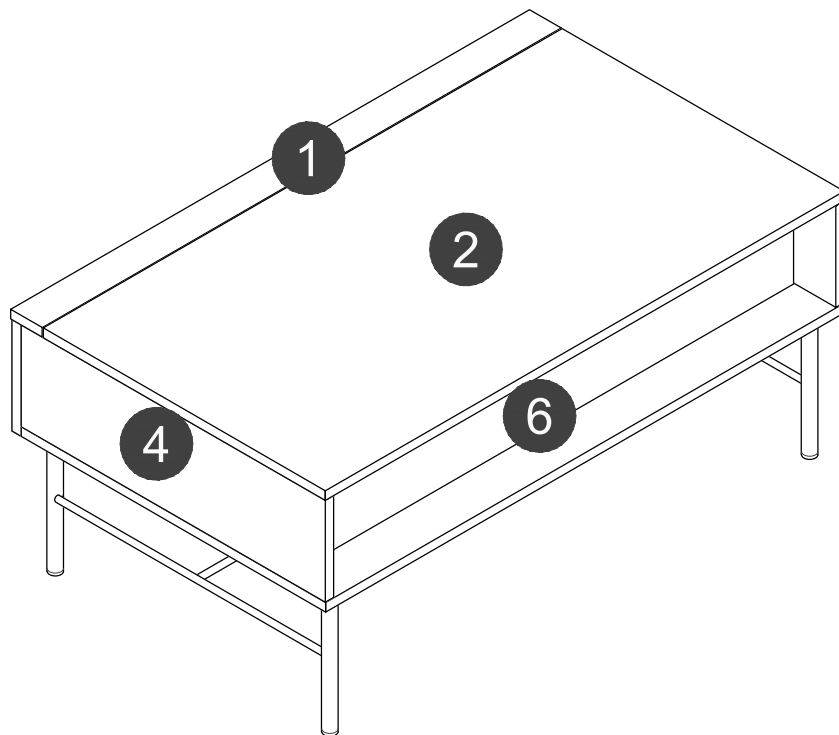

STEP 14

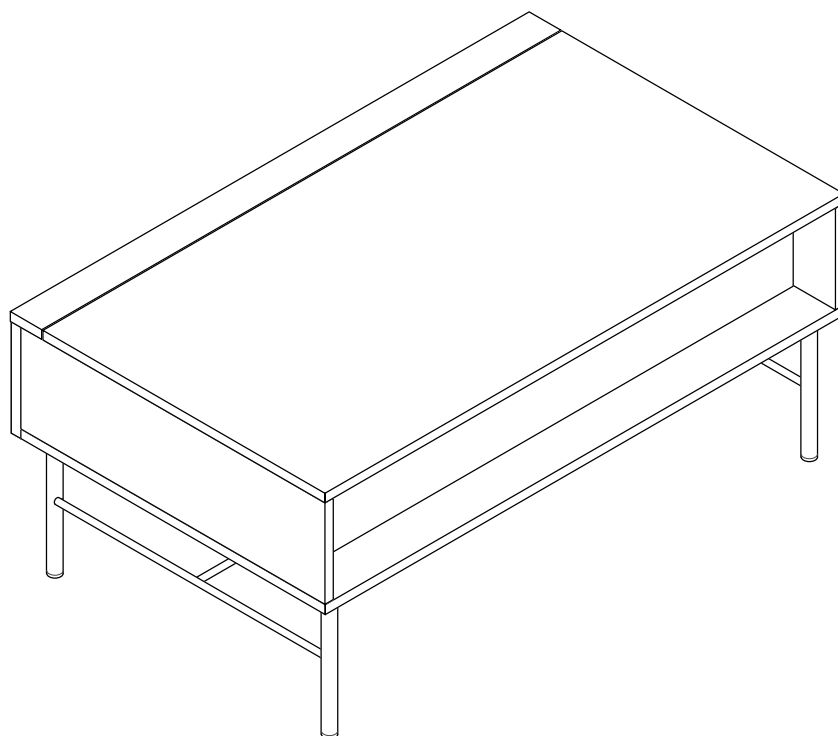

Finish