




STEP 1

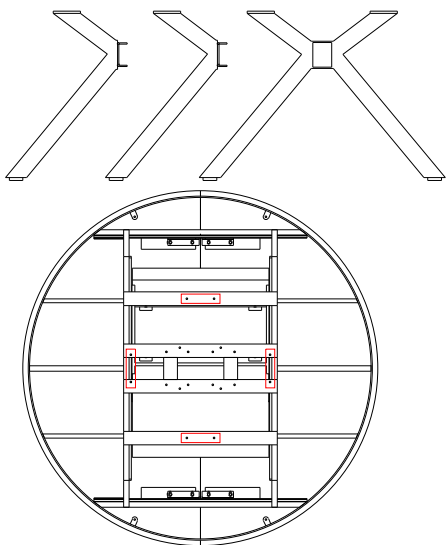


STEP 2

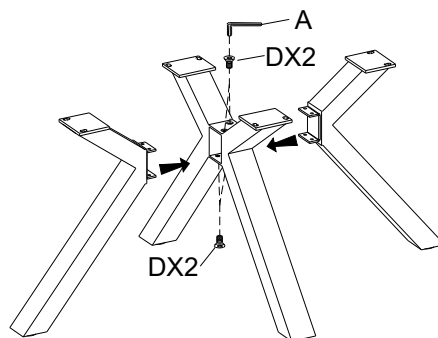


STEP 3

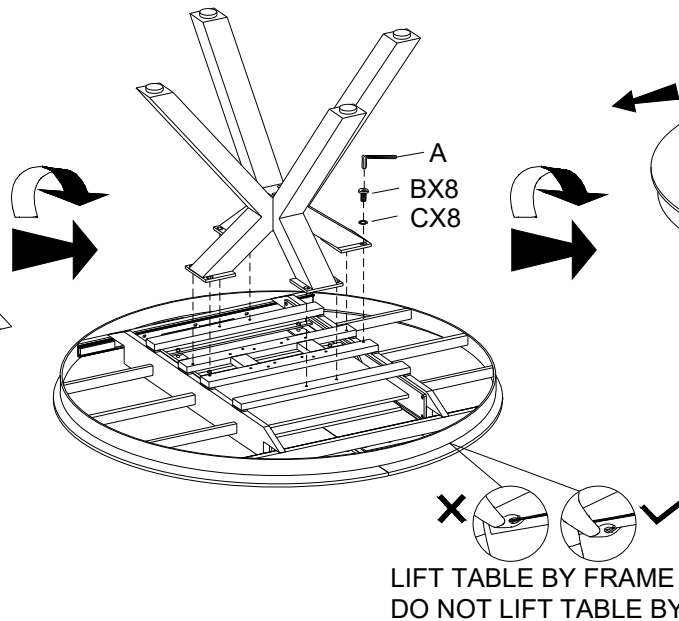


STEP 4

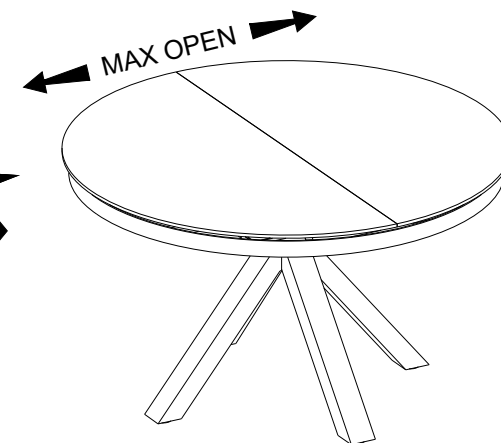


STEP 5

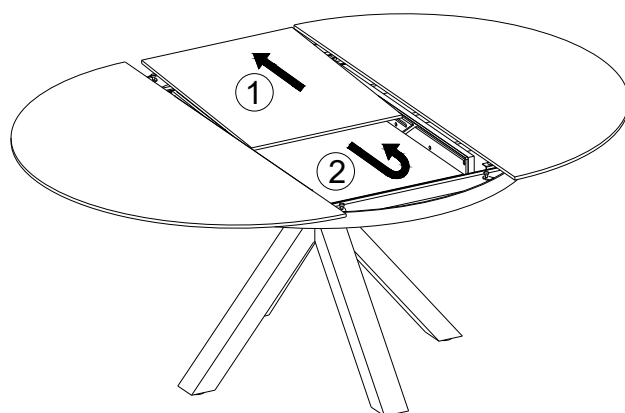

STEP 6

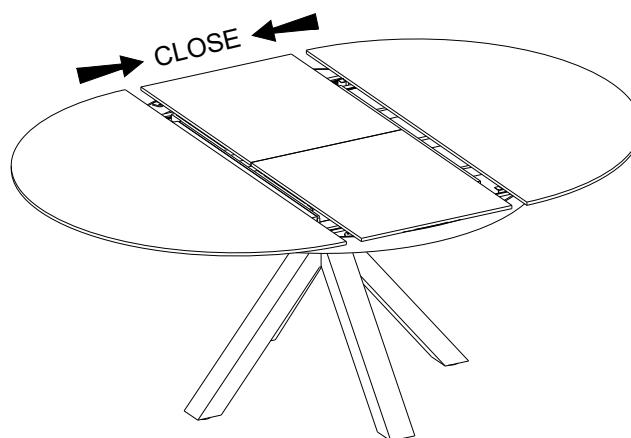




STEP 7

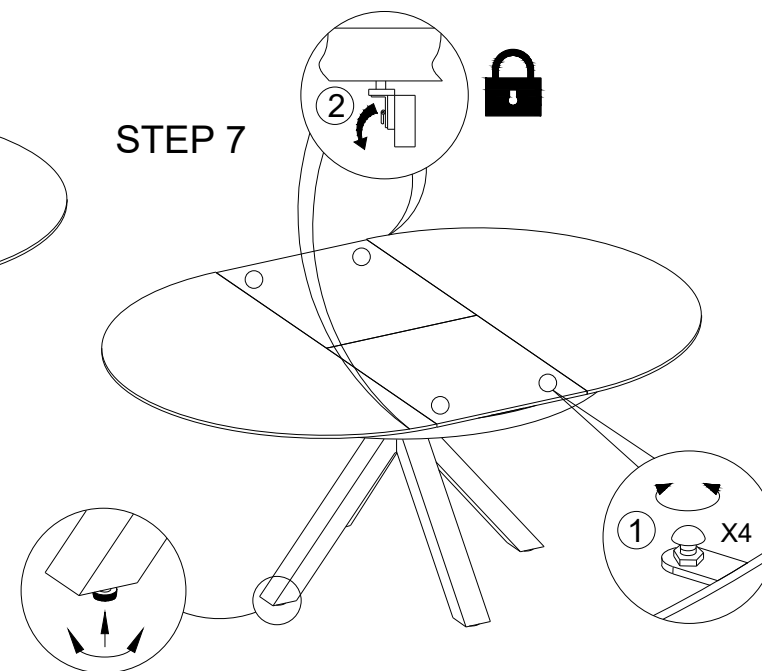



A	B	C	D
 5#	 M8	 Ø8	 M8
1PC	8PCS	8PCS	4PCS





sømcasa

Adjustment instruction






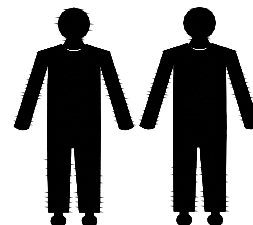
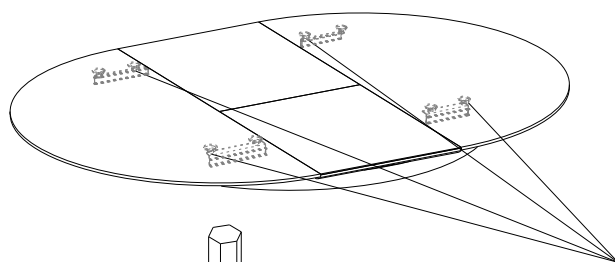
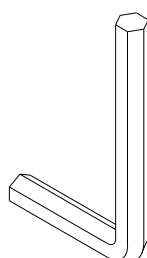


Spanner A


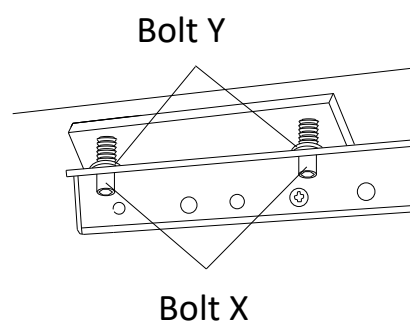
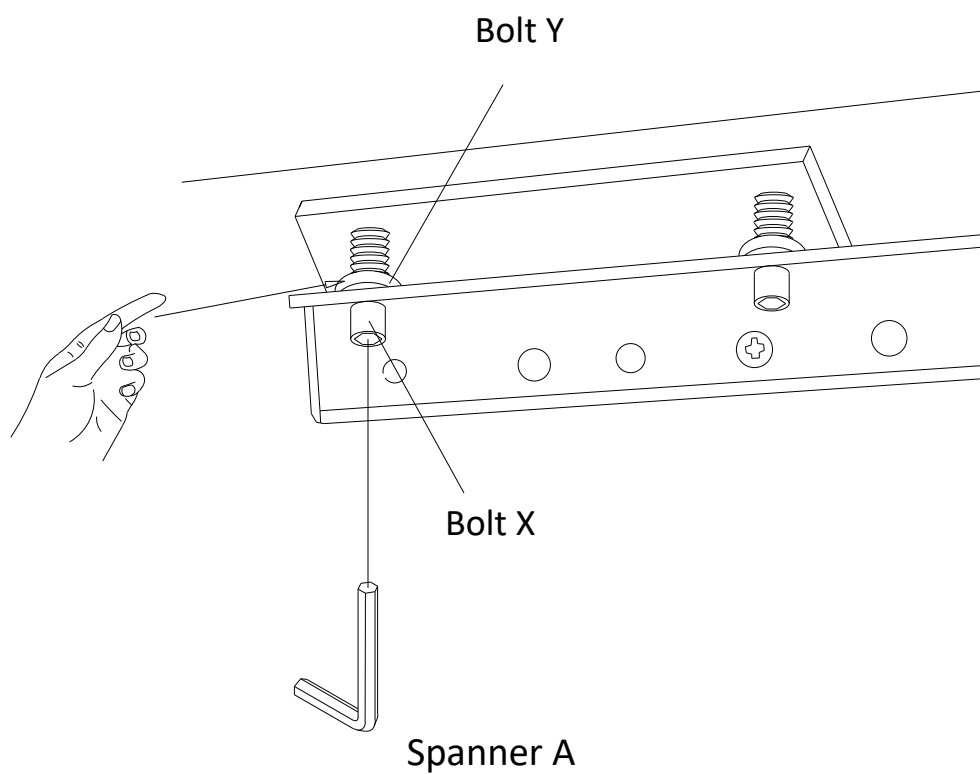


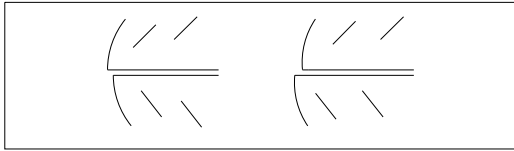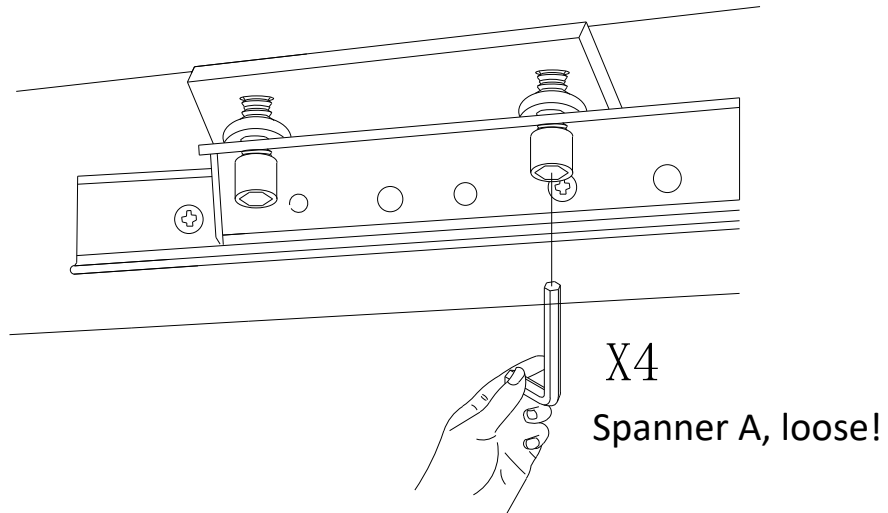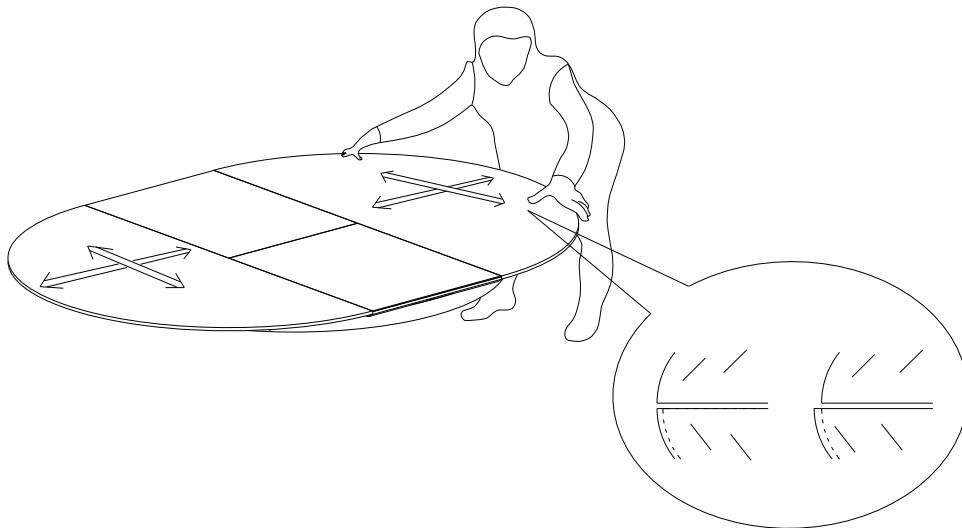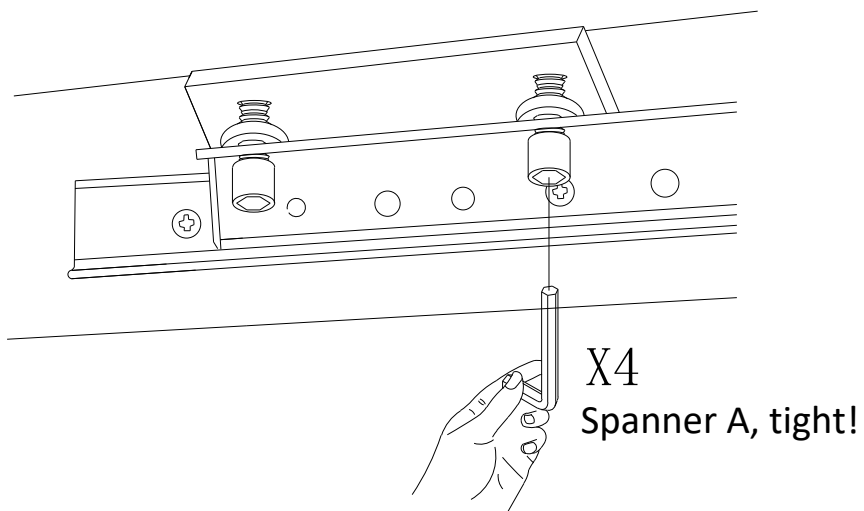Alignment instruction**Step 1****Step 2****Step 3**

ADJUSTMENT FOR TOP WITH TRIANGLE GAP

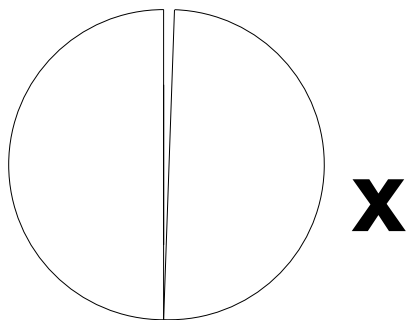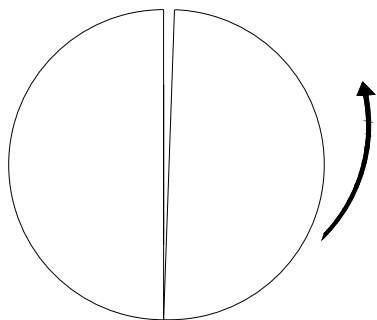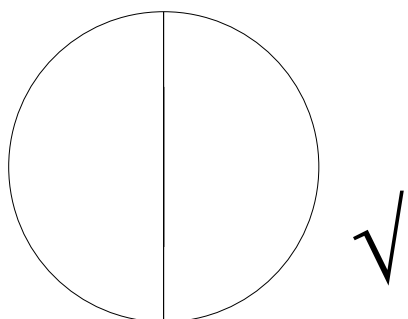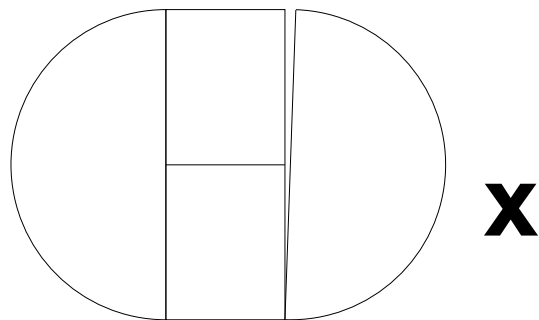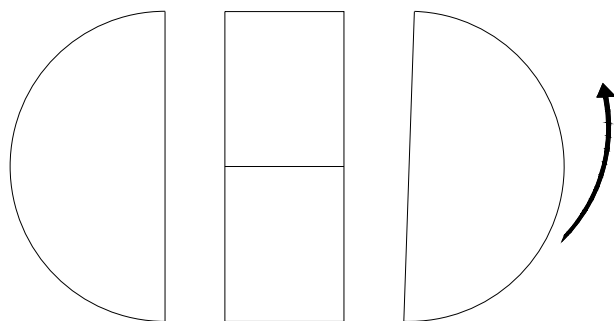
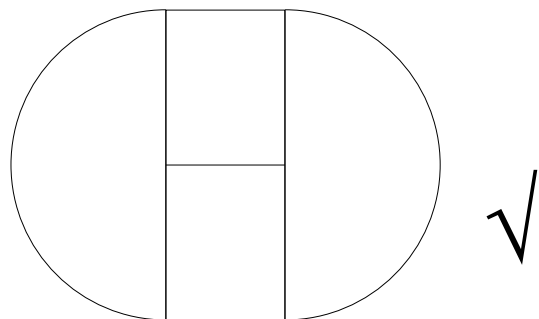


ADJUSTMENT FOR TOP WITH PARALLEL GAP

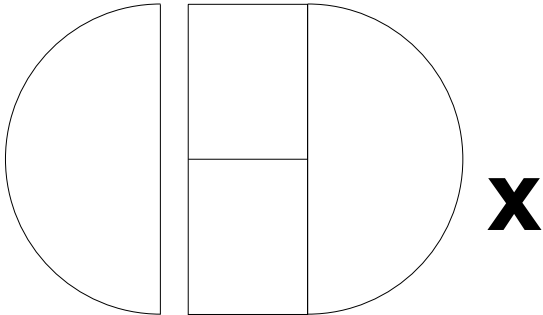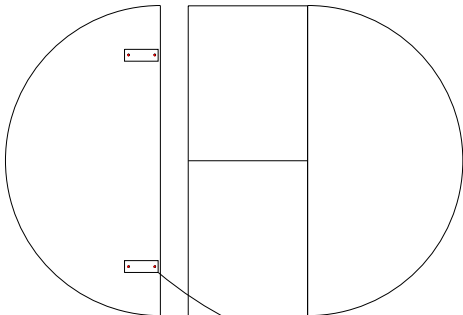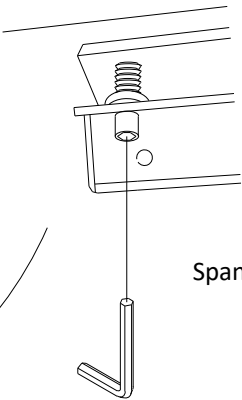

Spanner A, loose!

X4

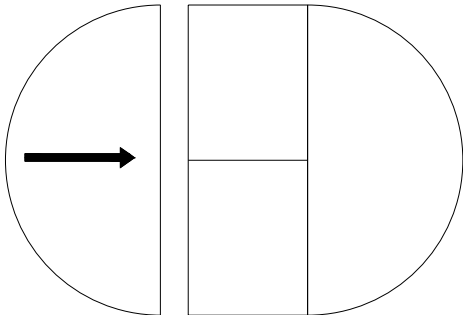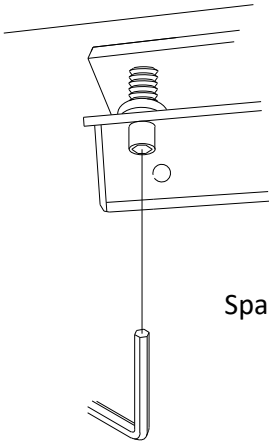

Spanner A, tight!

X4

