ASSEMBLY INSTRUCTIONS

sømcasa

MODEL : WM1974-DT3

IMPORTANT NOTE :

* PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AD A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
* BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.

HARDWARE LIST		
A	JCBC M6 x 45mm + S/W M6 + F/W M6 x 13mm	3PCS
B	JCBC M6 x 30mm + S/W M6 + F/W M6 x 13mm	9PCS
C	ALLEN KEY M4 (BALL SHAPE)	1PC
D	DOWEL M10 x 30mm	6PCS
E	WOOD BUTTON Ø14.5mm	3PCS

PART LIST		
1	TABLE LEG	3PCS
2	LEG SUPPORT	3PCS
3	TABLE TOP	1PC

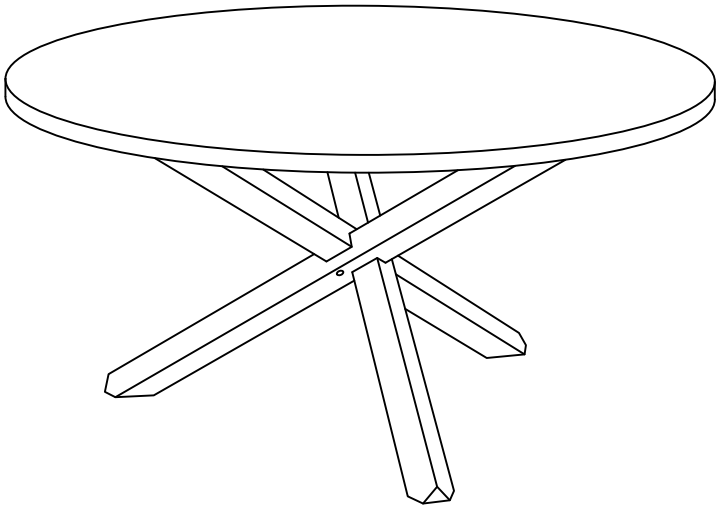

STEP 1

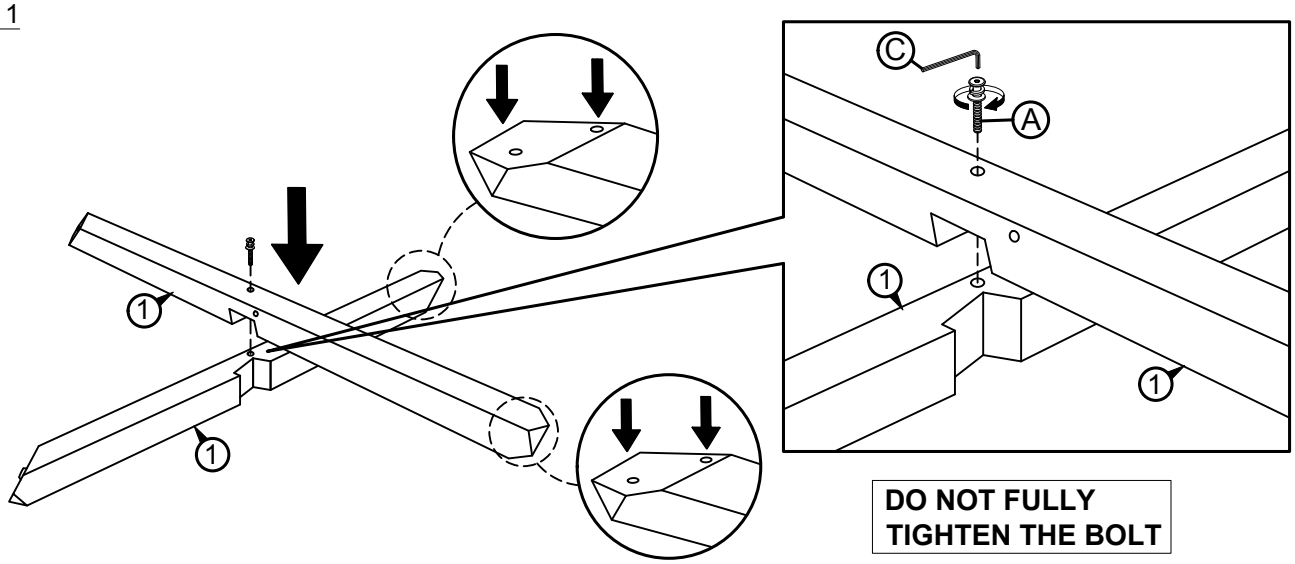

DO NOT FULLY TIGHTEN THE BOLT

STEP 2

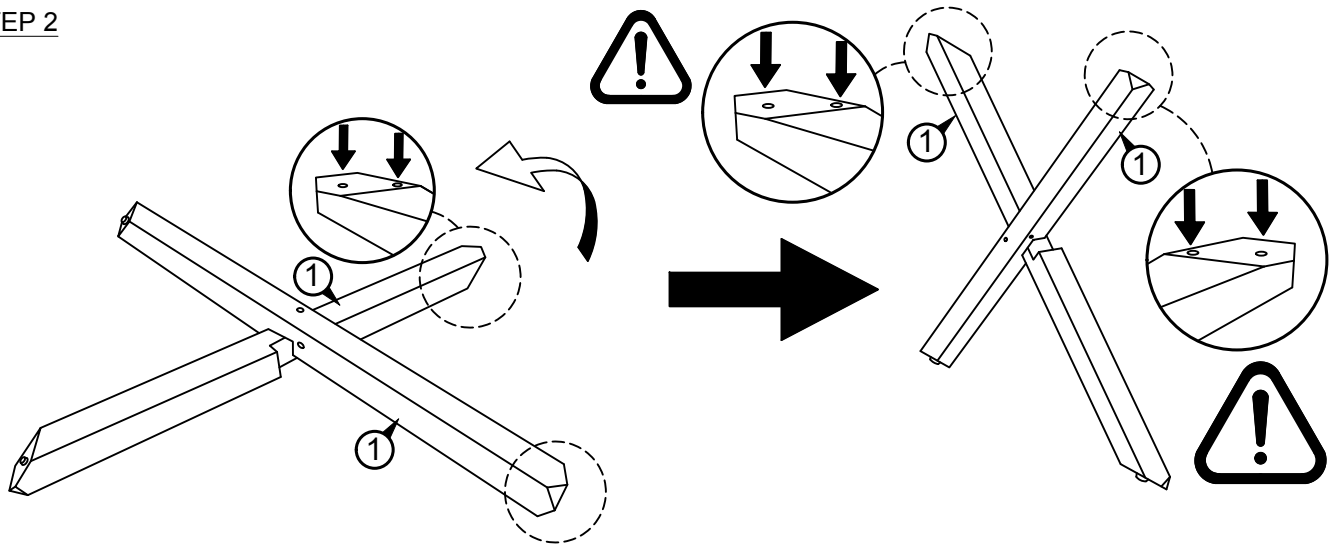

STEP 3

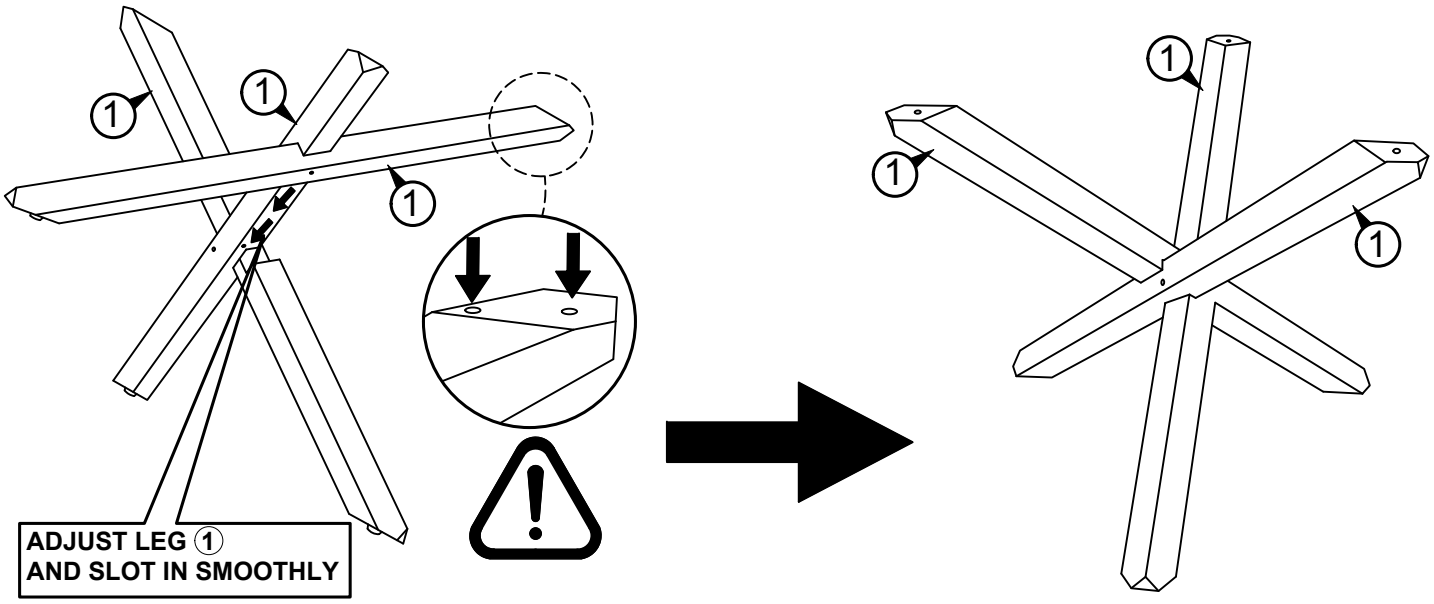

STEP 4

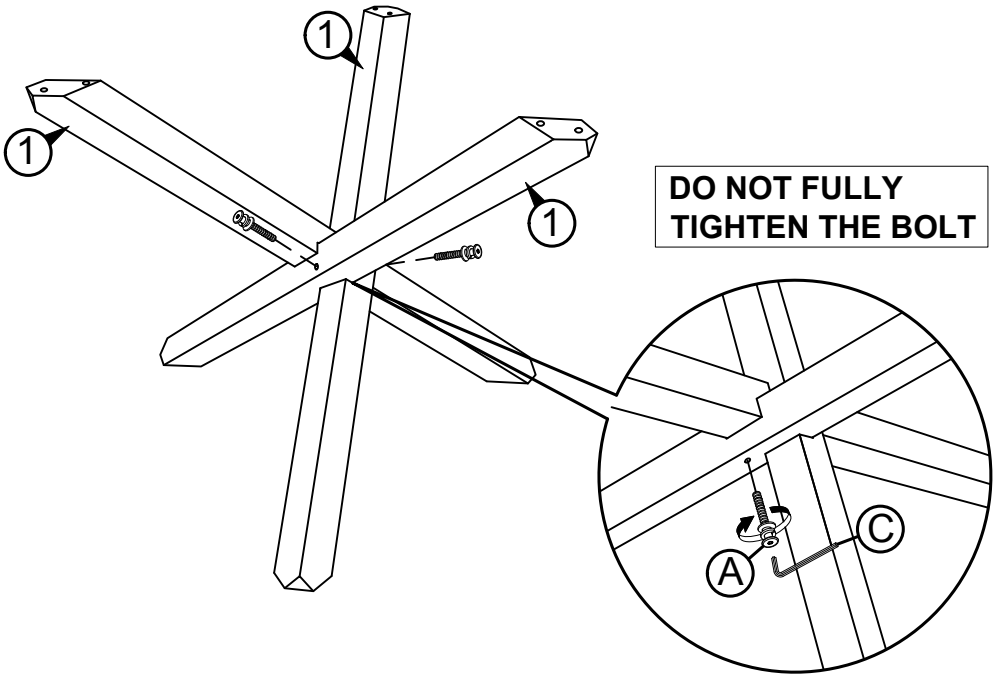

STEP 5

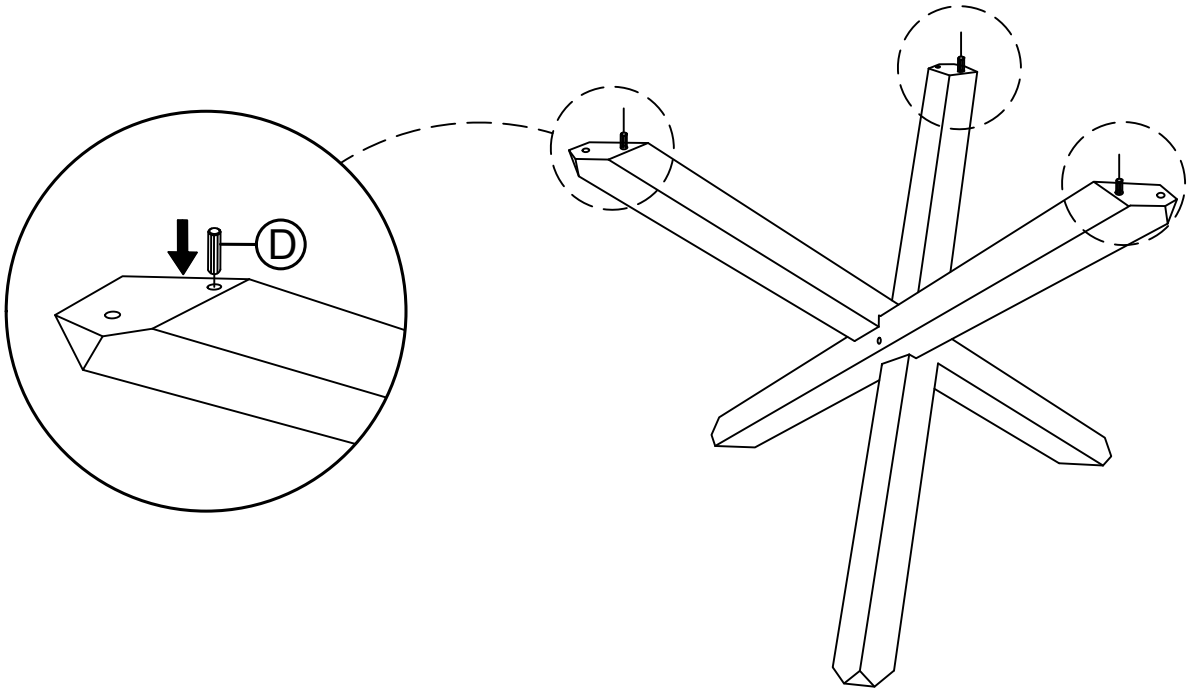

STEP 6

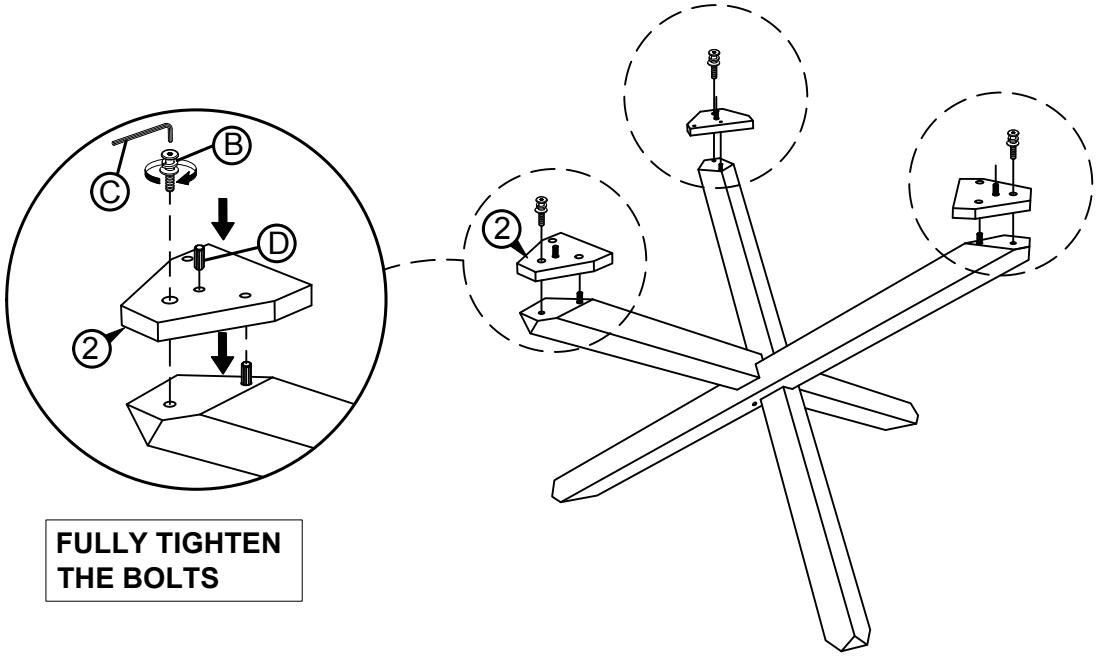

FULLY TIGHTEN THE BOLTS

STEP 7

ADJUST THE TABLE LEGS WHEN ATTACH TO THE TABLE TOP

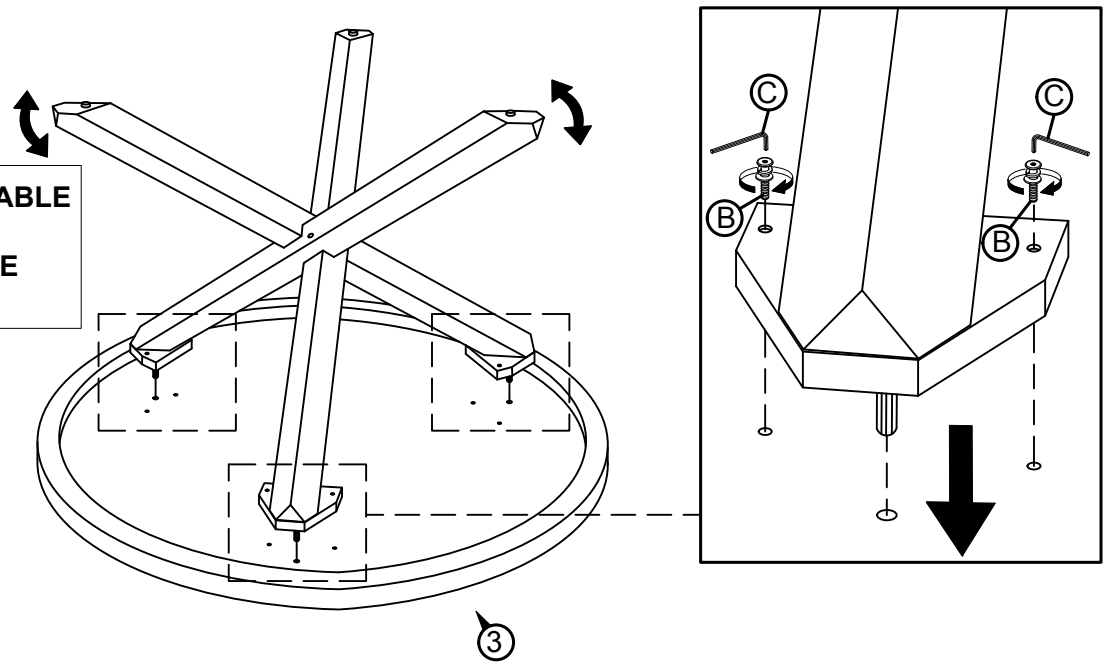

STEP 8

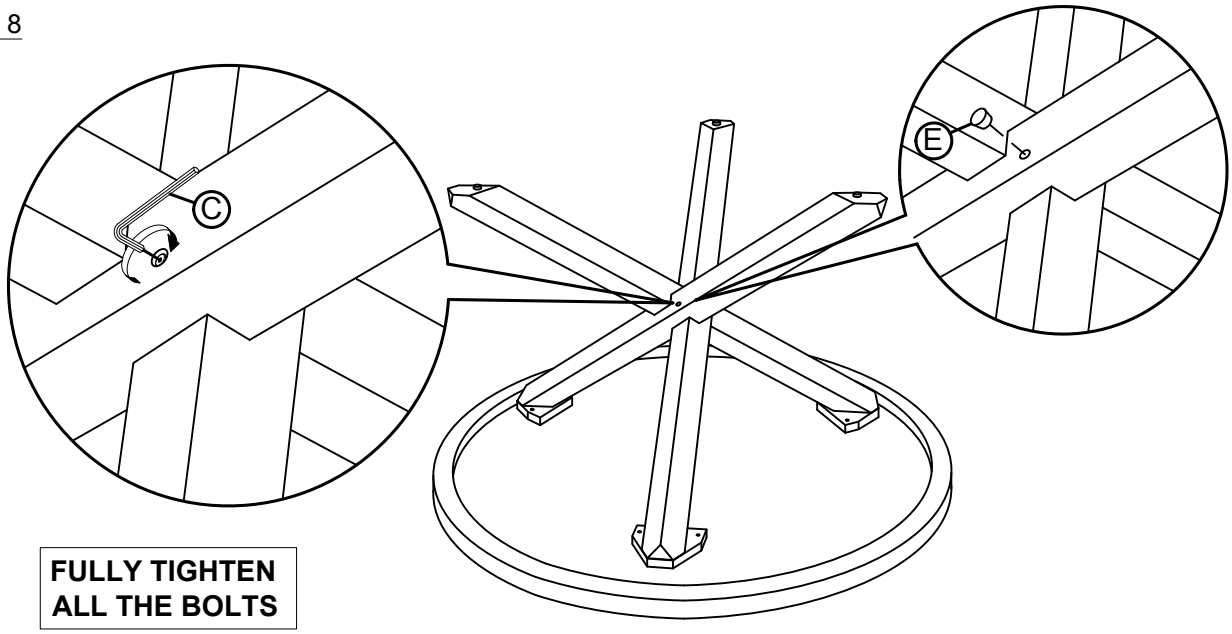

FULLY TIGHTEN ALL THE BOLTS

STEP 9

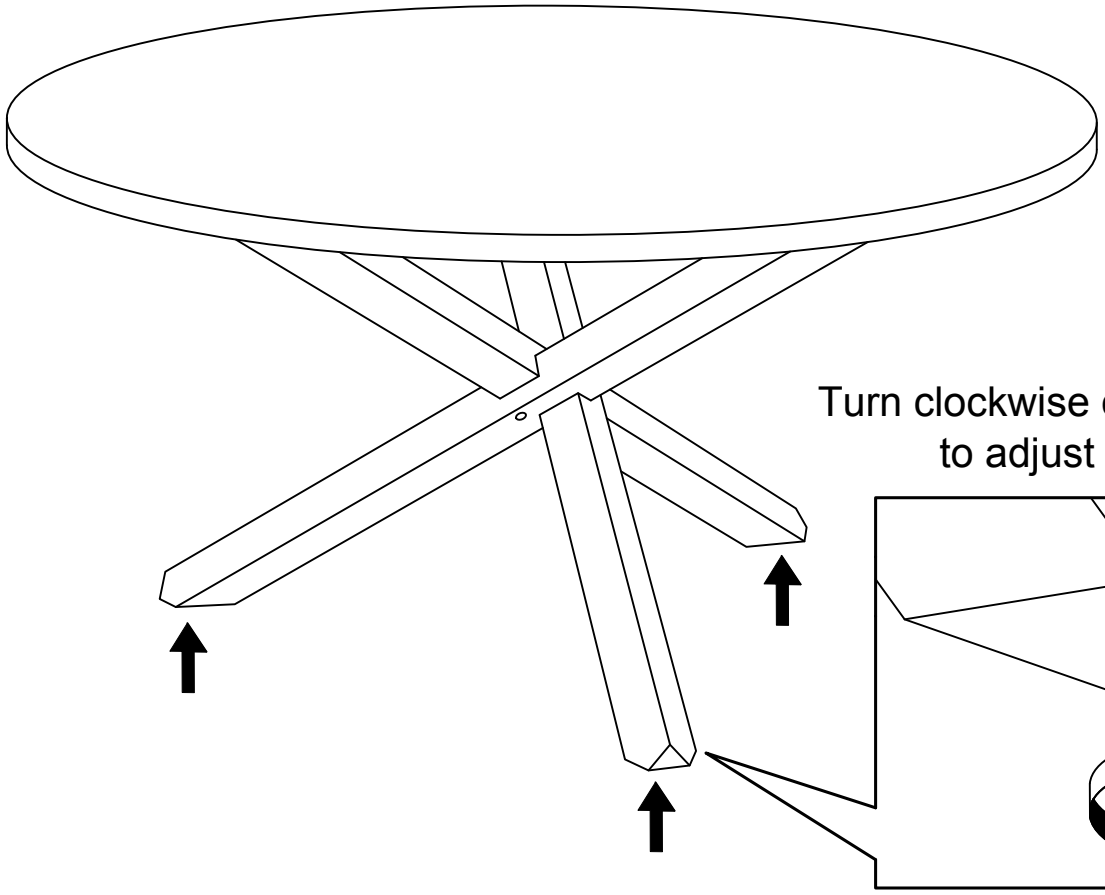

STEP 10

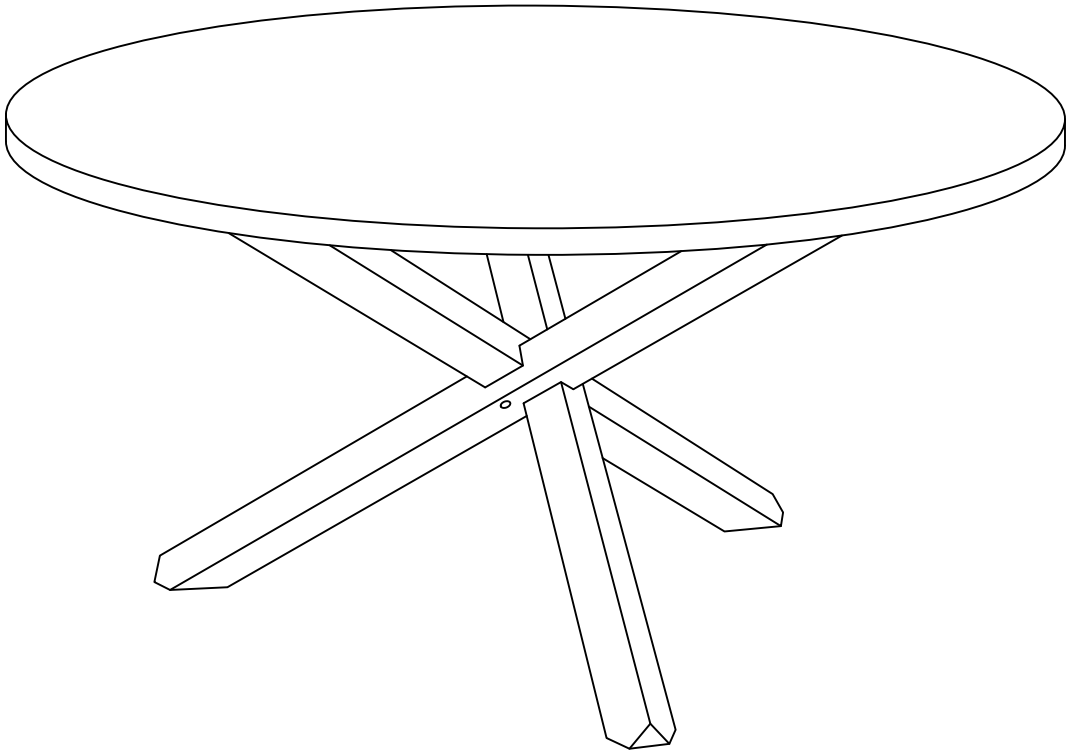

COMPLETED TABLE ASSEMBLY.