

ASSEMBLY INSTRUCTIONS

sømcasa

MODEL : WM1962-DT

- IMPORTANT NOTE :**
- * PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AD A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
 - * BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.


HARDWARE LIST			
A	HEX NUT 5/16"		8PCS
B	SPRING WASHER 5/16"		8PCS
C	FLAT WASHER 5/16"		8PCS
D	SPANNER 12.8		1PC
E	JCBC M6 x 70mm + S/W M6 + F/W M6 x 13mm		4PCS
F	ALLEN KEY M4		1PC
G	ALLEN KEY M3		1PC
H	JCBC M6 x 25mm		4PCS
I	HEX SOCKET		8PCS
J	ALUMINIUM DIES		4PCS

PART LIST		
1	GLASS TOP	1PC
2	TABLE LEG	4PCS
3	SHELF	1PC
4	CENTER BOX	1PC




COMPLETED TABLE ASSEMBLY.

STEP 1

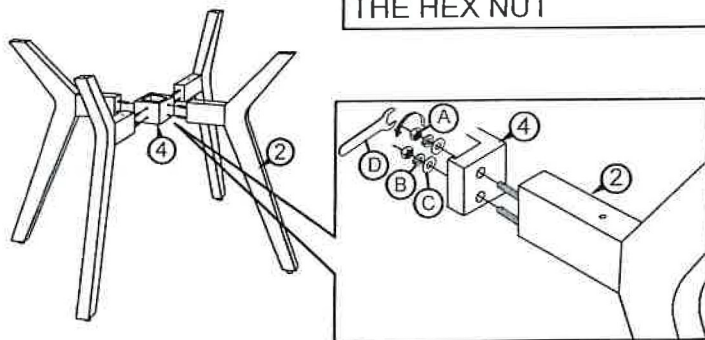


STEP 2

FULLY TIGHTEN THE BOLT BUT DO NOT OVER-TIGHTEN

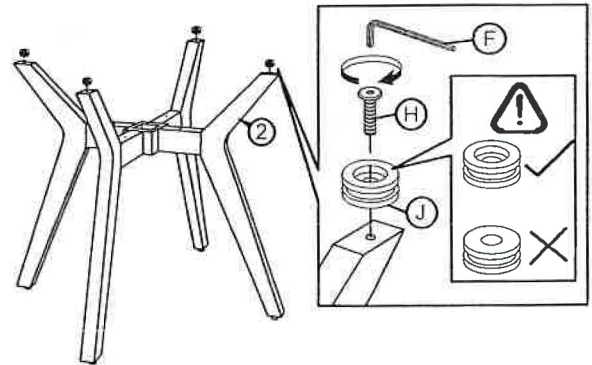


STEP 3

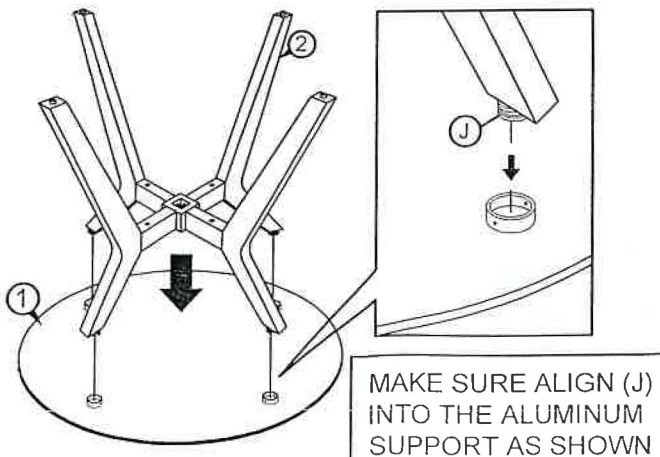


STEP 4

FULLY TIGHTEN HEX NUT & BOLT

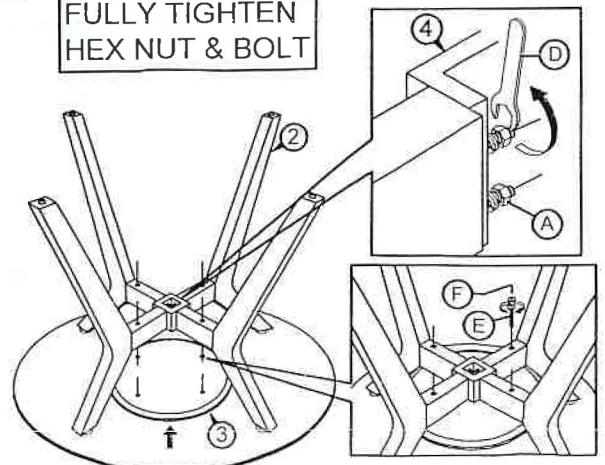


STEP 5

MAKE SURE ALIGN (J) INTO THE ALUMINUM SUPPORT AS SHOWN

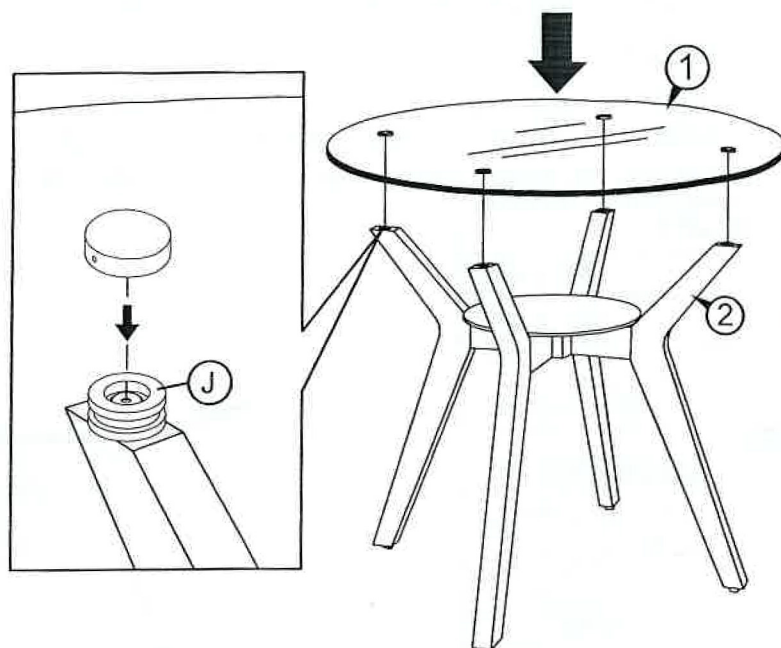

STEP 6

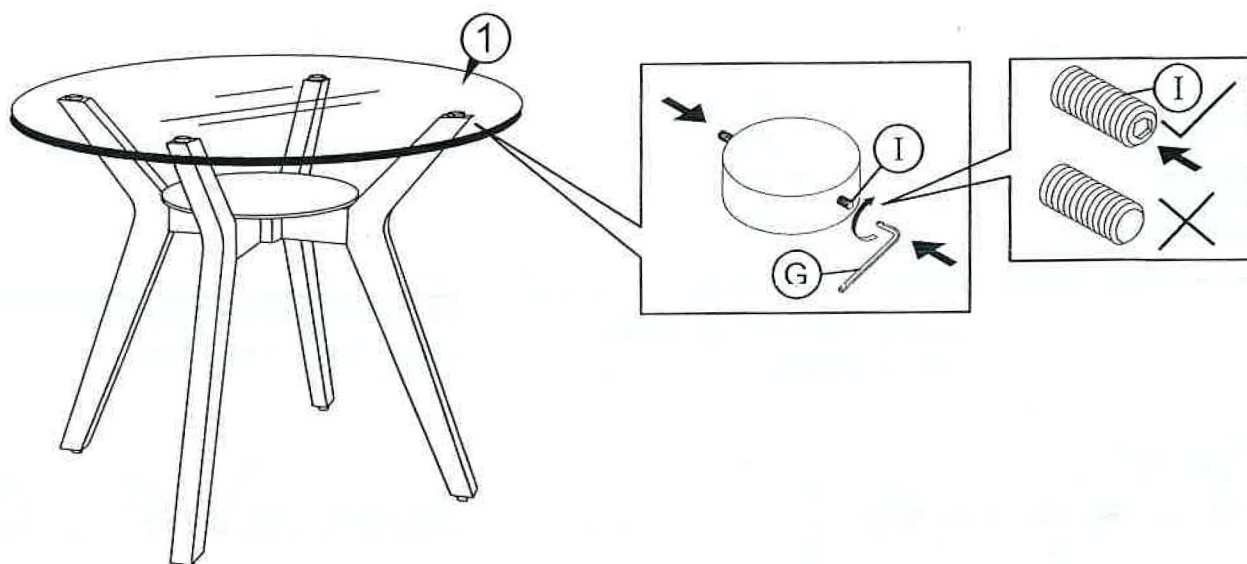

STEP 7

