

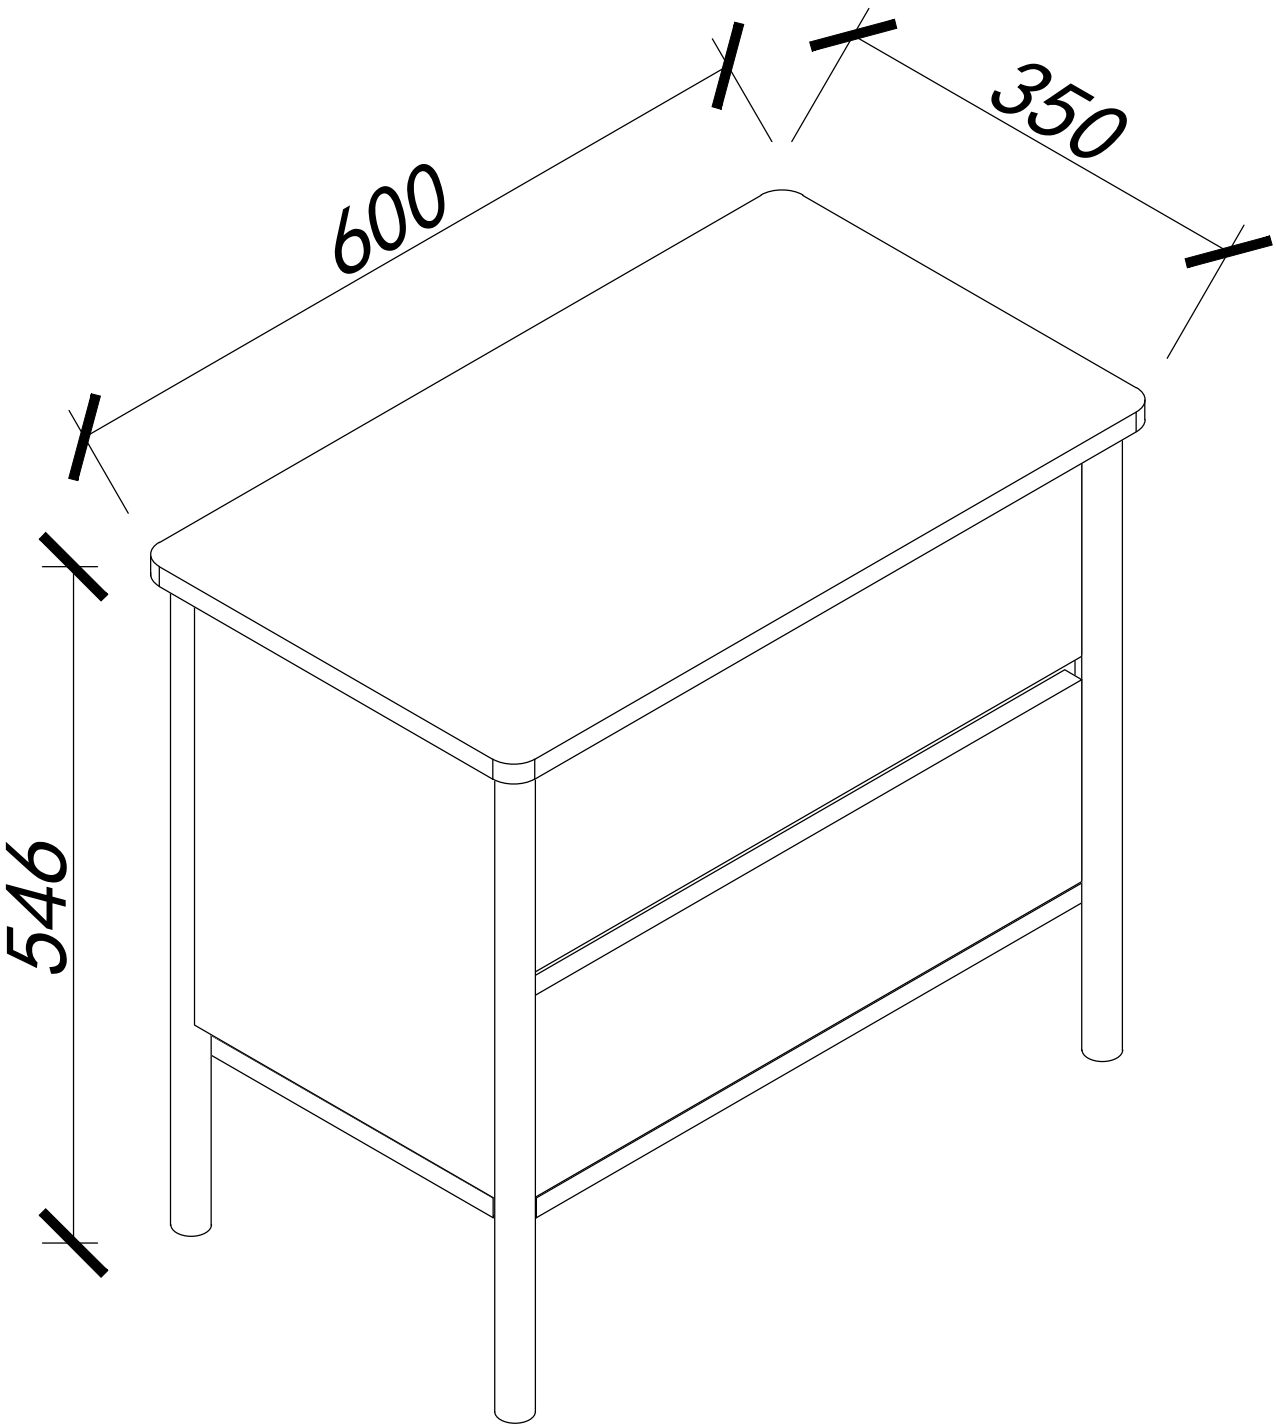
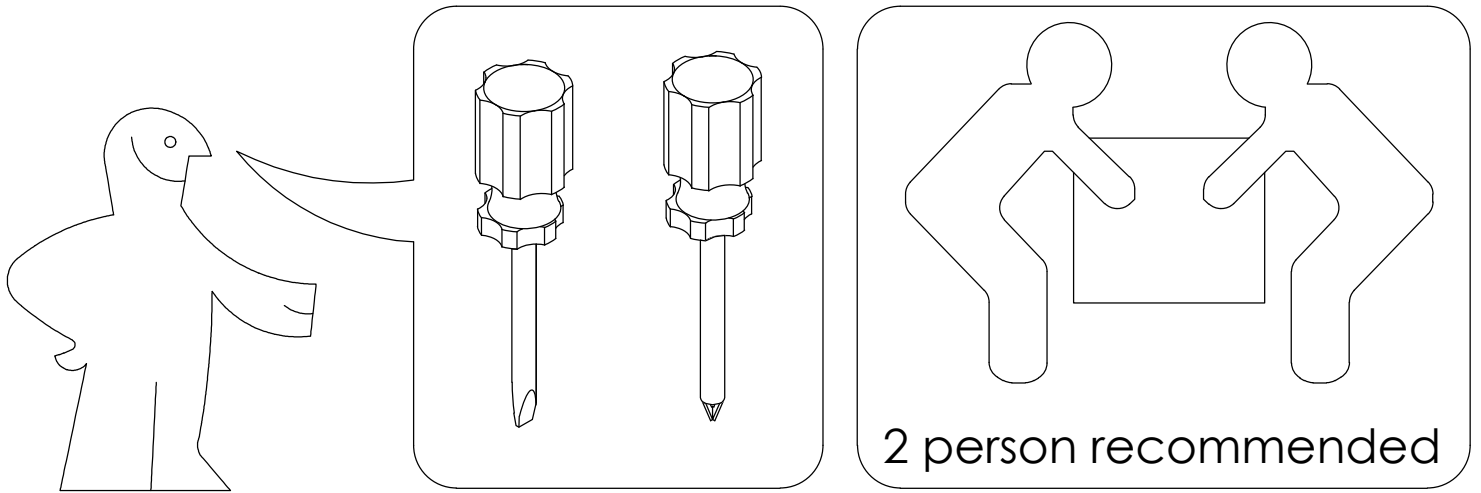
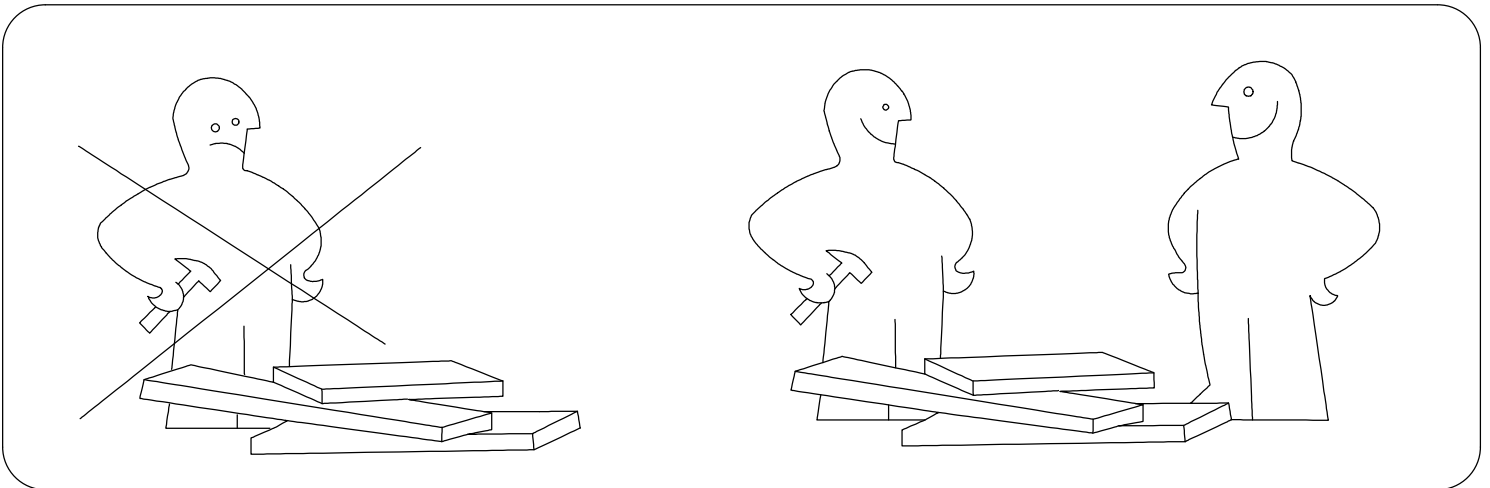


sømcasa


Assembly Instruction

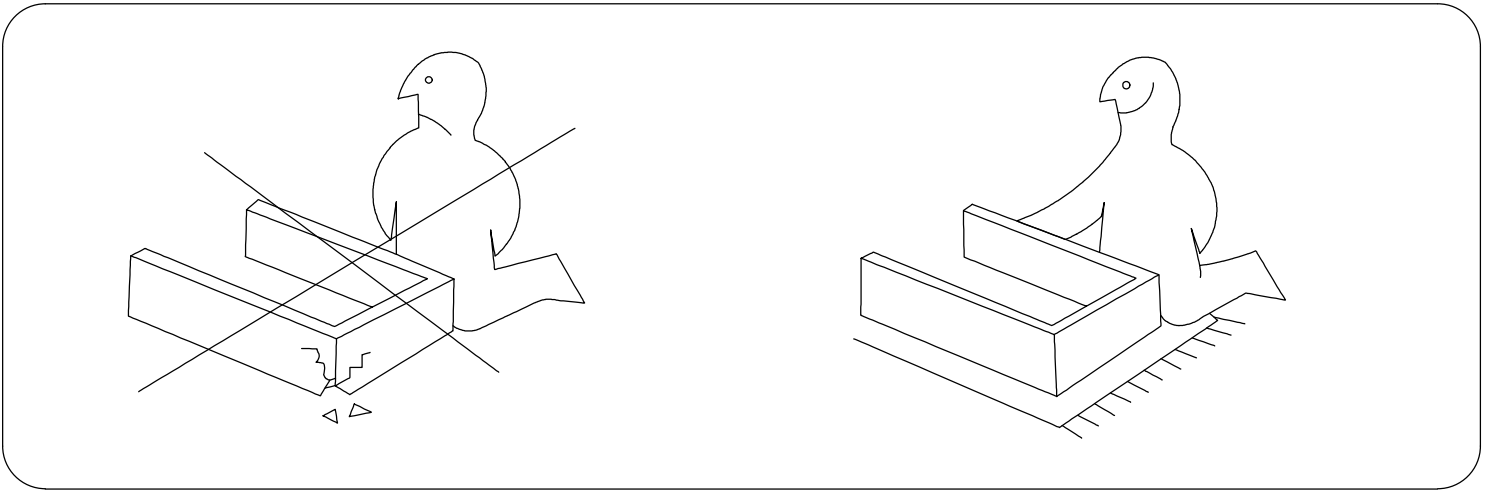

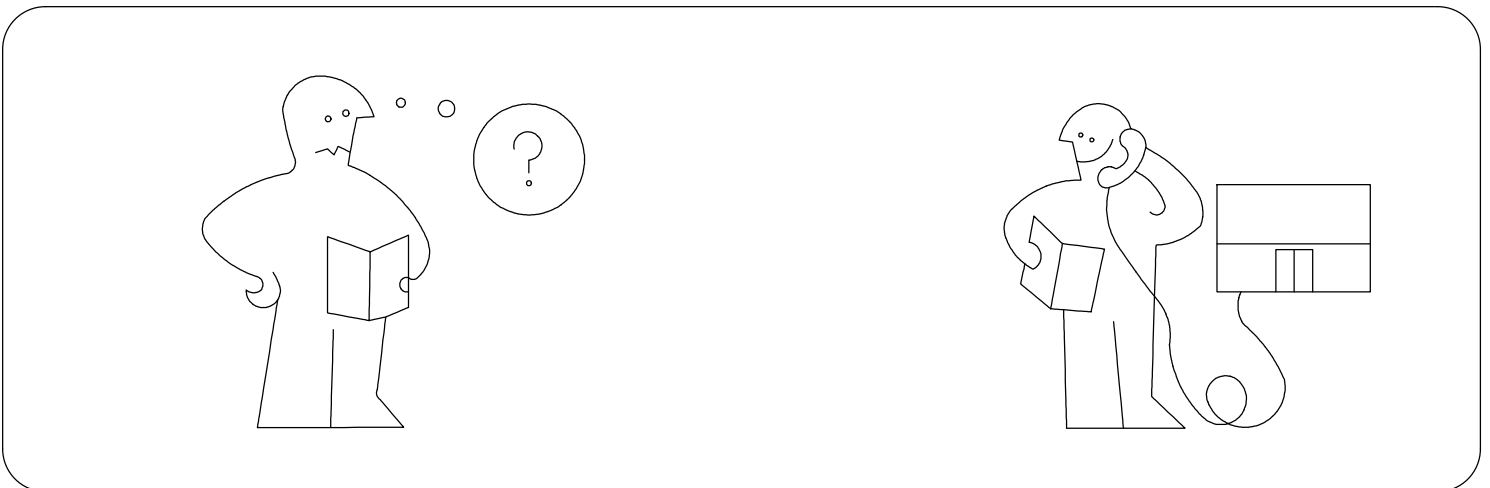

Panel No	Panel Sizes	Quantity
1	600*350*16	1
2	579*329*16	1
3	530*346*35	1
4	530*346*35	1
5	527*45*16	1
6	551*367*5	1


Panel No	Panel Sizes	Quantity
7	520*163*16	2
8	483*120*12	2
9	250*120*12	2
10	250*120*12	2
11	493*248*5	2

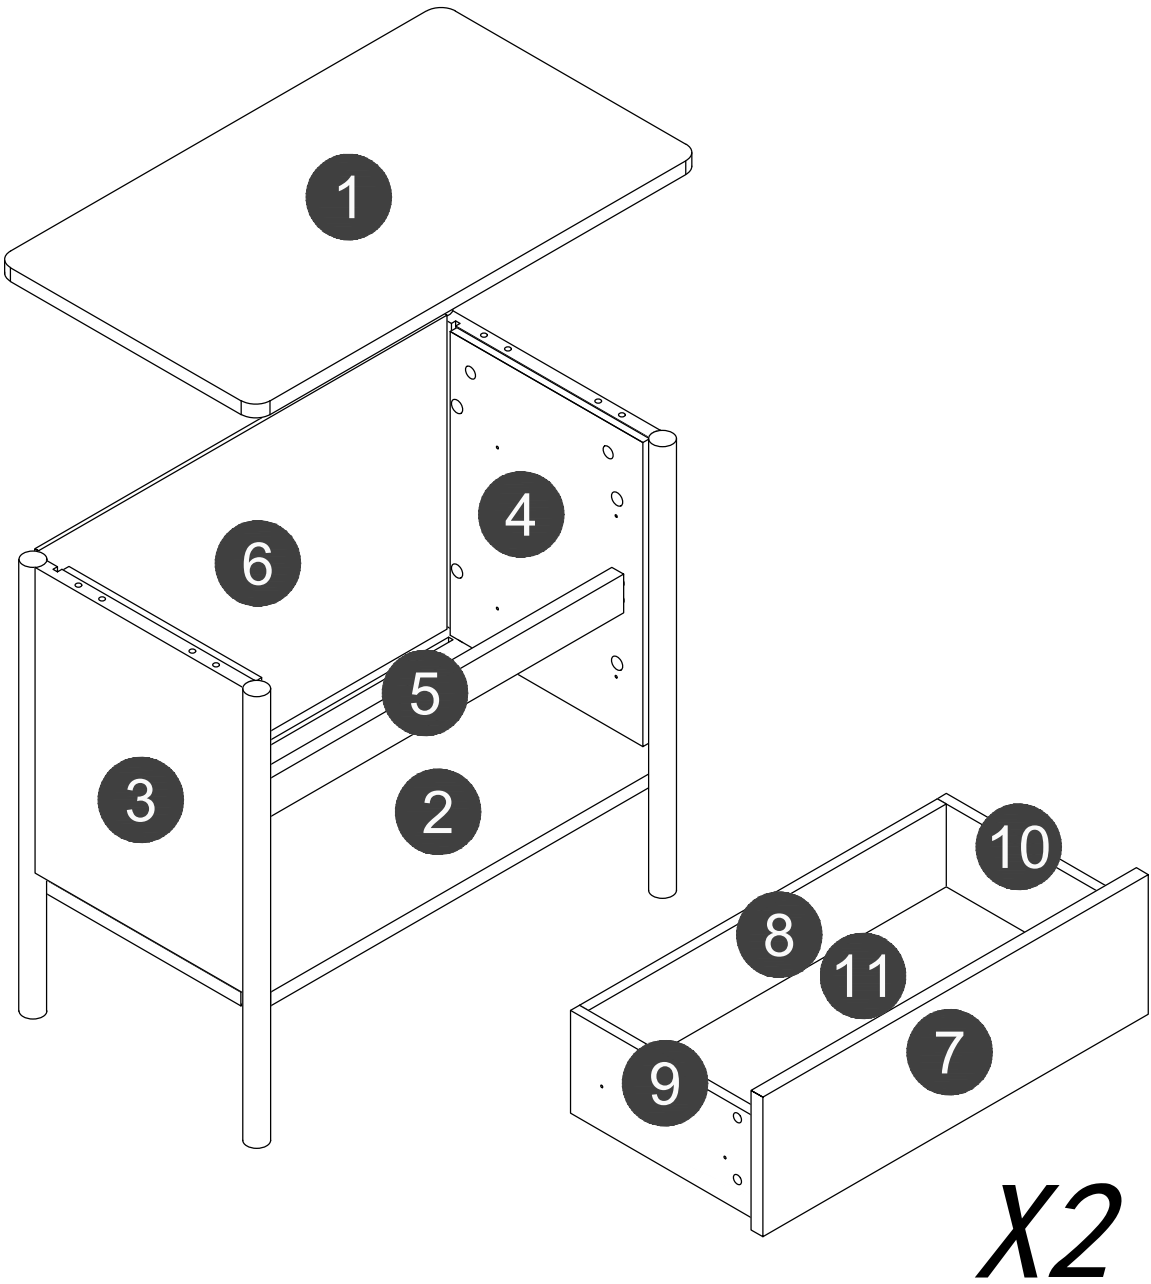


Fittings



M6*40
A=6




Φ8*30
B=10

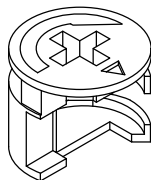


Φ15*12
C=6



Φ21
D=22

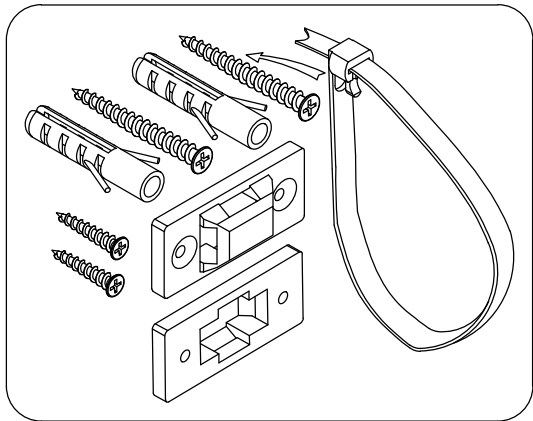


F=1

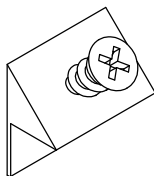


E=4




O =16

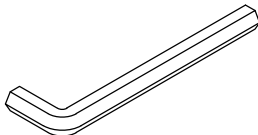


H =1




P =16

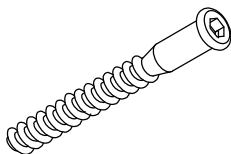

Q=4

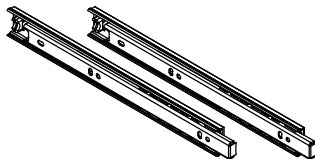


N=2




V1=16


STEP 1

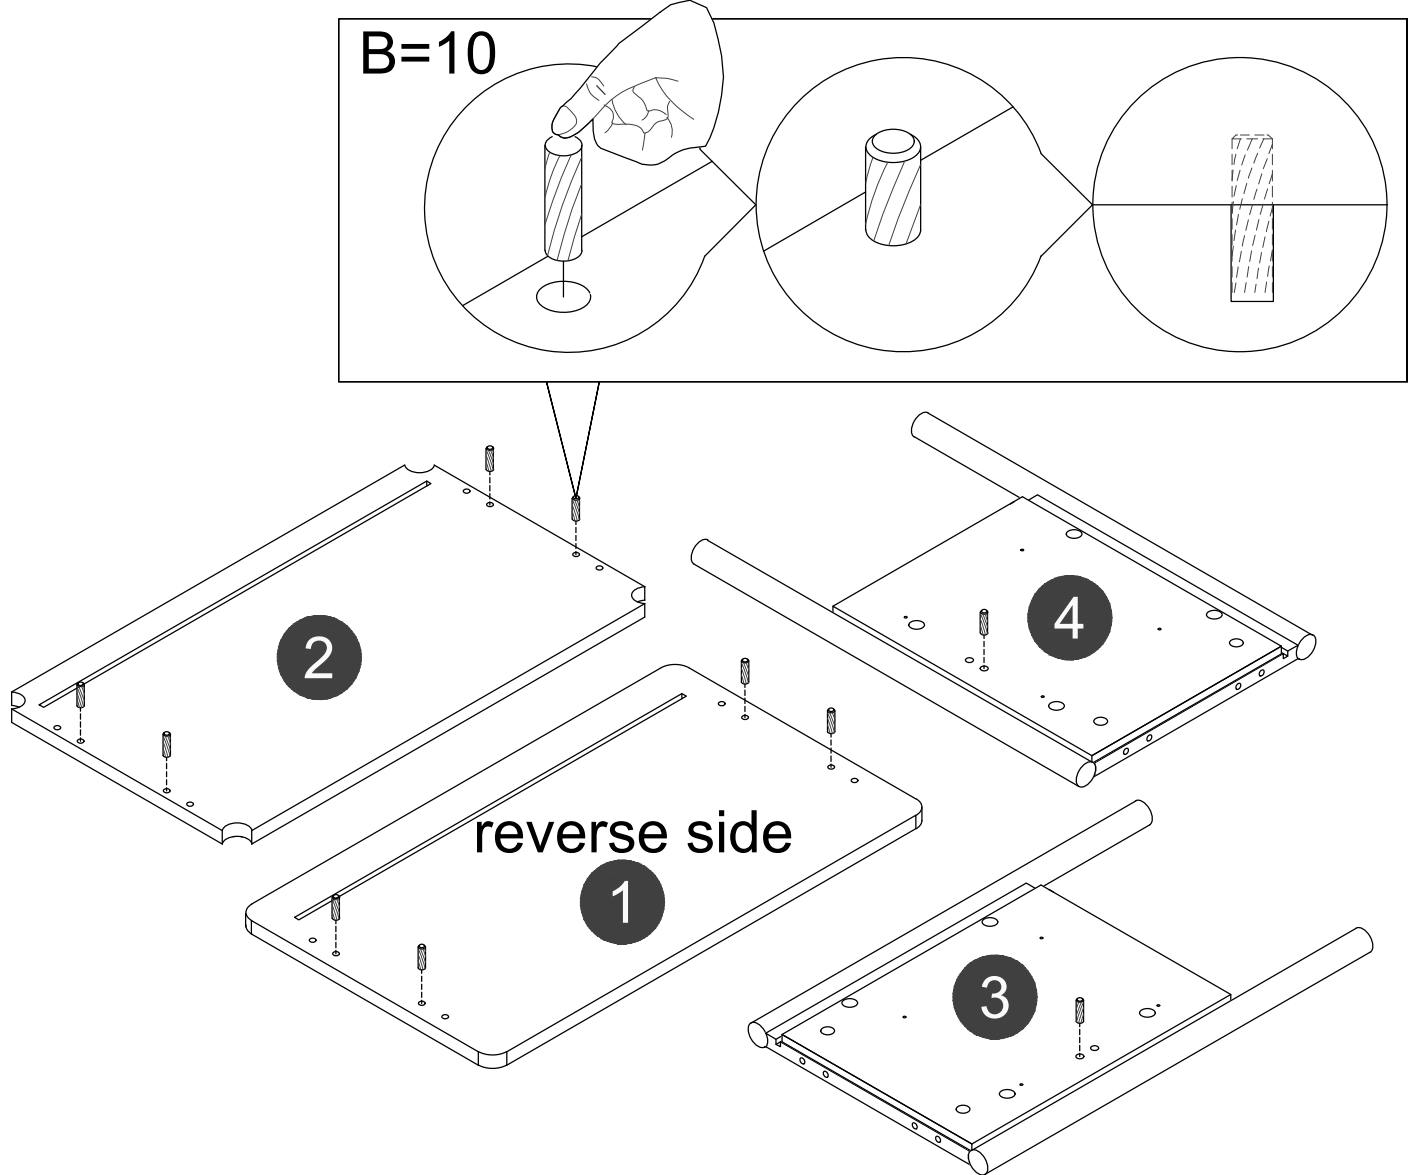


STEP 2

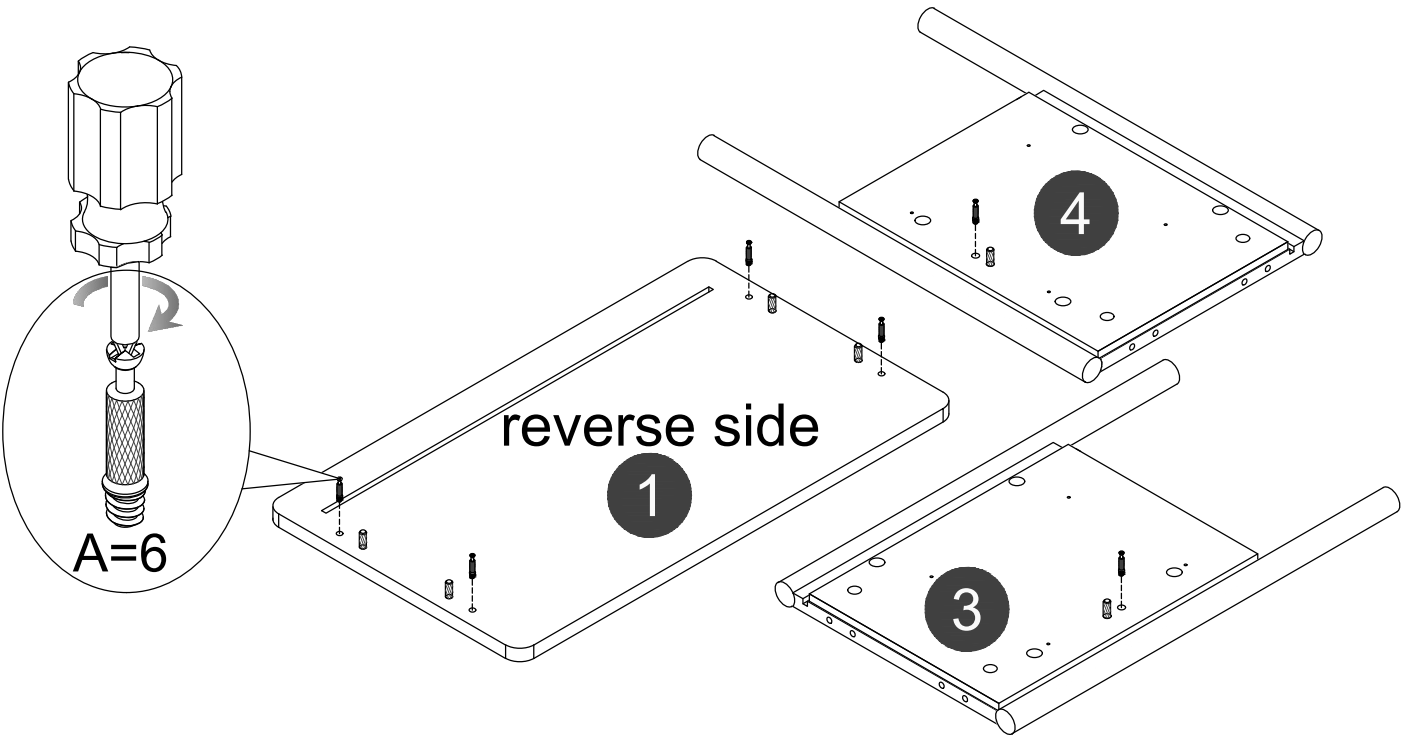



STEP 3

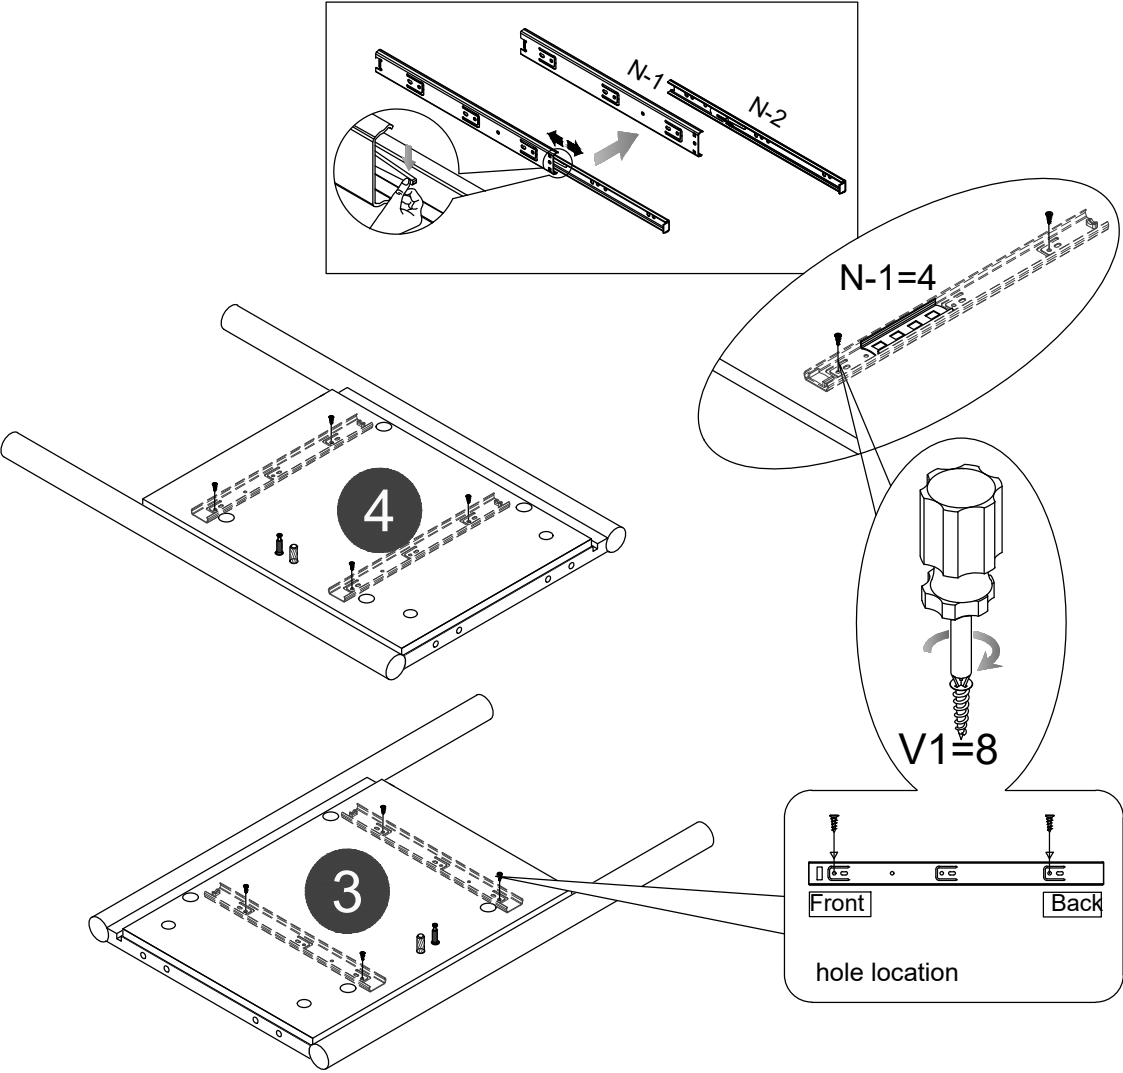


STEP 4

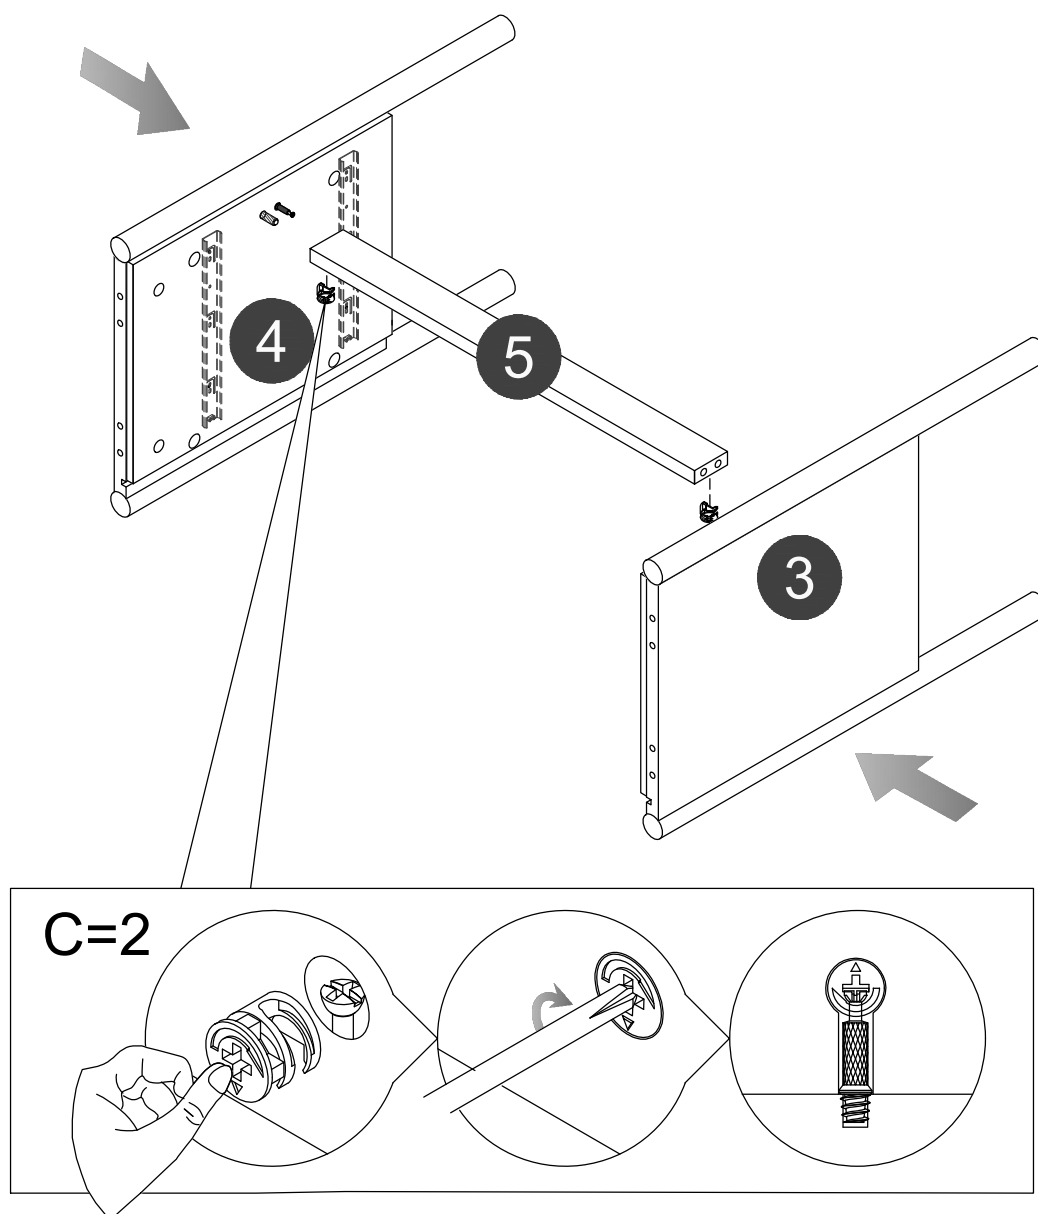


STEP 5

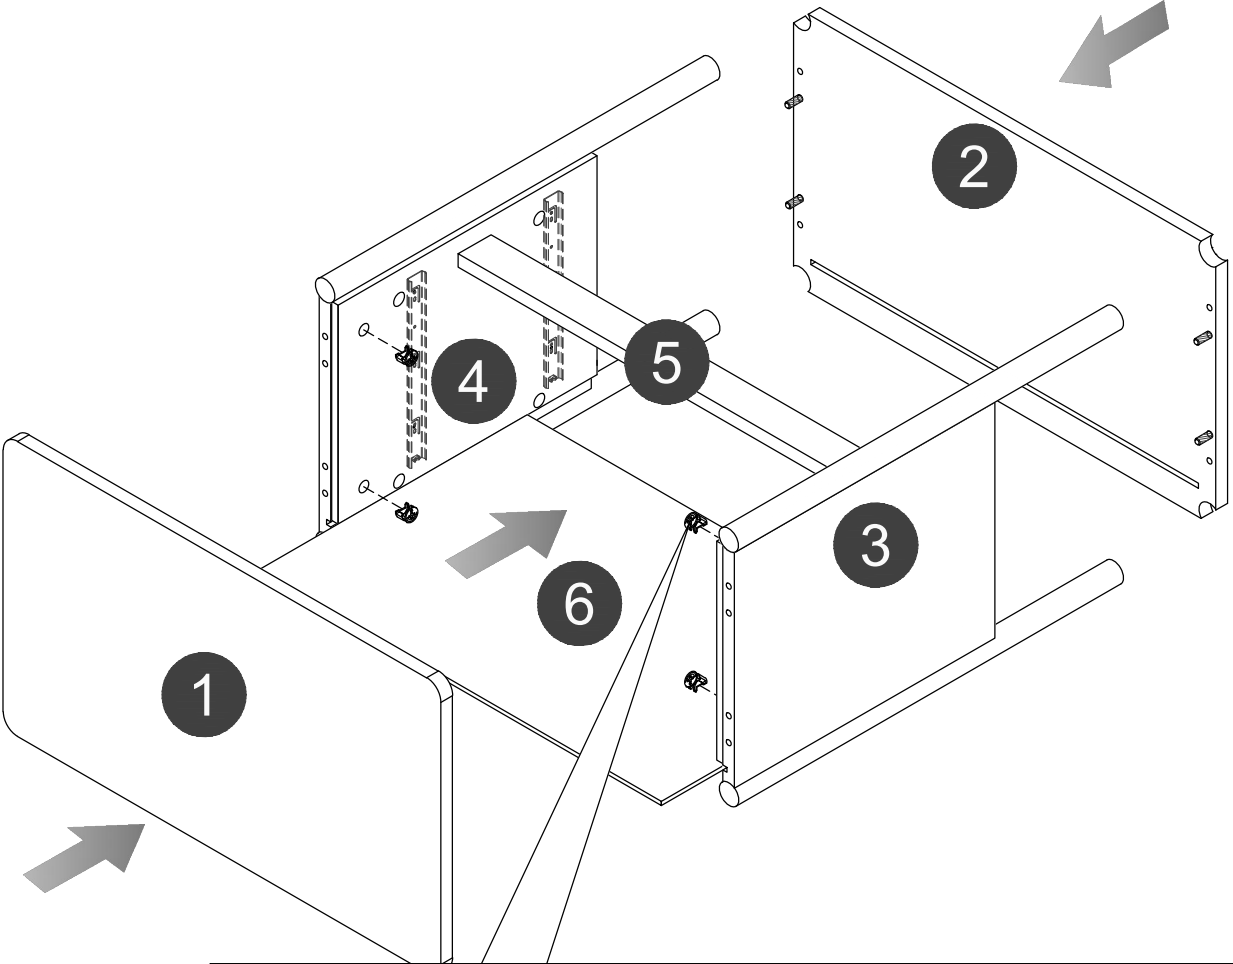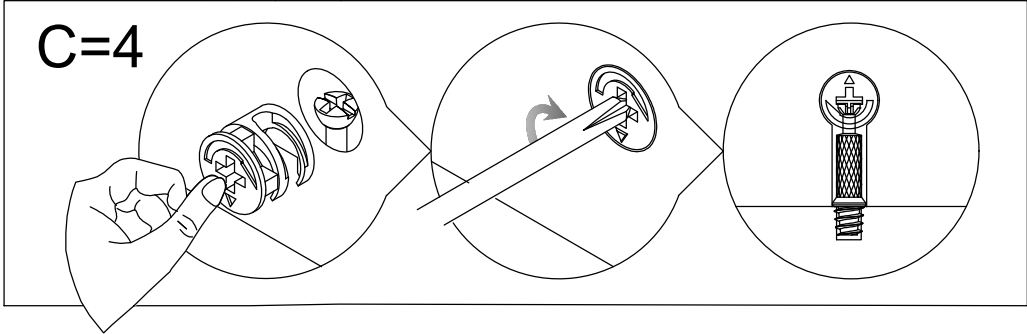


STEP 6

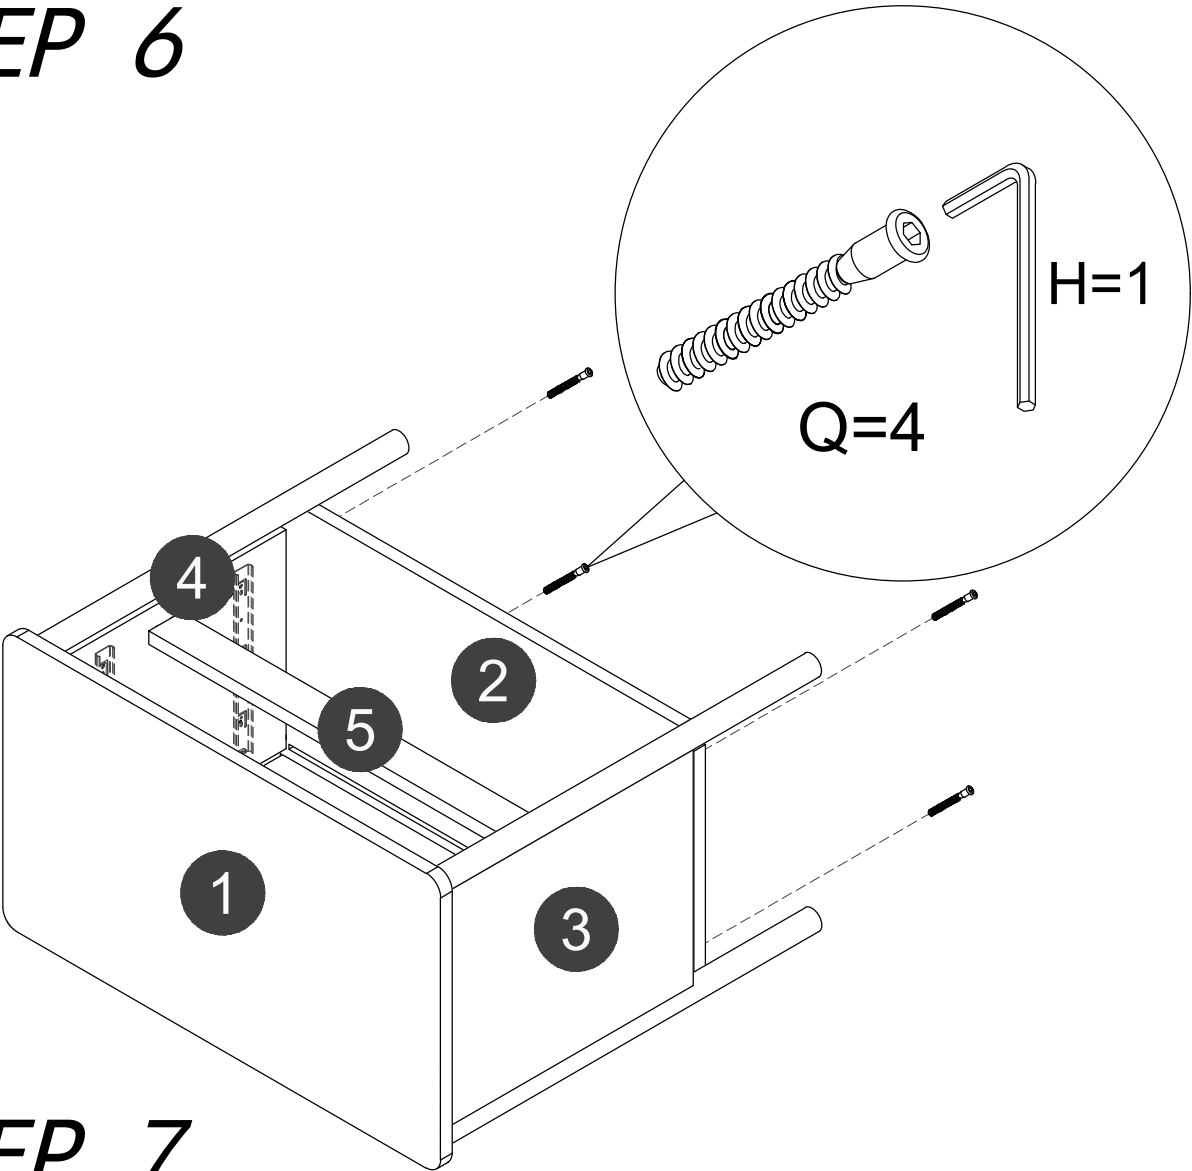


STEP 7

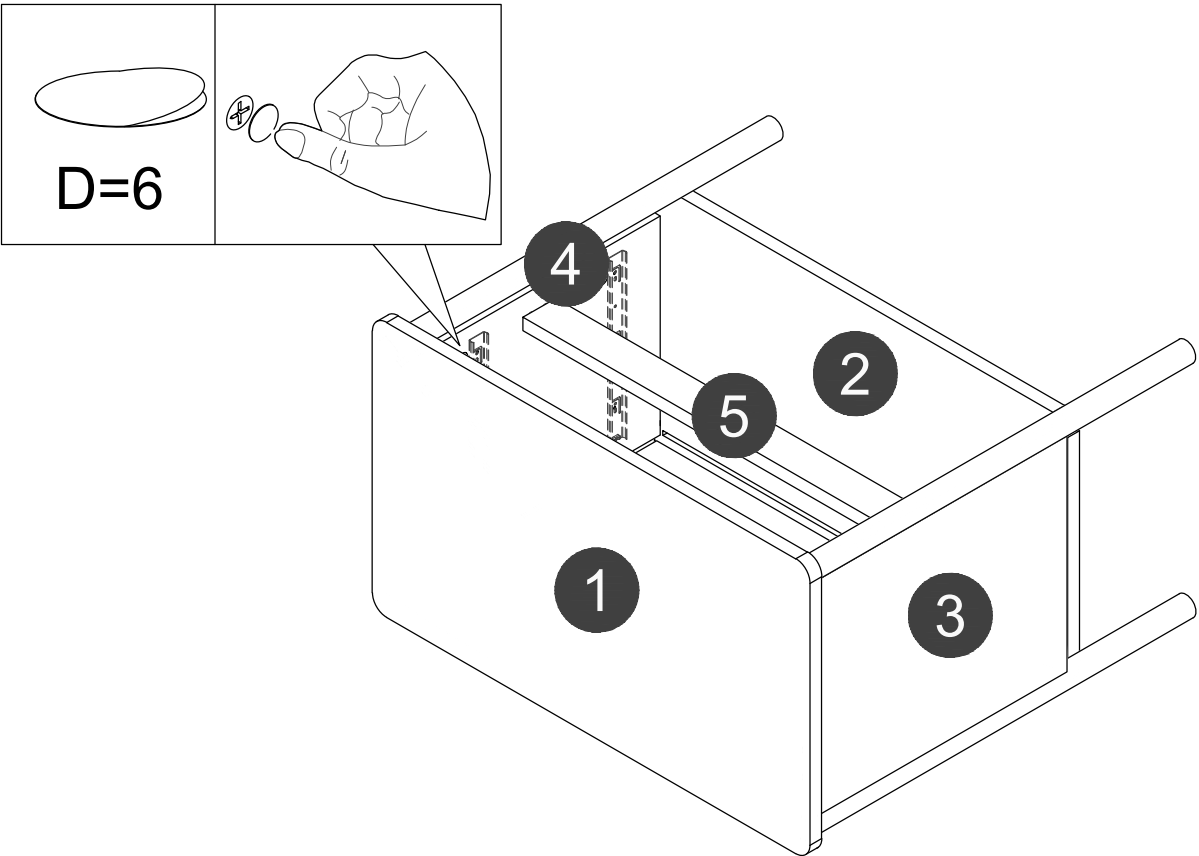


STEP 8

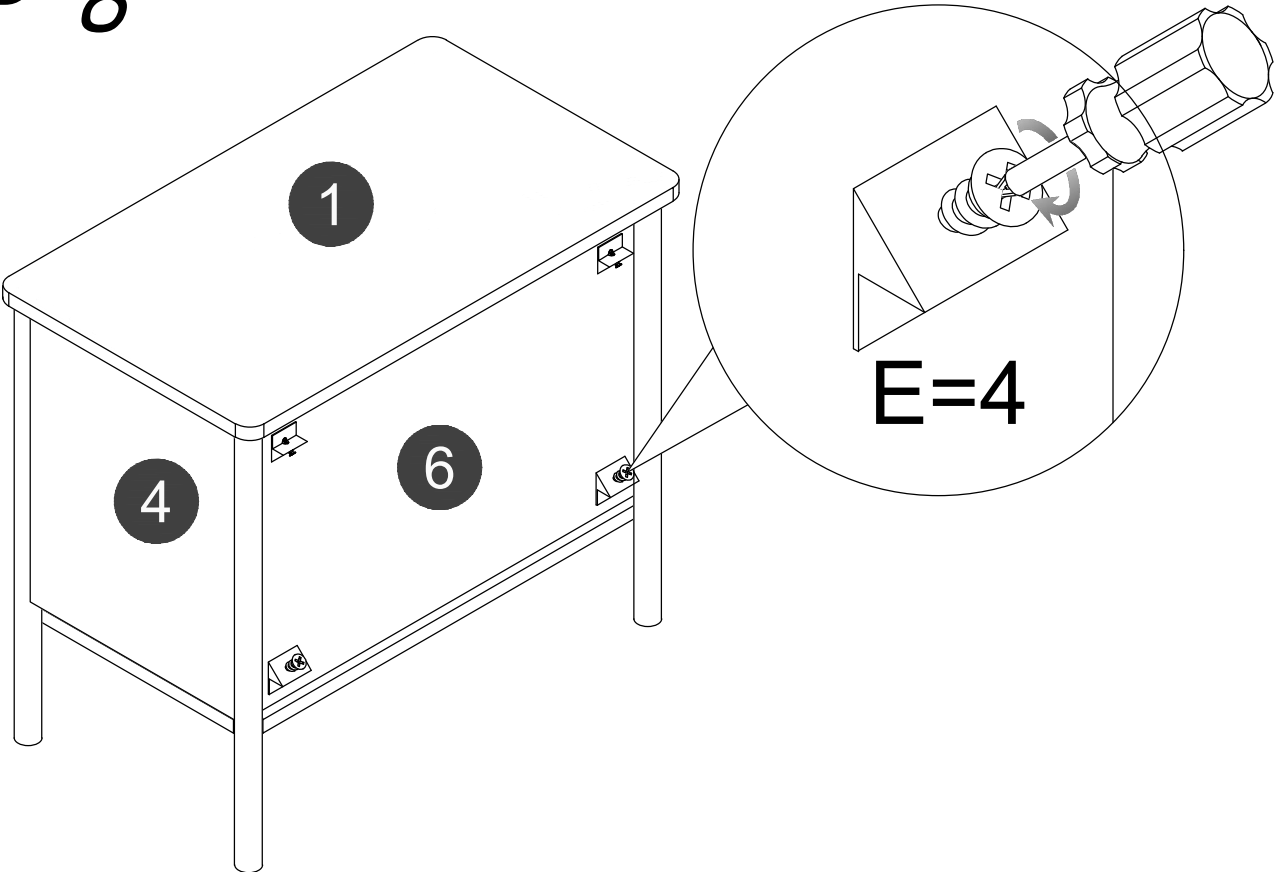


STEP 9

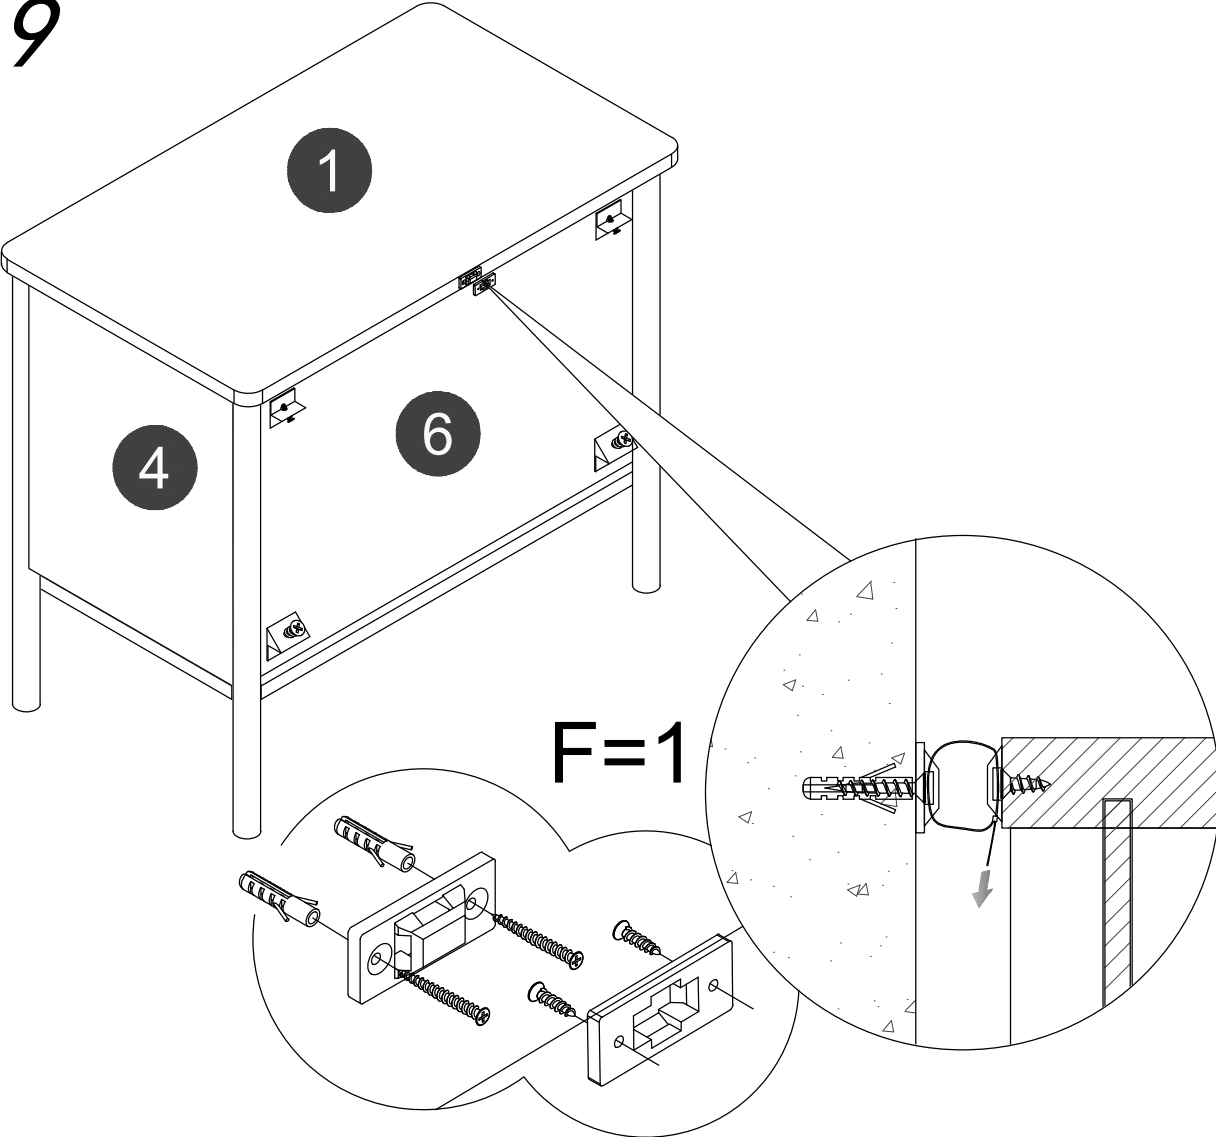


STEP 10

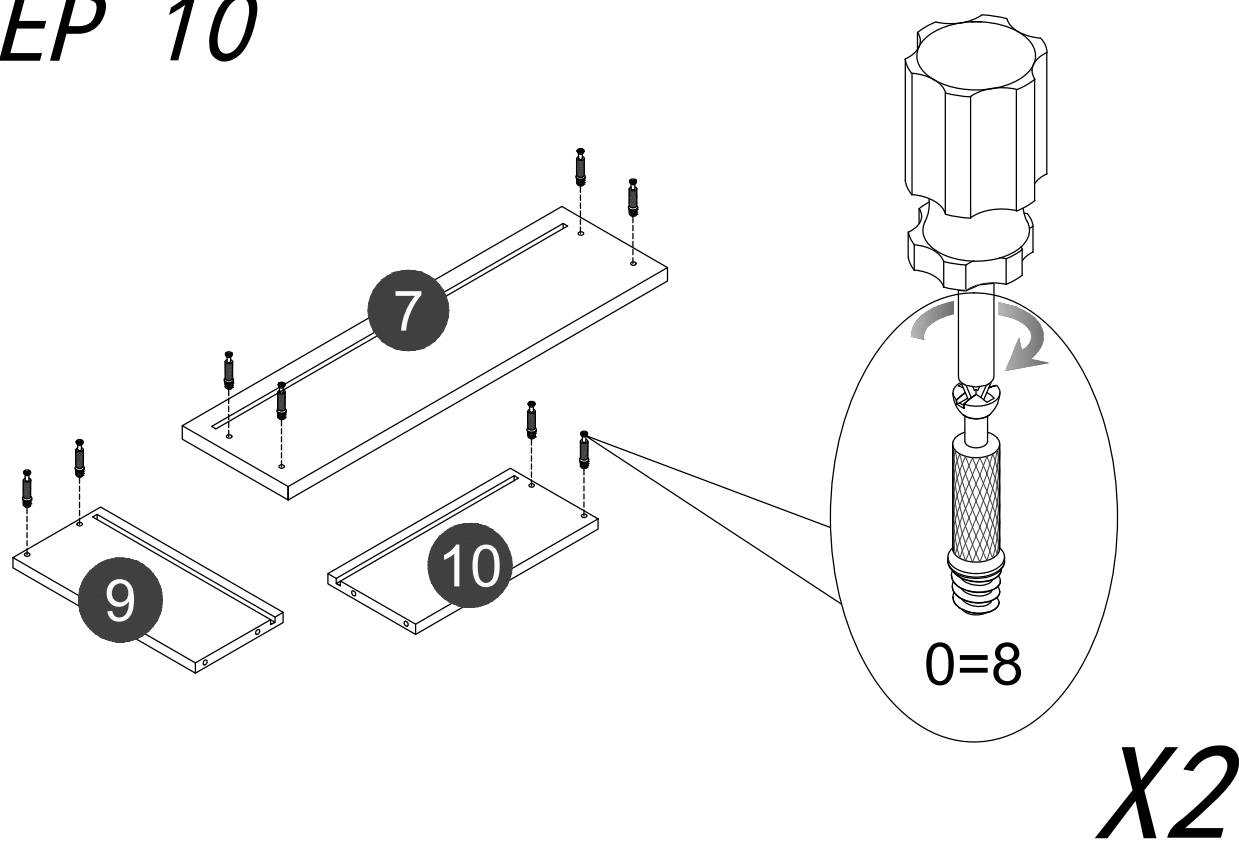

STEP 11




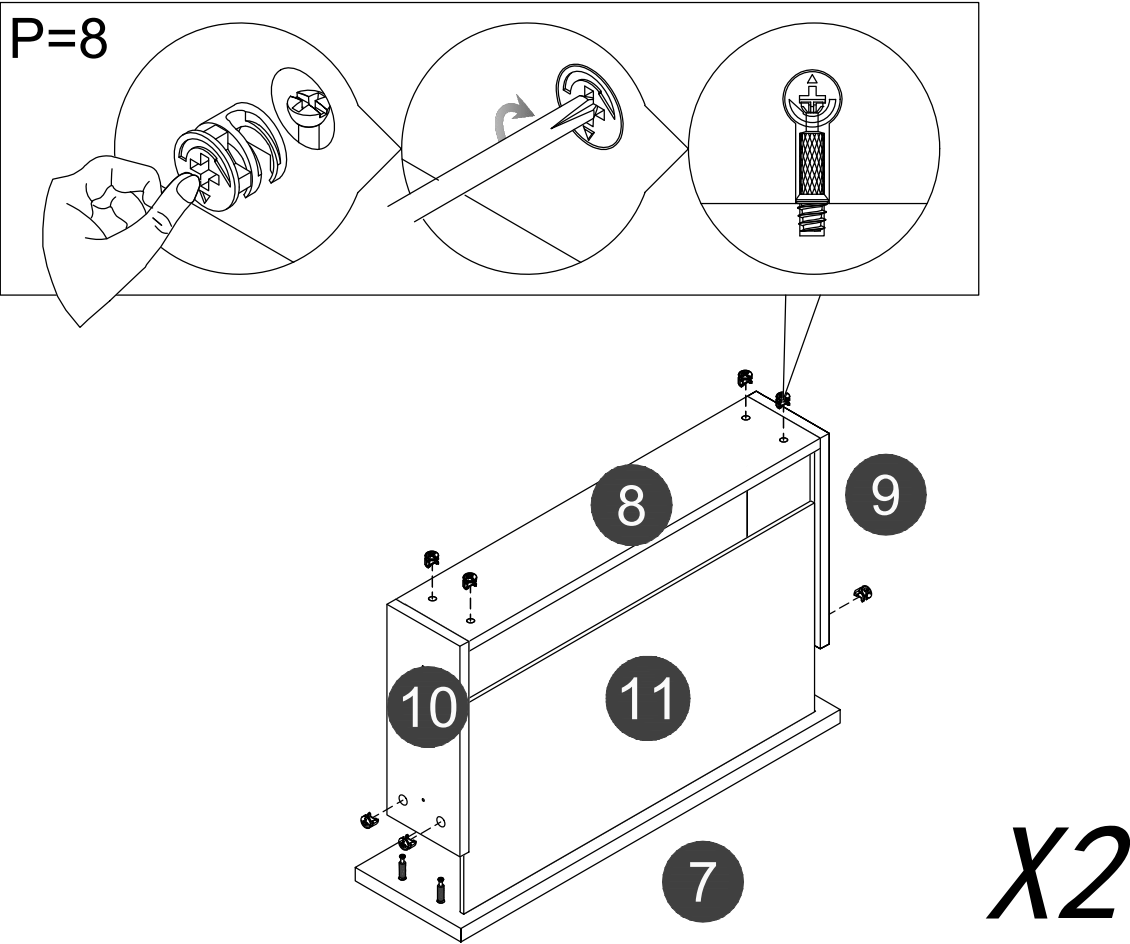


STEP 12

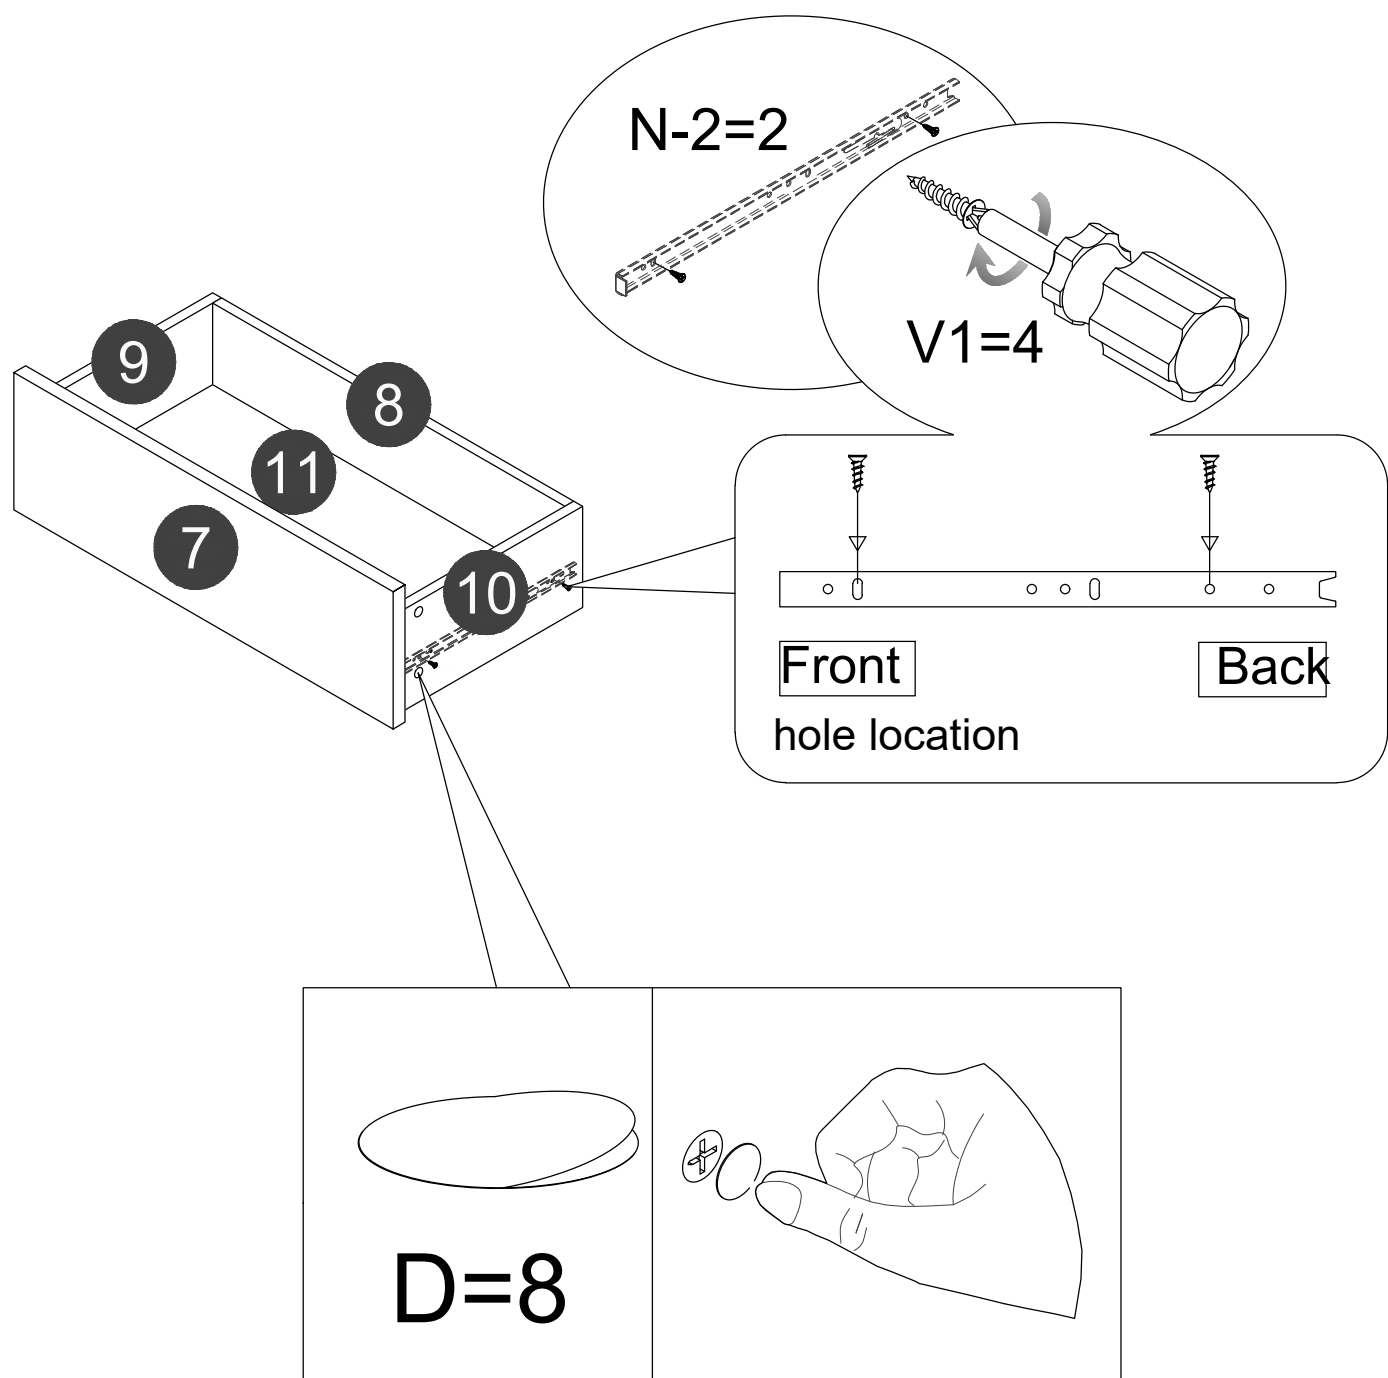


X2


STEP 13

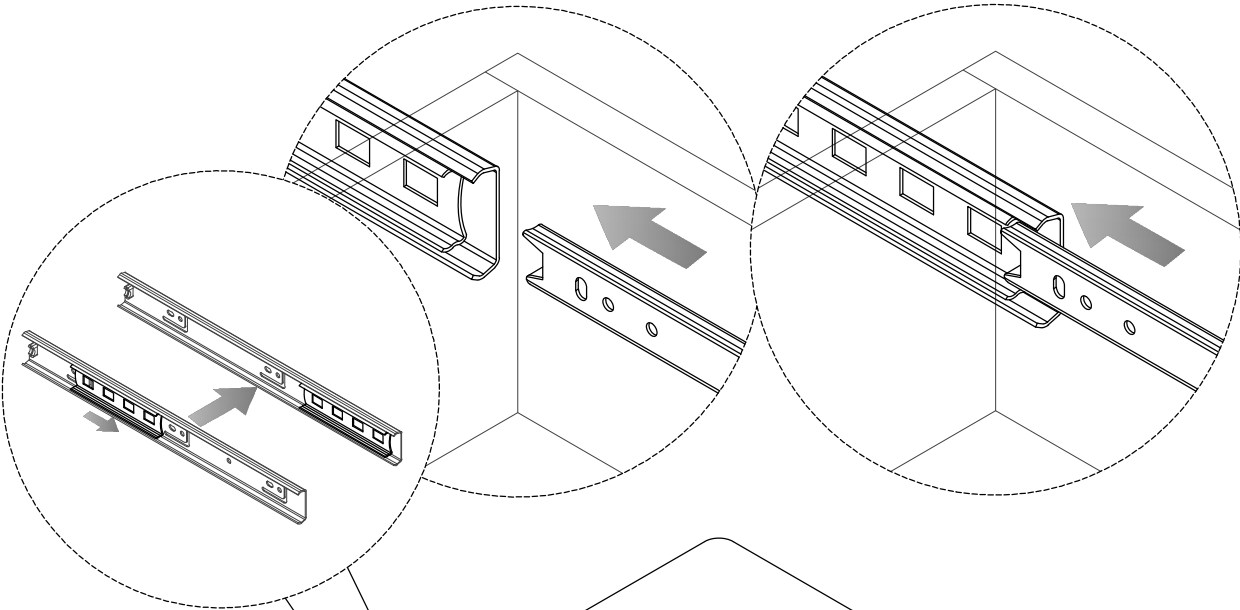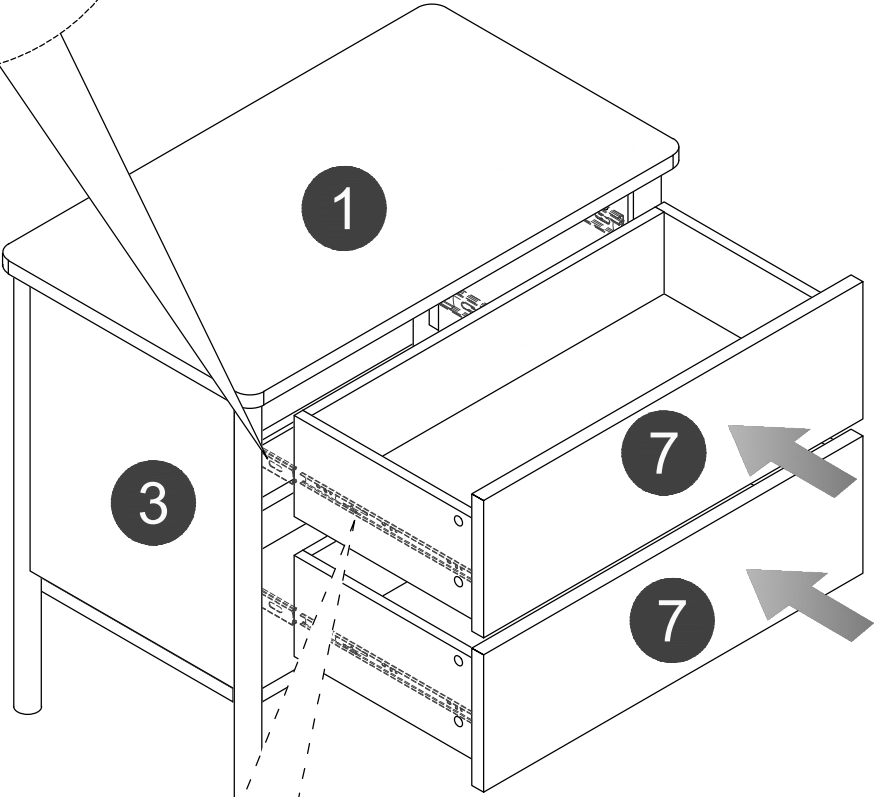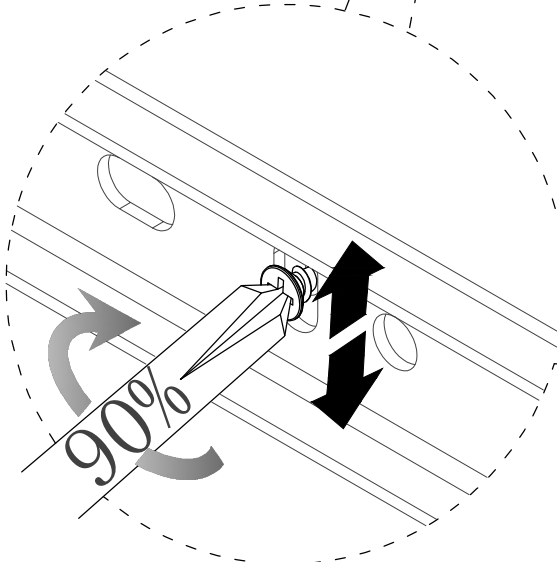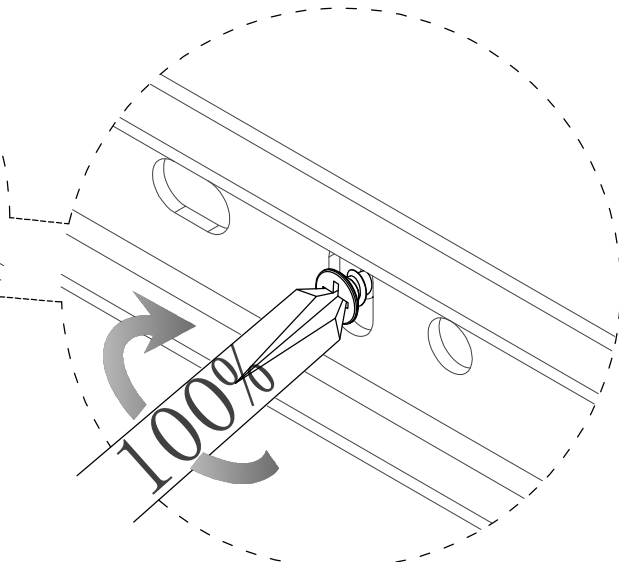

STEP 14

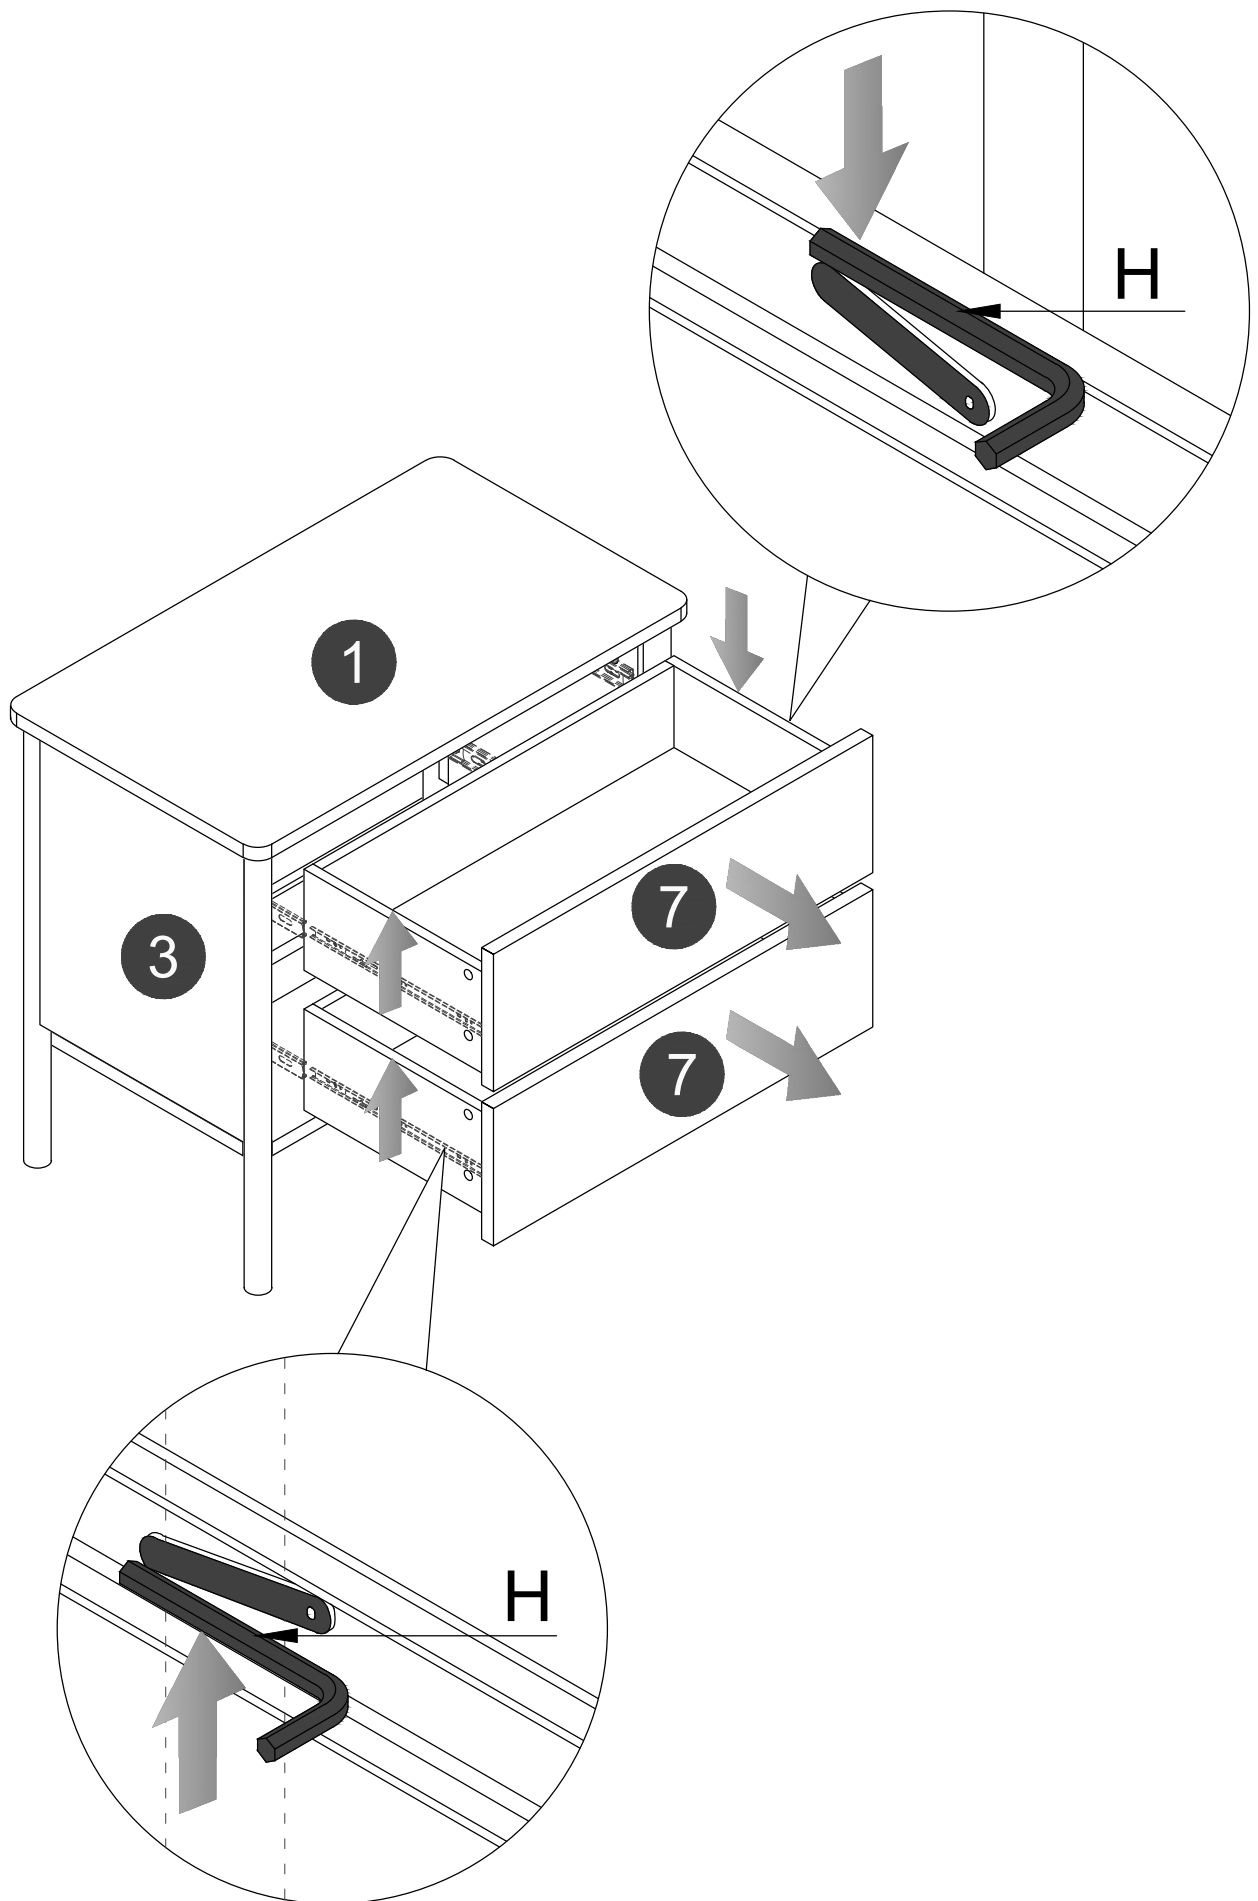

STEP 15

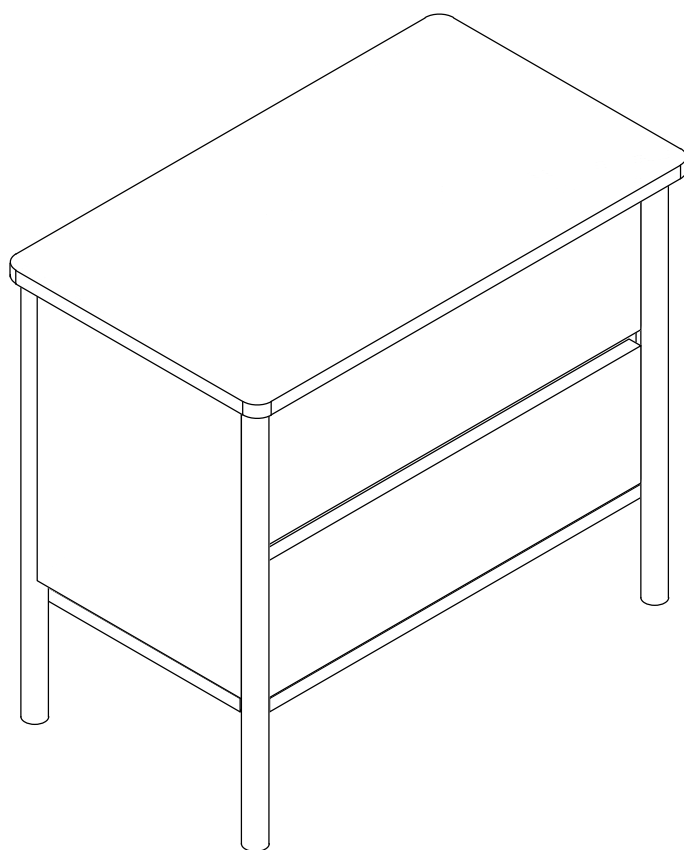

Finish