

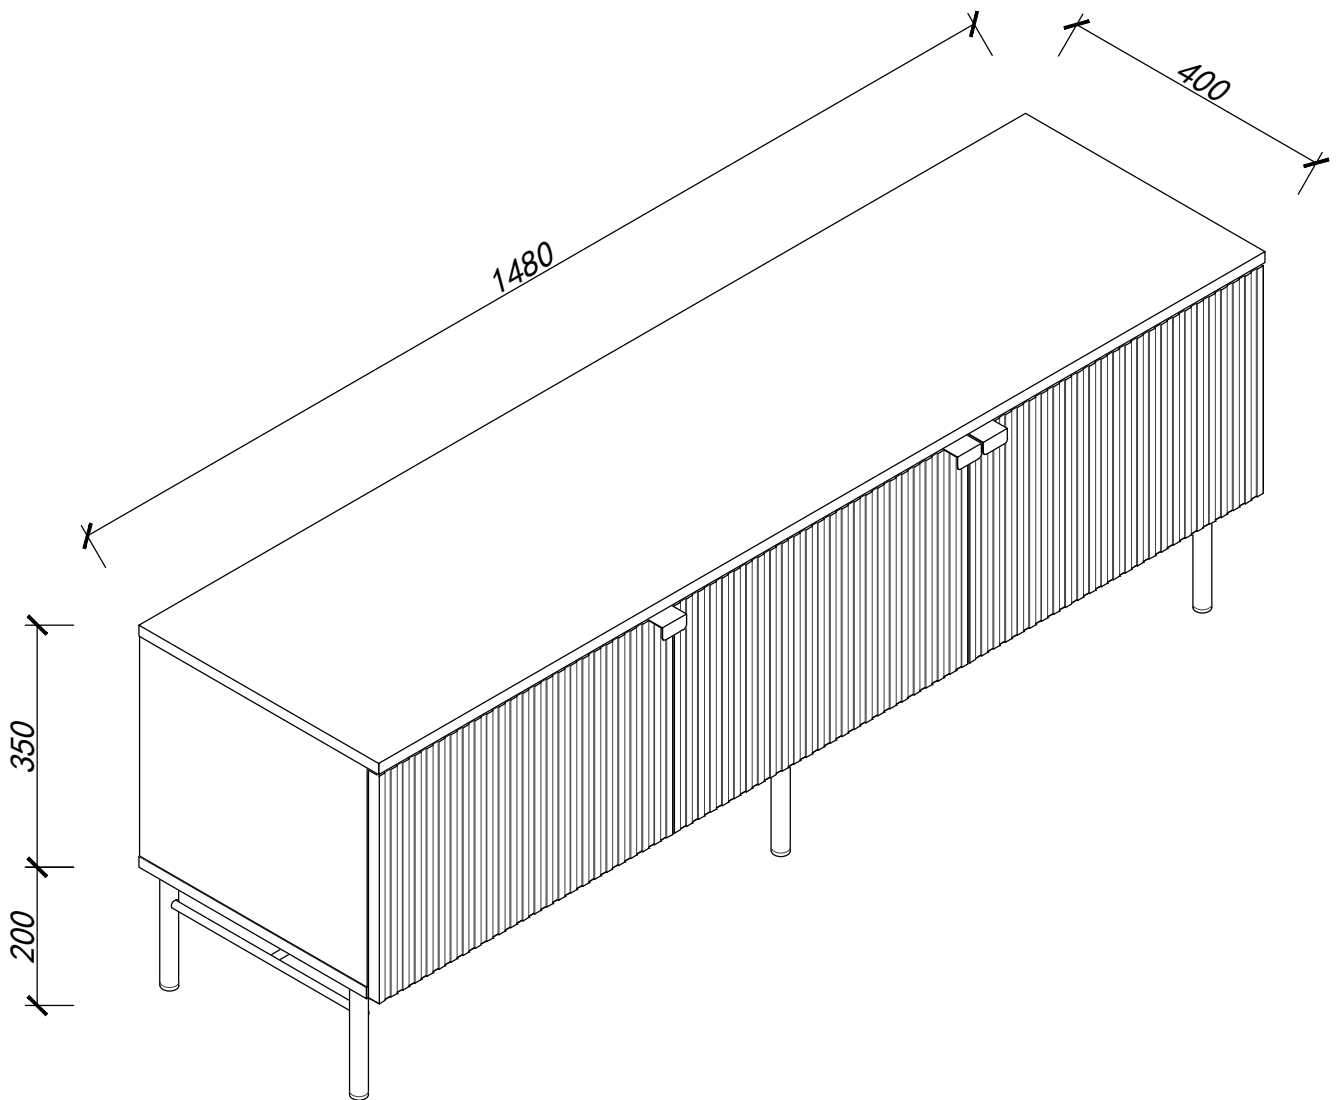
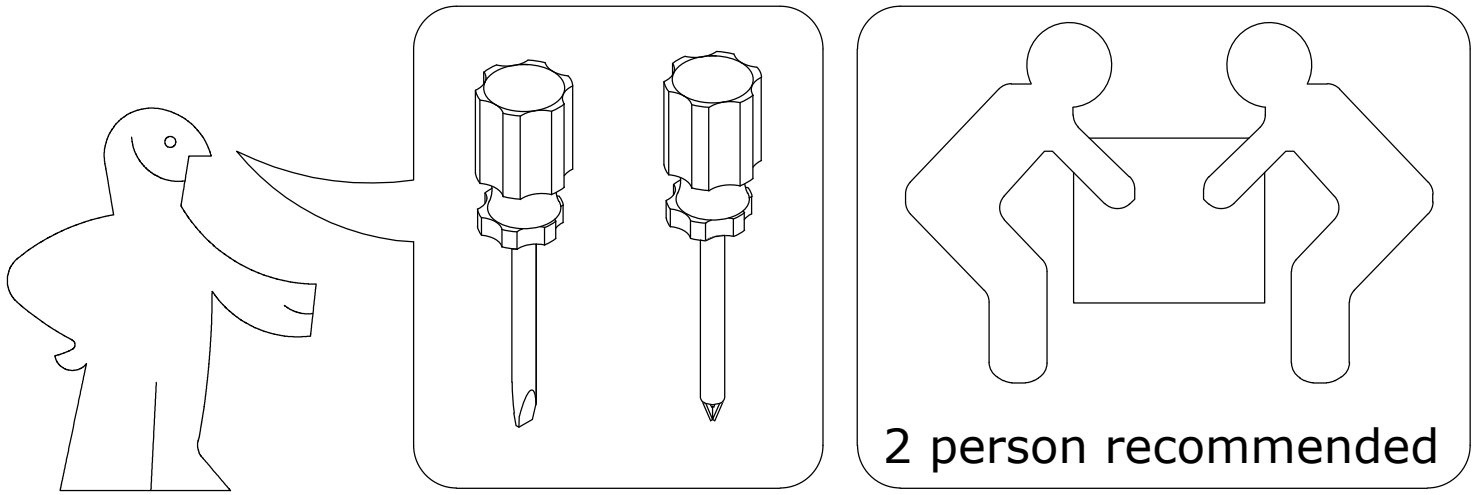
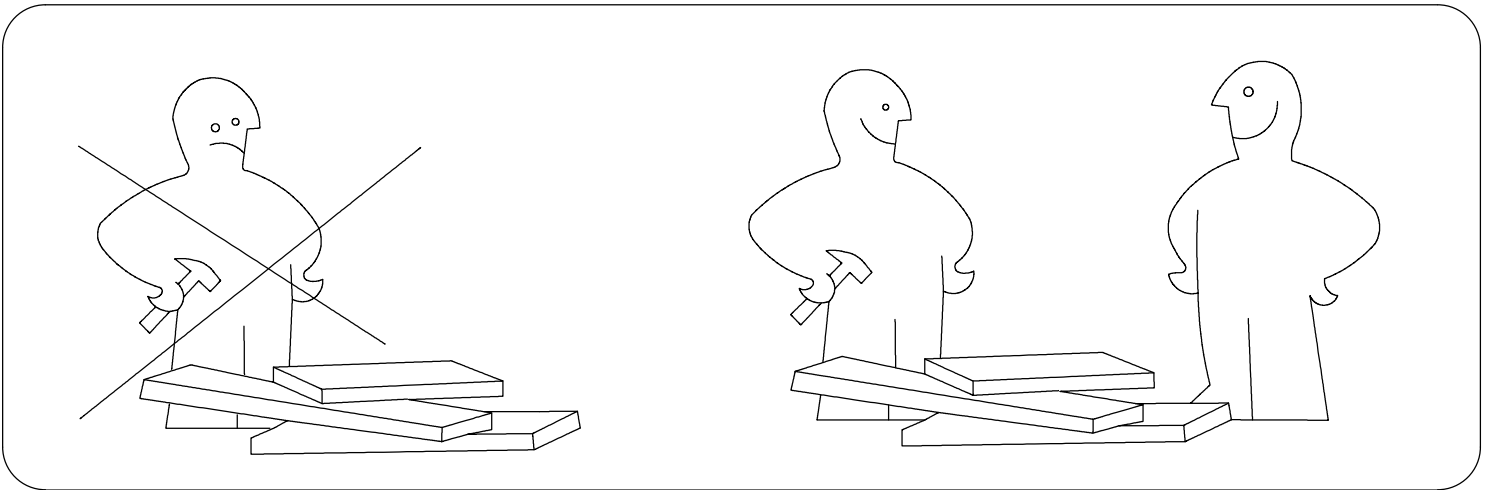


sømcasa


Assembly Instruction

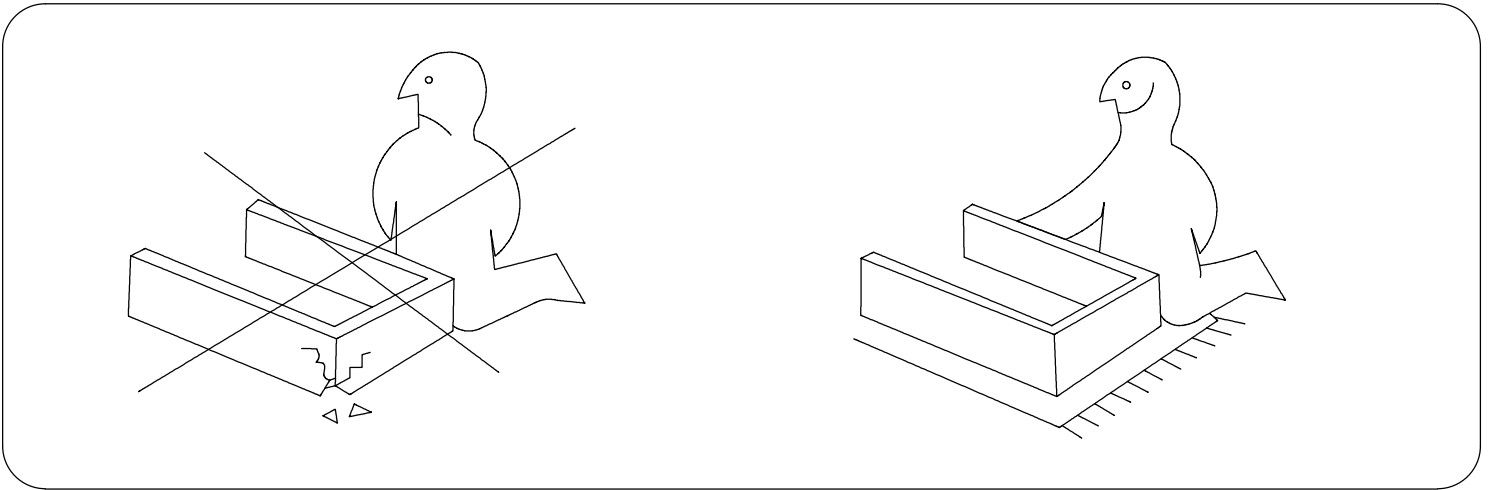

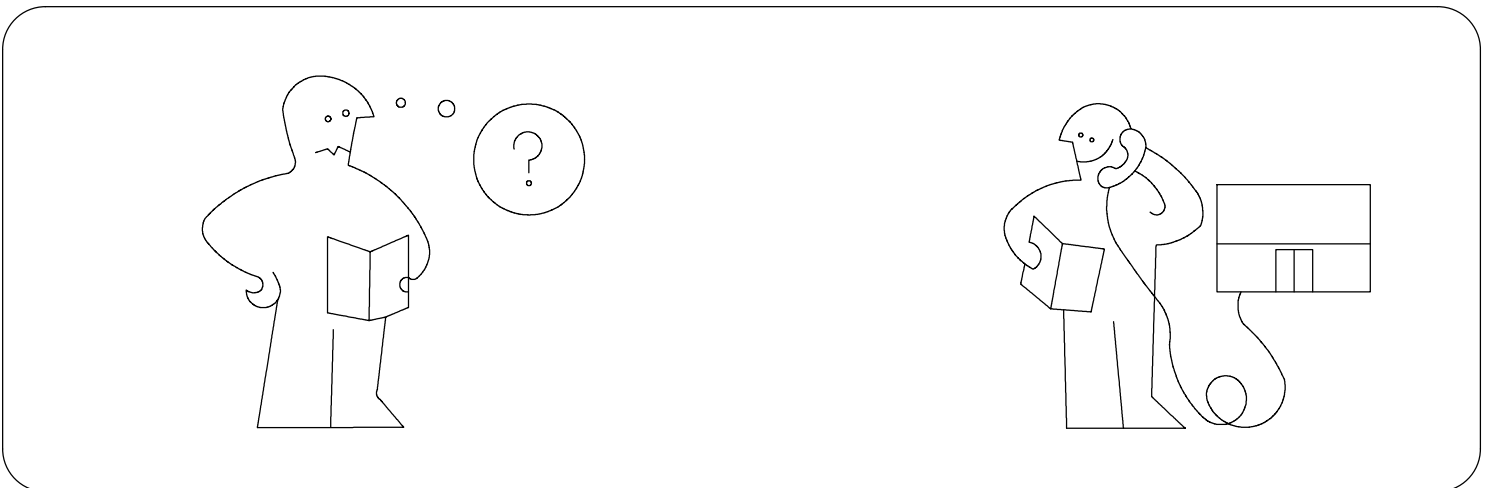

Panel No	Panel Sizes	Quantity
1	1480*400*16	1
2	1480*380*16	1
3	318*380*16	1
4	318*380*16	1
5	318*358*16	1

Panel No	Panel Sizes	Quantity
6	318*358*16	1
7	465*350*16	2
8	475*350*16	1
9	1456*328*5	1
10	329*490*18	2
11	329*490*18	1

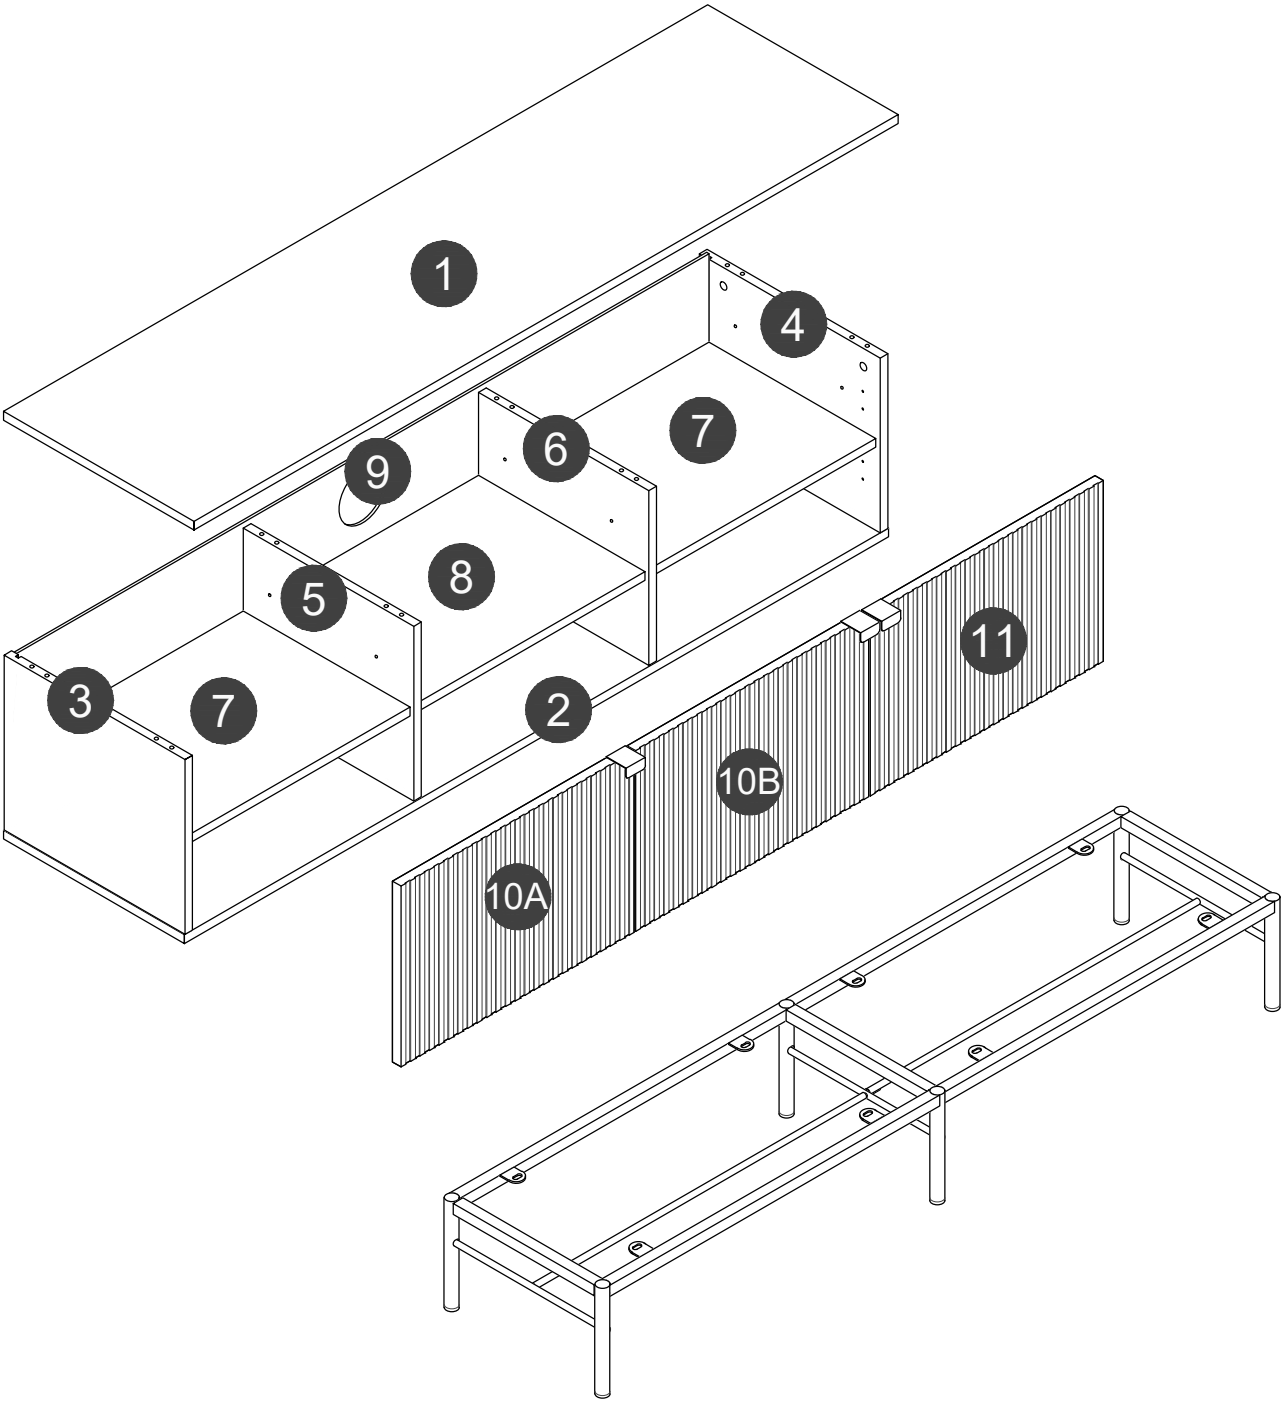


Fittings




M6*40

A=8



Φ8*30

B=16

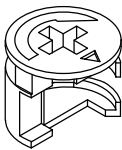

Φ15*12

C=8




Φ21

D=8



E=12

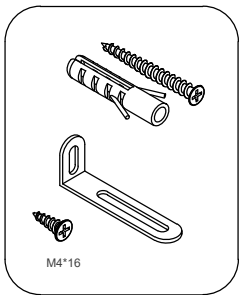

M4*16

F=2




M6*16

G1=14




M5*8

G2=2

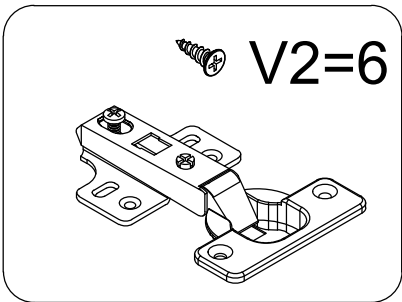

V2=6

I1=4

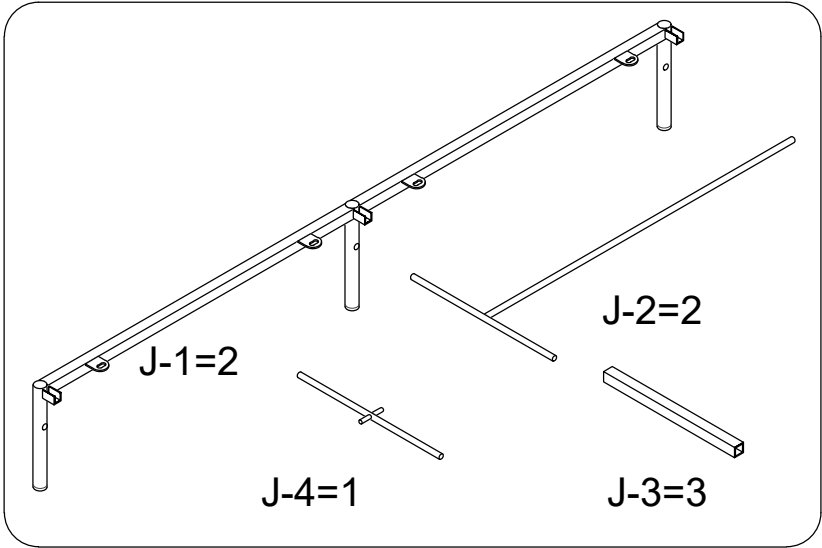


J-1=2

J-2=2

J-4=1


J-3=3

J=1

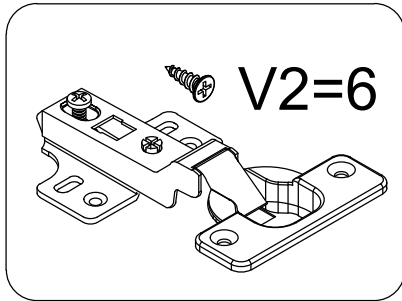


V2=6


I2=2




H =1

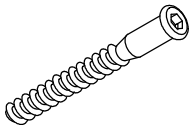

Q=8

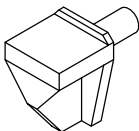

L=12

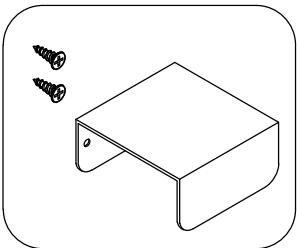

U=3




Z1=8




Z2=8


STEP 1

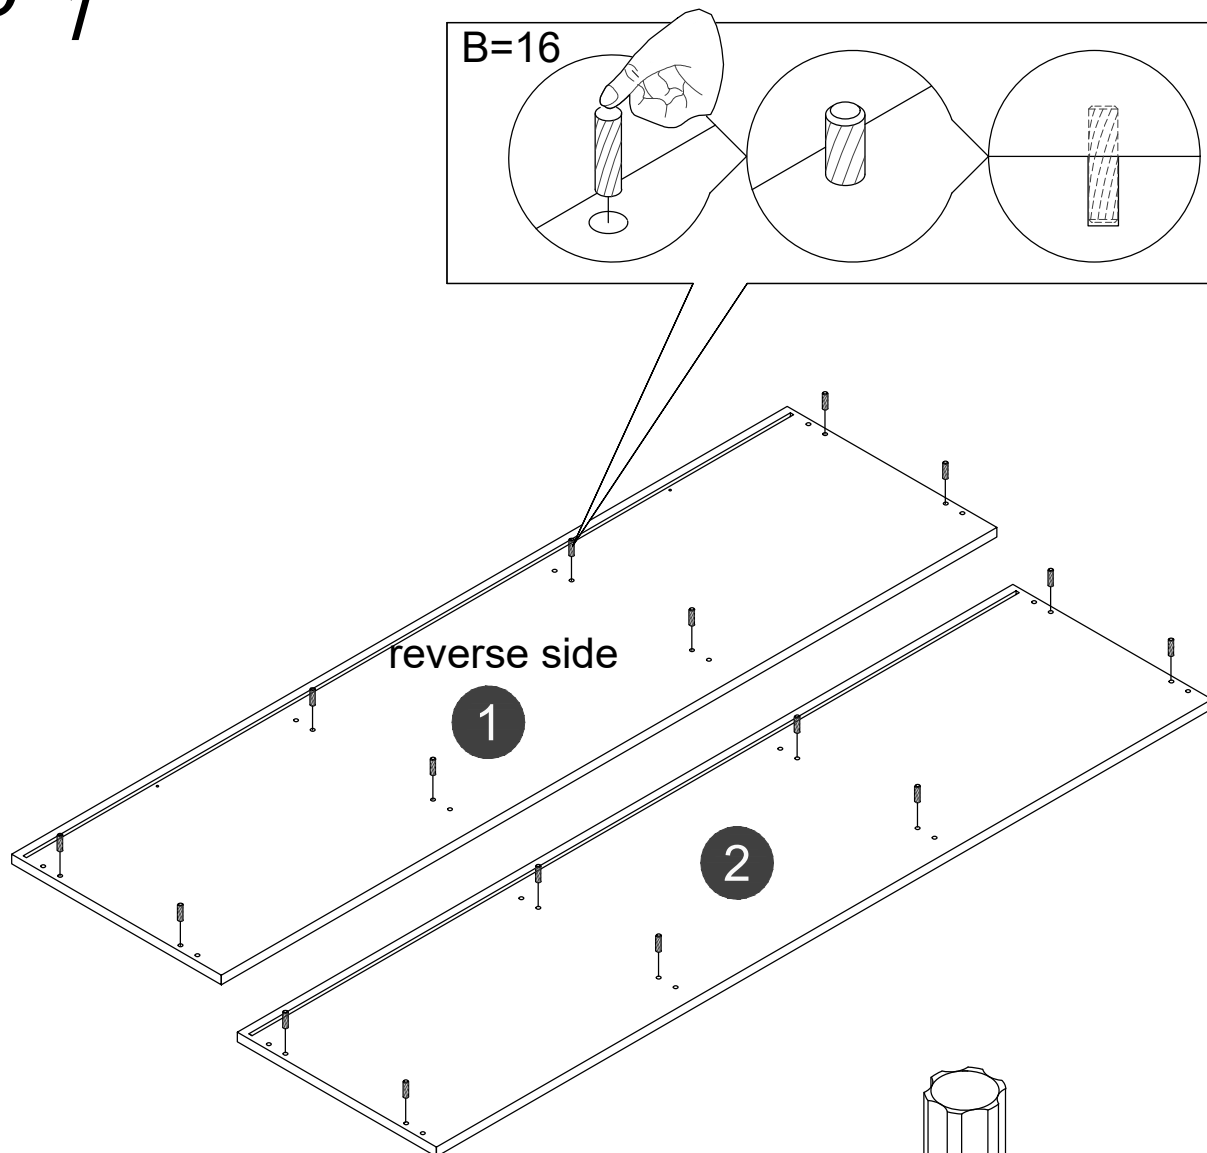


STEP 2

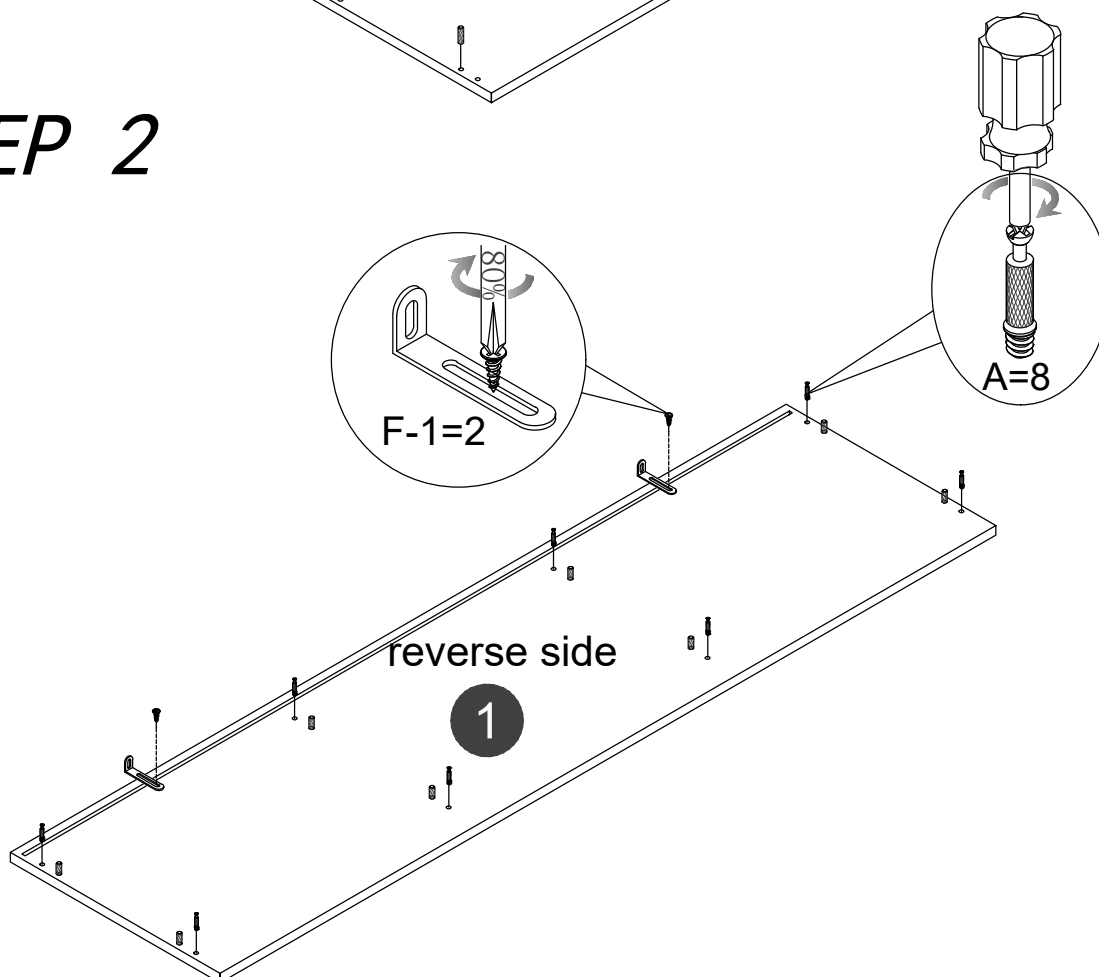


STEP 3

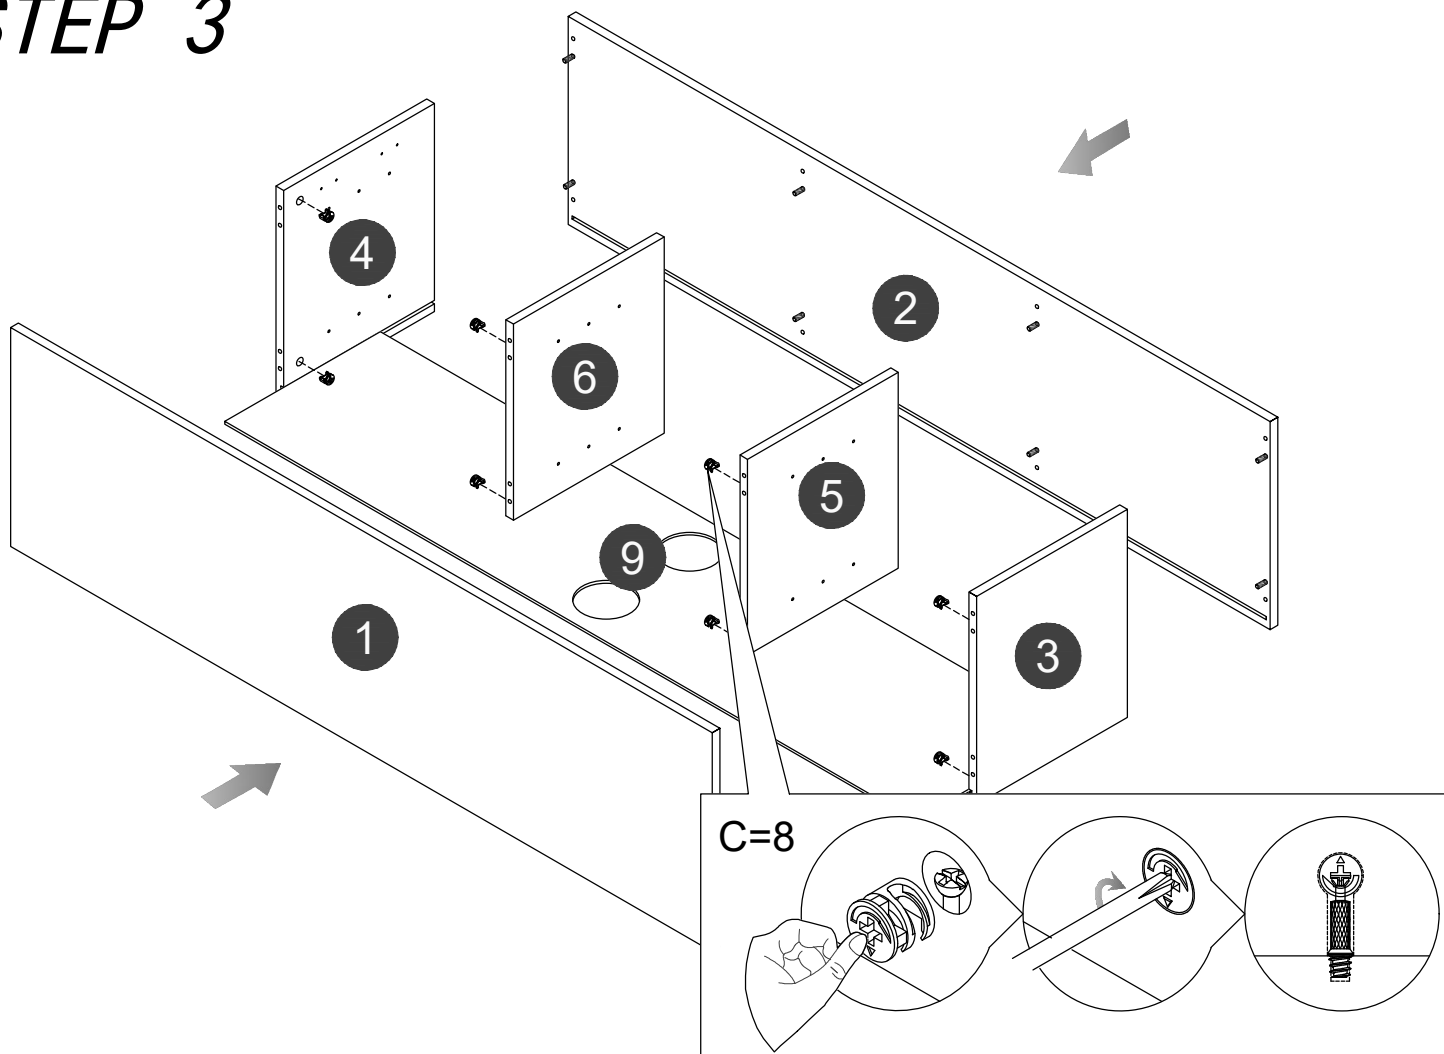


STEP 4

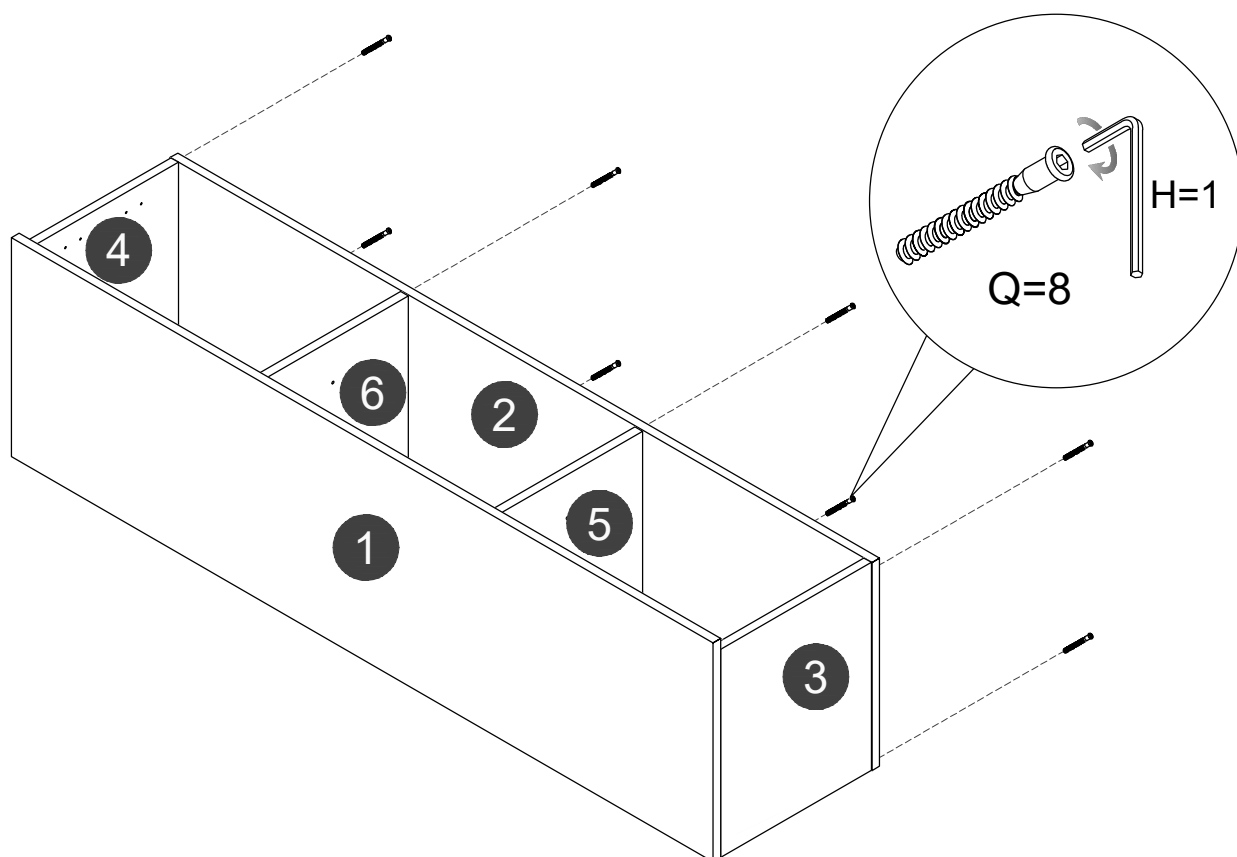


STEP 5

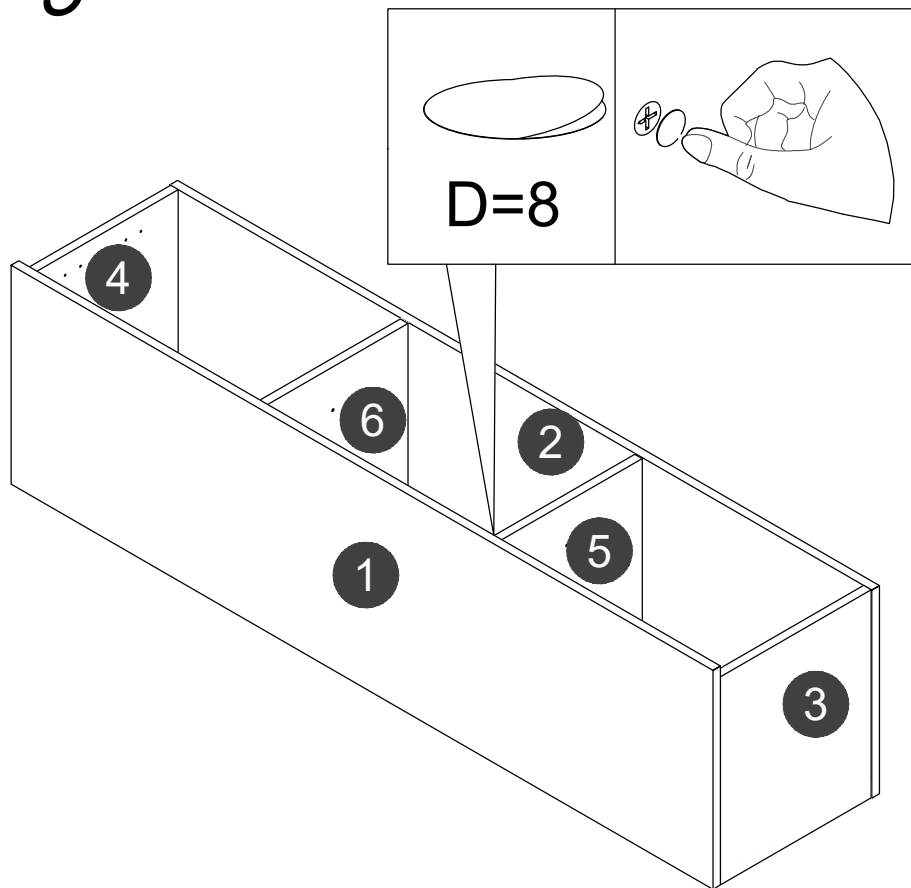


STEP 6

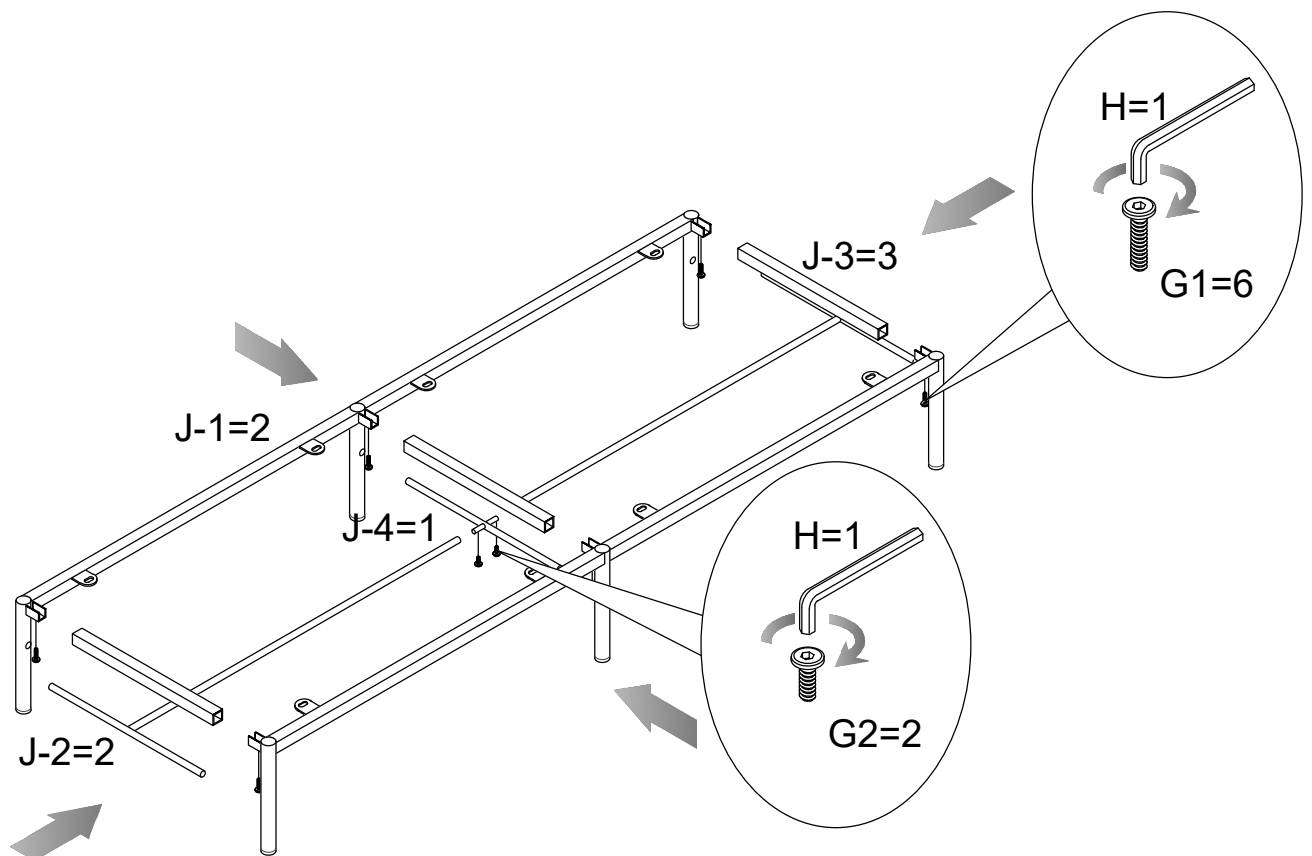


STEP 7

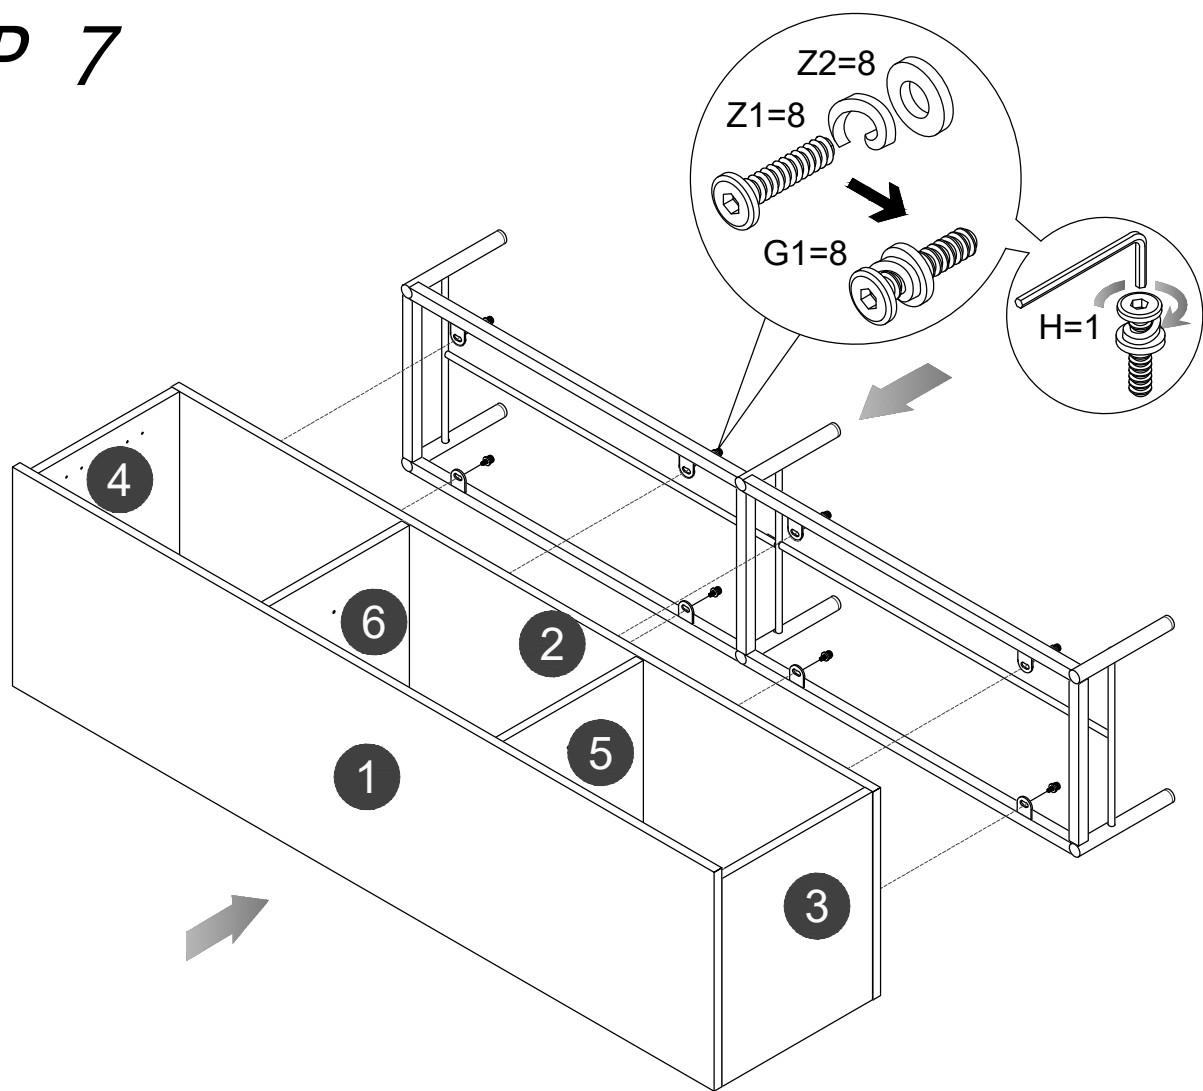


STEP 8

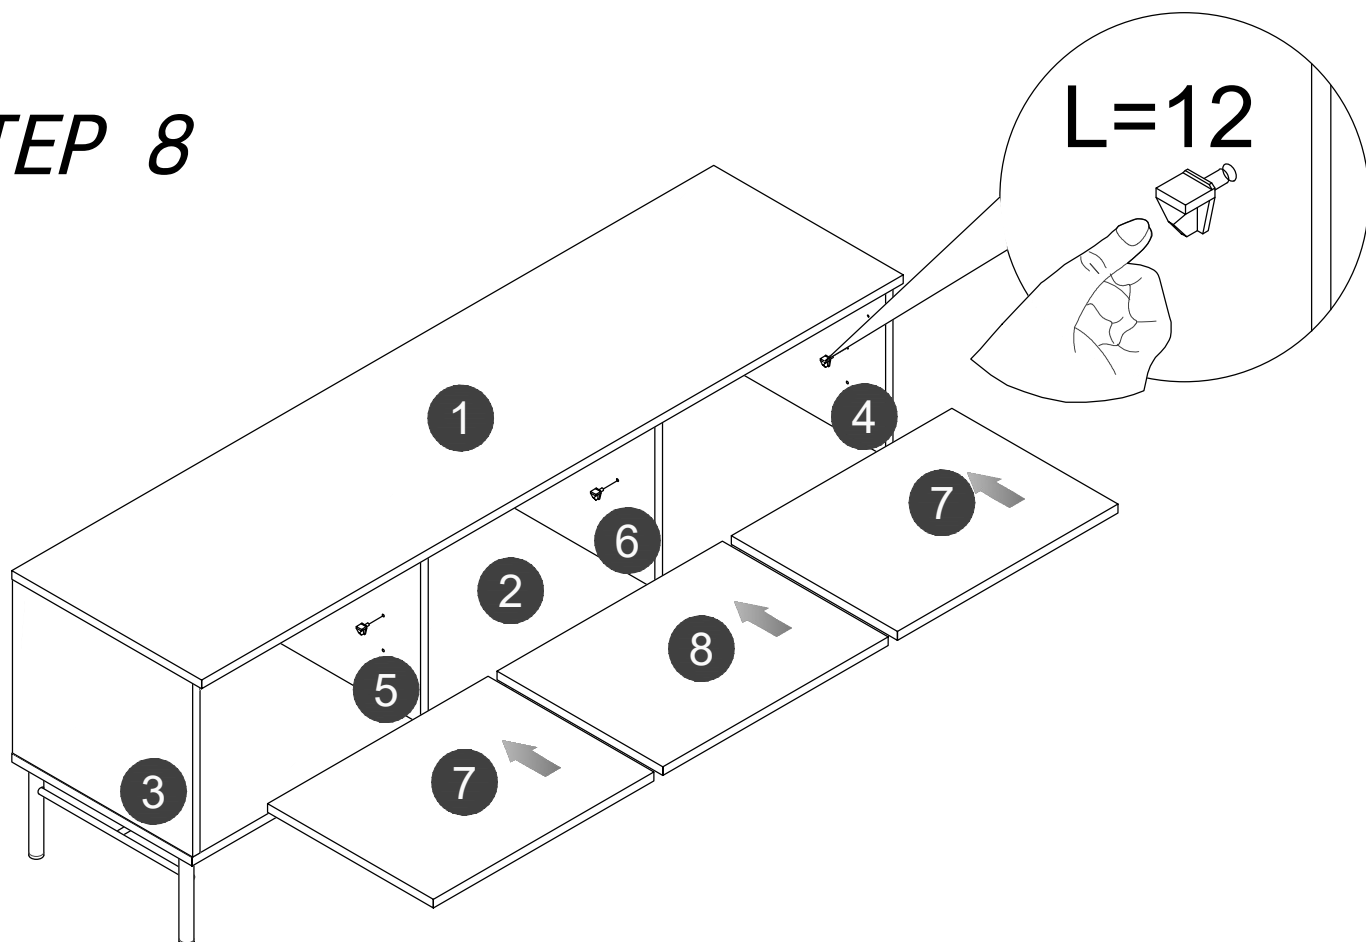





STEP 9

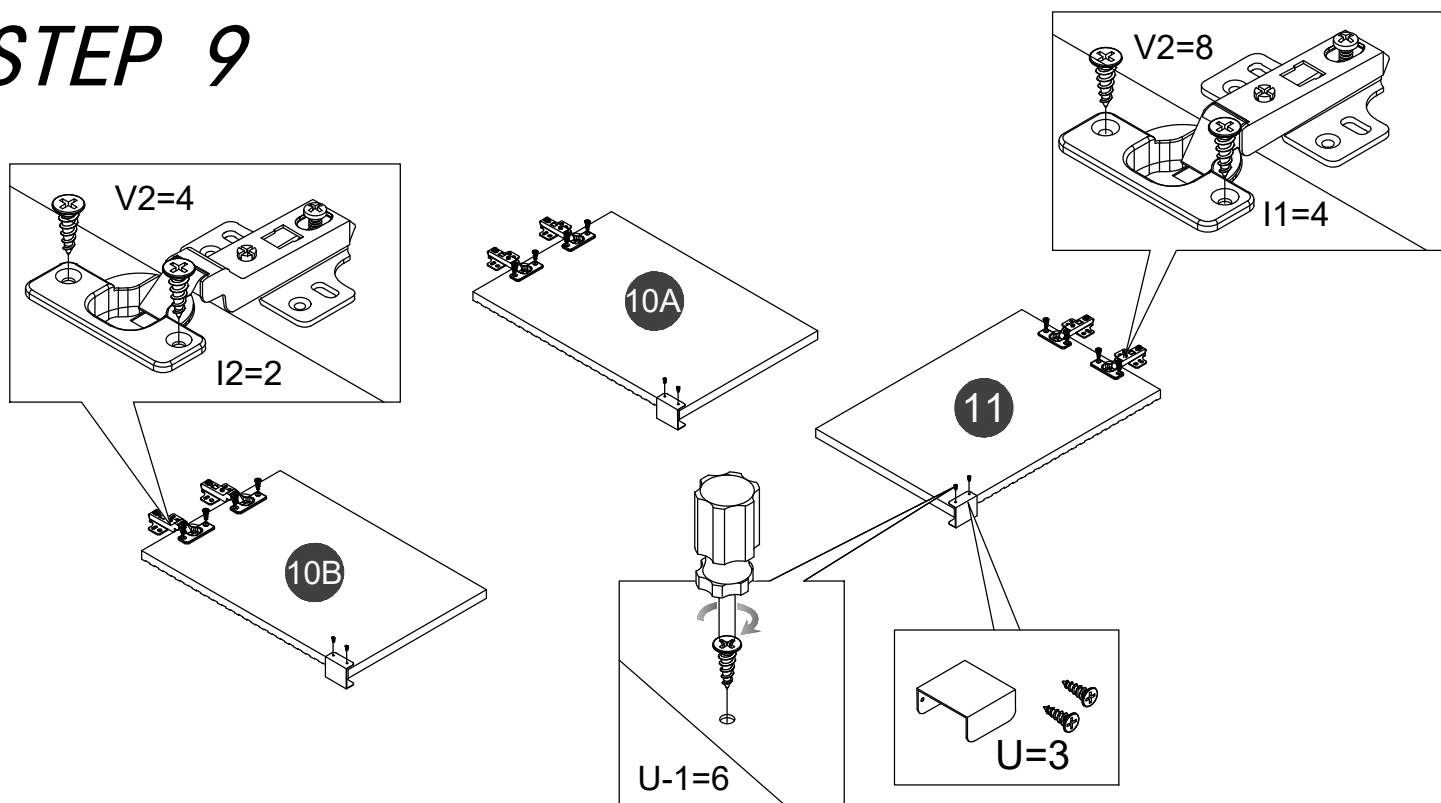


STEP 10

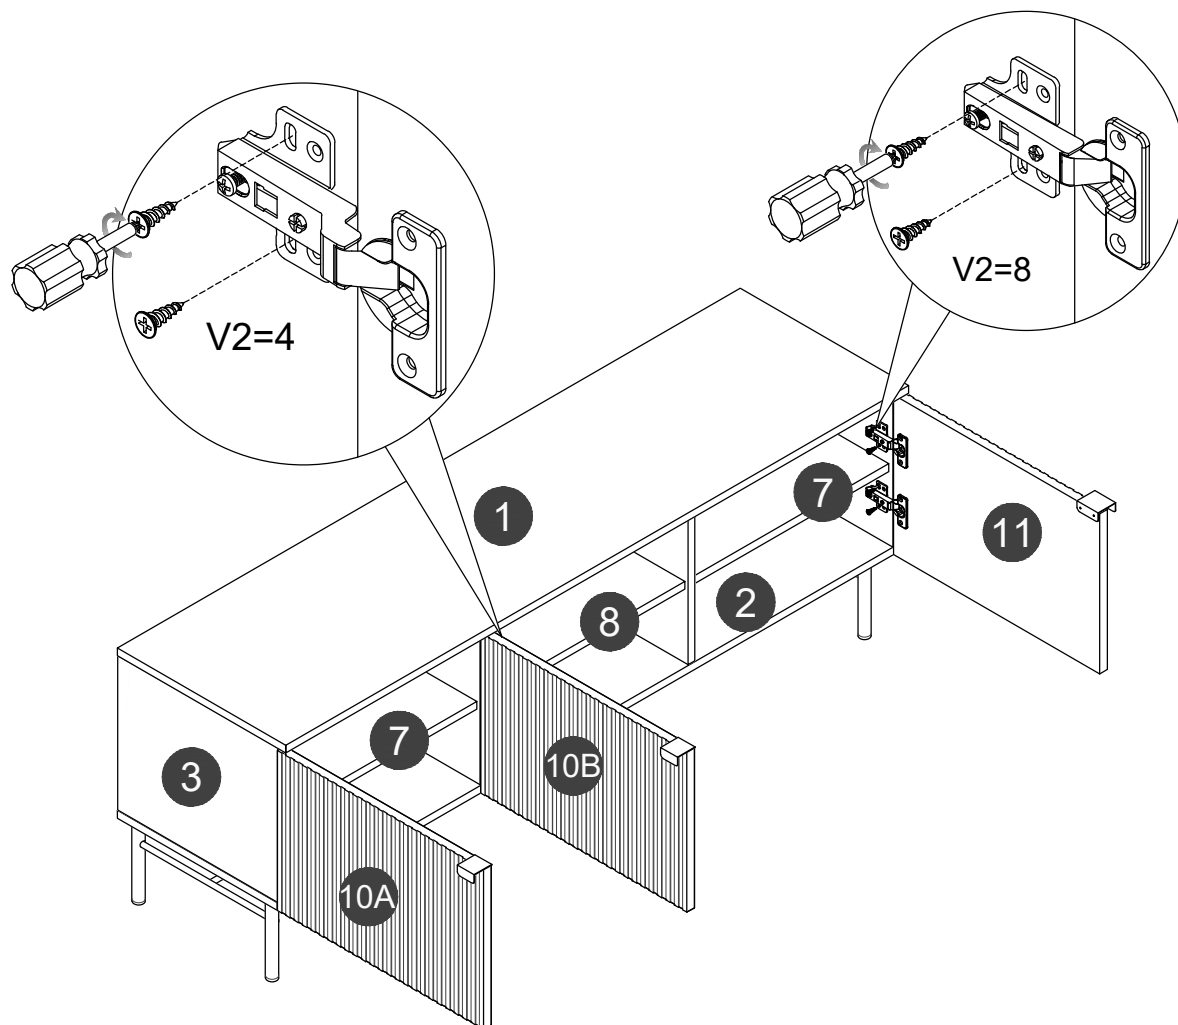


STEP 11

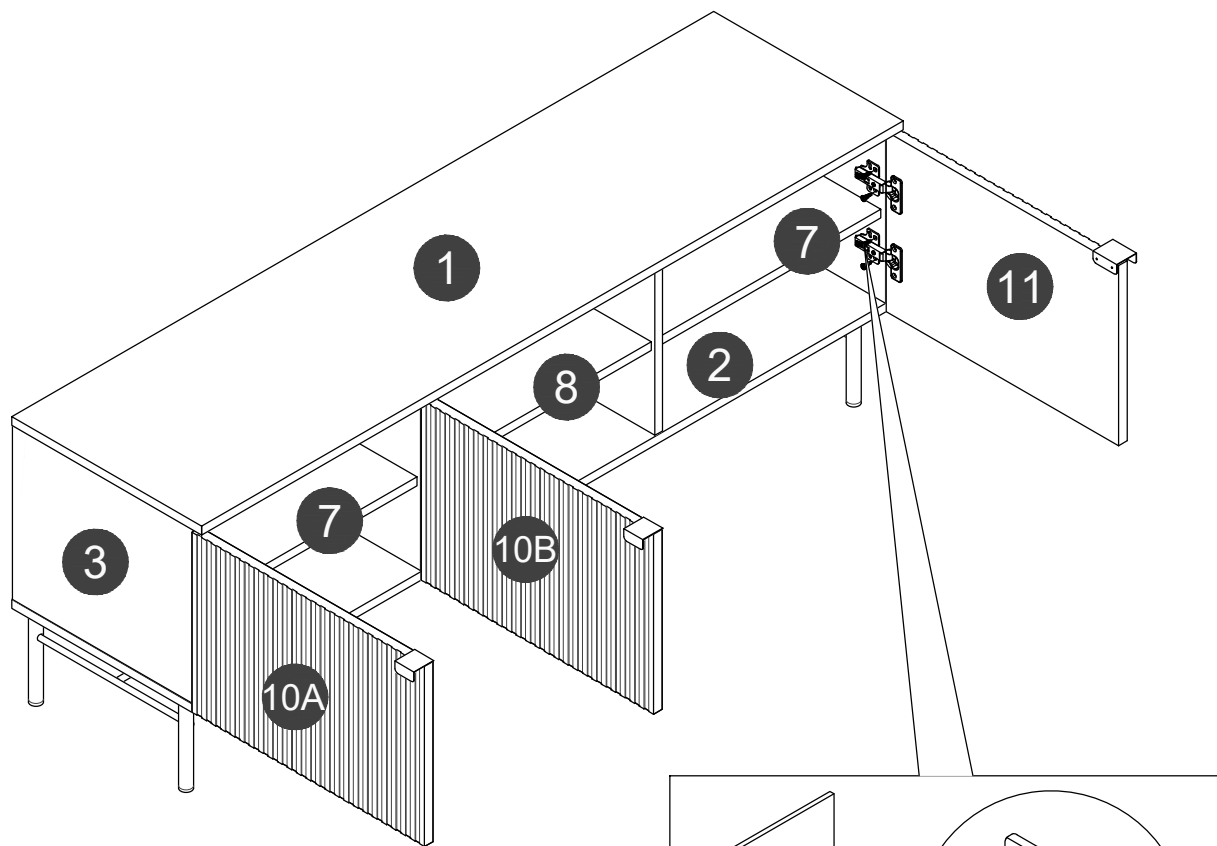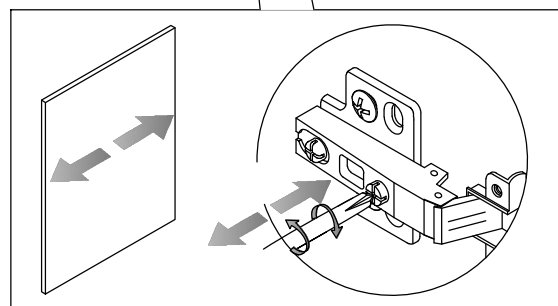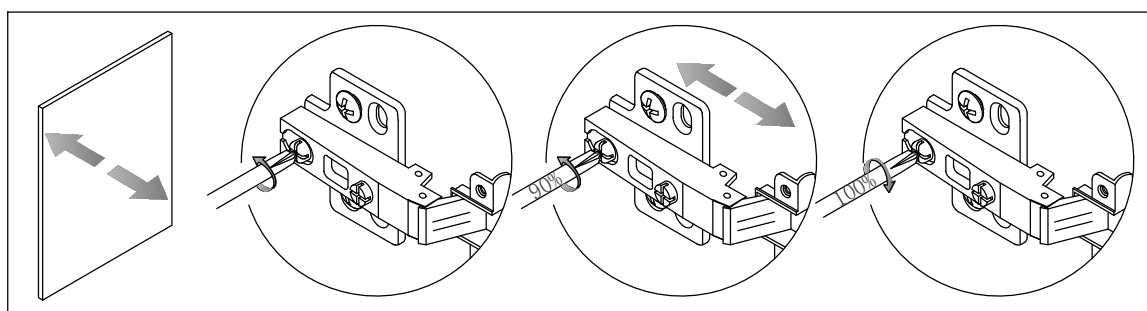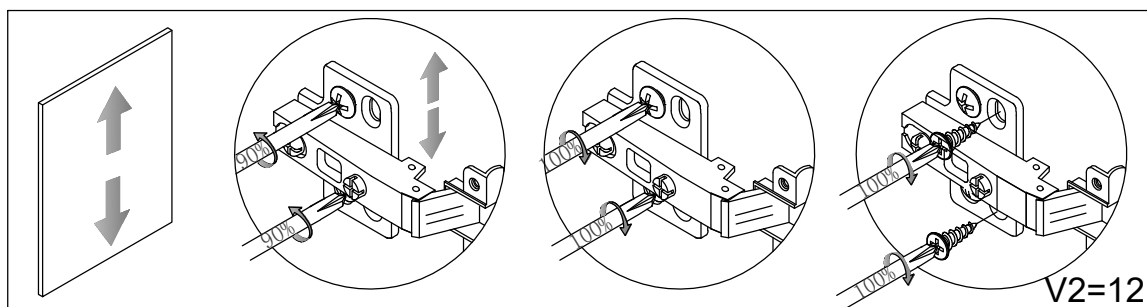


STEP 12

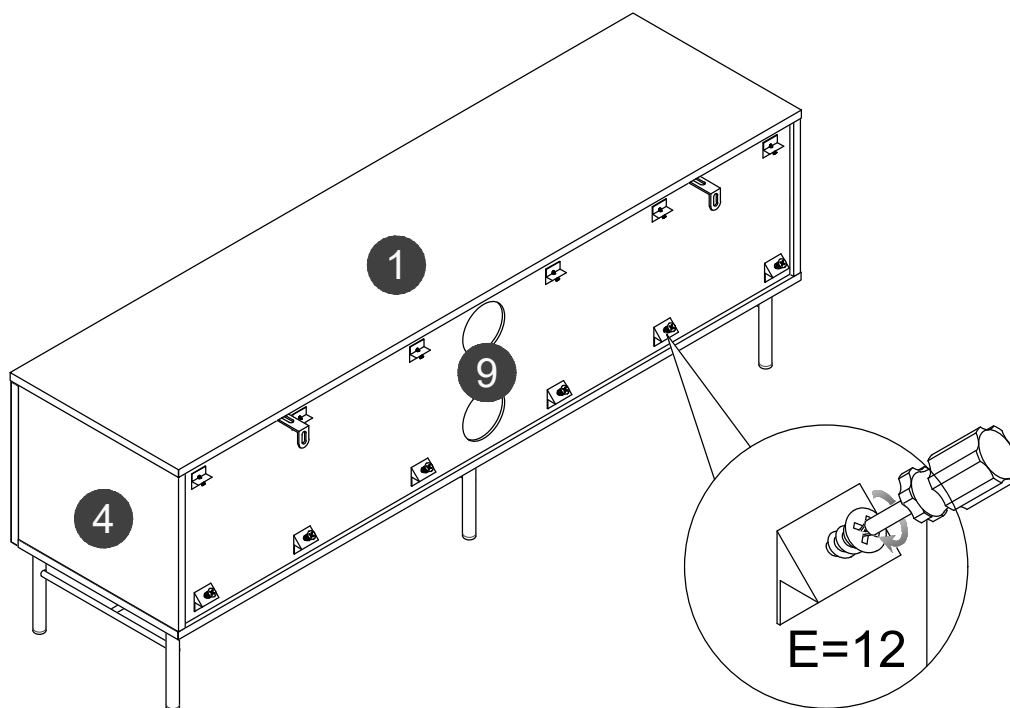

STEP 13

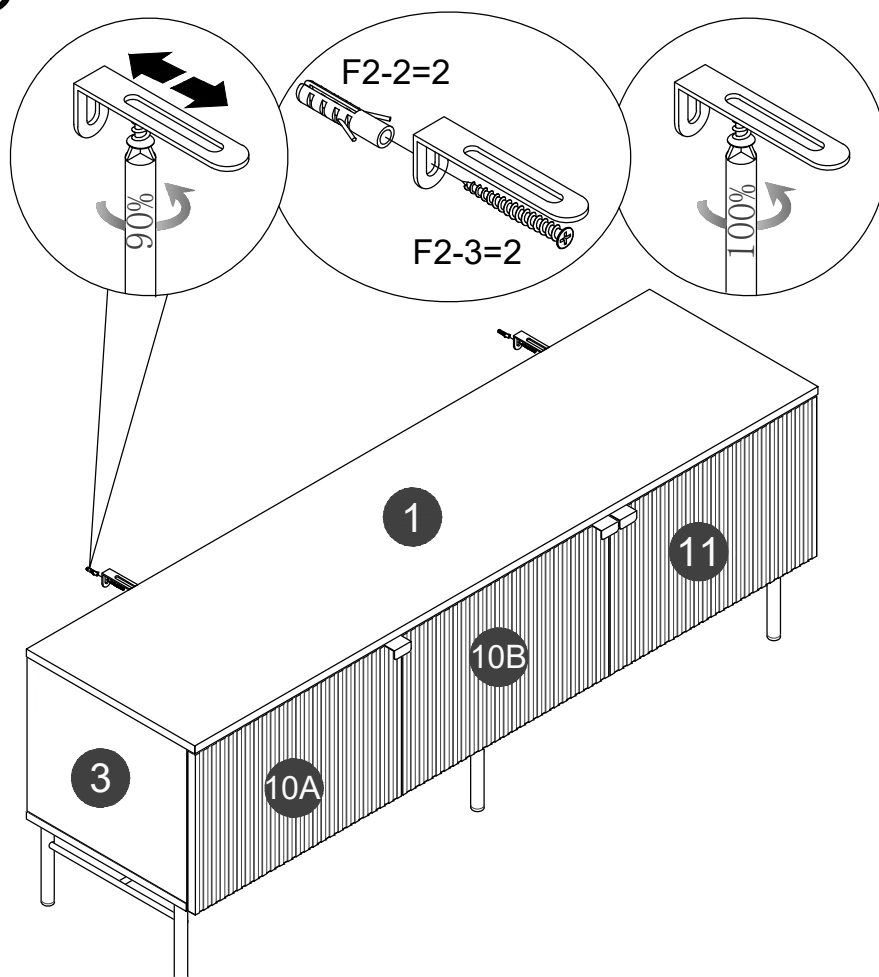

STEP 14

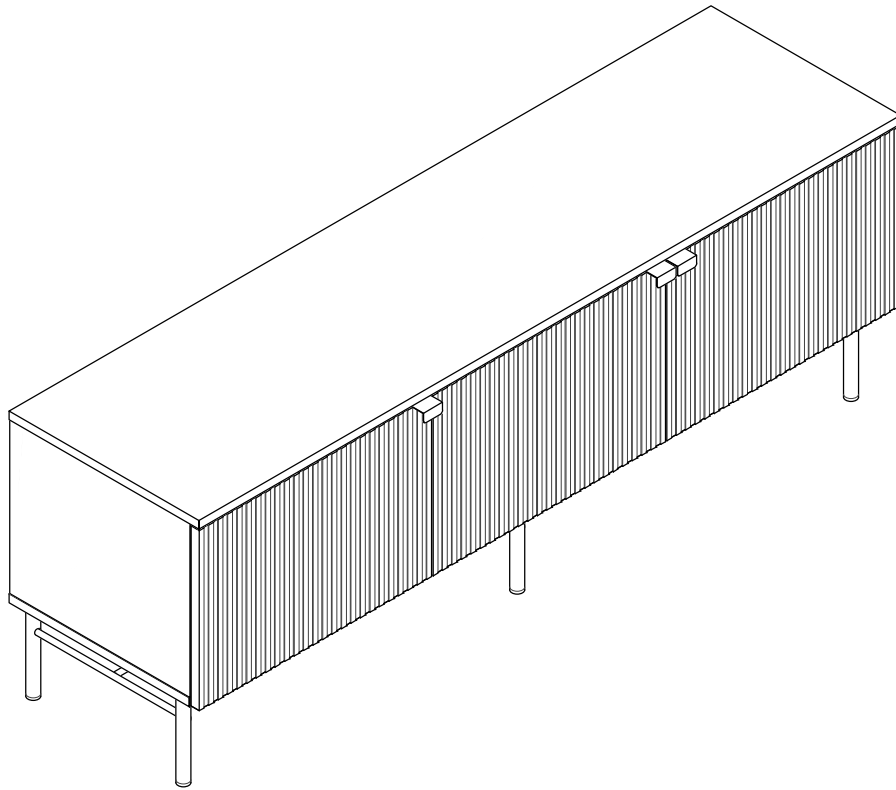

Finish