

ASSEMBLY INSTRUCTIONS

sømcasa

IMPORTANT NOTE : *

- PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- DO NOT TIGHTEN ALL SCREWS UNTIL THE CHAIR IS FULLY SET-UP.

HARDWARE LIST			PART LIST		
A	JCBC M6 x 25mm + S/W M6 + F/W M6 x 13mm	4PCS	1	X LEG UP	1PC
B	JCBC M6 x 55mm + S/W M6 + F/W M6 x 13mm	4PCS	2	X LEG DOWN	1PC
C	JCBC W SCREW M7 x 40mm	1PC	3	TOP REST	1PC
D	PH CB SCREW M4 x 25mm	8PCS	4	CUSHION SEAT	1PC
E	ALLEN KEY M4 (BALL SHAPE)	1PC	5	CORNER BLOCK	2PCS


CAUTIONS :

(1) **DO NOT FULLY-TIGHTEN THE NUT OR NUT BOLTS INITIALLY UNTIL ALL NUTS OR BOLT IS READY ASSEMBLED.**


(TO AVOID CAUSING DAMAGES TO THE THREAD, DO NOT OVER-TIGHTEN THE NUTS OR BOLTS.)

(2) **KEEP ALL HARDWARE PART OUT OF REACH OF CHILDREN.**




STEP 1

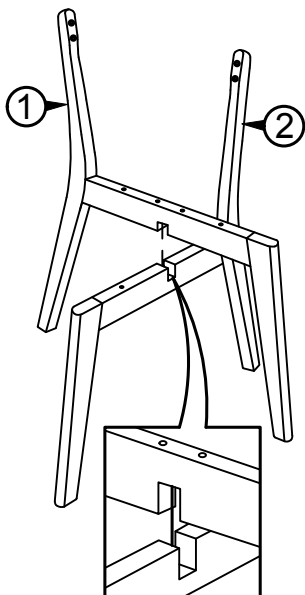


STEP 2

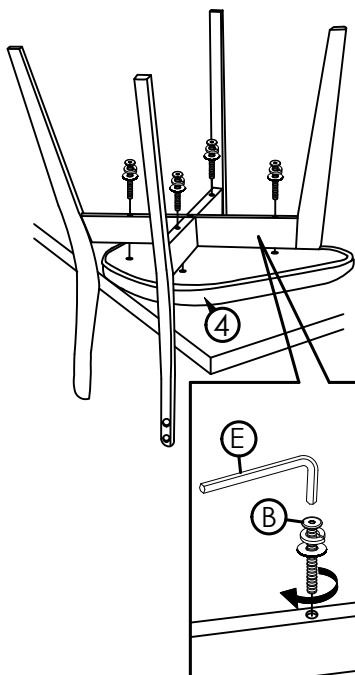


STEP 3

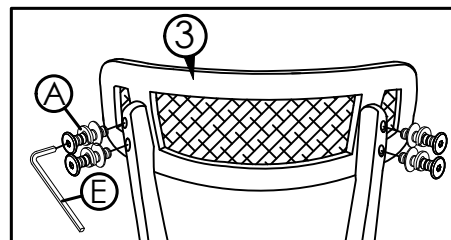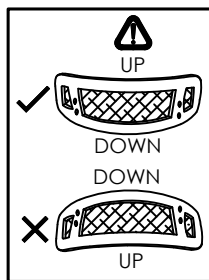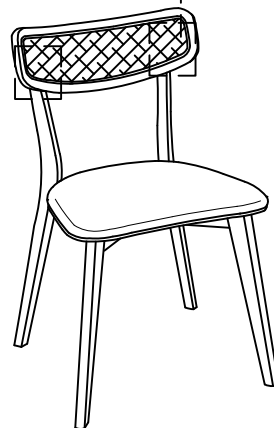


STEP 4

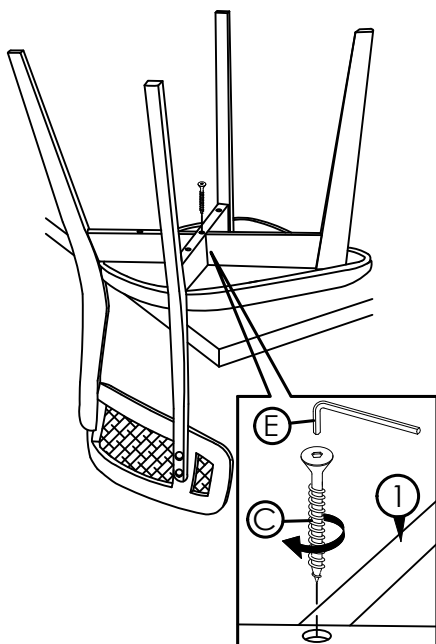

STEP 5

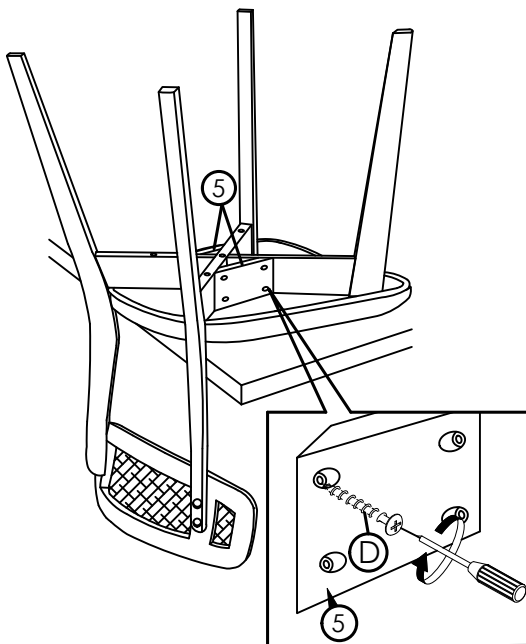

STEP 6

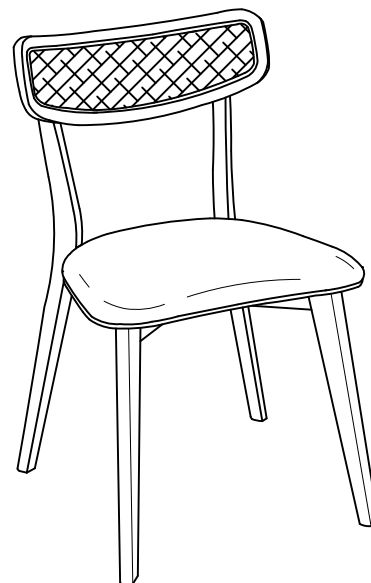

COMPLETED
CHAIR ASSEMBLY.