

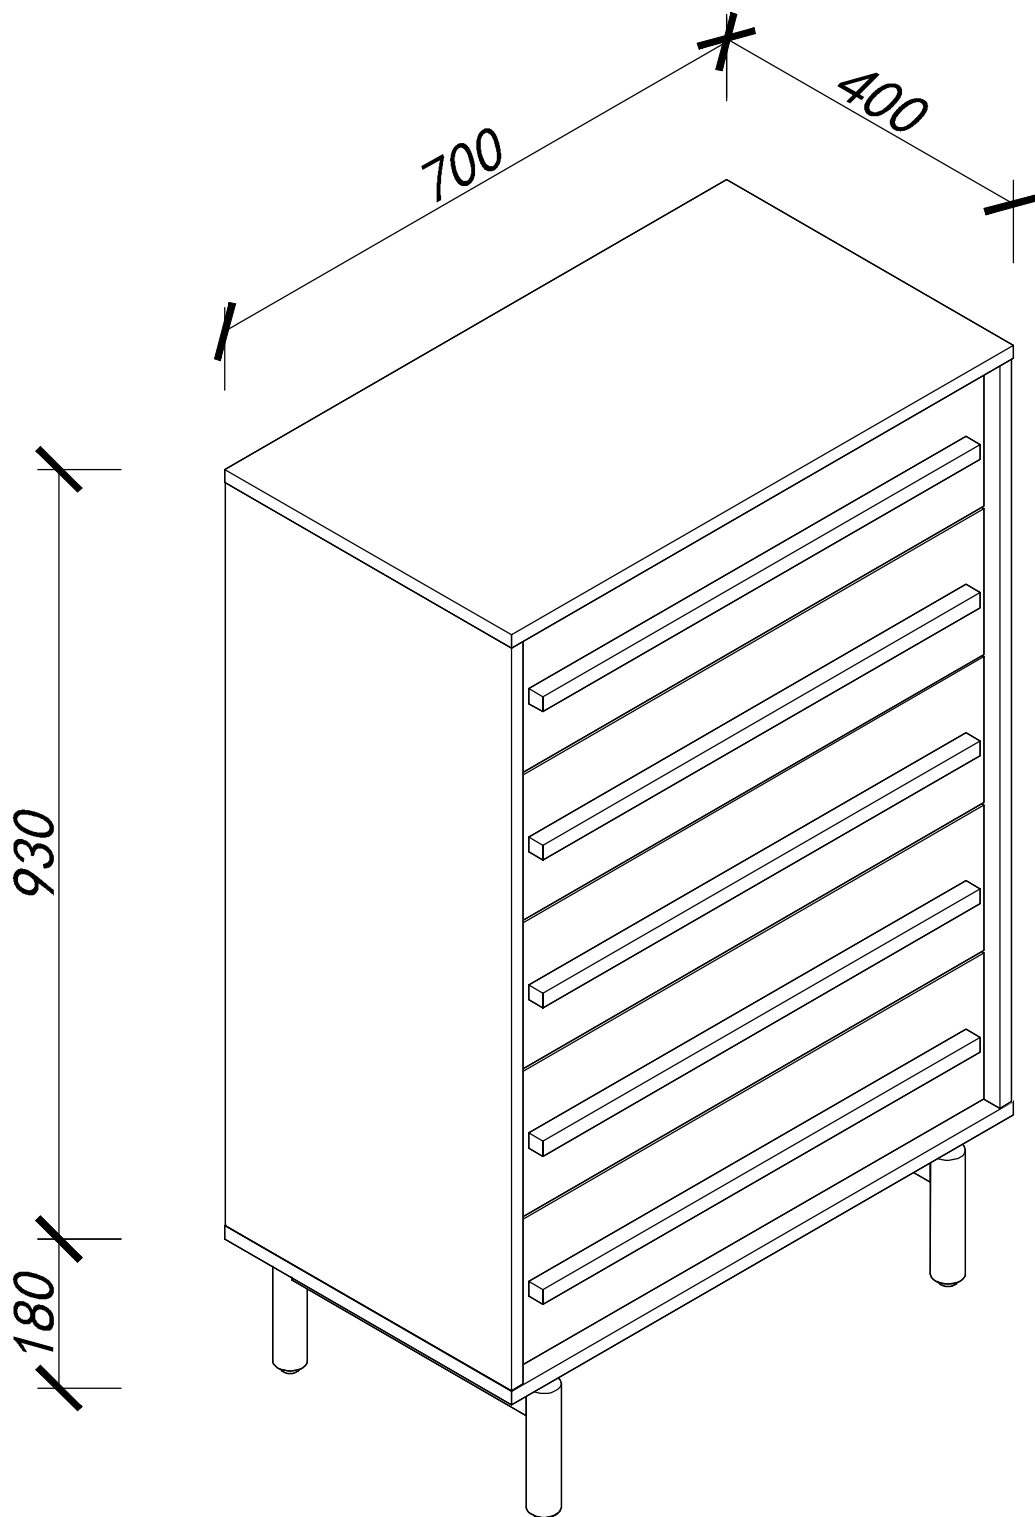
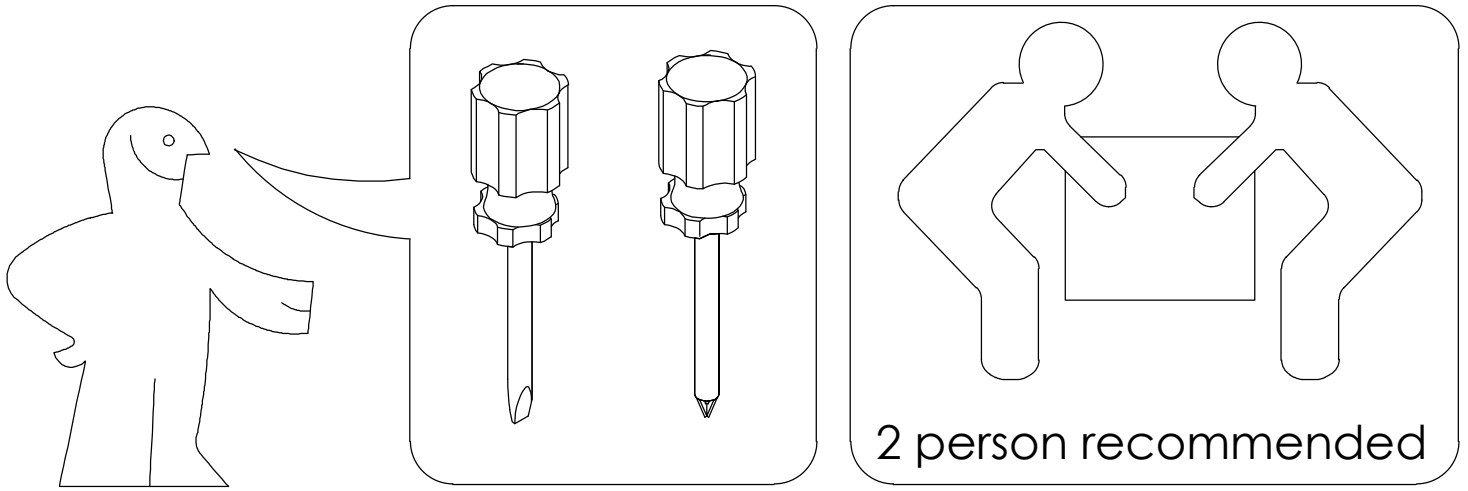
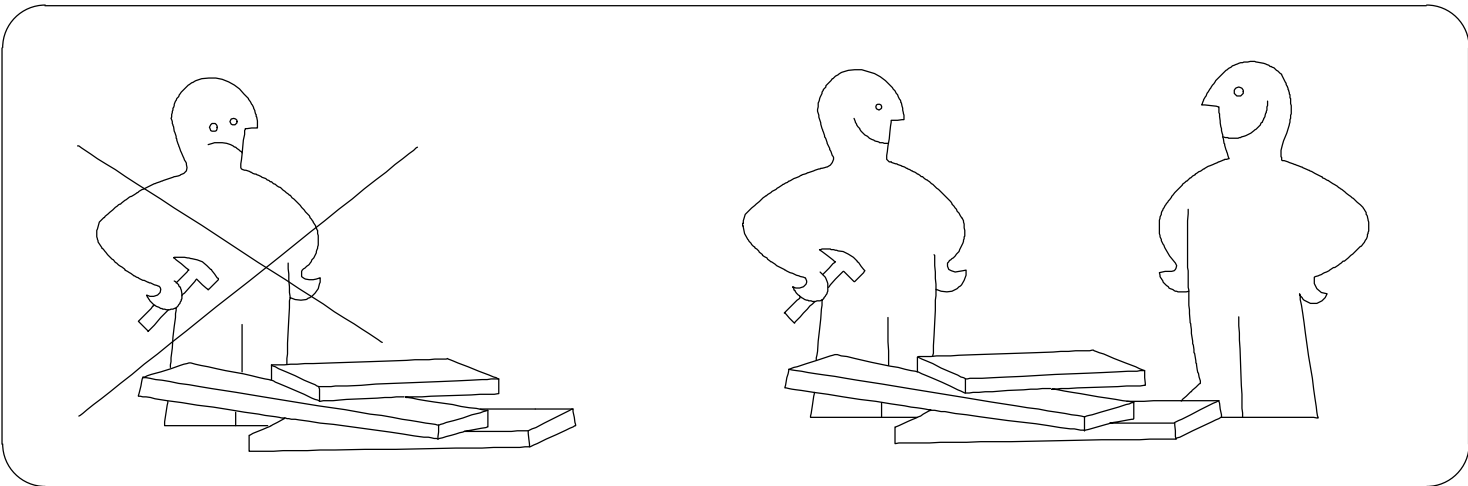


sømcasa


Assembly Instruction

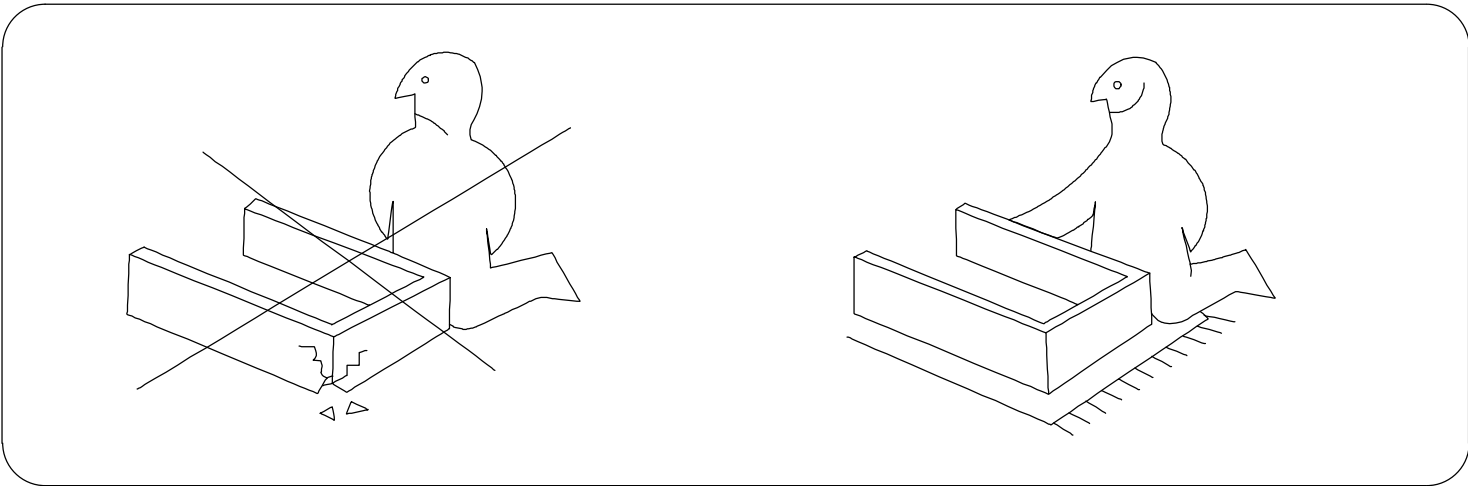

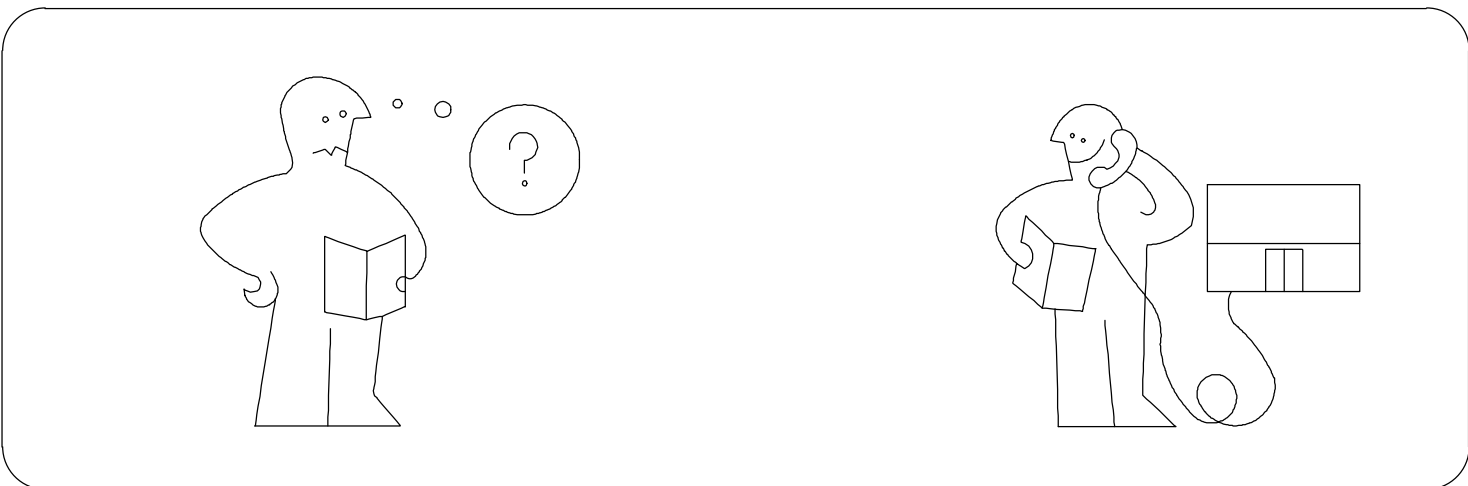

Panel No	Panel Sizes	Quantity
1	700*400*16	1
2	700*400*16	1
3	898*399*16	1
4	898*399*16	1
5	898*100*16	1
6	908*293*5	2
7	660*176*16	5

Panel No	Panel Sizes	Quantity
8	622*120*12	5
9	300*120*12	5
10	300*120*12	5
11	632*298*5	5
12	542*60*18	2
13	198*60*18	2
14	610*20*18	5

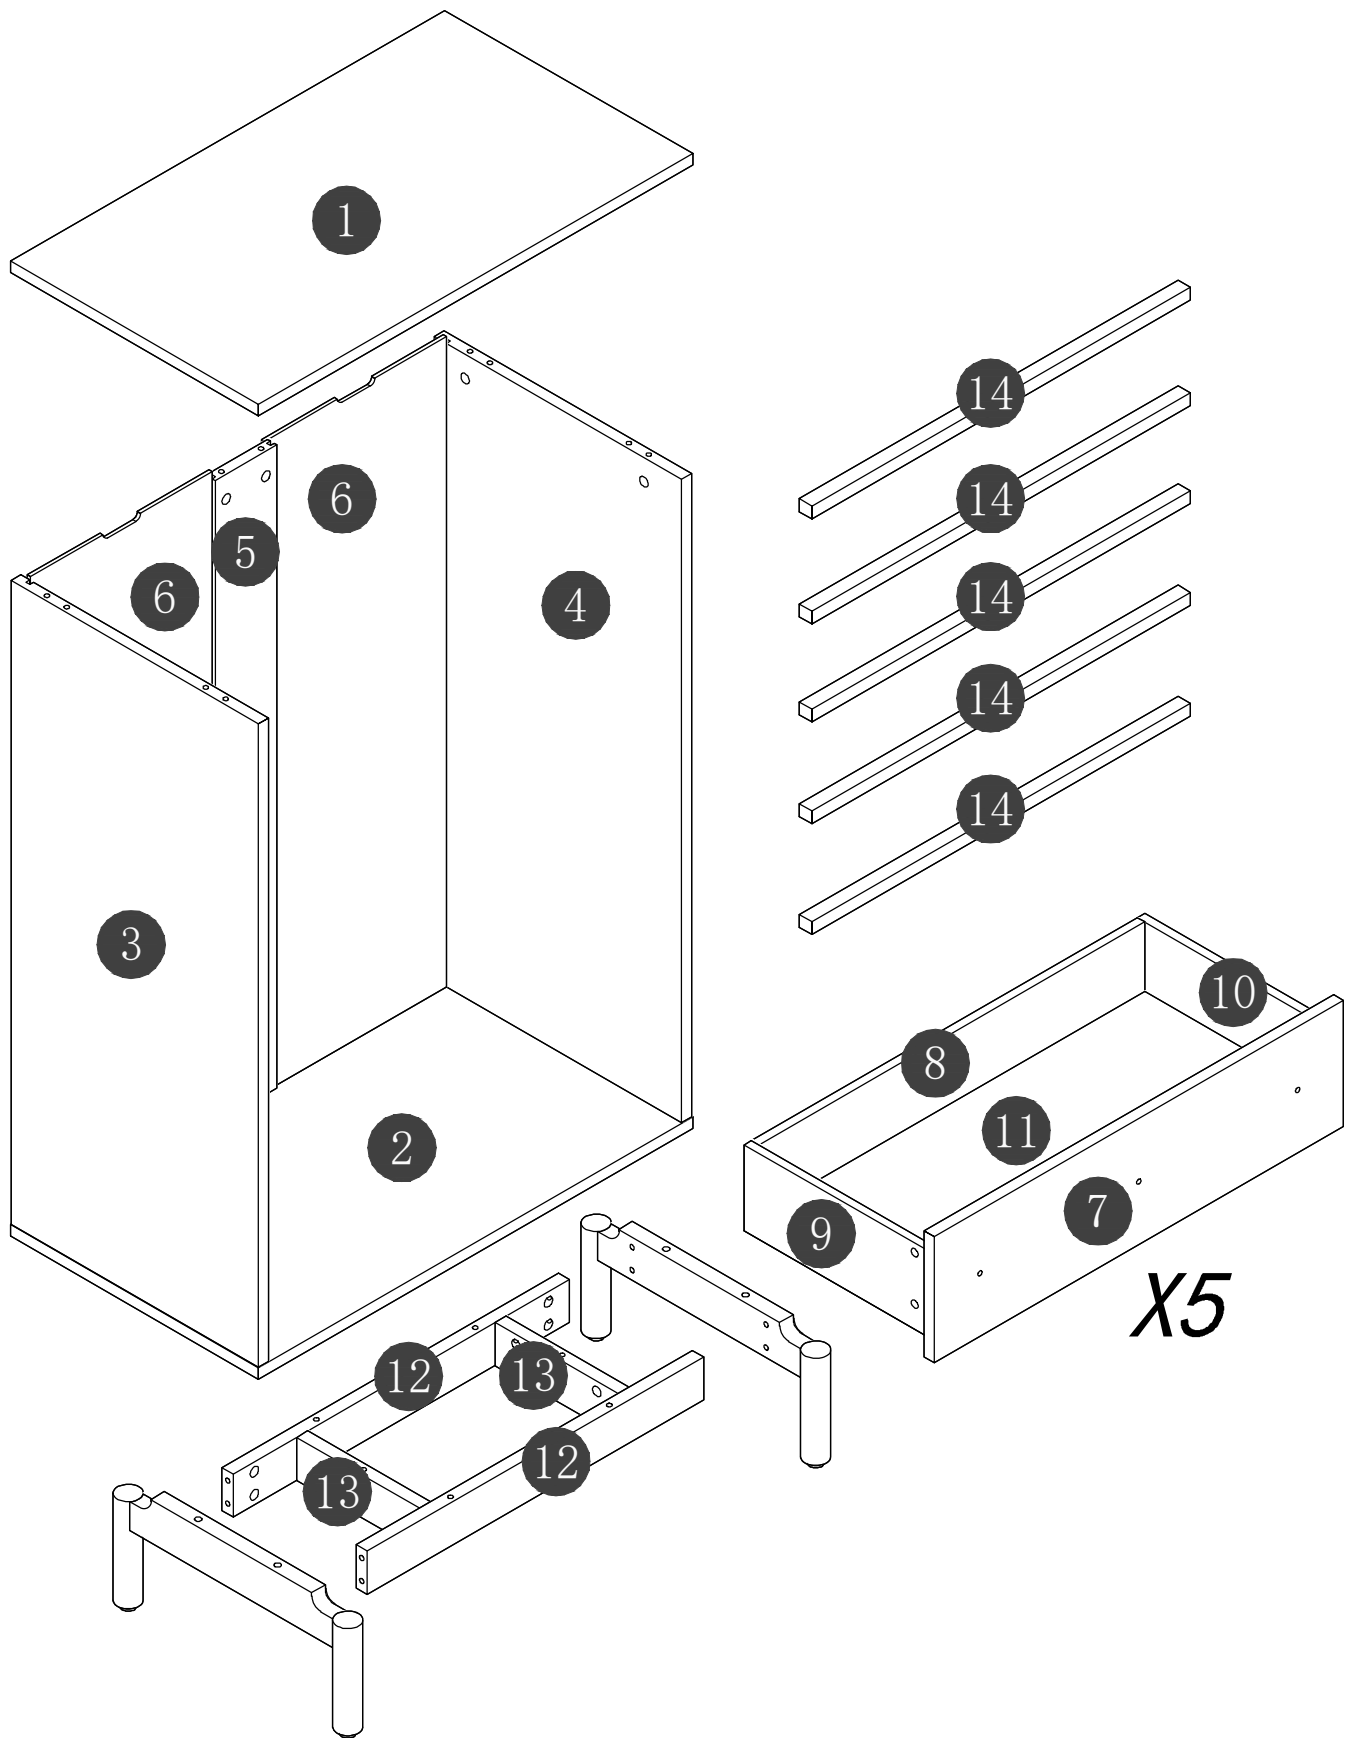

Fittings




M6*40

A=18



Φ 8*30

B=16

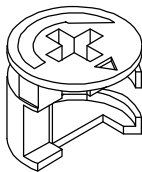


Φ 15*12

C=18




Φ 21


D=58

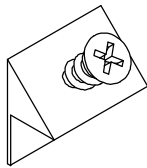

E=16

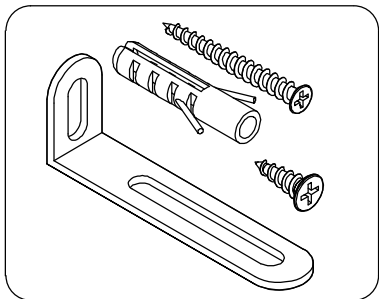


F=2

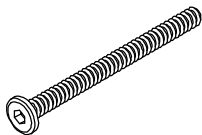


M6*70

G2=6

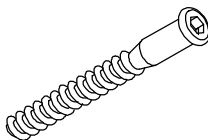

Φ 7*50

Q=6

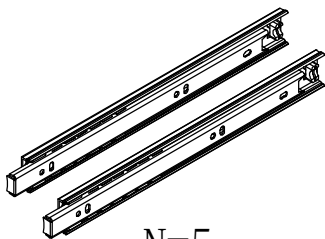


N=5



M6*34

O=40




Φ 12*10.5

P=40



H=1

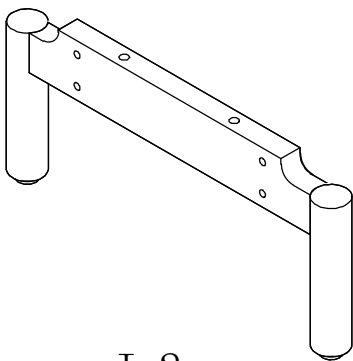


J=2



M3. 5*12

V1=40




M3. 5*30

V3=15




Z1=6




Z2=6


STEP 1

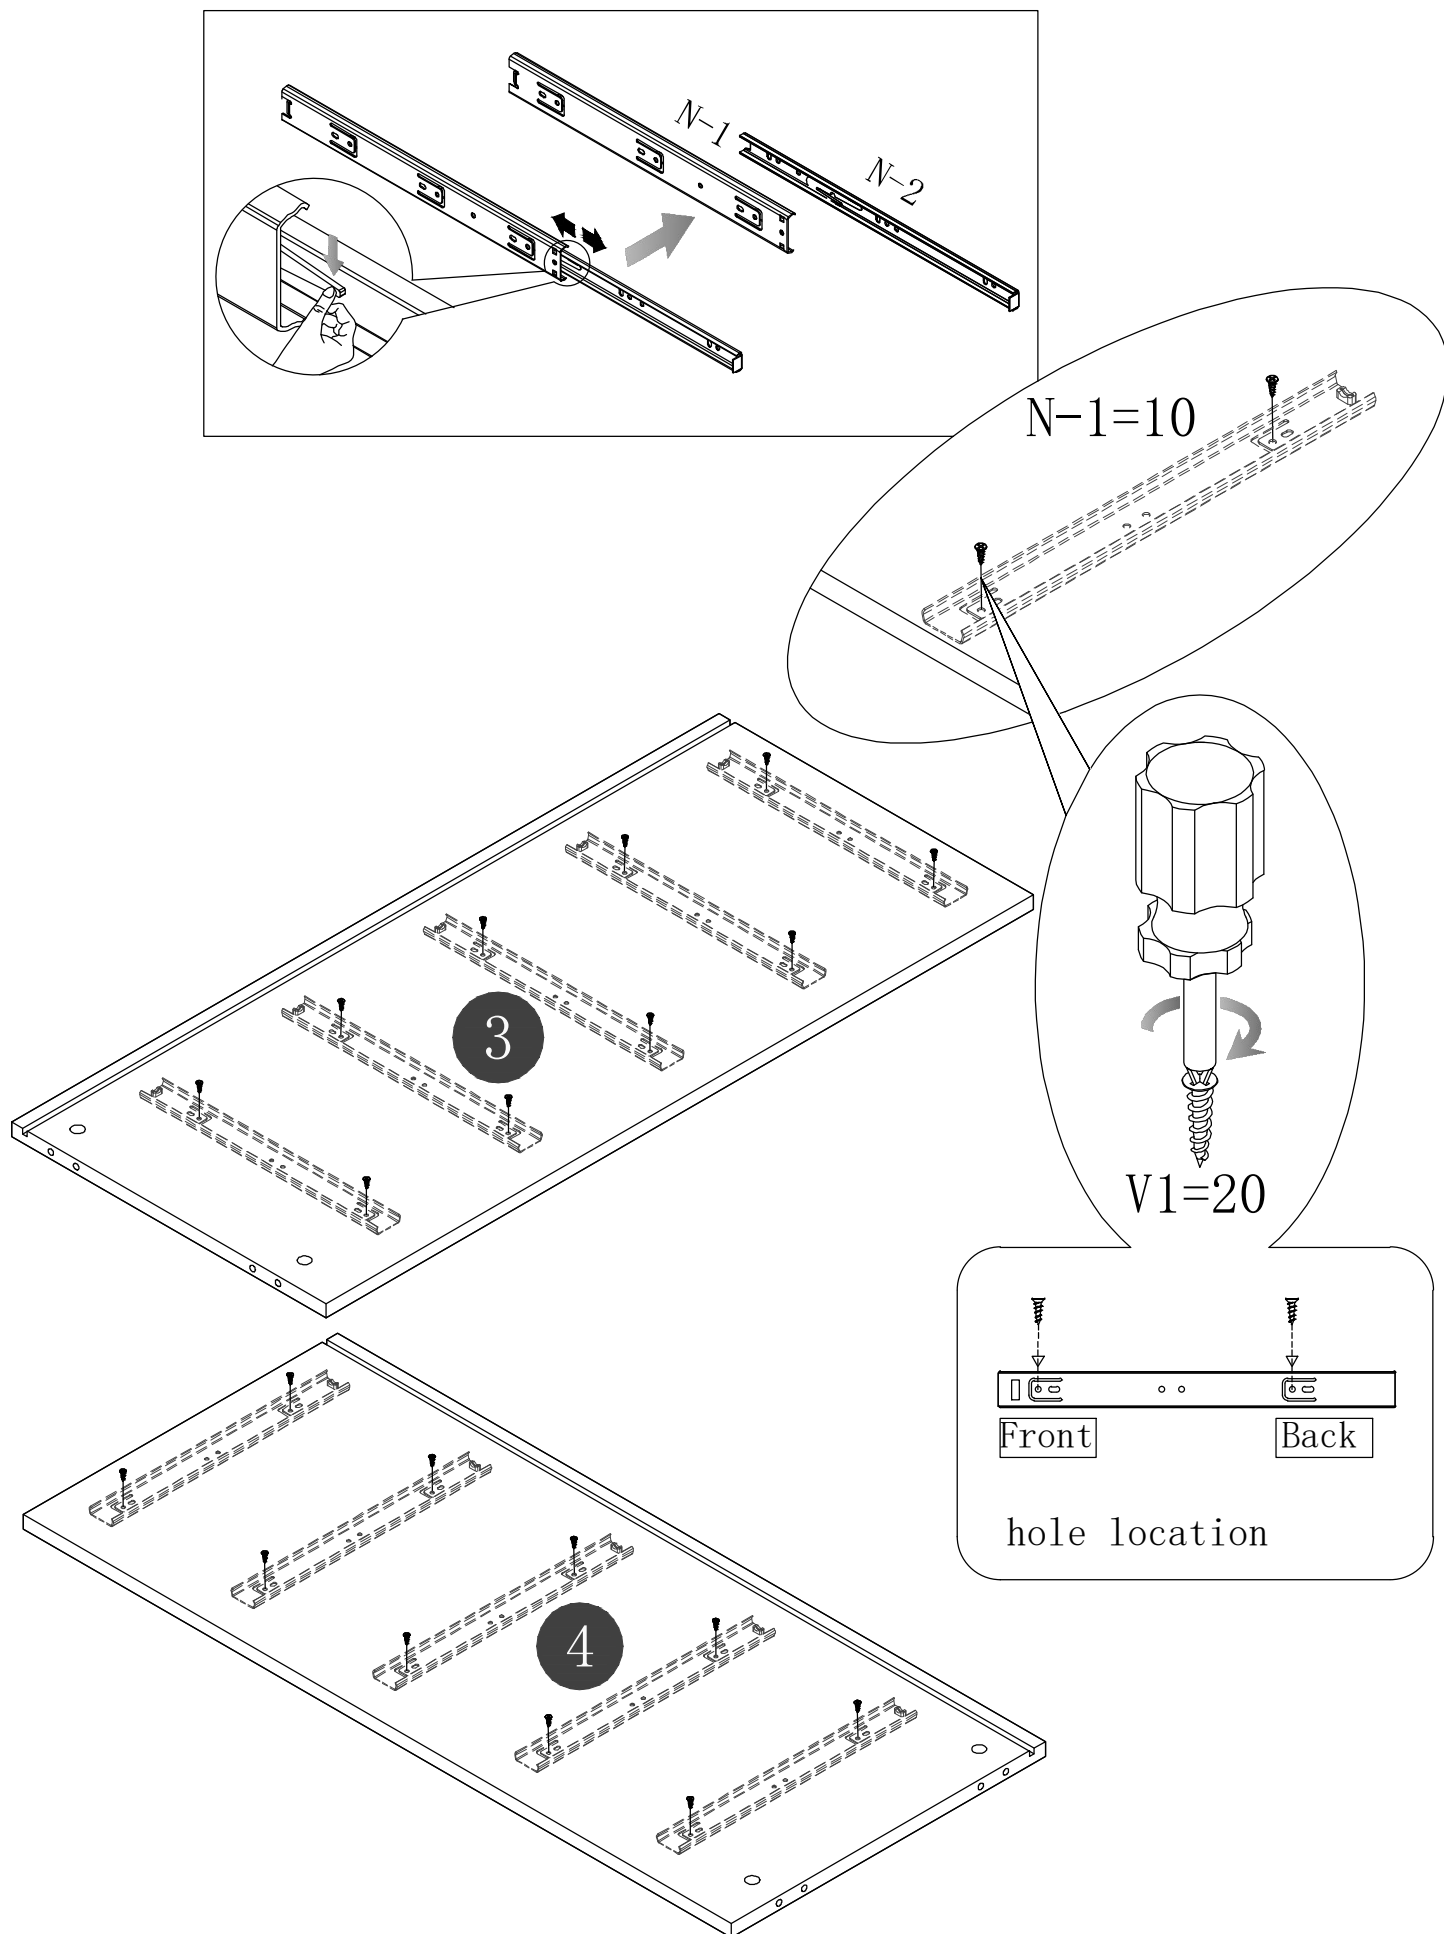


STEP 2

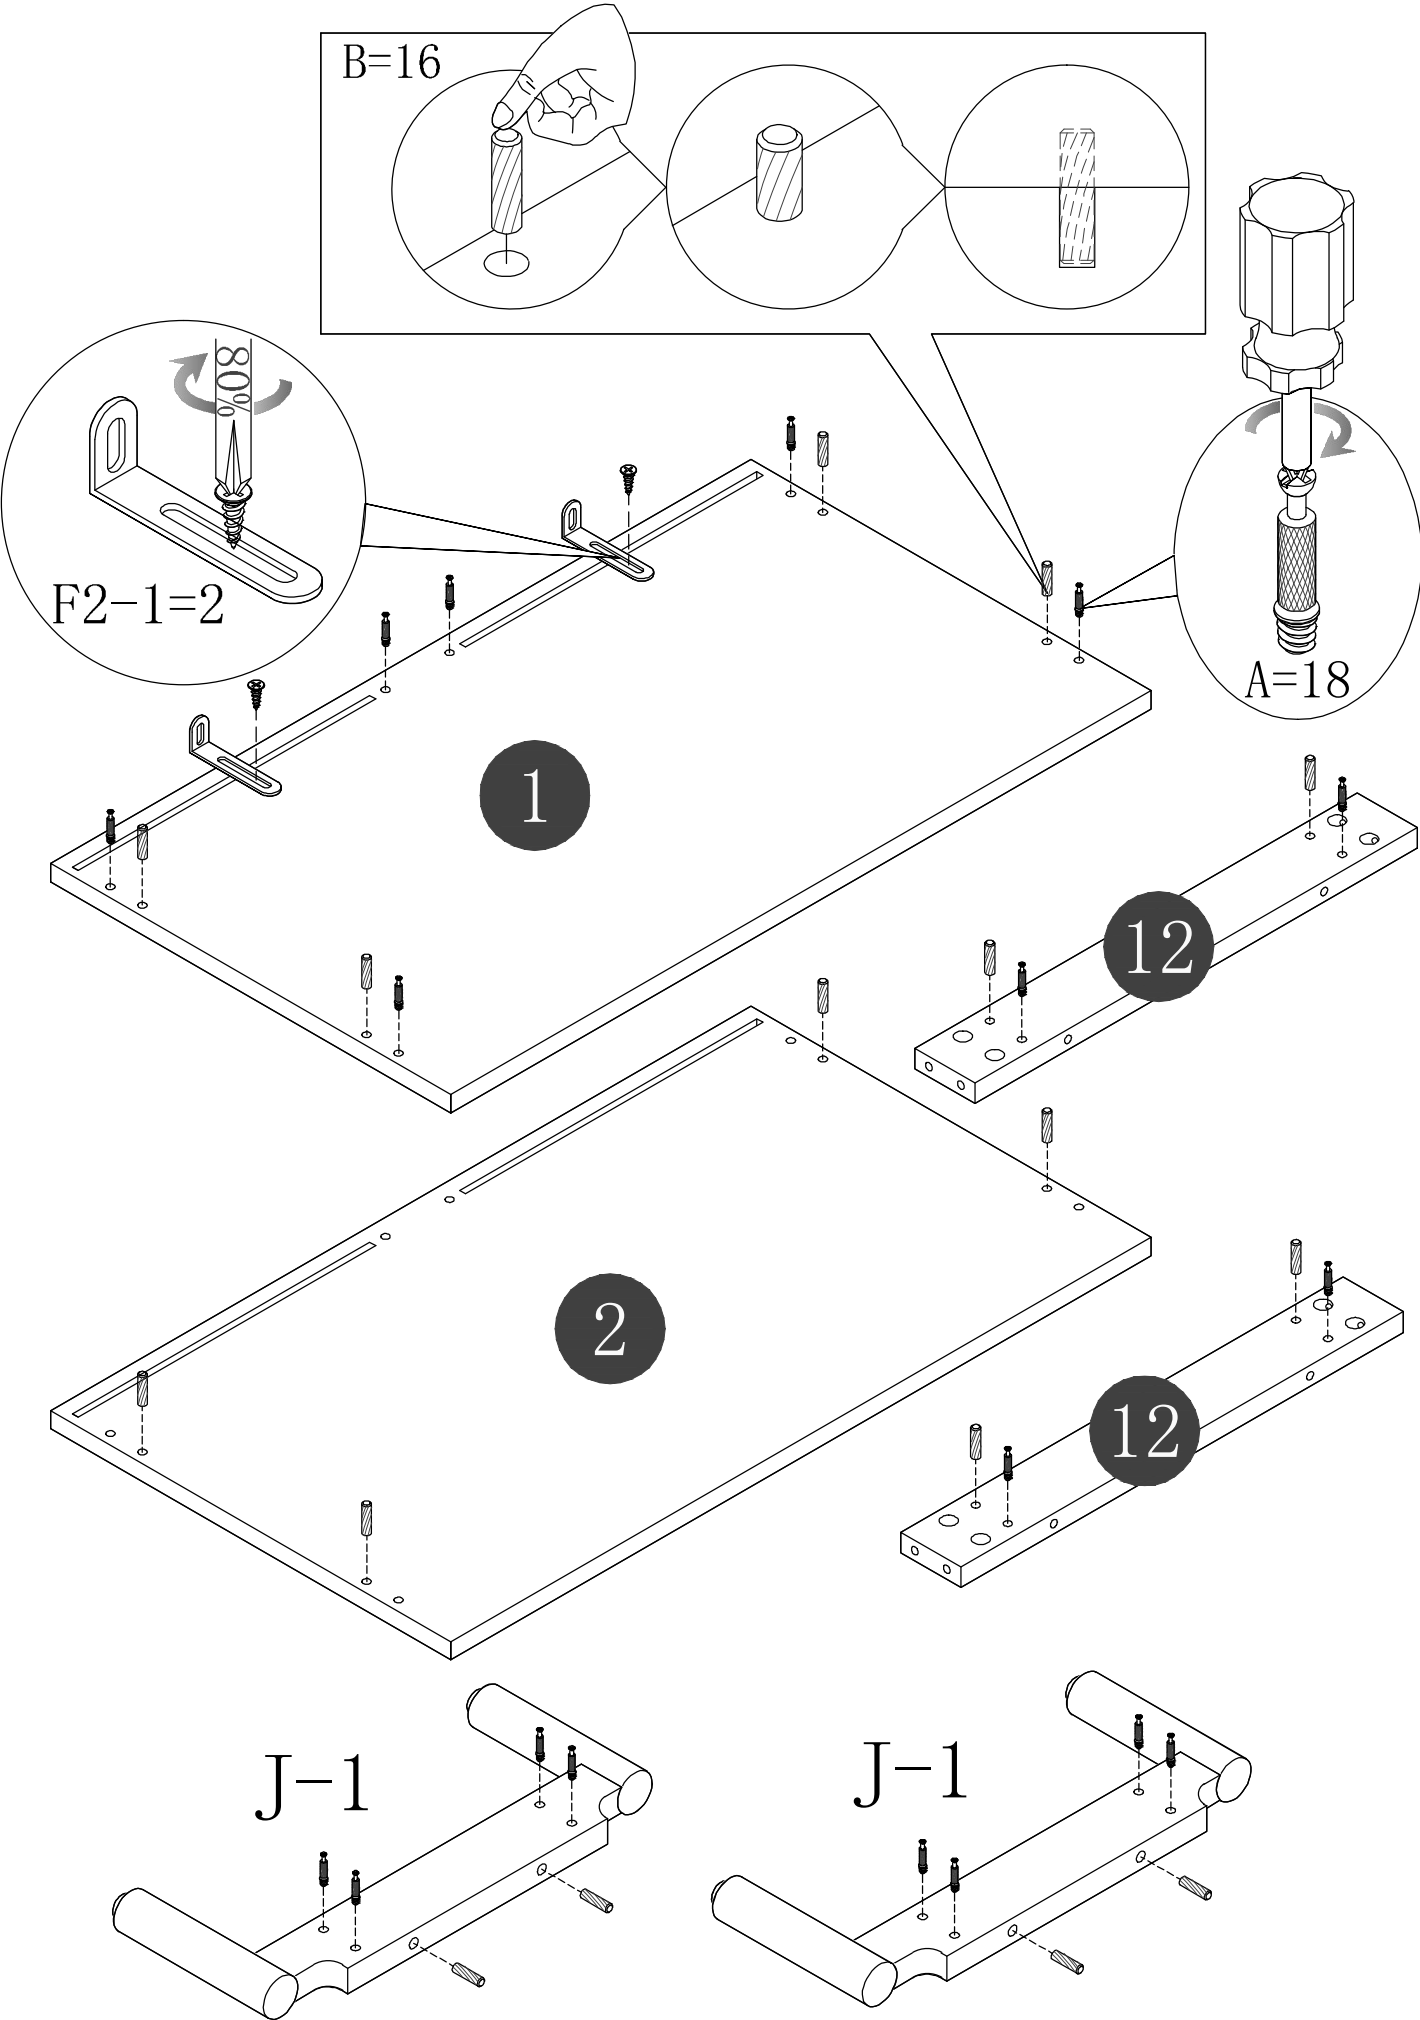


STEP 3

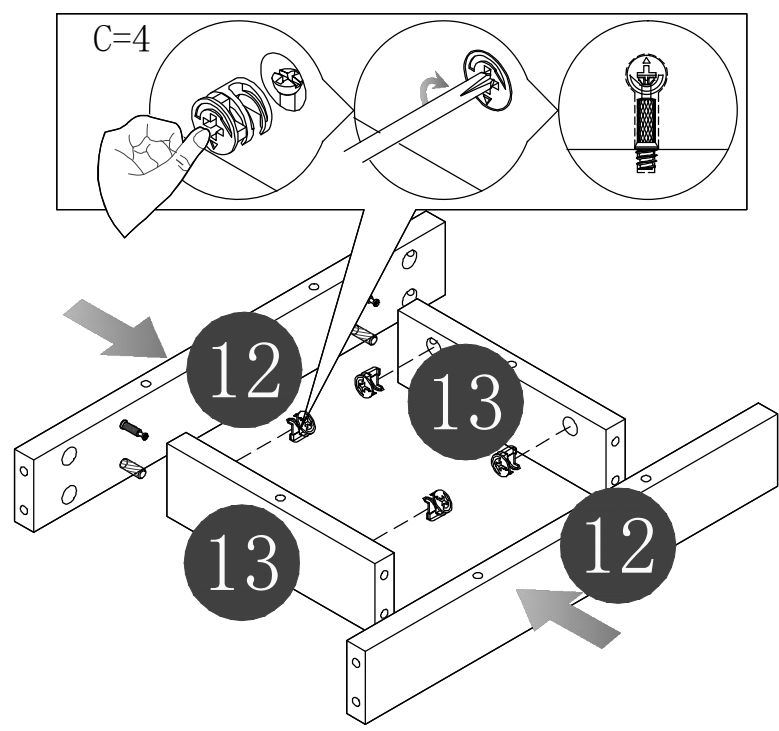


STEP 4

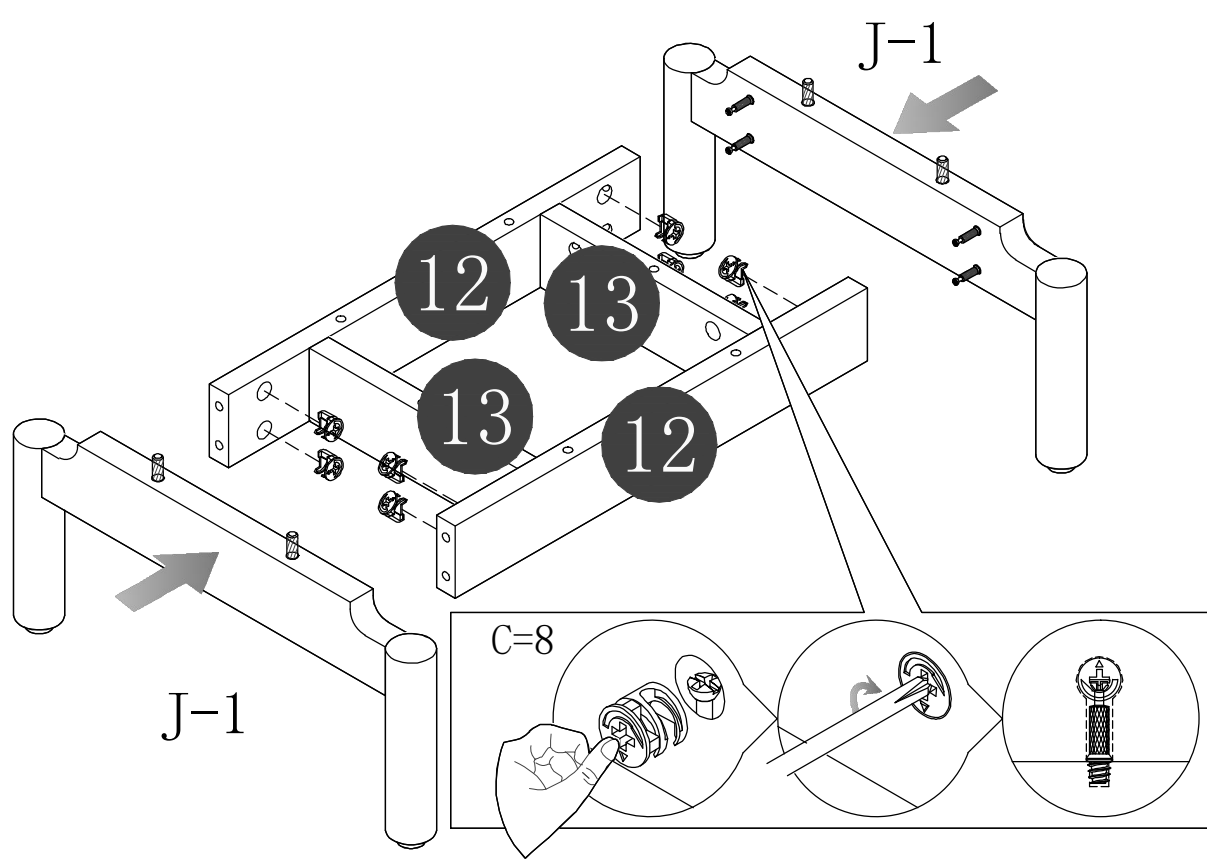


STEP 5

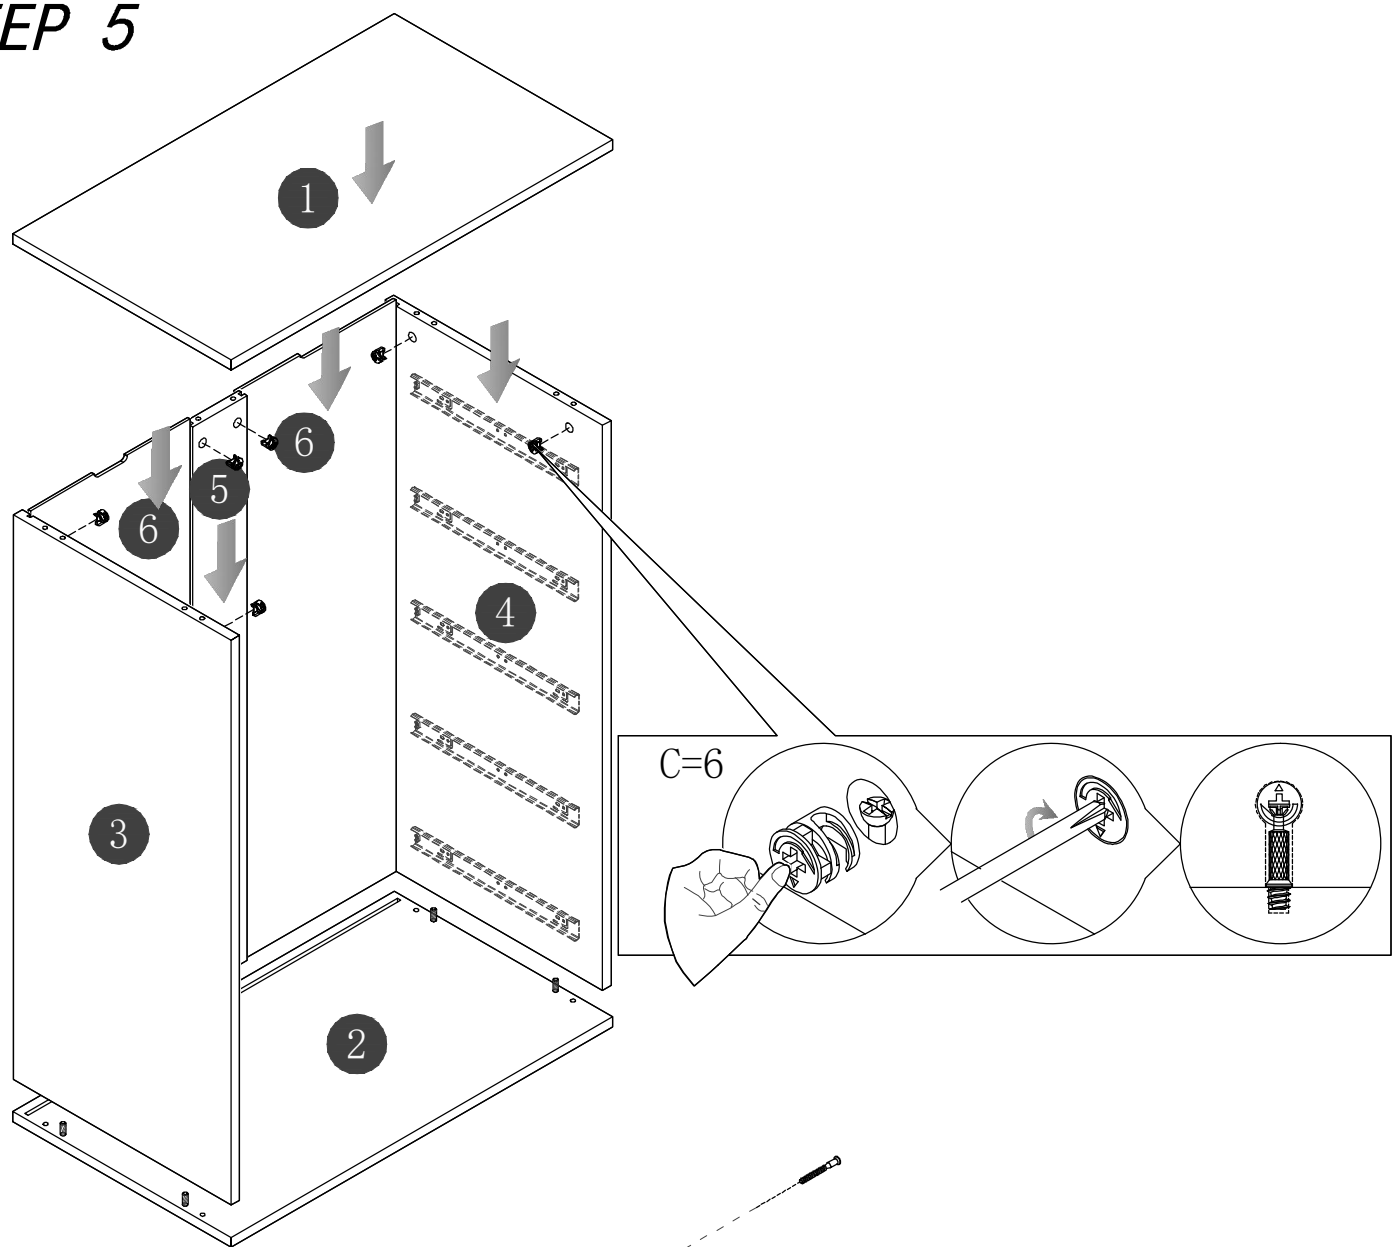


STEP 6

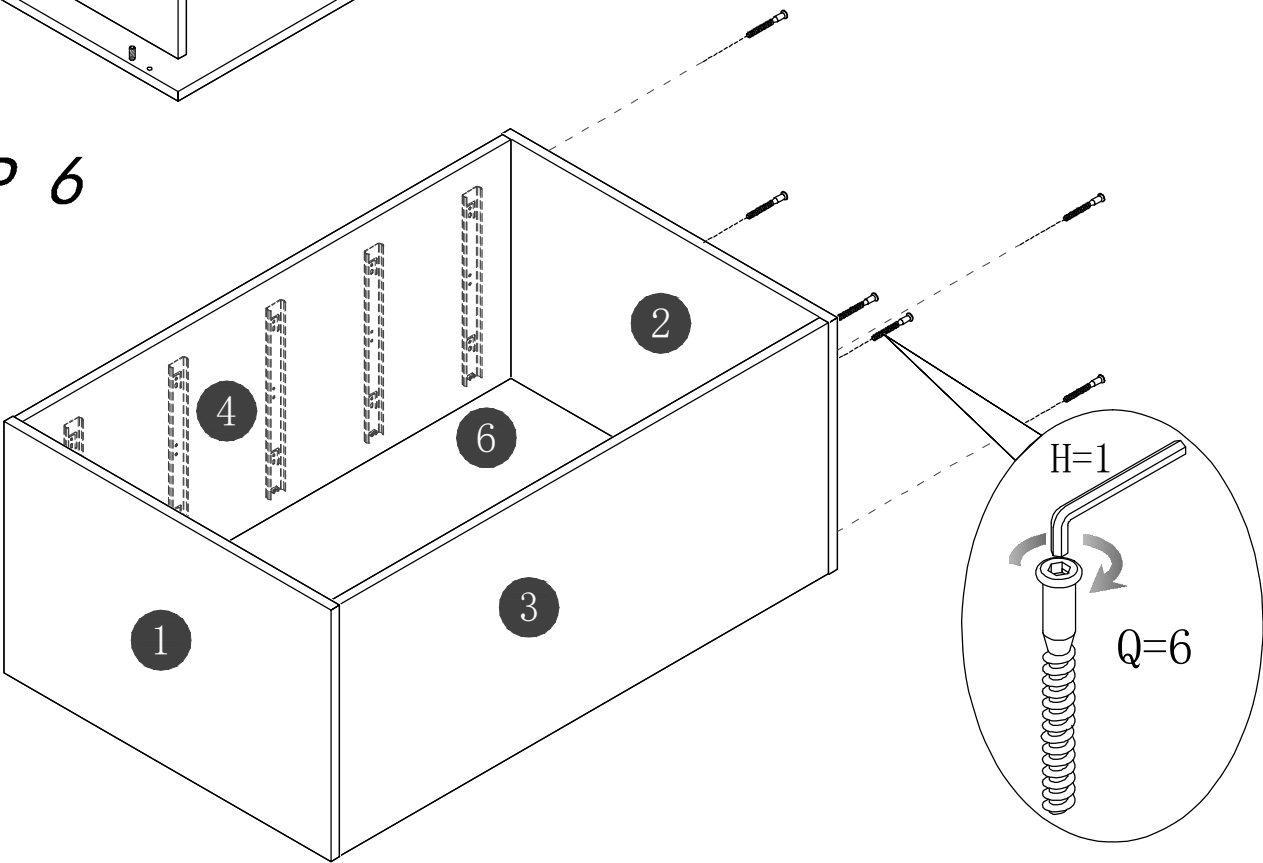


STEP 7

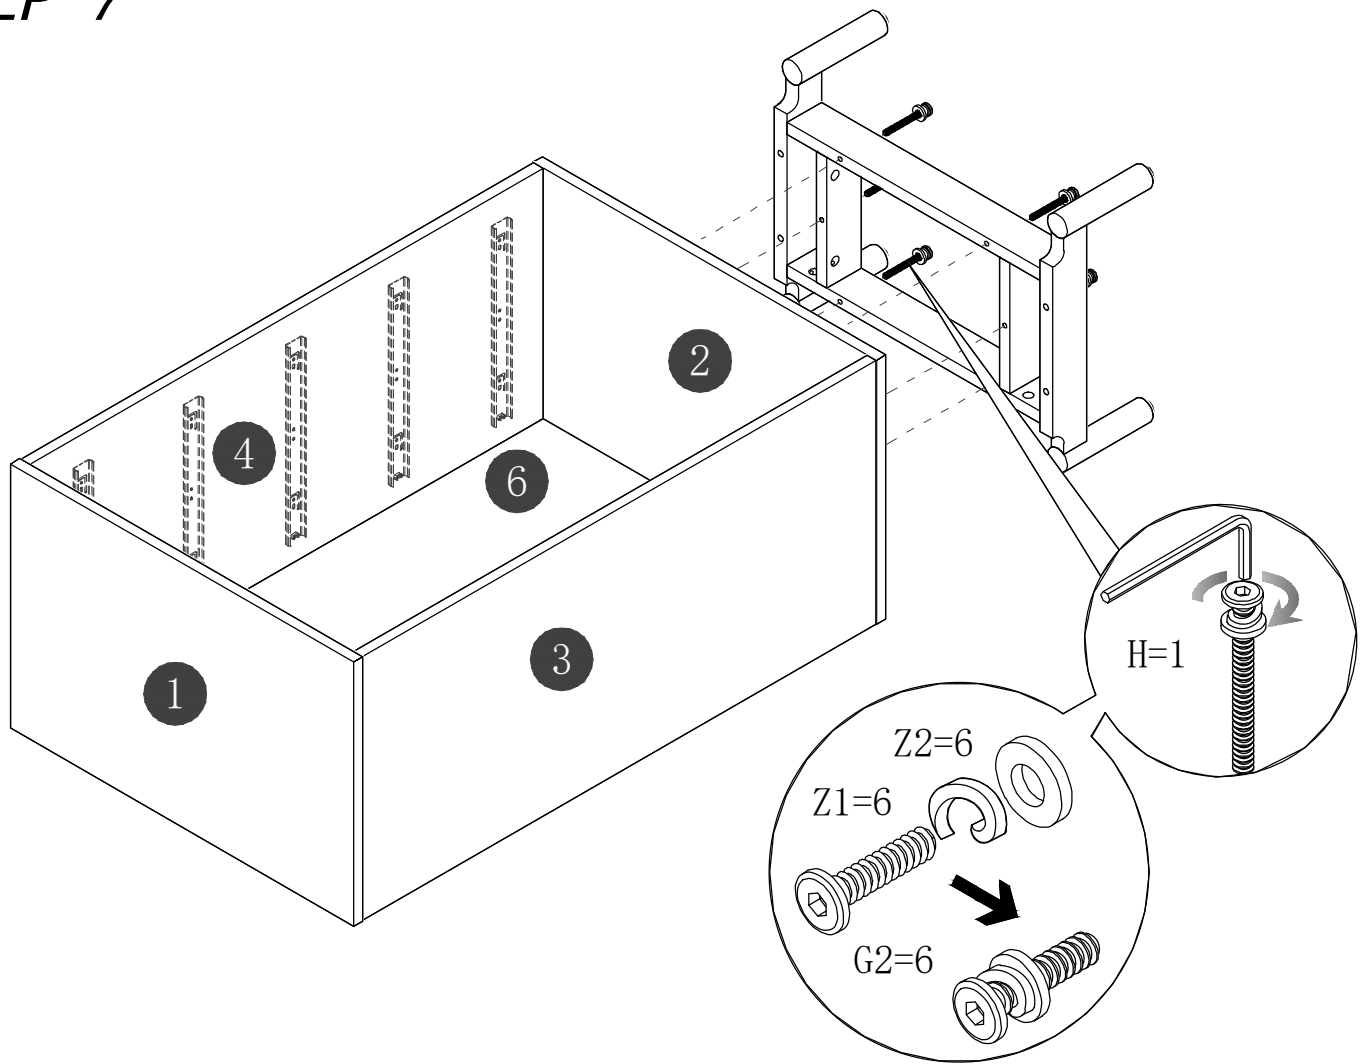


STEP 8

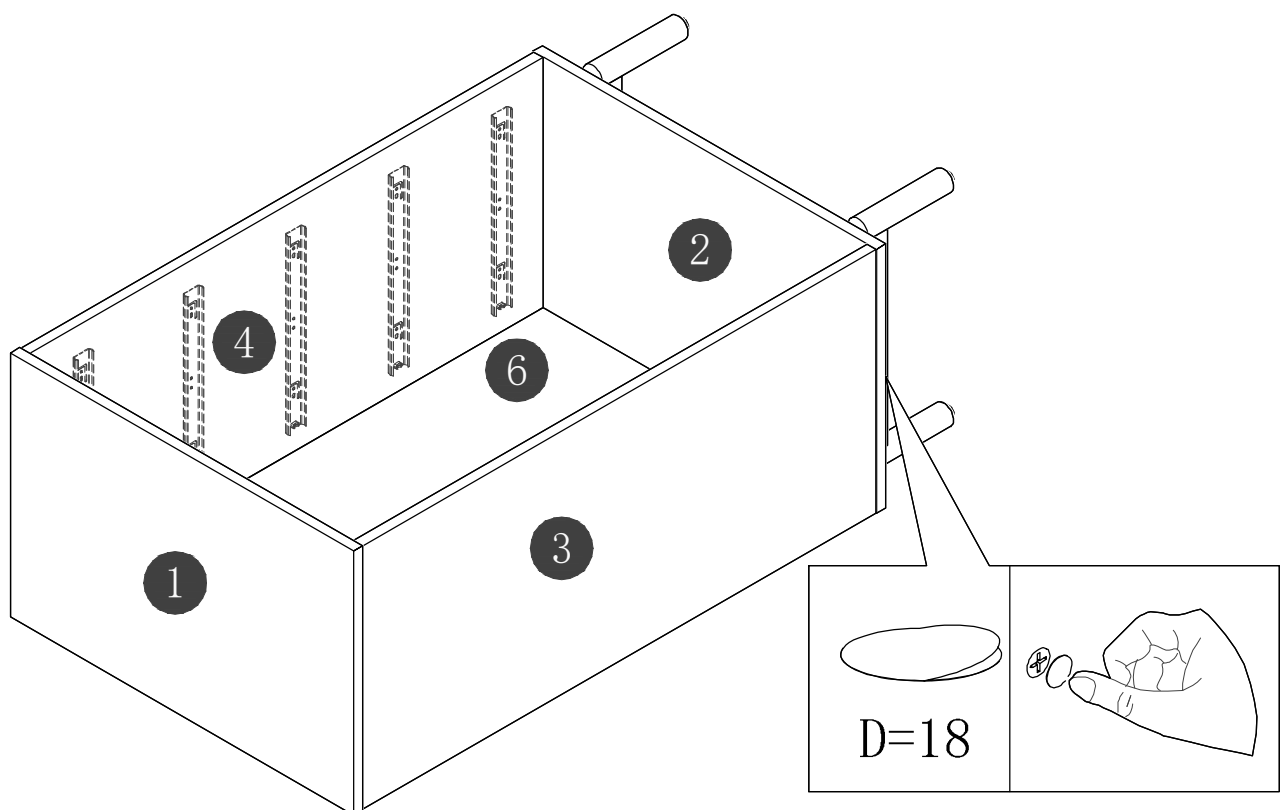

STEP 9

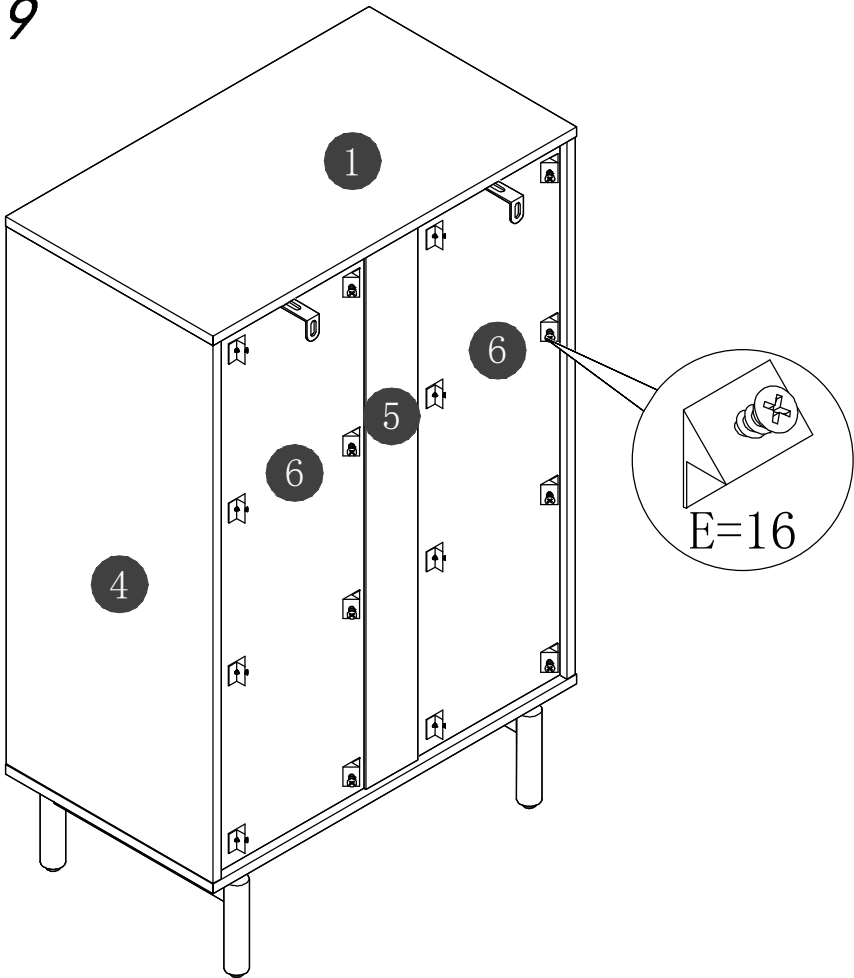


STEP 10

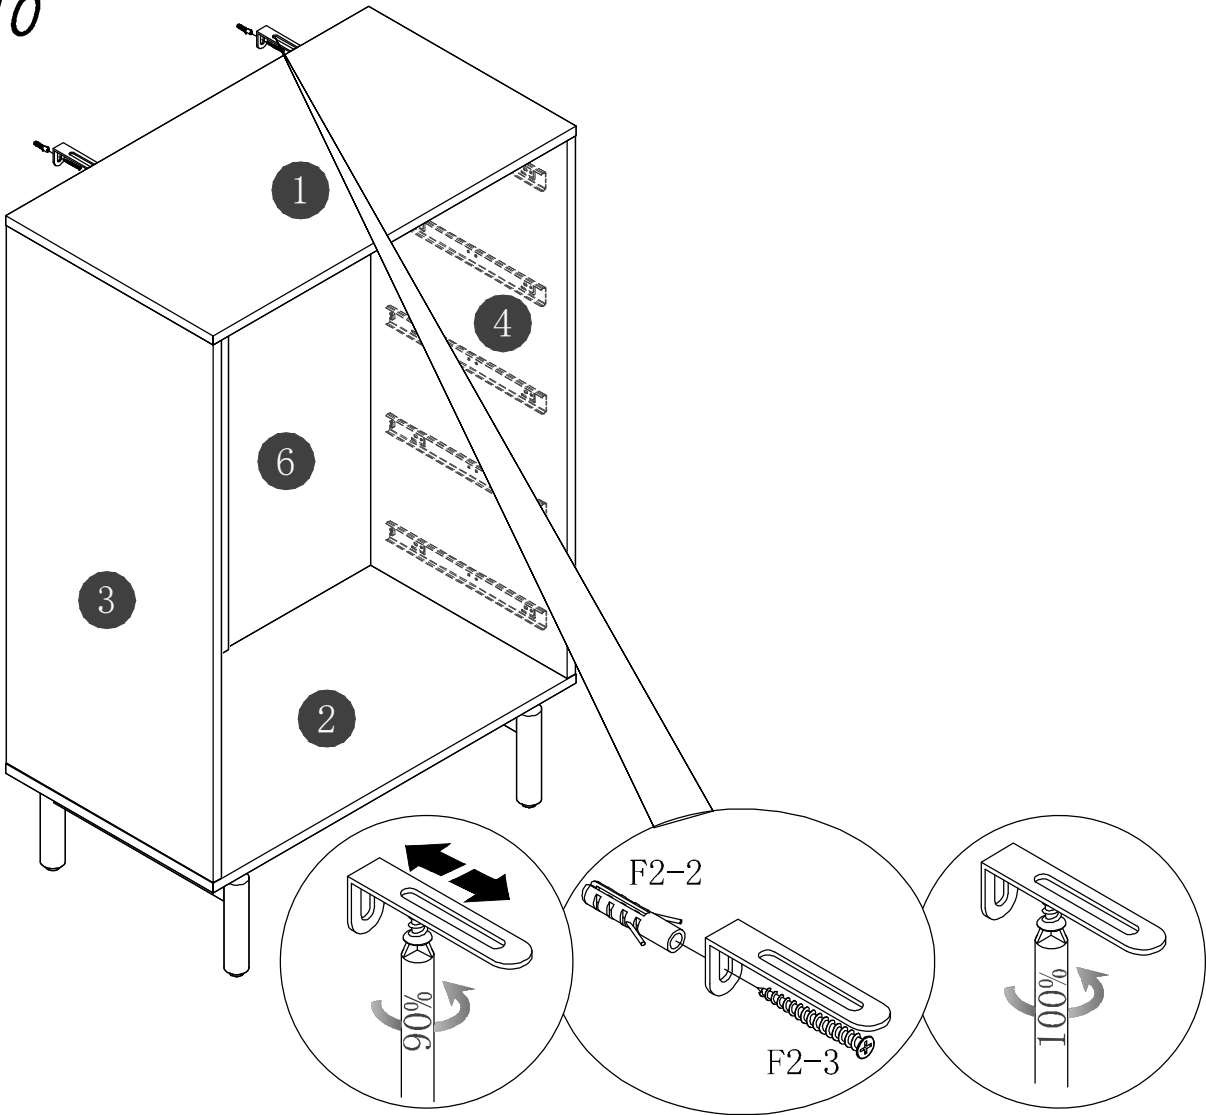


STEP 11


11-1

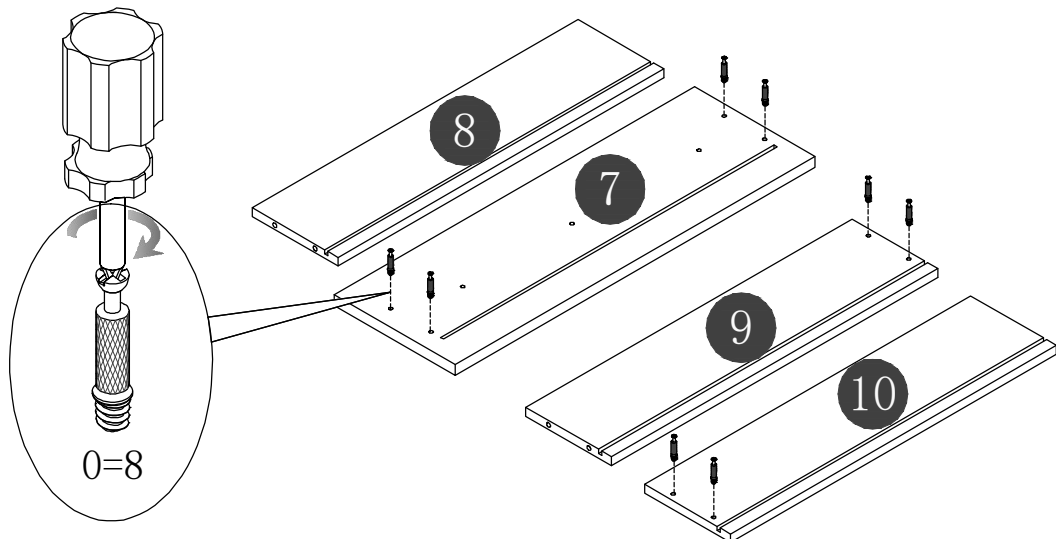


11-2

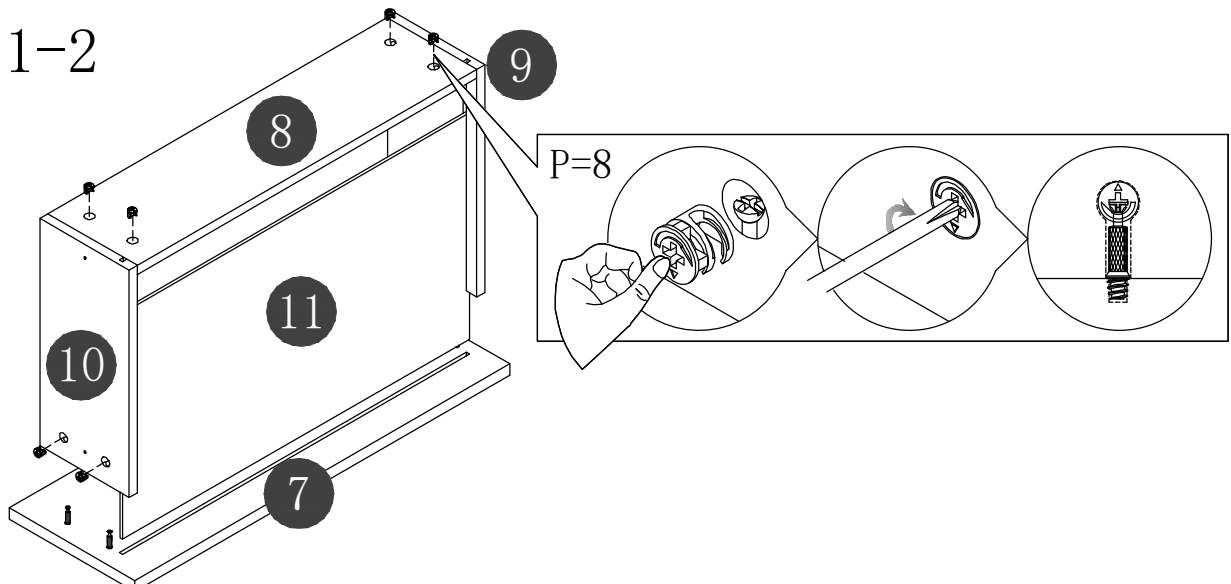


11-3

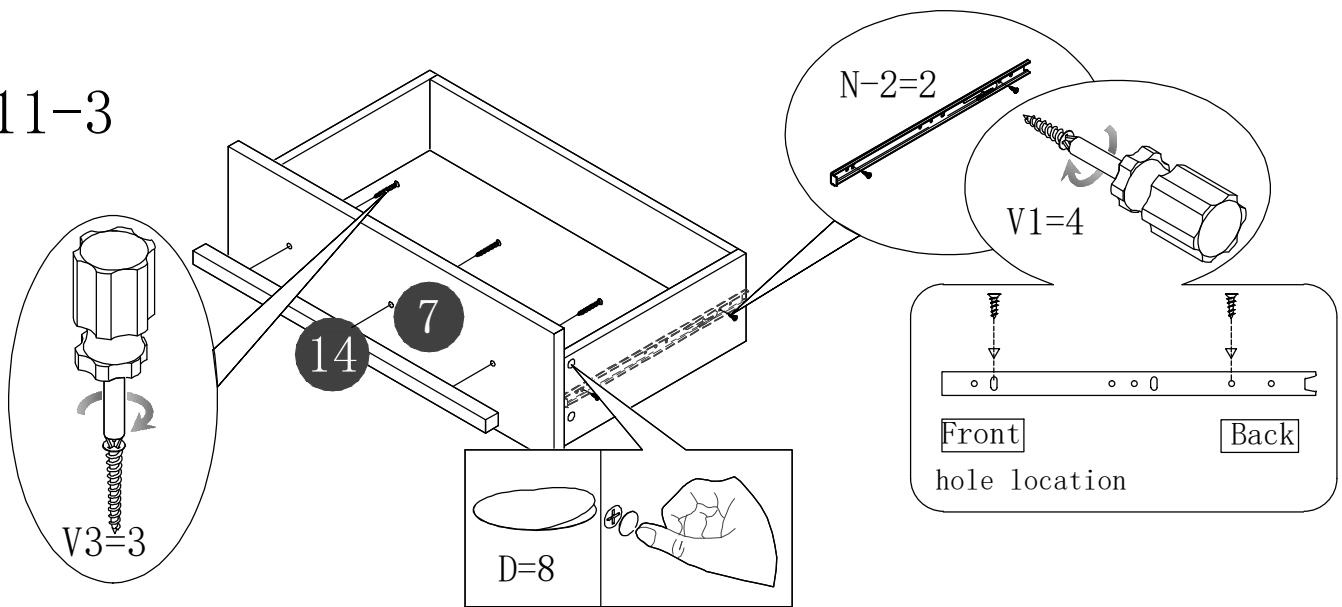

STEP 12

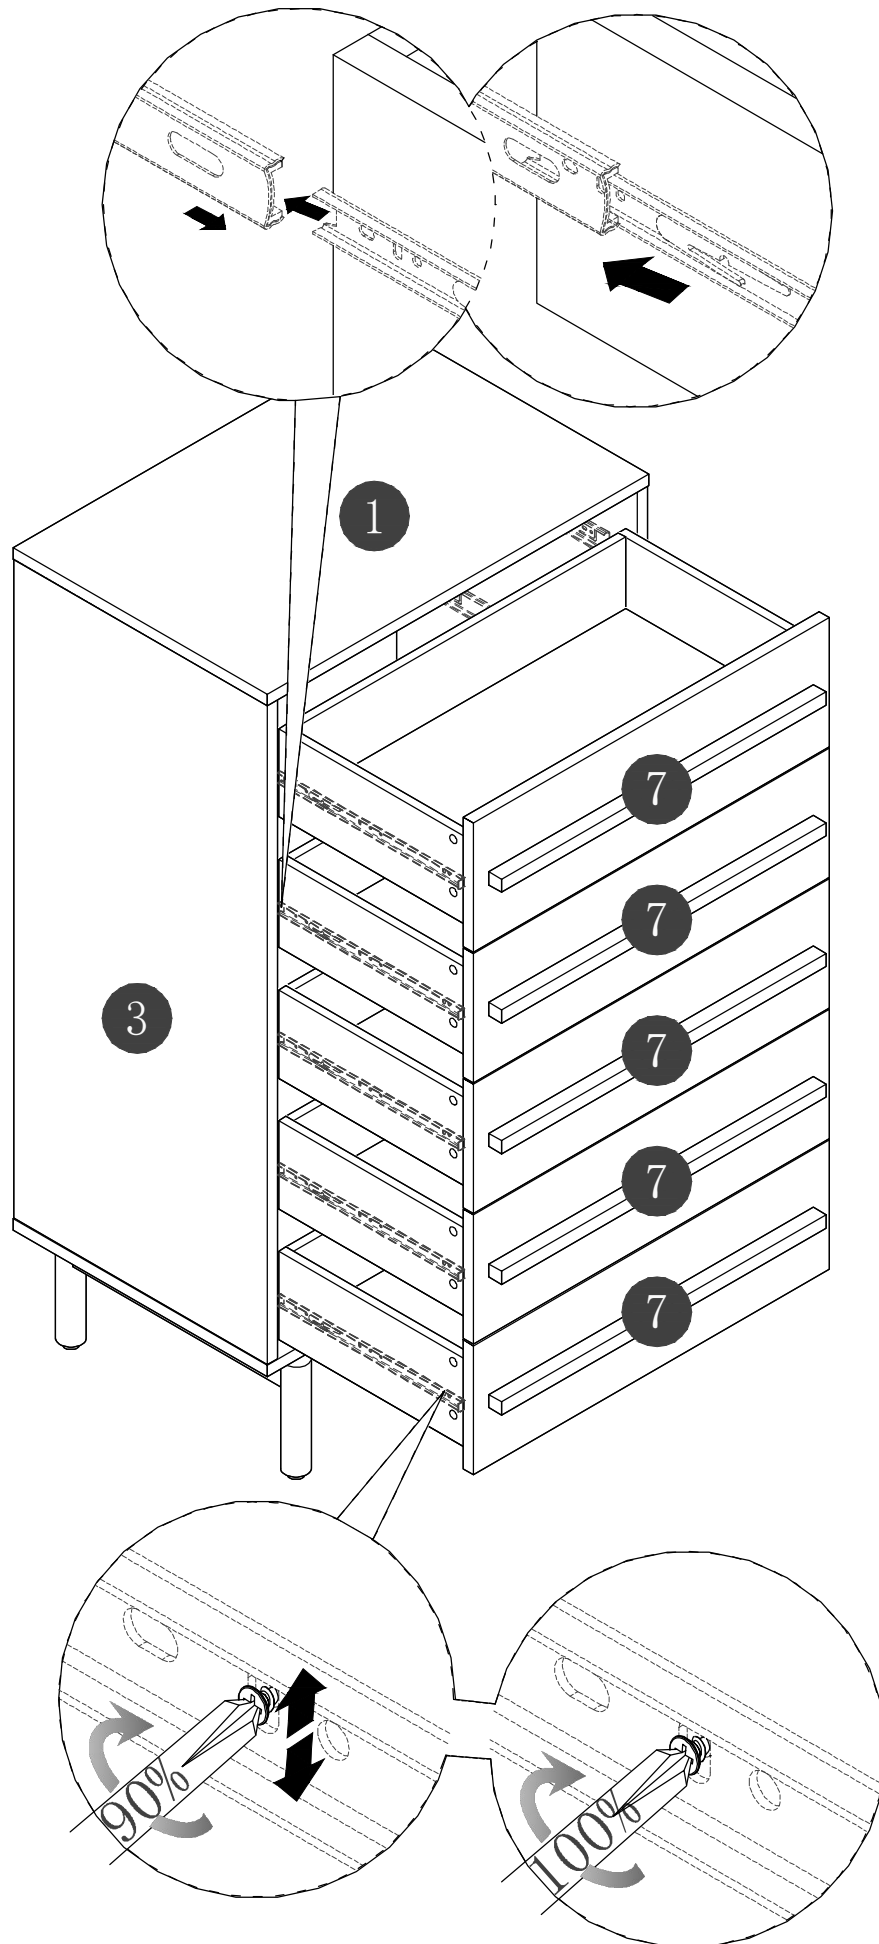

STEP 13

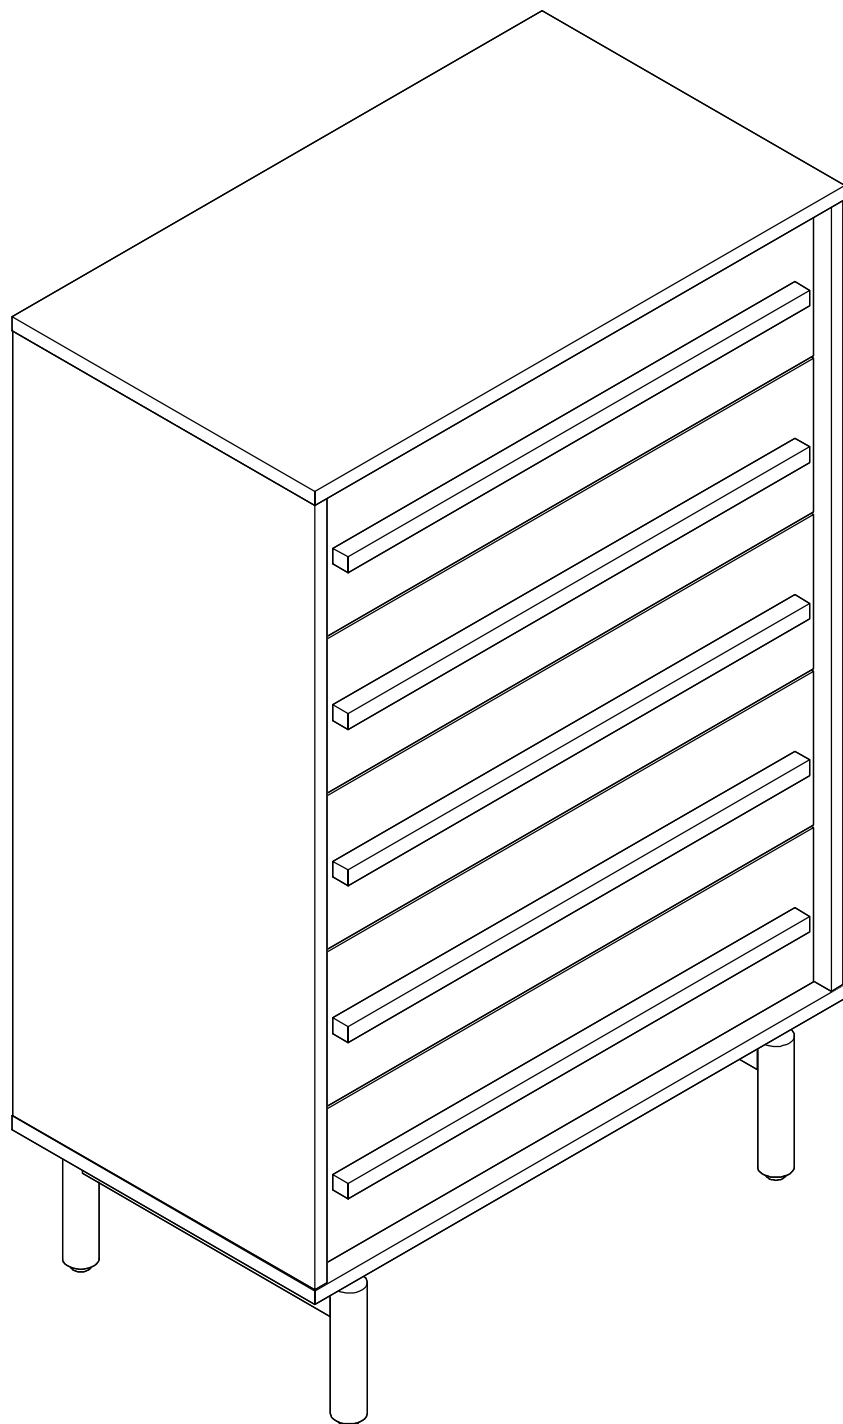

Finish