

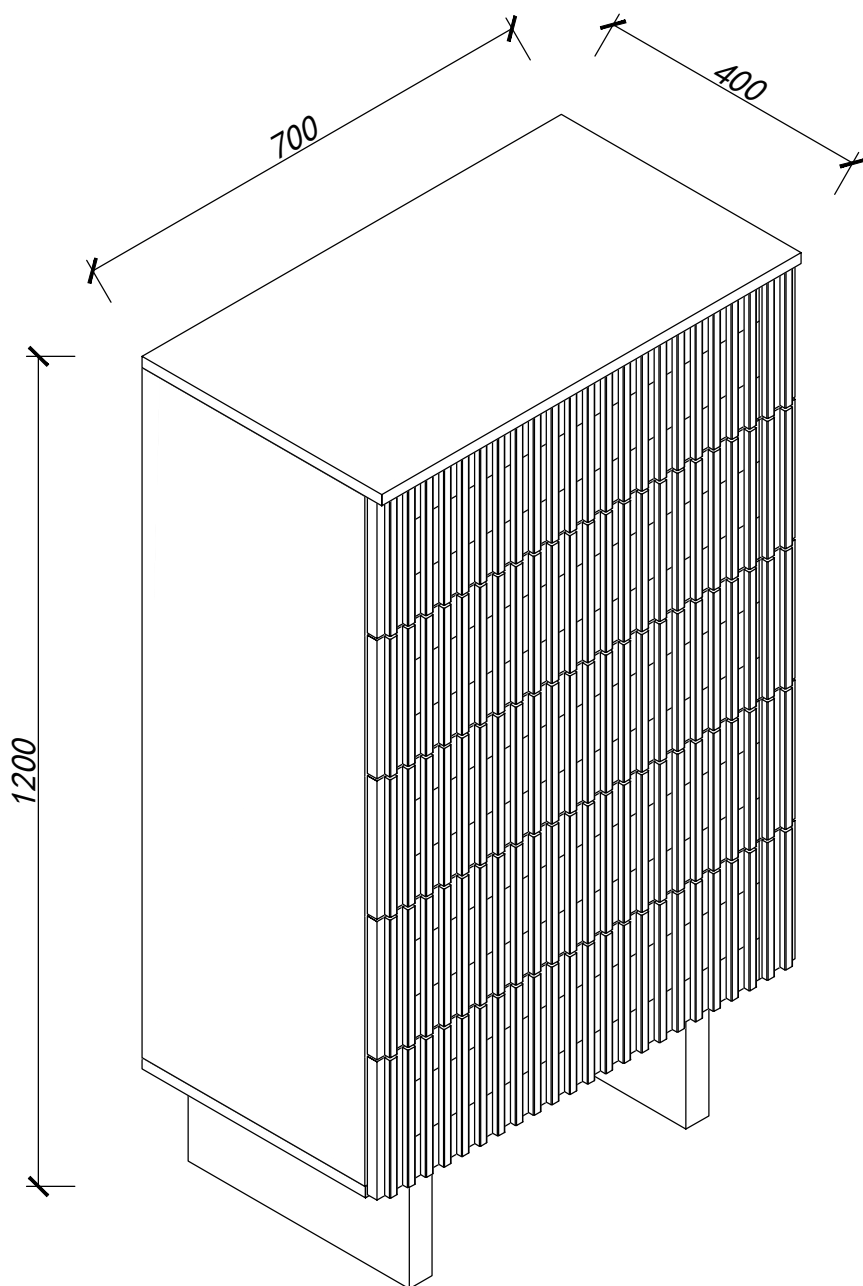
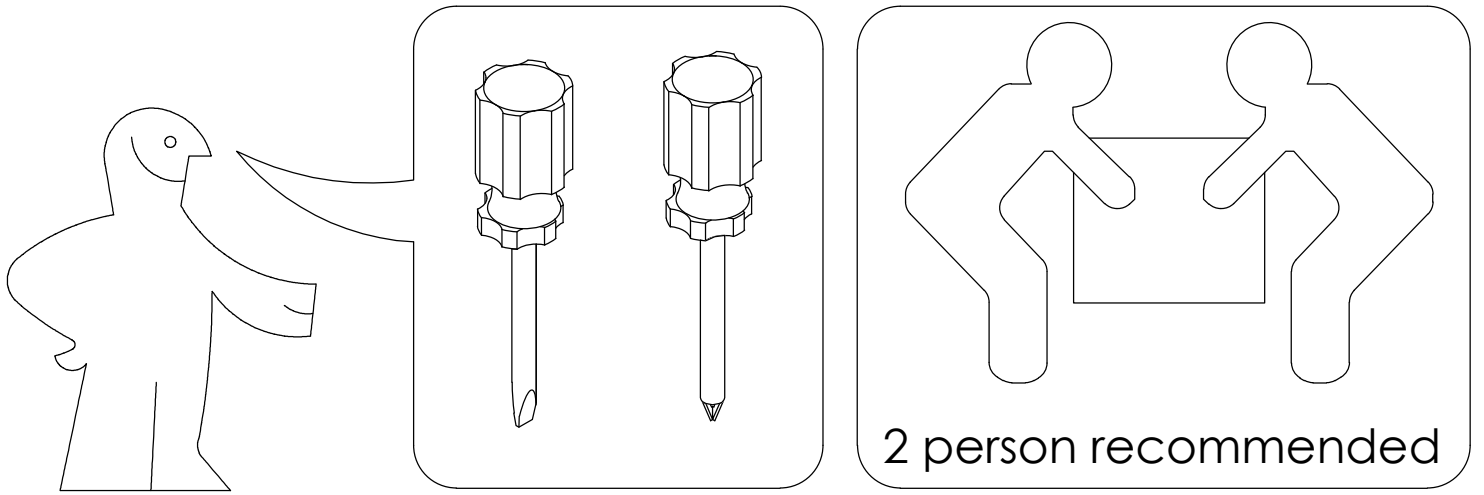
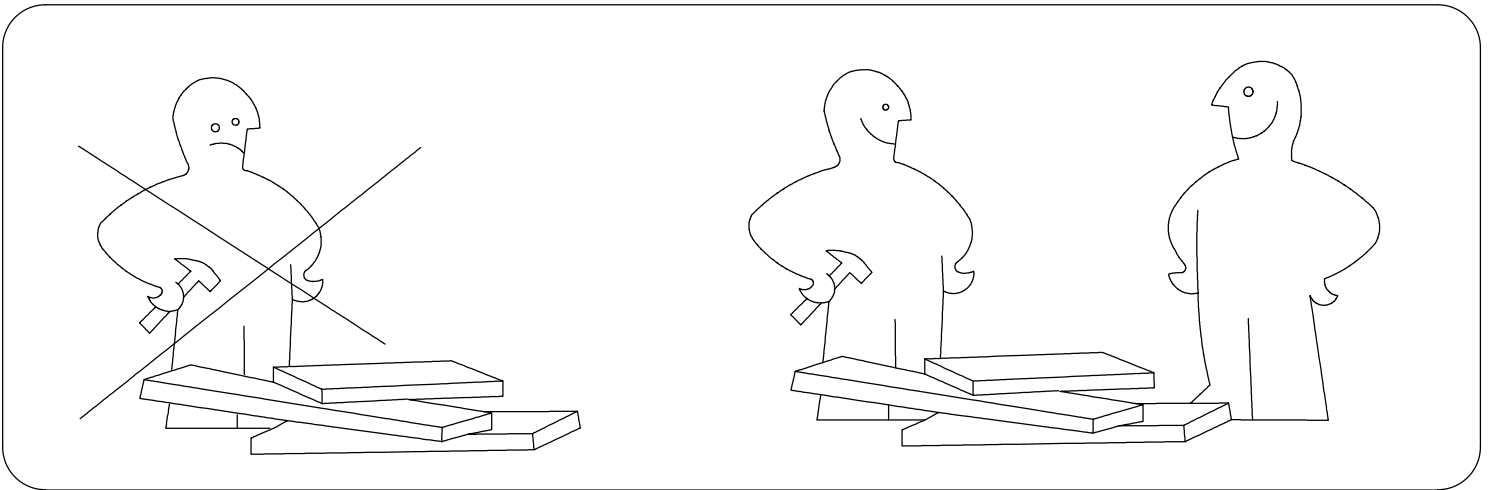


sømcasa


Assembly Instruction

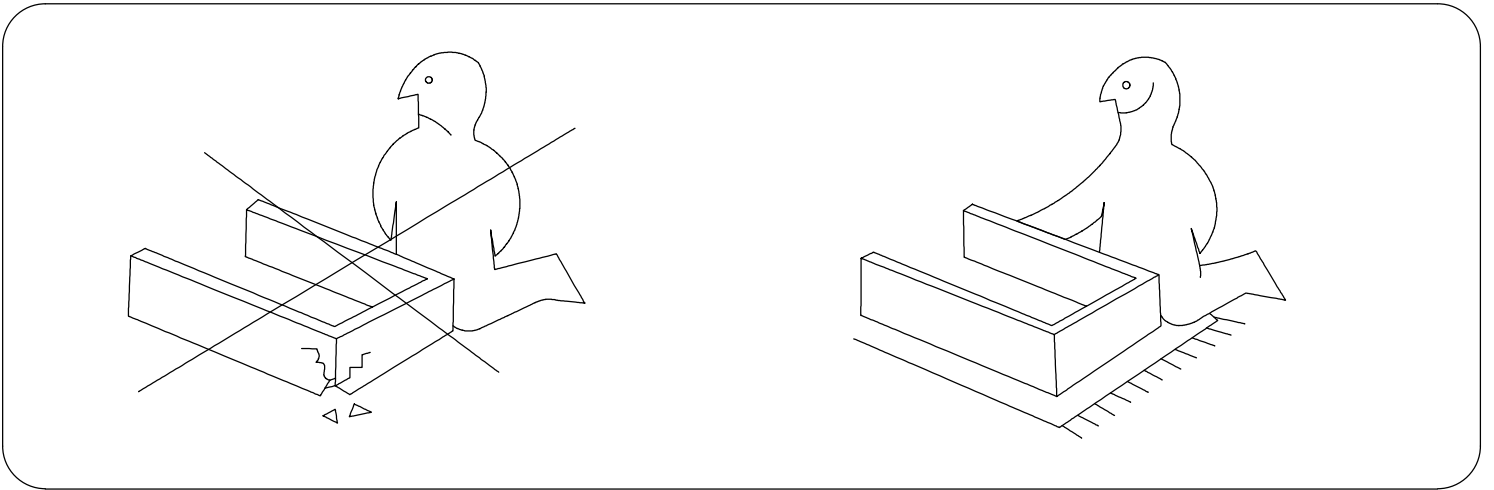

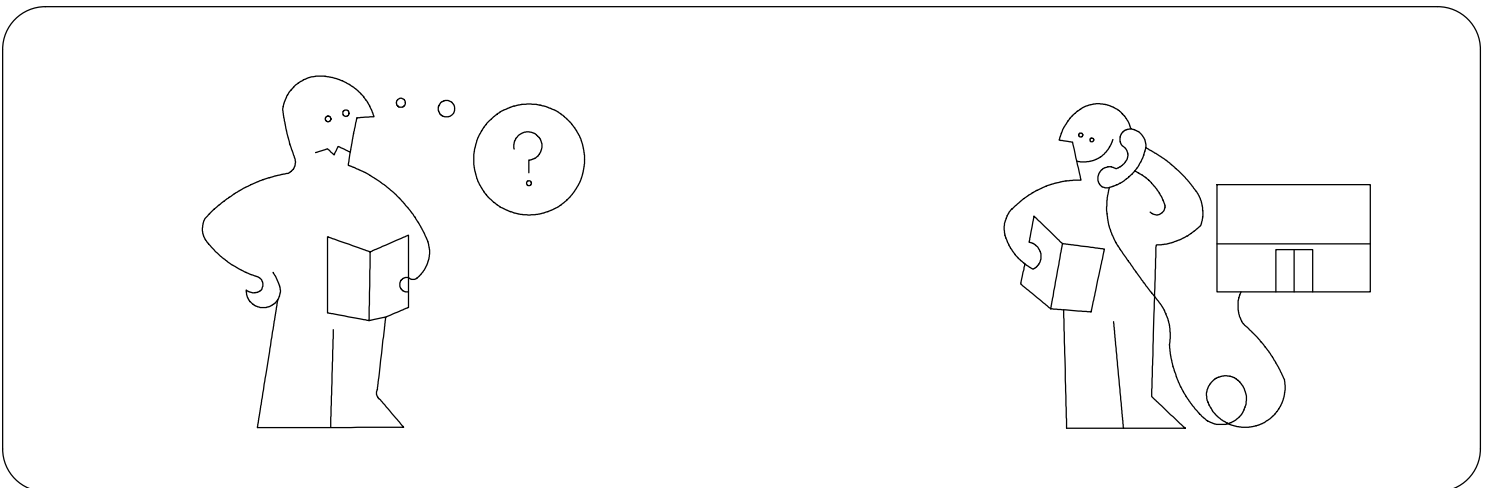

Panel No	Panel Sizes	Quantity
1	700*400*16	1
2	700*373*16	1
3	998*372*16	1
4	998*372*16	1
5	666*80*16	1
6	998*100*16	1
7	1008*293*5	2
8	698*200*25	5

Panel No	Panel Sizes	Quantity
9	622*150*12	5
10	300*150*12	5
11	300*150*12	5
12	632*298*5	5
13	287*100*12	5
14	474*100*16	1
15	170*369*38	2

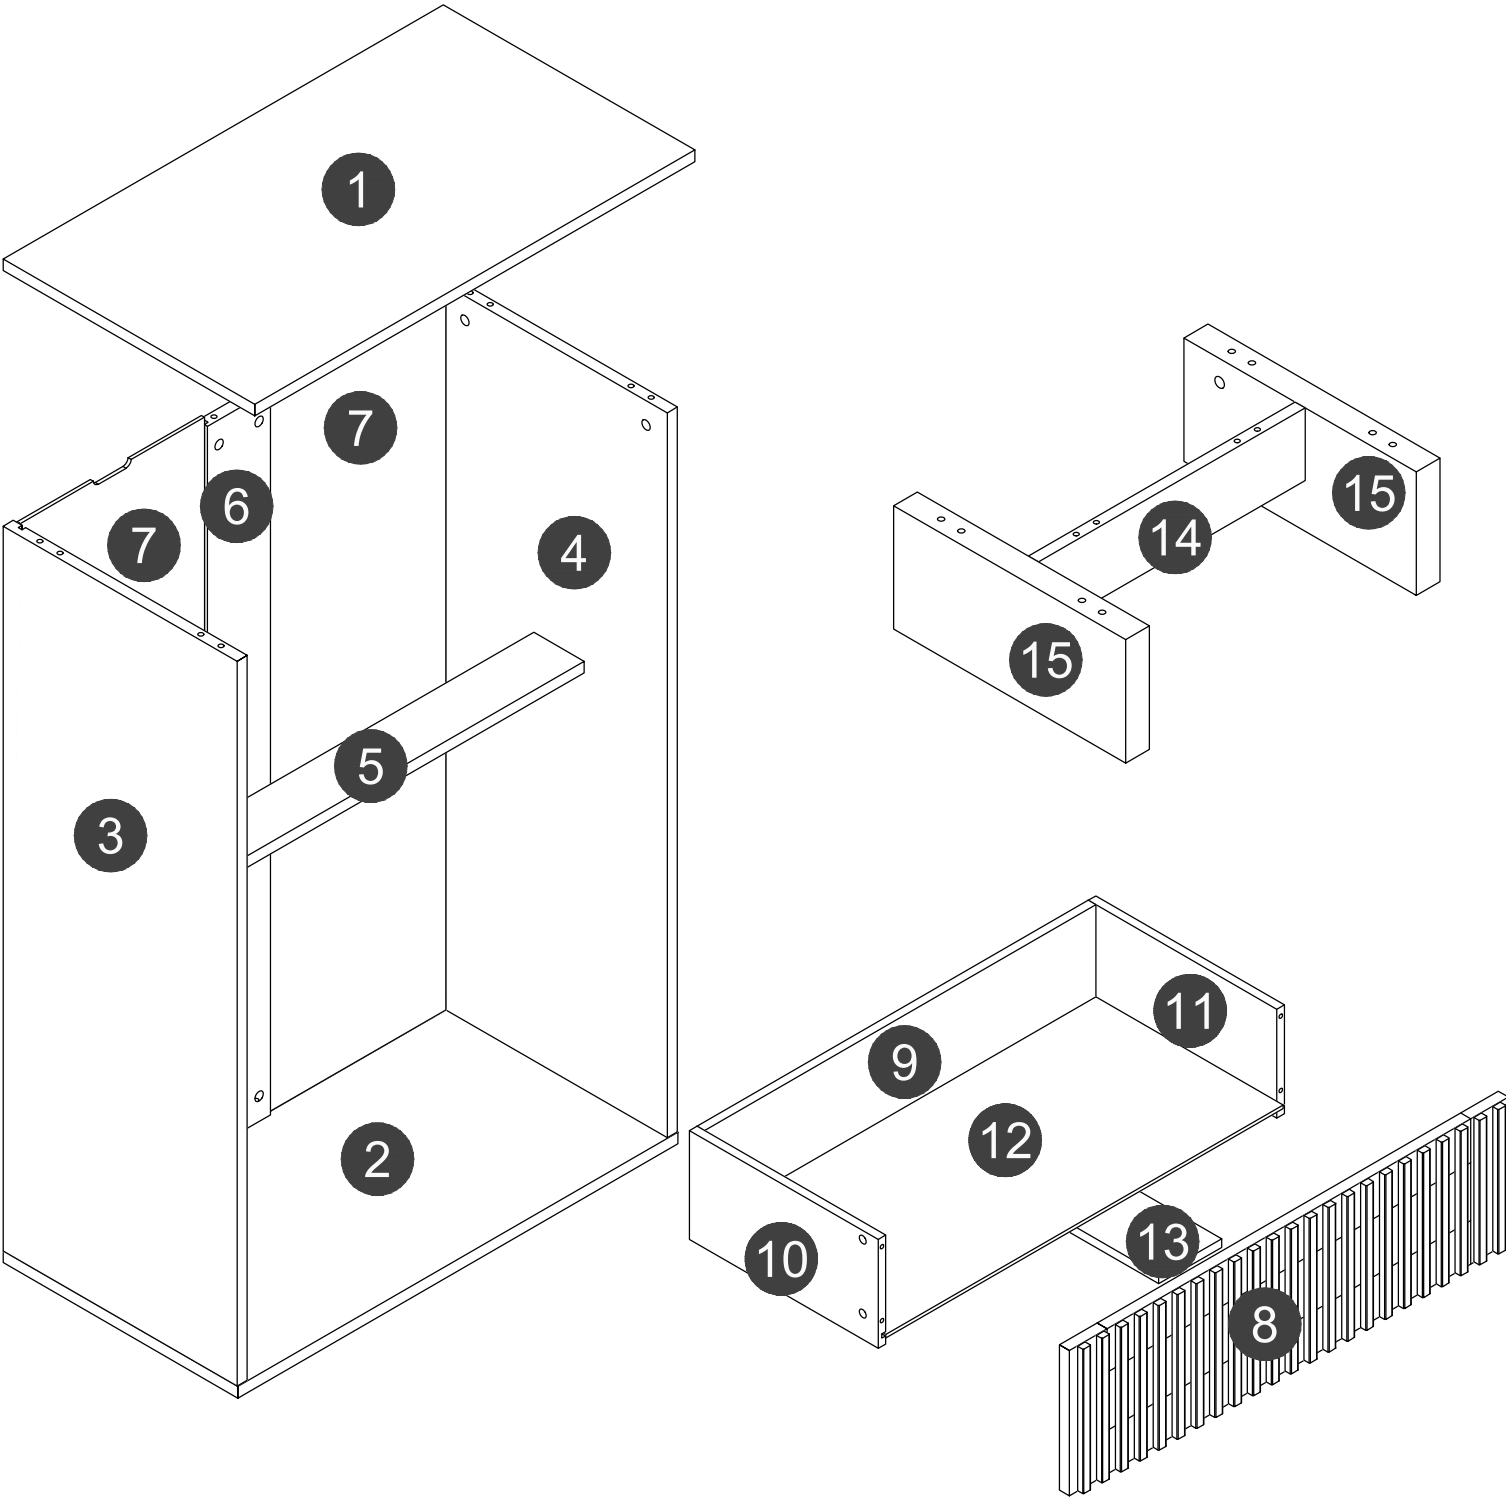


Fittings




M6*40

A=22



$\Phi 8*30$

B=16

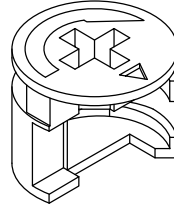


$\Phi 15*12$

C=22




$\Phi 21$


D=72

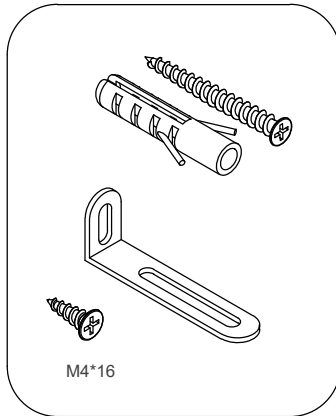


F=2

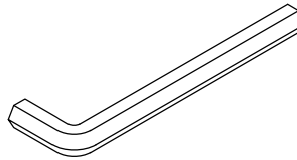

H = 1

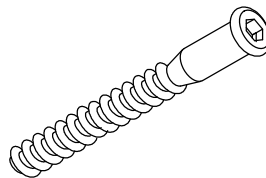


Q=4

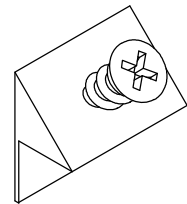


E=12




O = 50

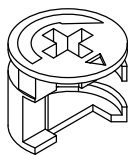

P = 50

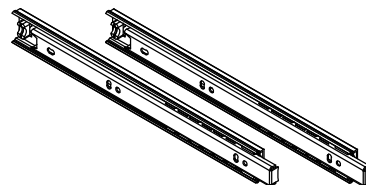


N=5

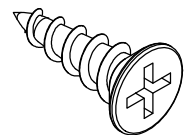


V1=40


STEP 1

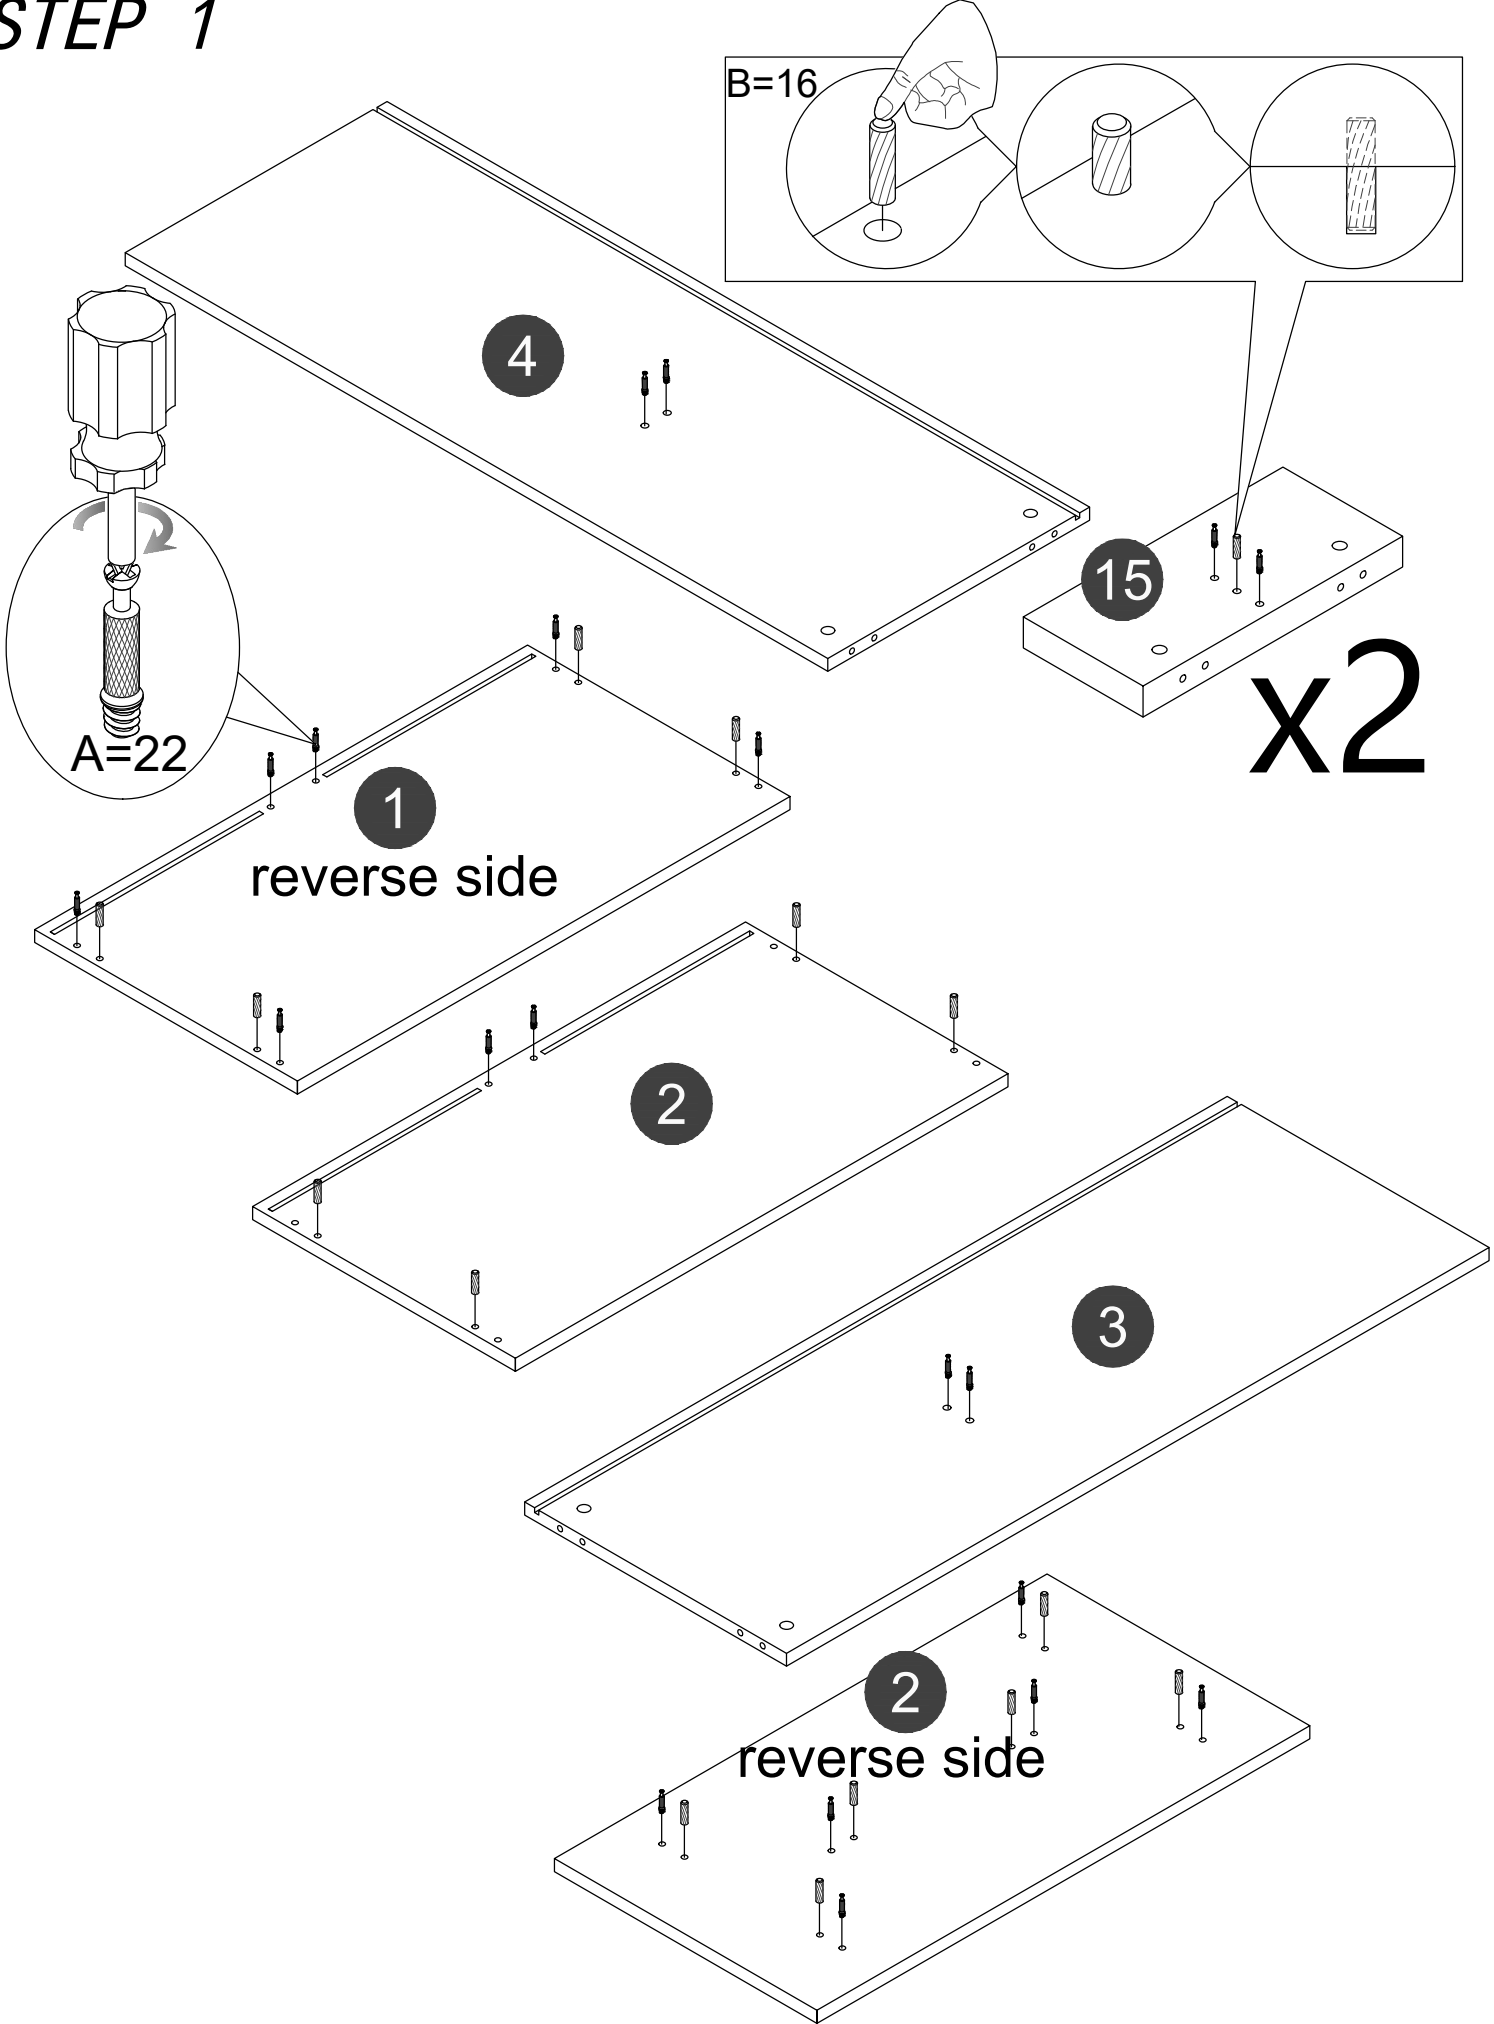


STEP 2

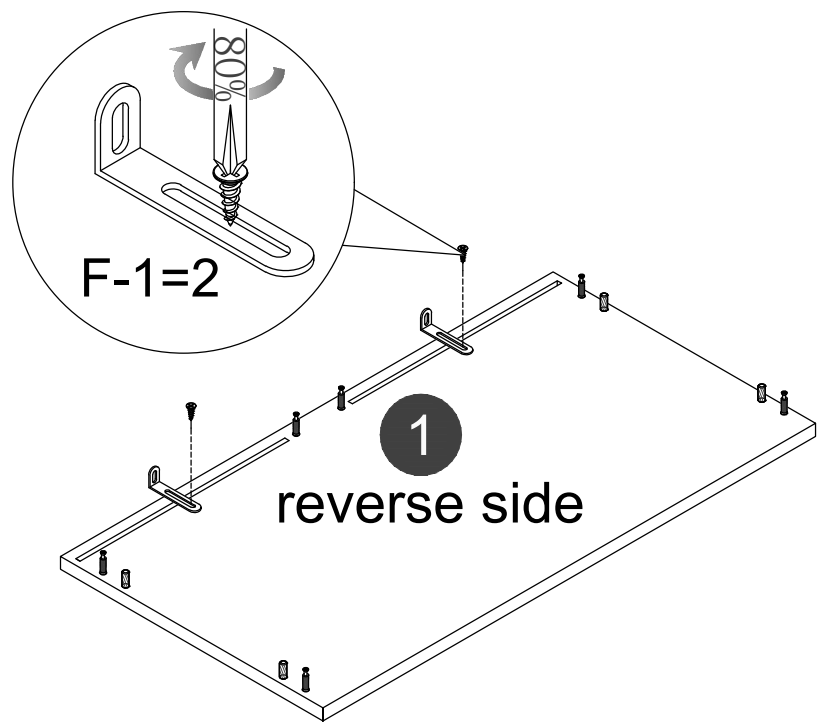


STEP 3

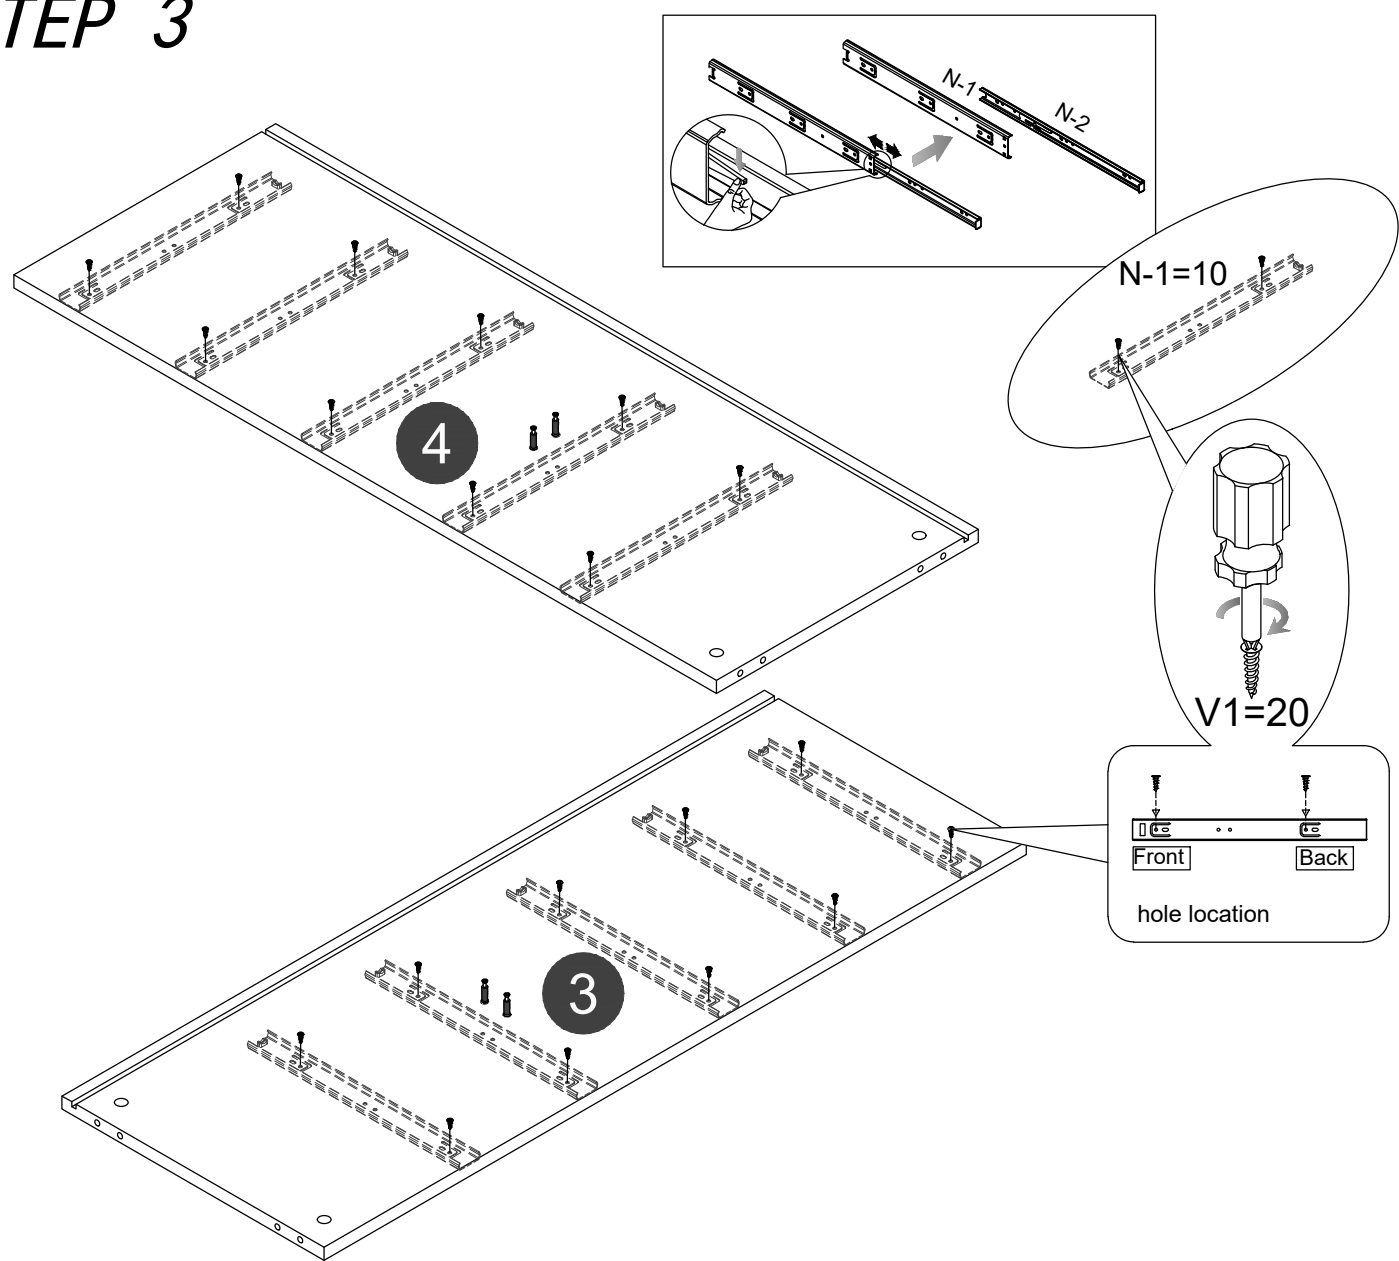


STEP 4

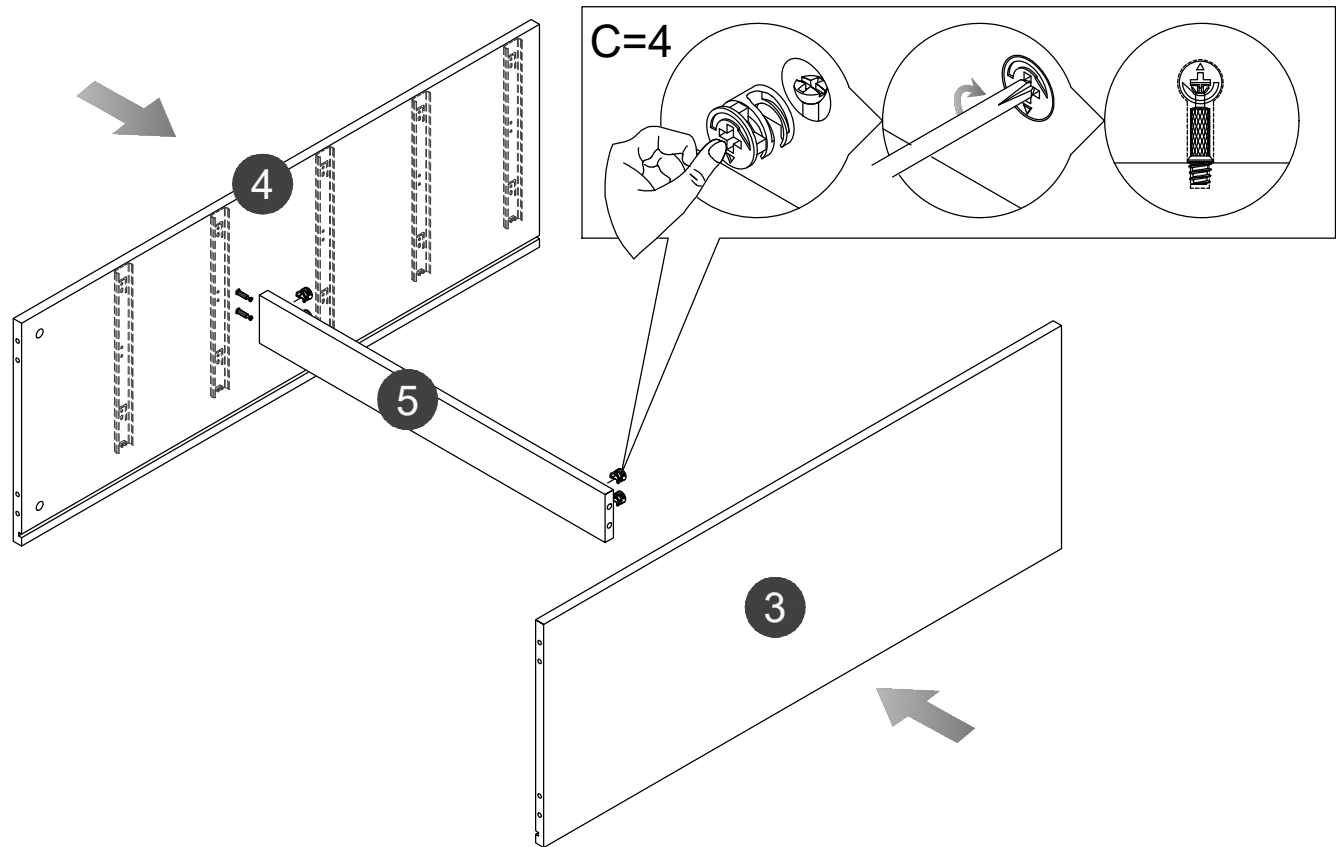


STEP 5

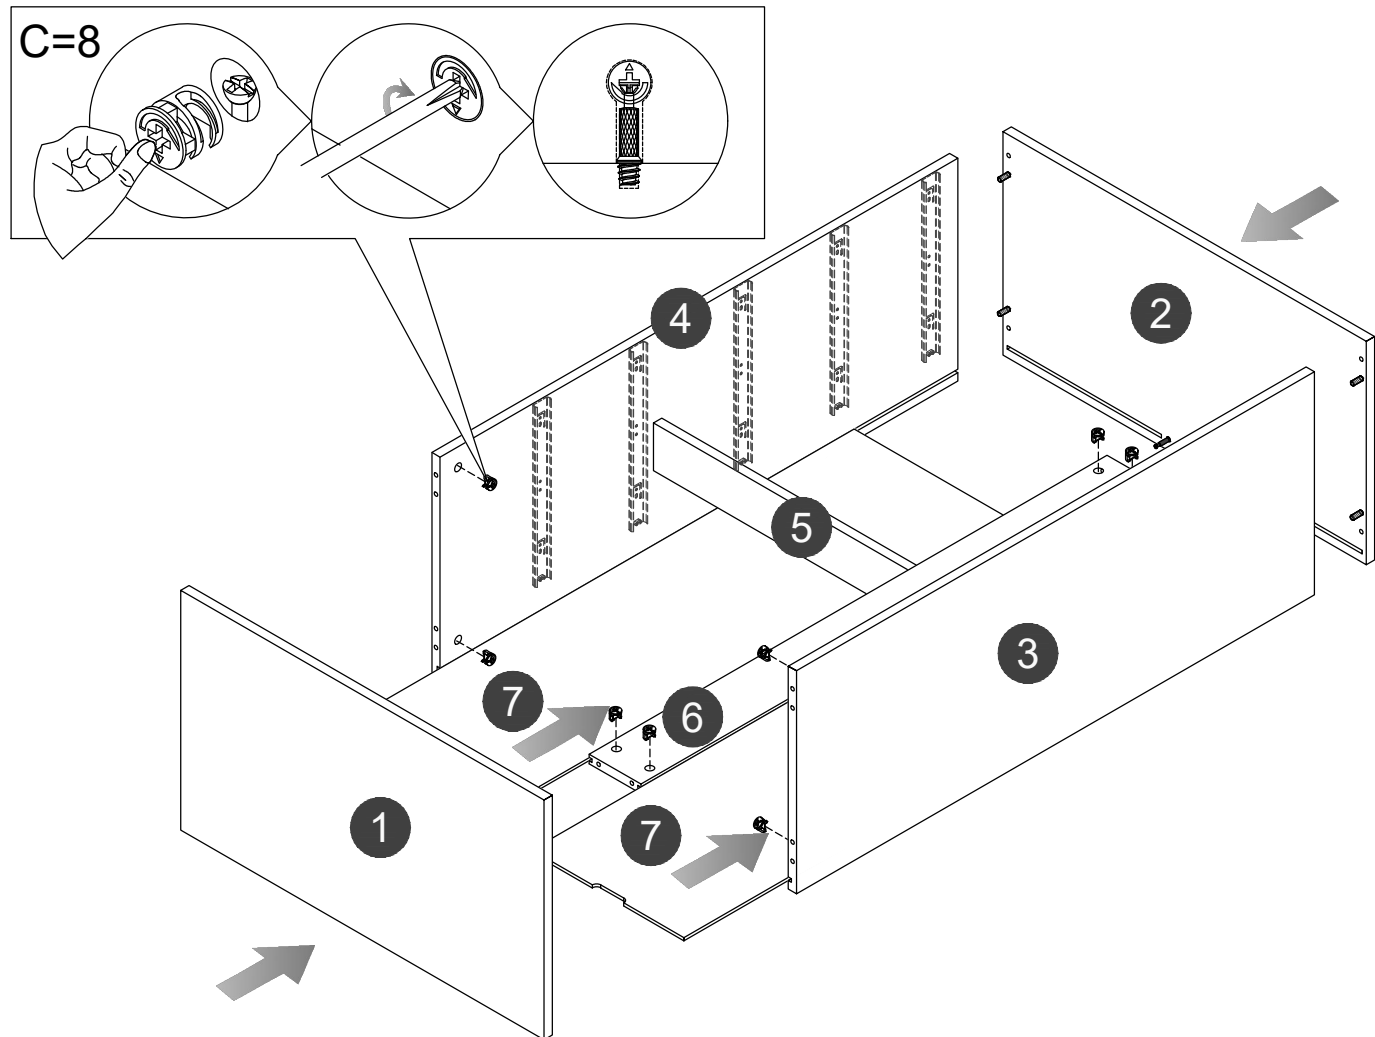


STEP 6

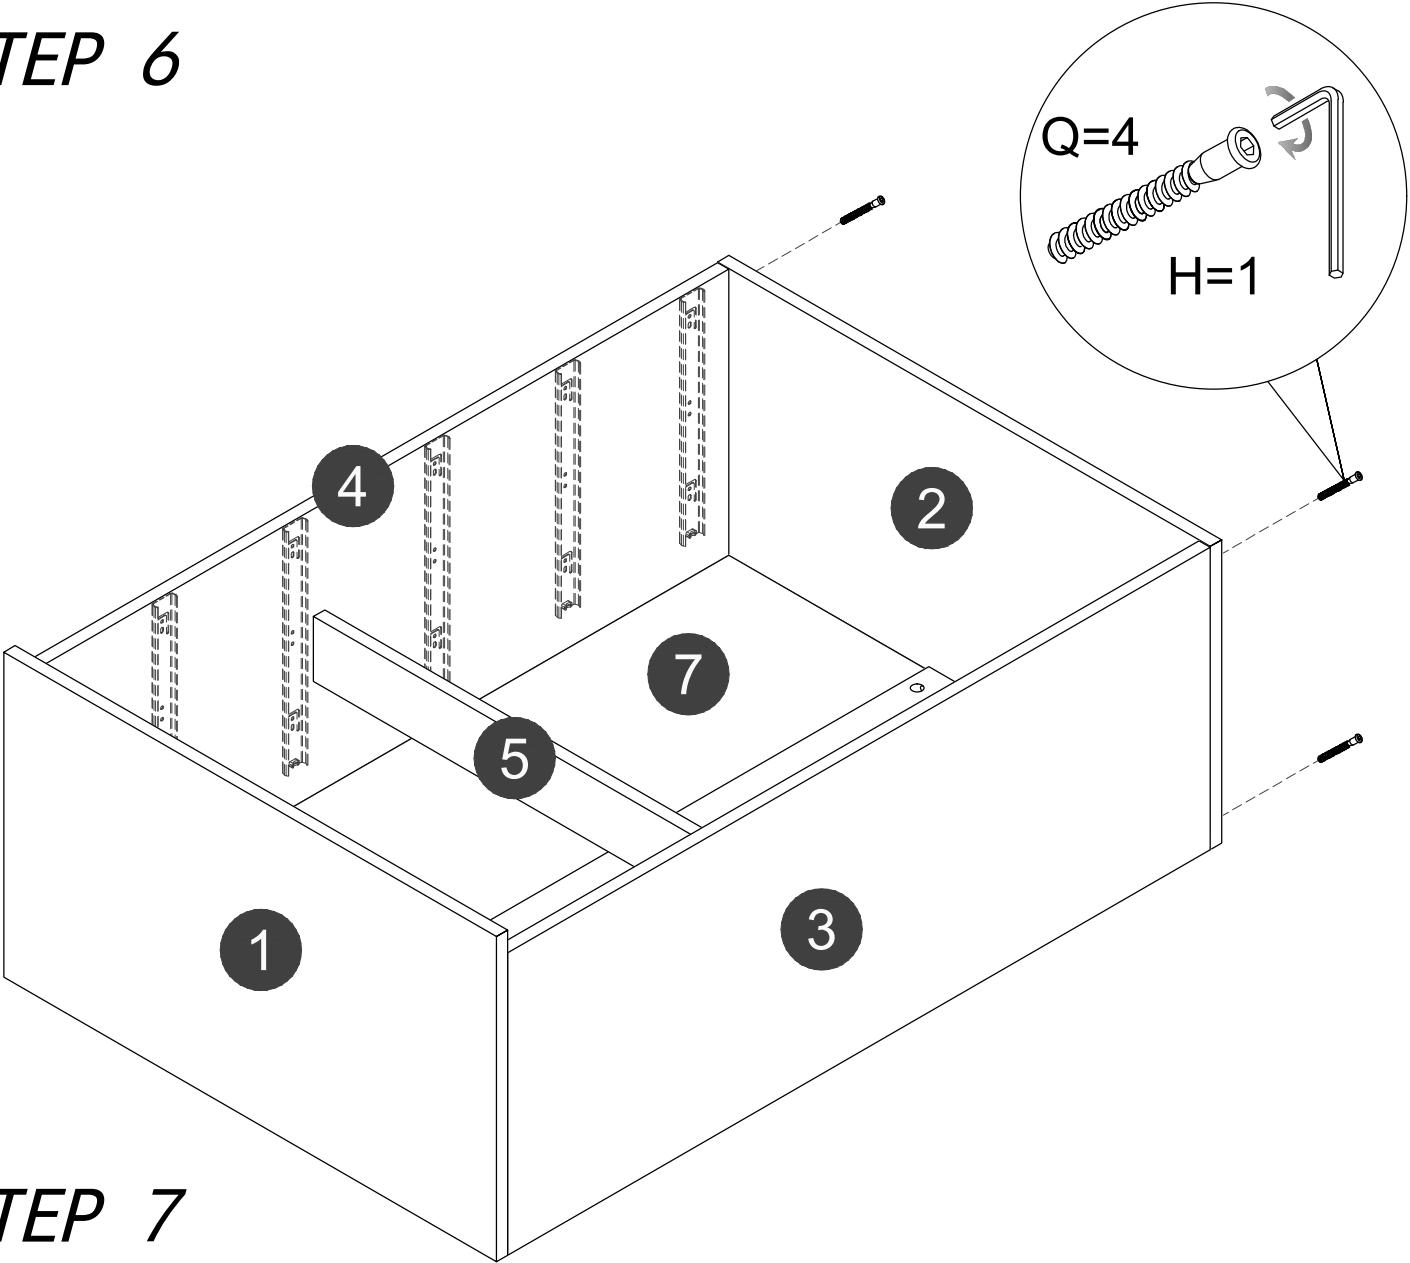


STEP 7

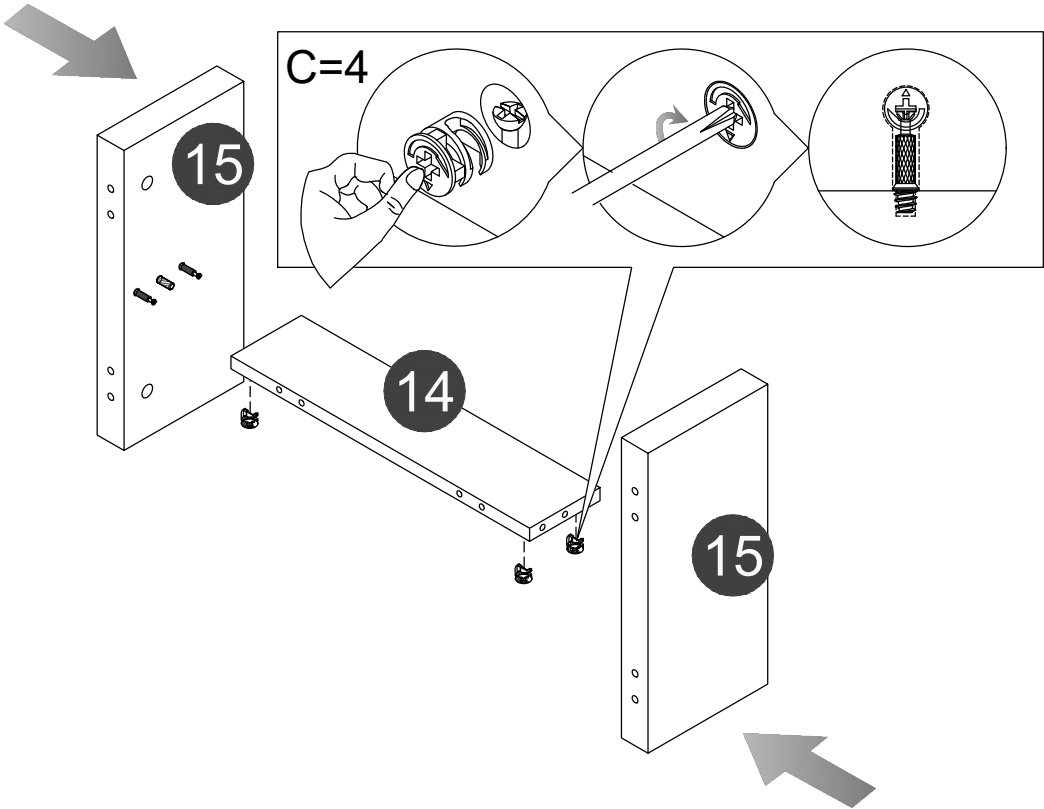


STEP 8

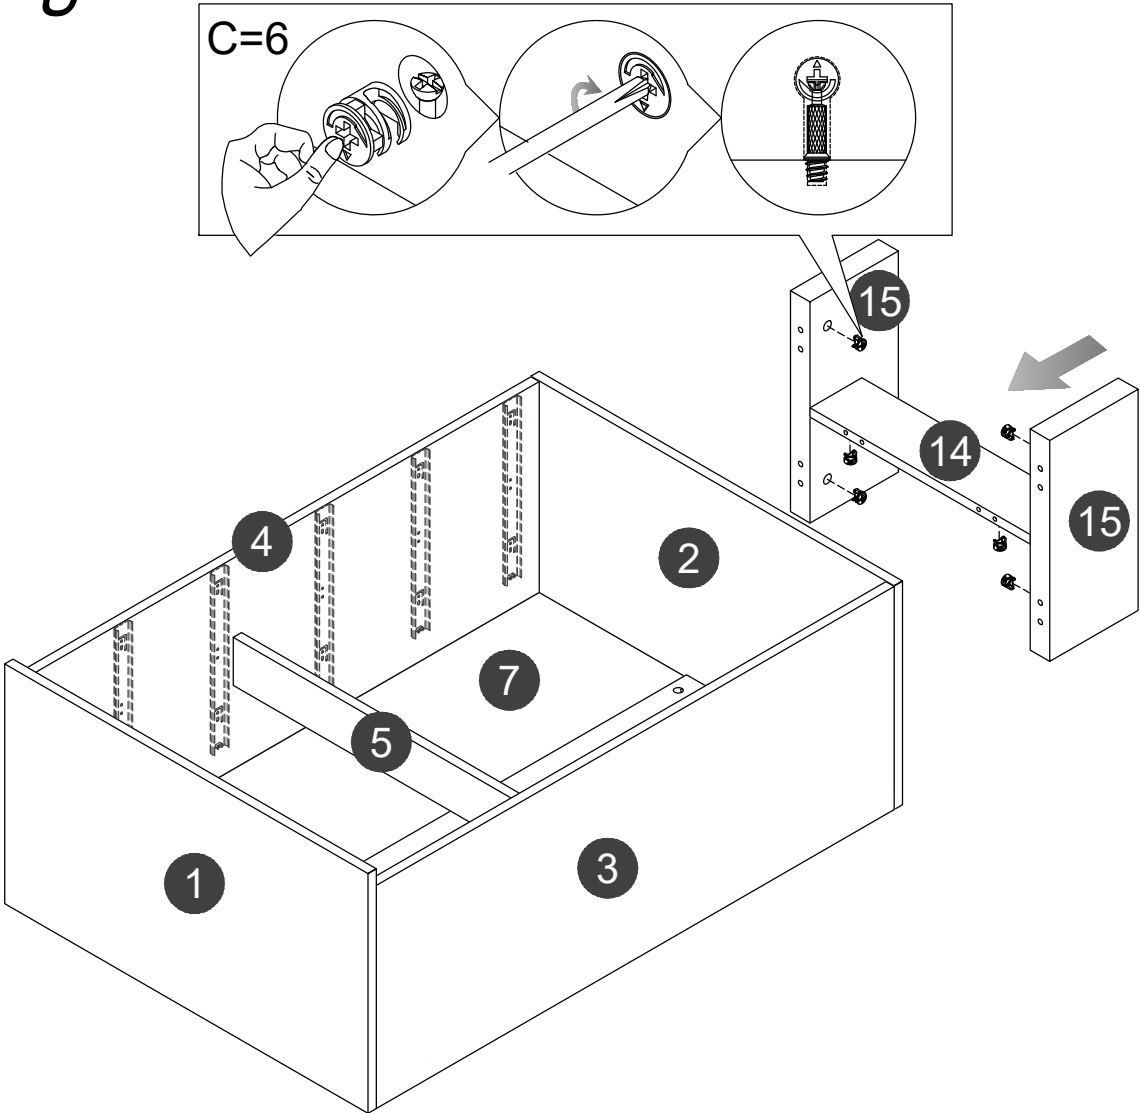


STEP 9

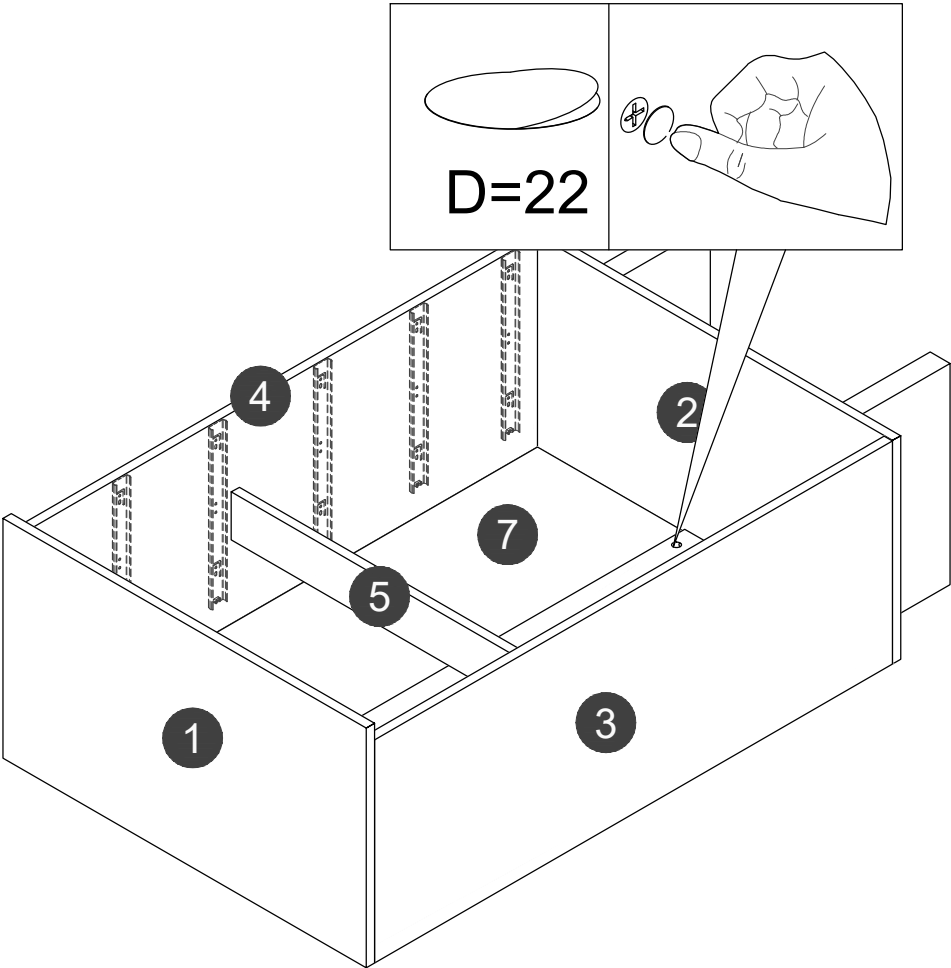


STEP 10

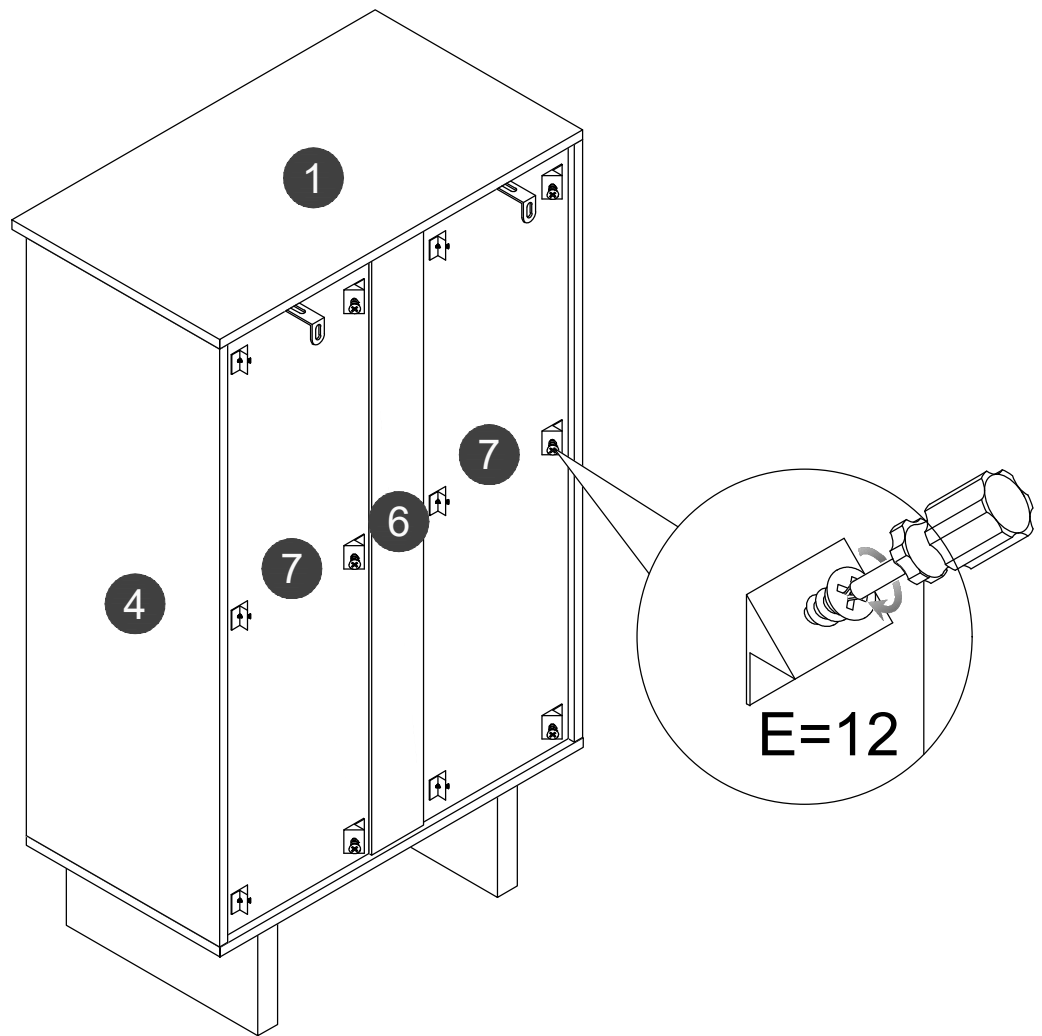


STEP 11

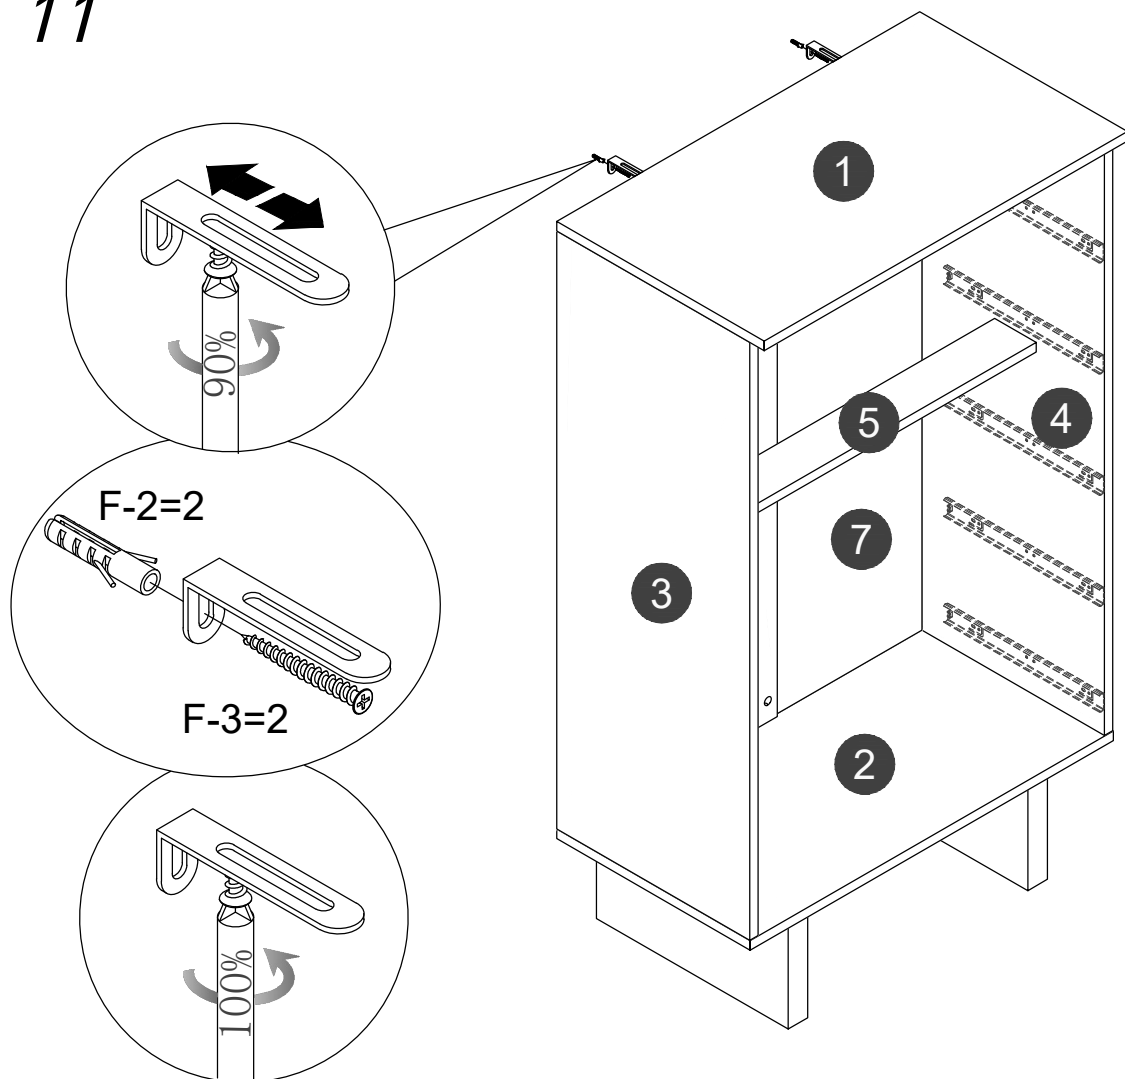


STEP 12

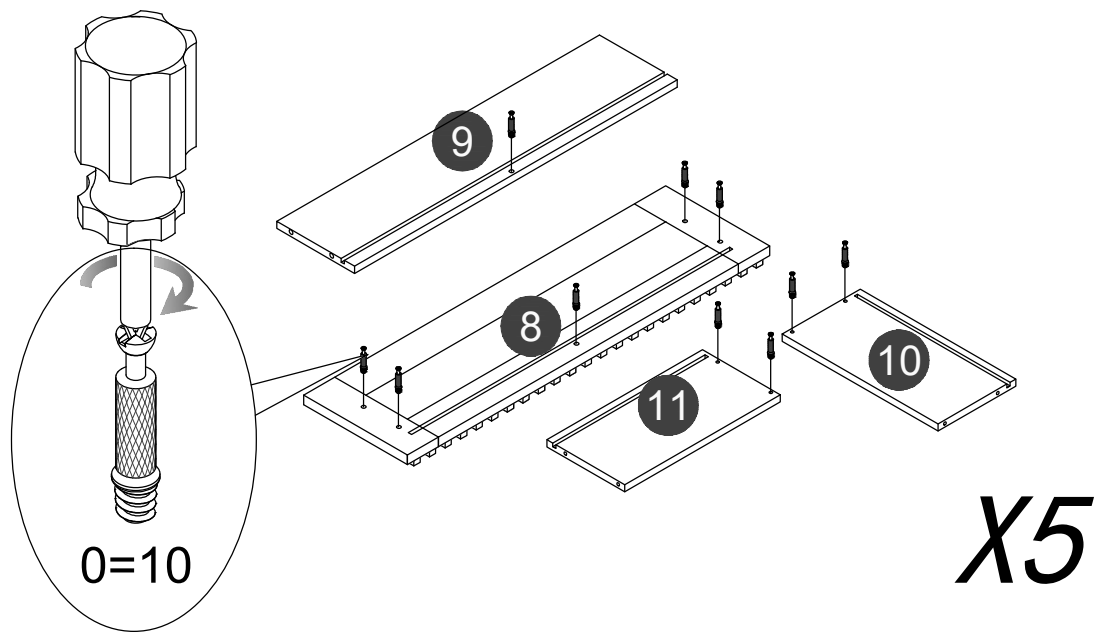


STEP 13

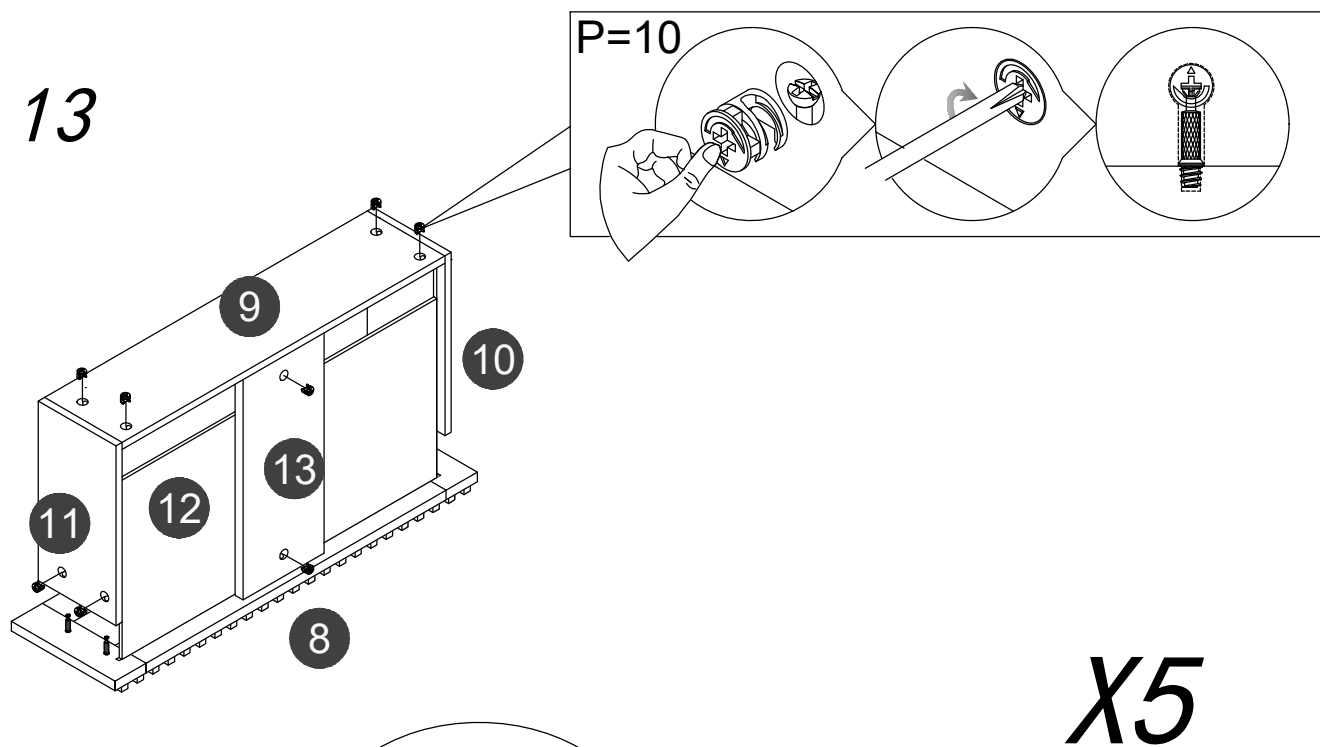


STEP 14

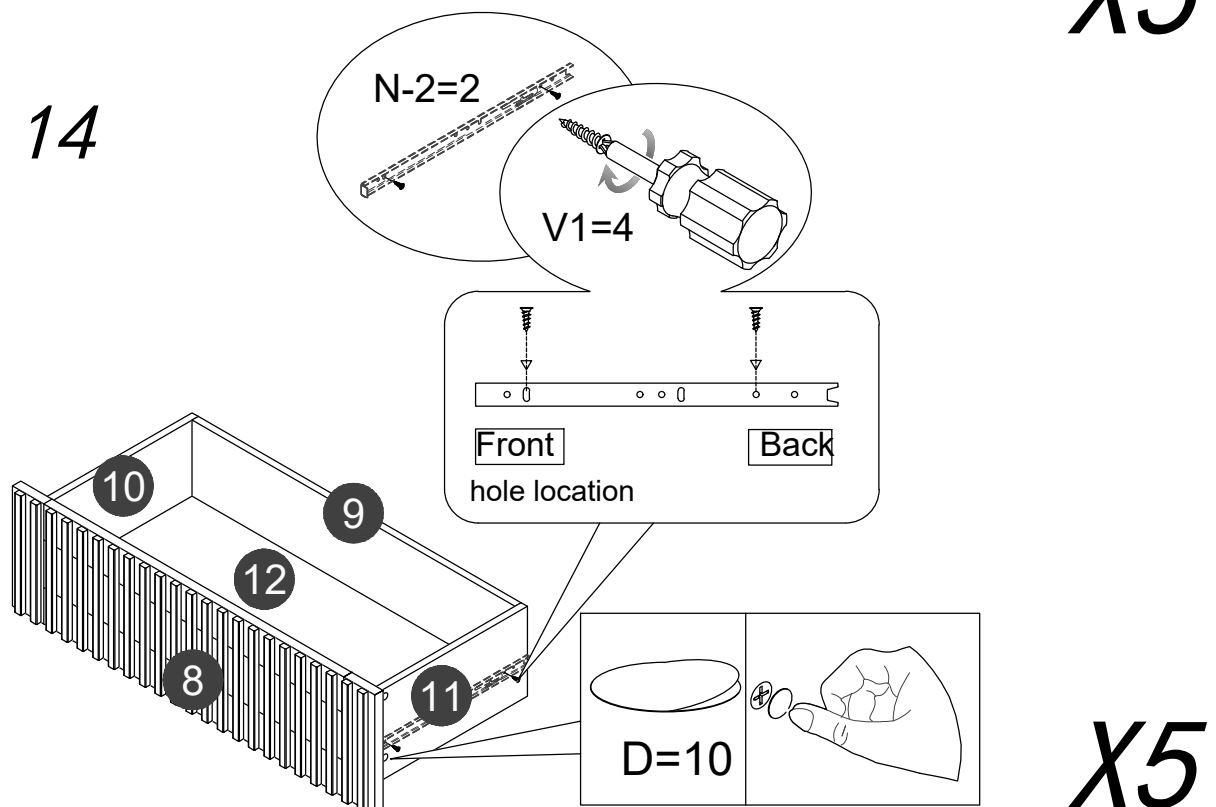


STEP 15

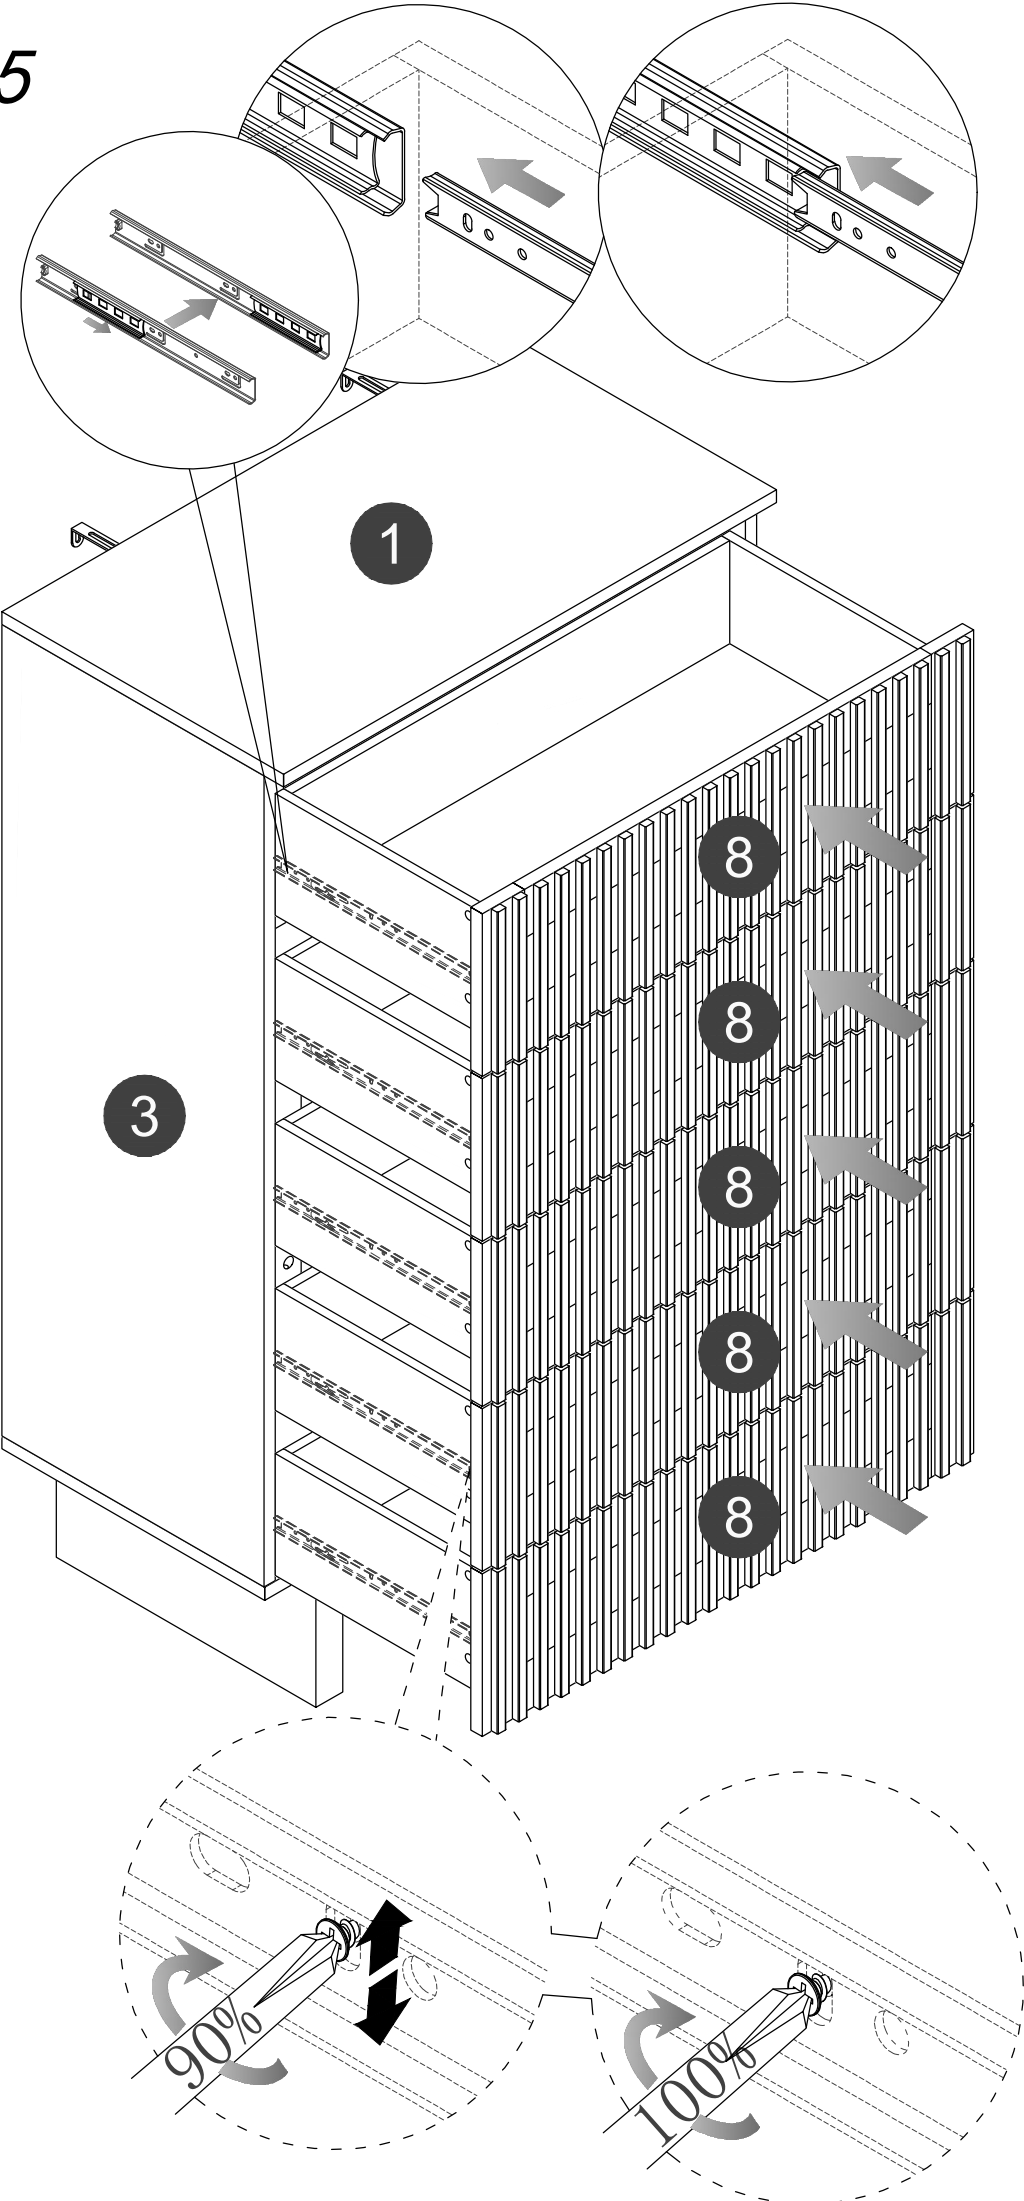

STEP 16

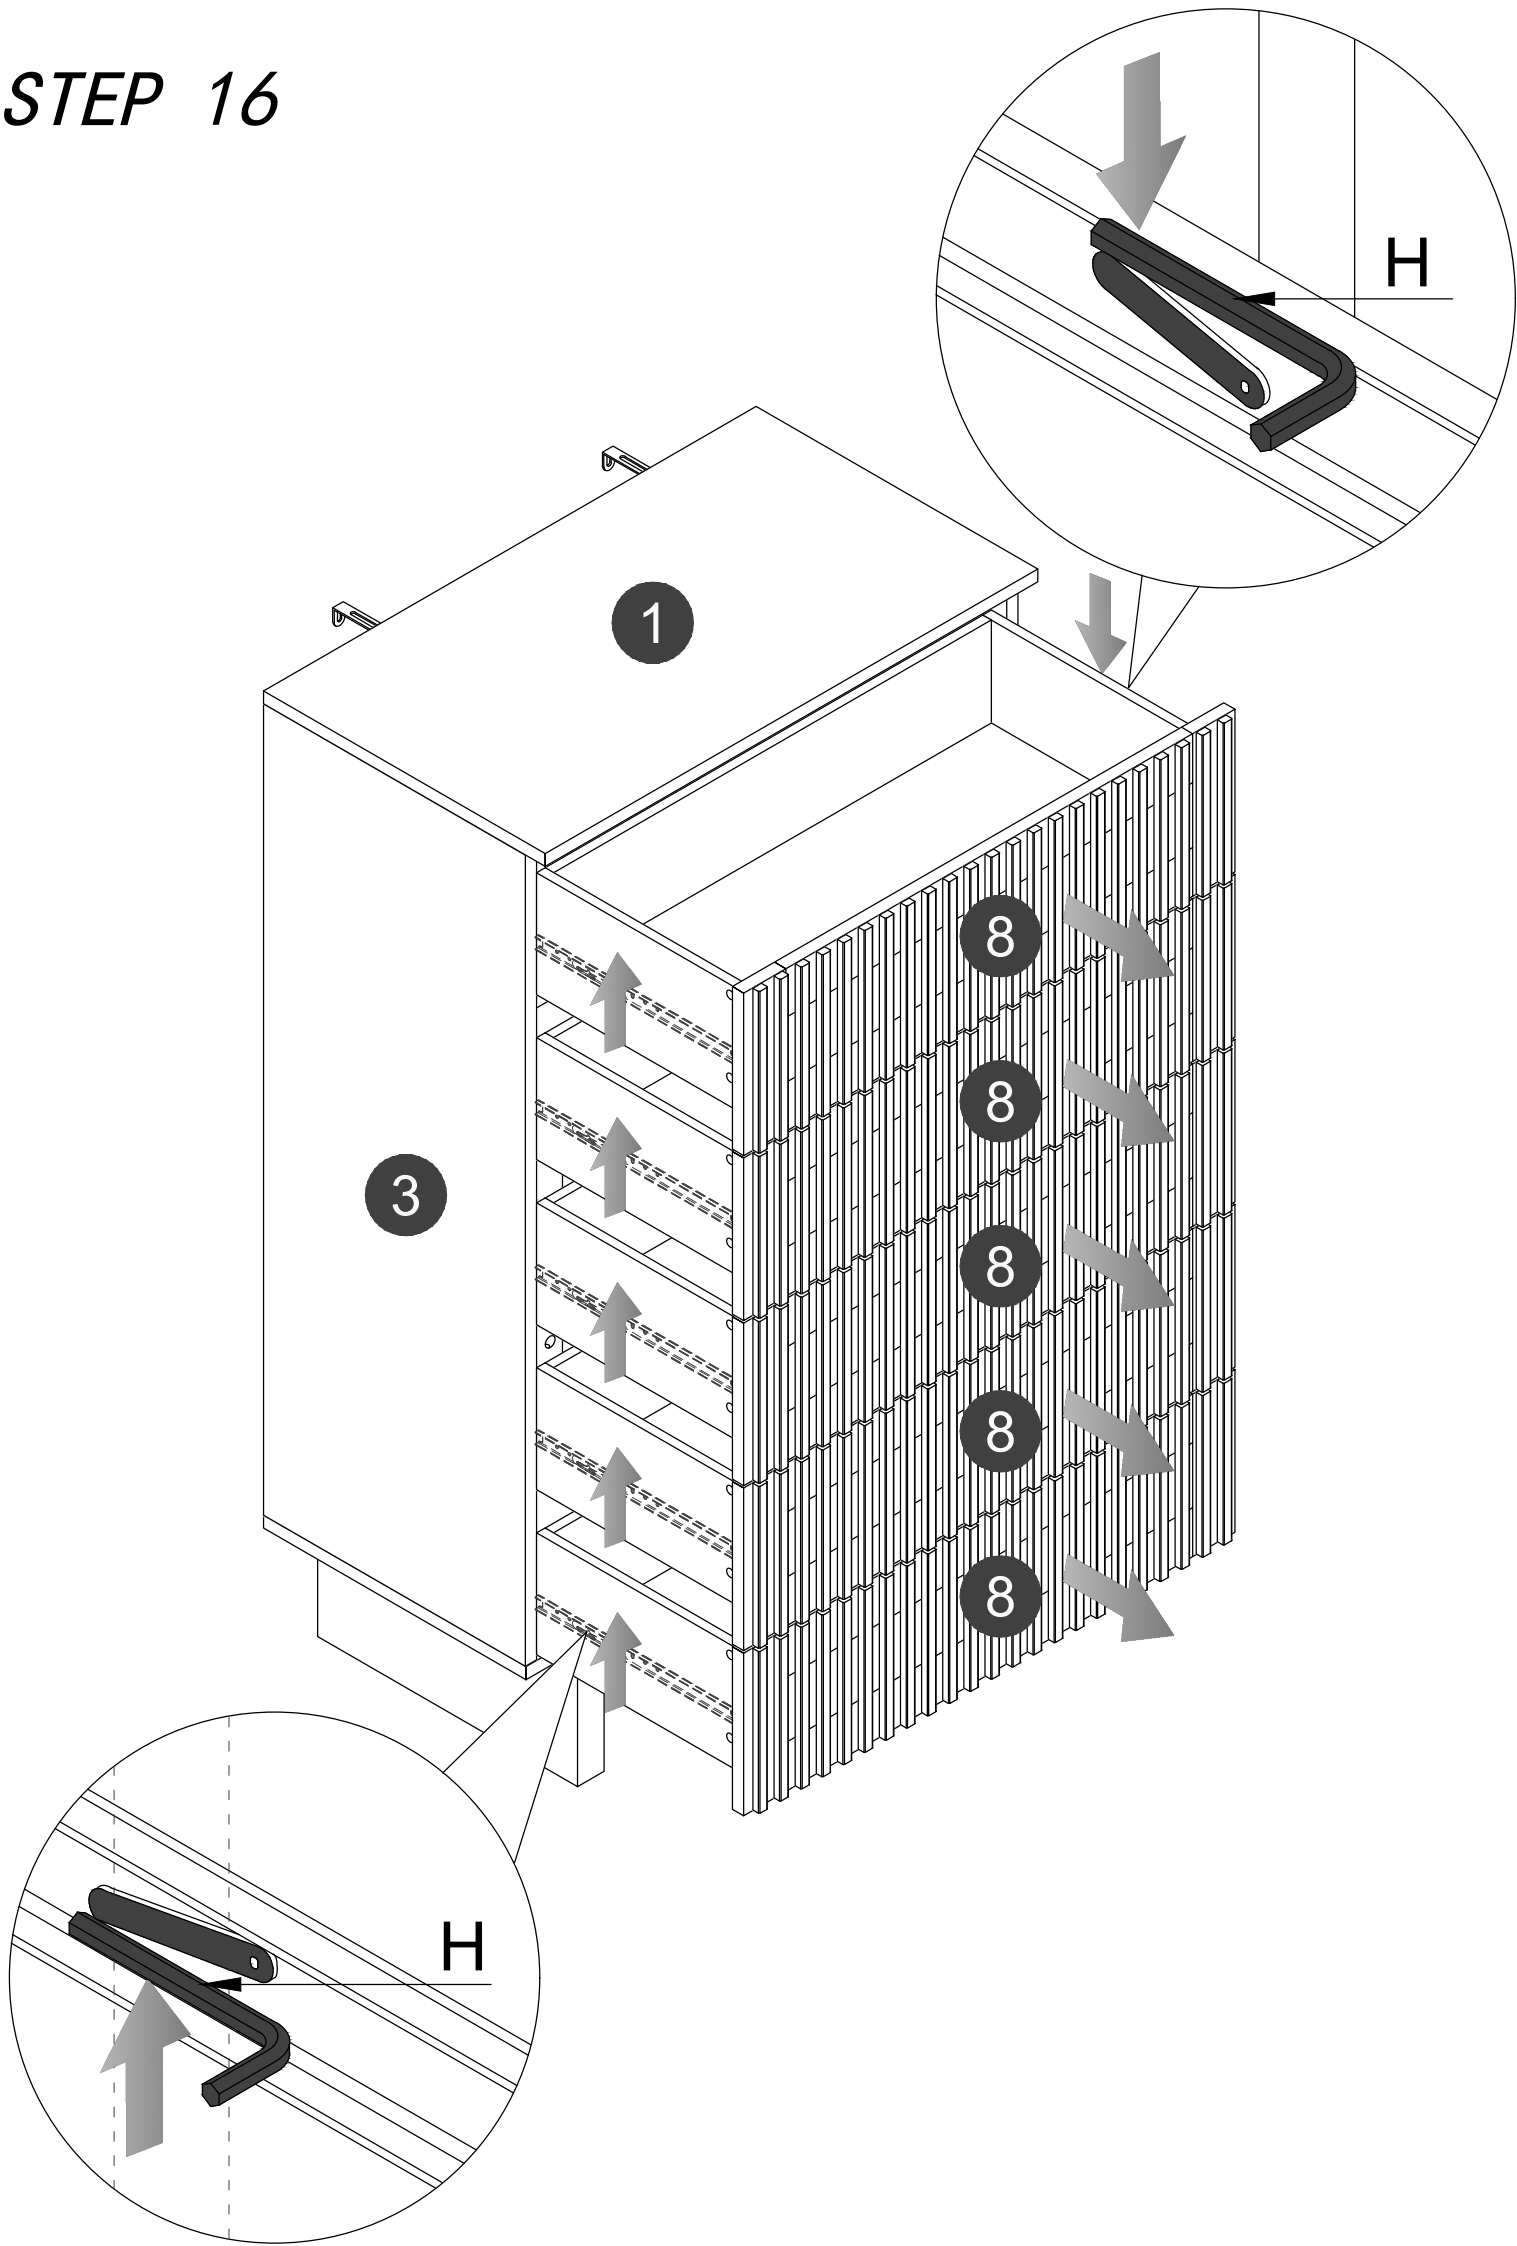

STEP 17

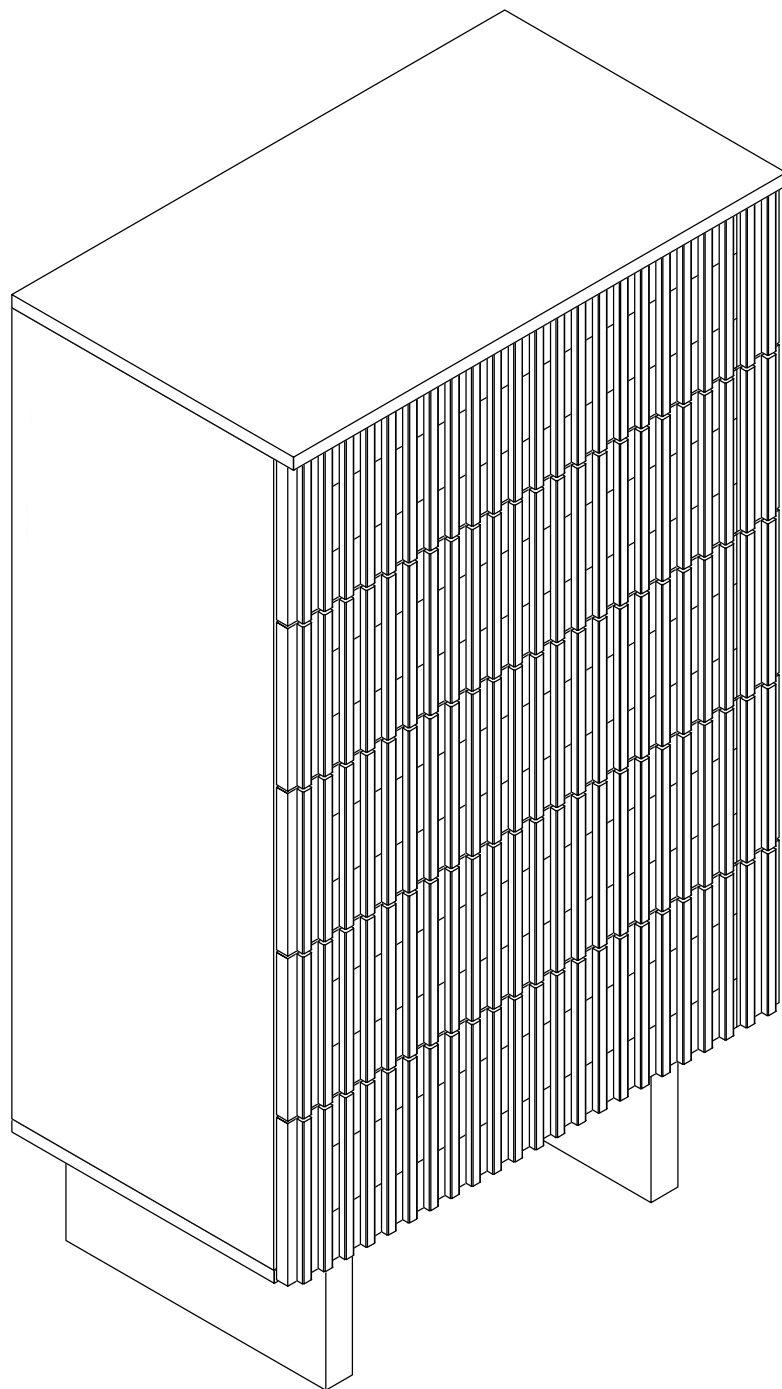

Finish