

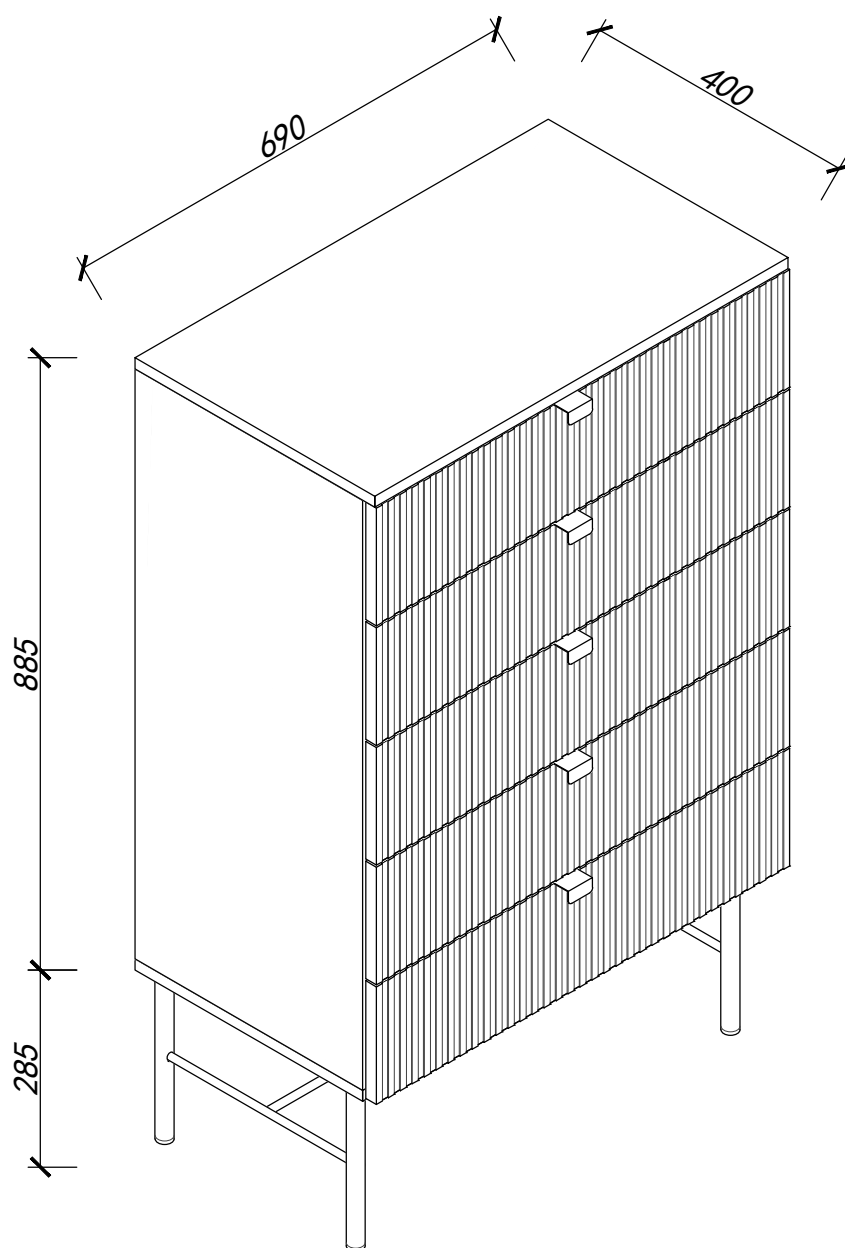
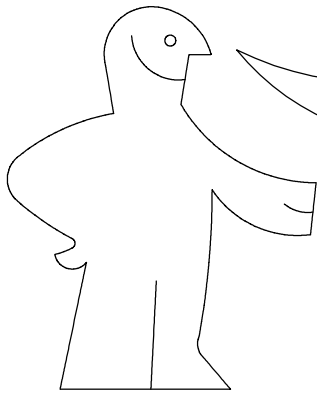








sømcasa

Assembly Instruction

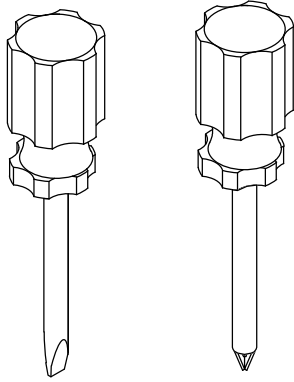


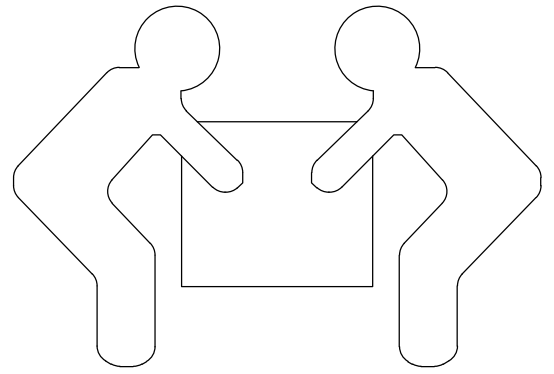


2 person recommended

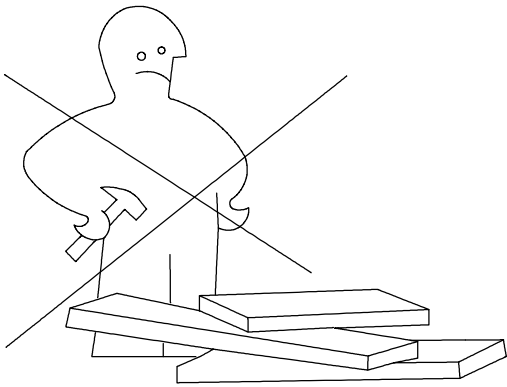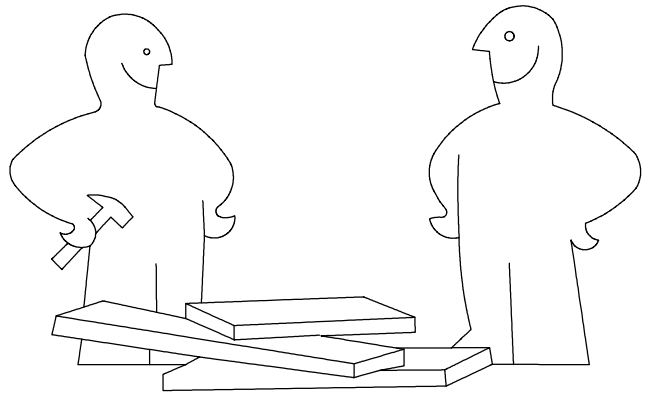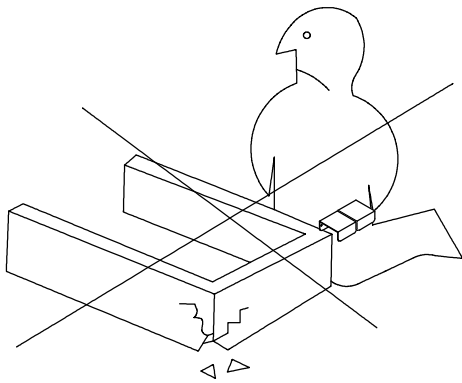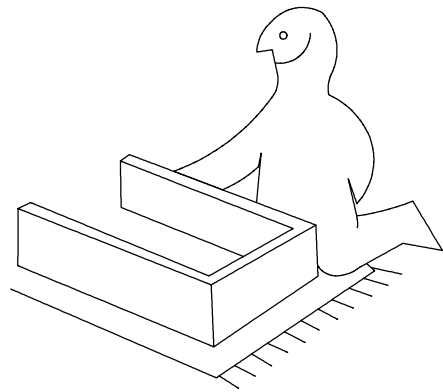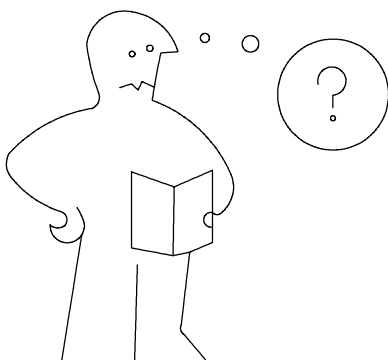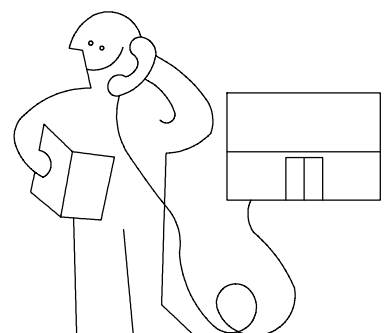


Panel No	Panel Sizes	Quantity
1	690*400*16	1
2	690*380*16	1
3	853*380*16	1
4	853*380*16	1
5	656*60*16	1
6	853*100*16	1

Panel No	Panel Sizes	Quantity
7	863*288*5	2
8	170*690*18	5
9	612*120*12	5
10	350*120*12	5
11	350*120*12	5
12	622*348*5	5

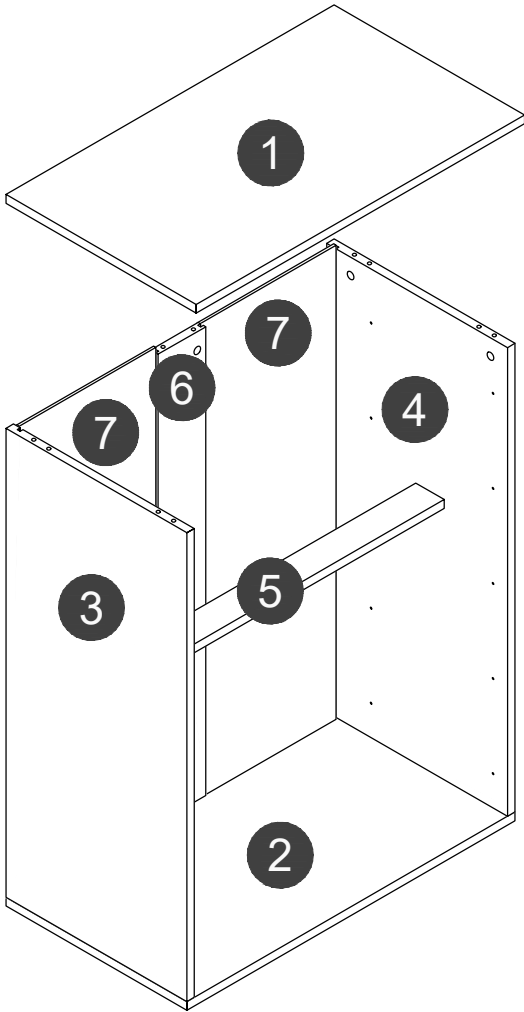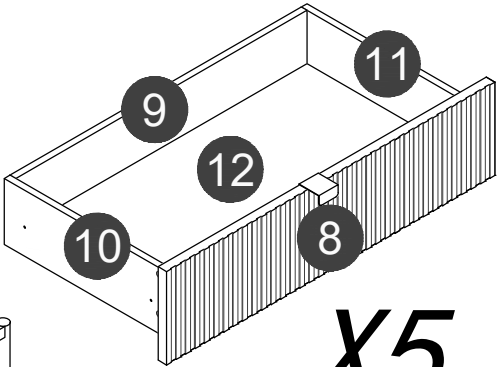

X5

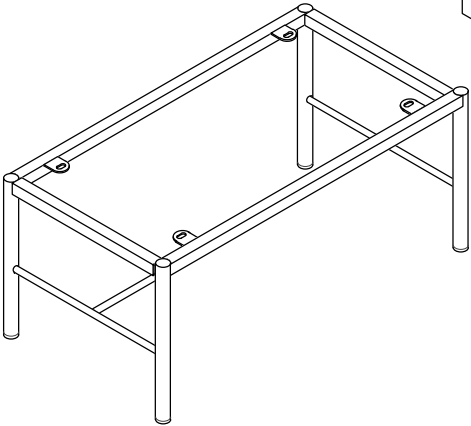


Fittings




M6*40

A=8



Φ8*30

B=10

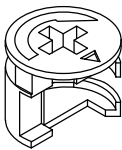

Φ15*12

C=8




Φ21

D=48



E=16

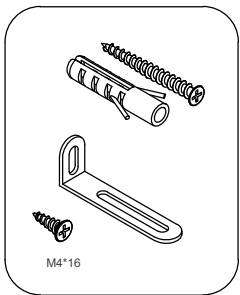


M4*16

F=2




M6*16


G1=8



H =1

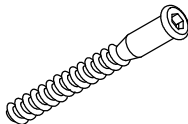

Q=6

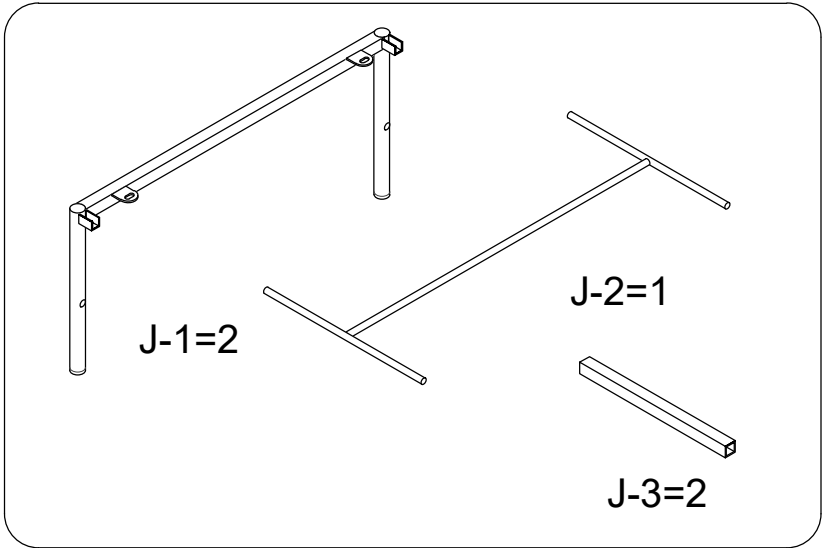

J-1=2

J-2=1

J-3=2


J=1




O =40




P =40

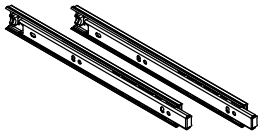

N=5

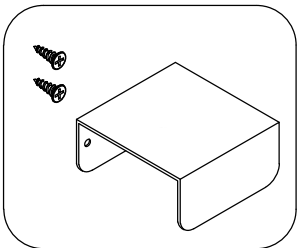

U=5



V1=40




Z1=4




Z2=4


STEP 1

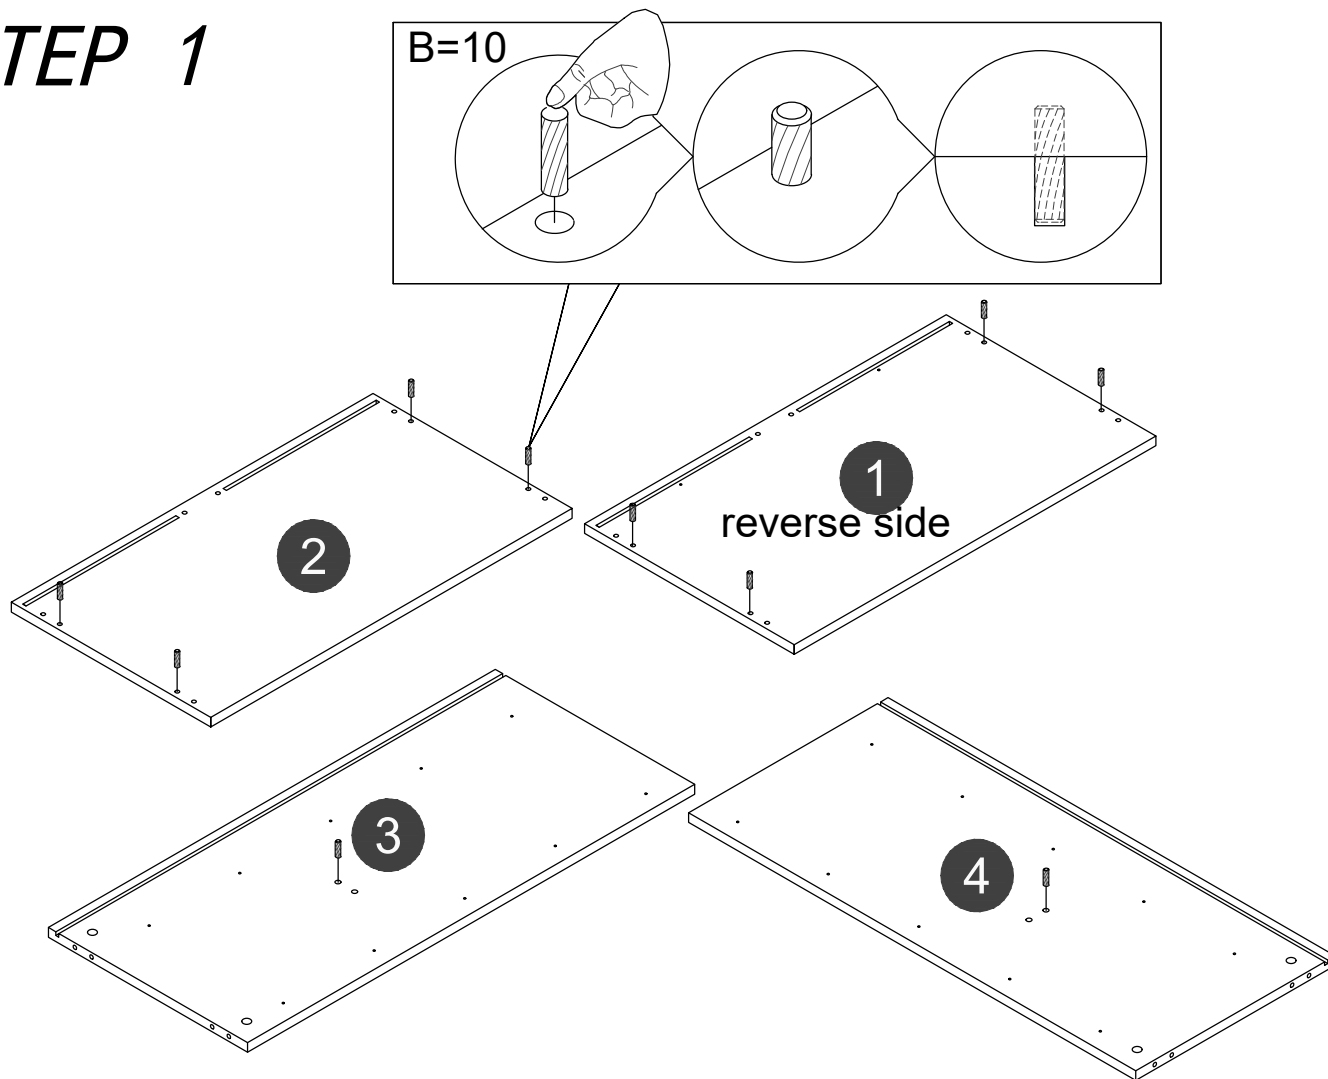


STEP 2

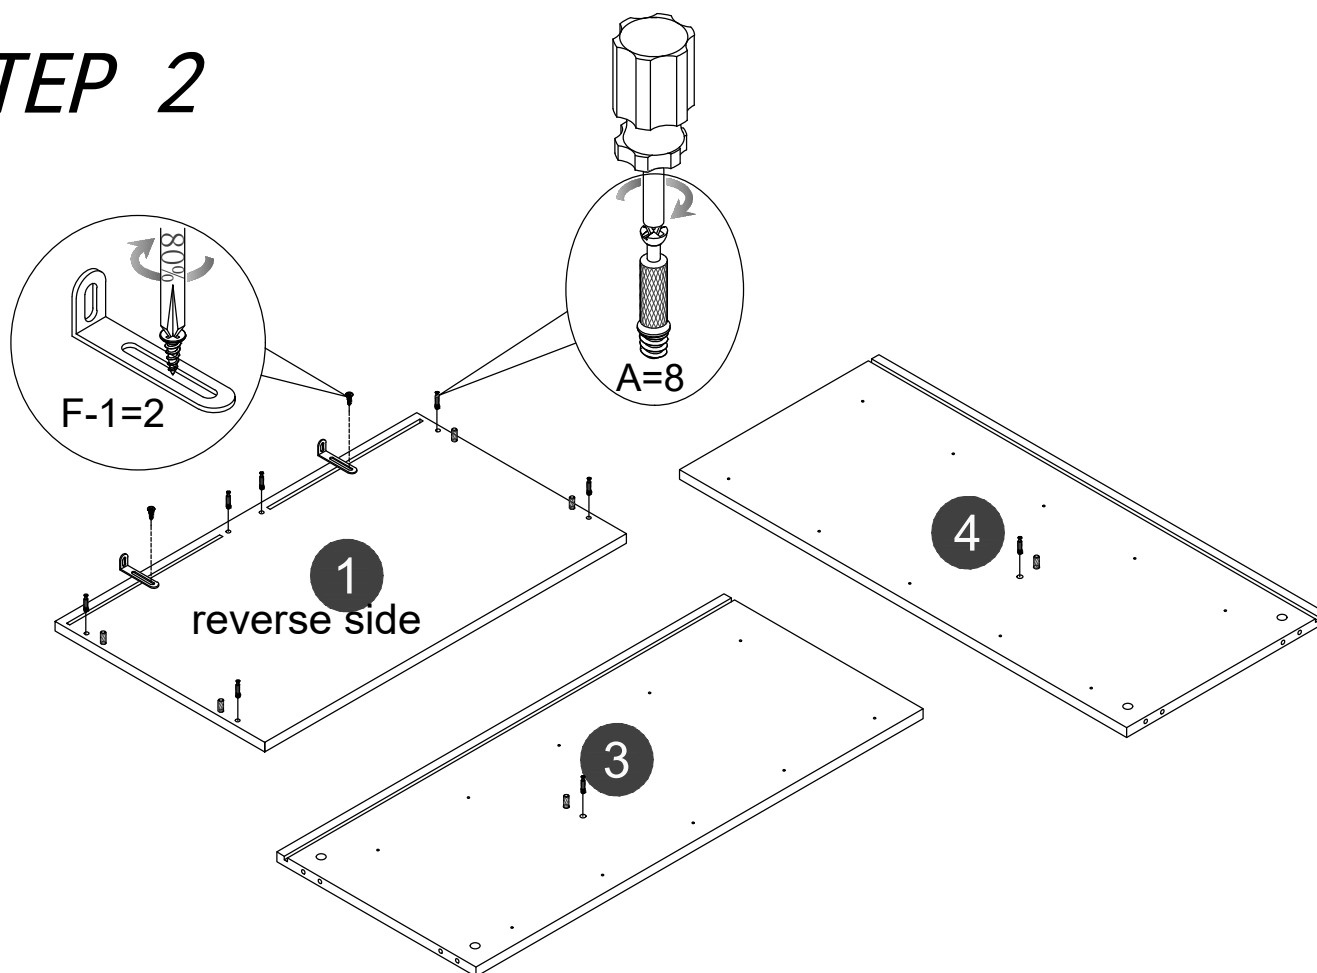


STEP 3

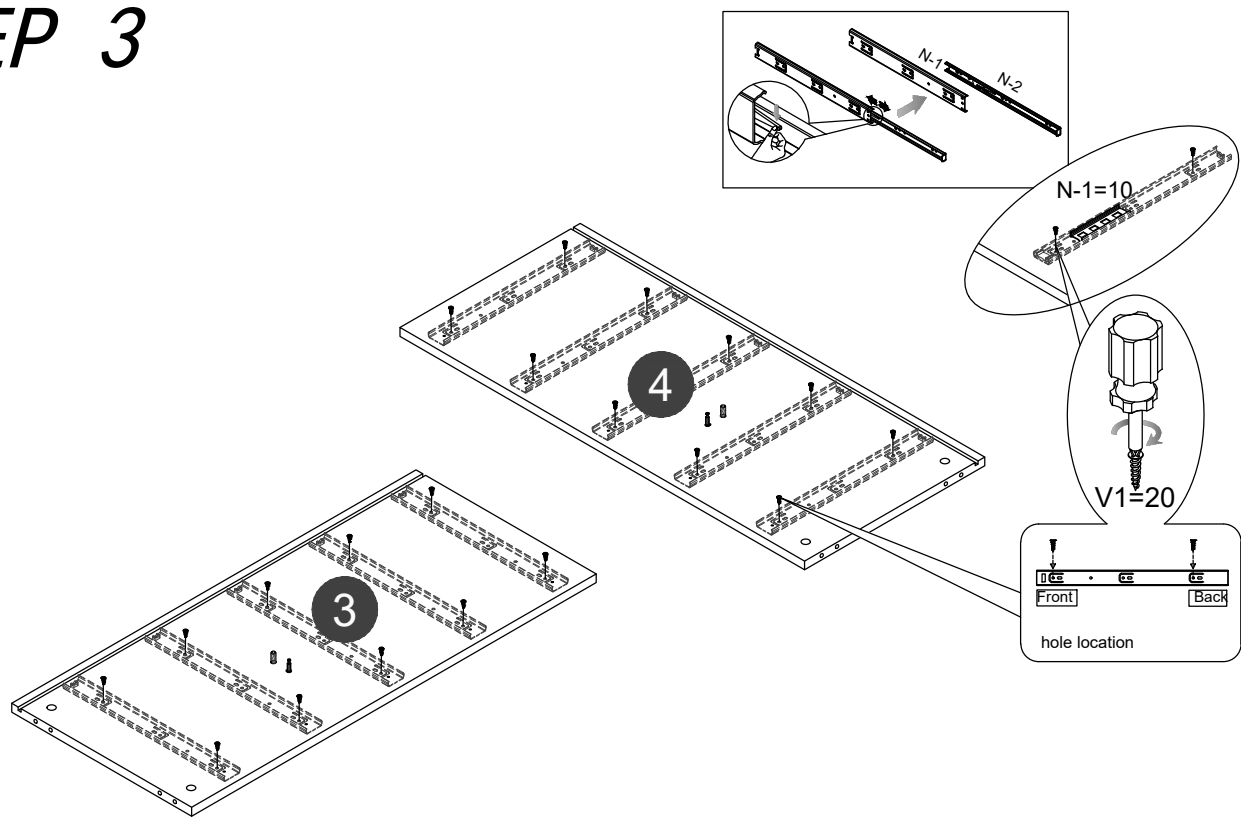


STEP 4

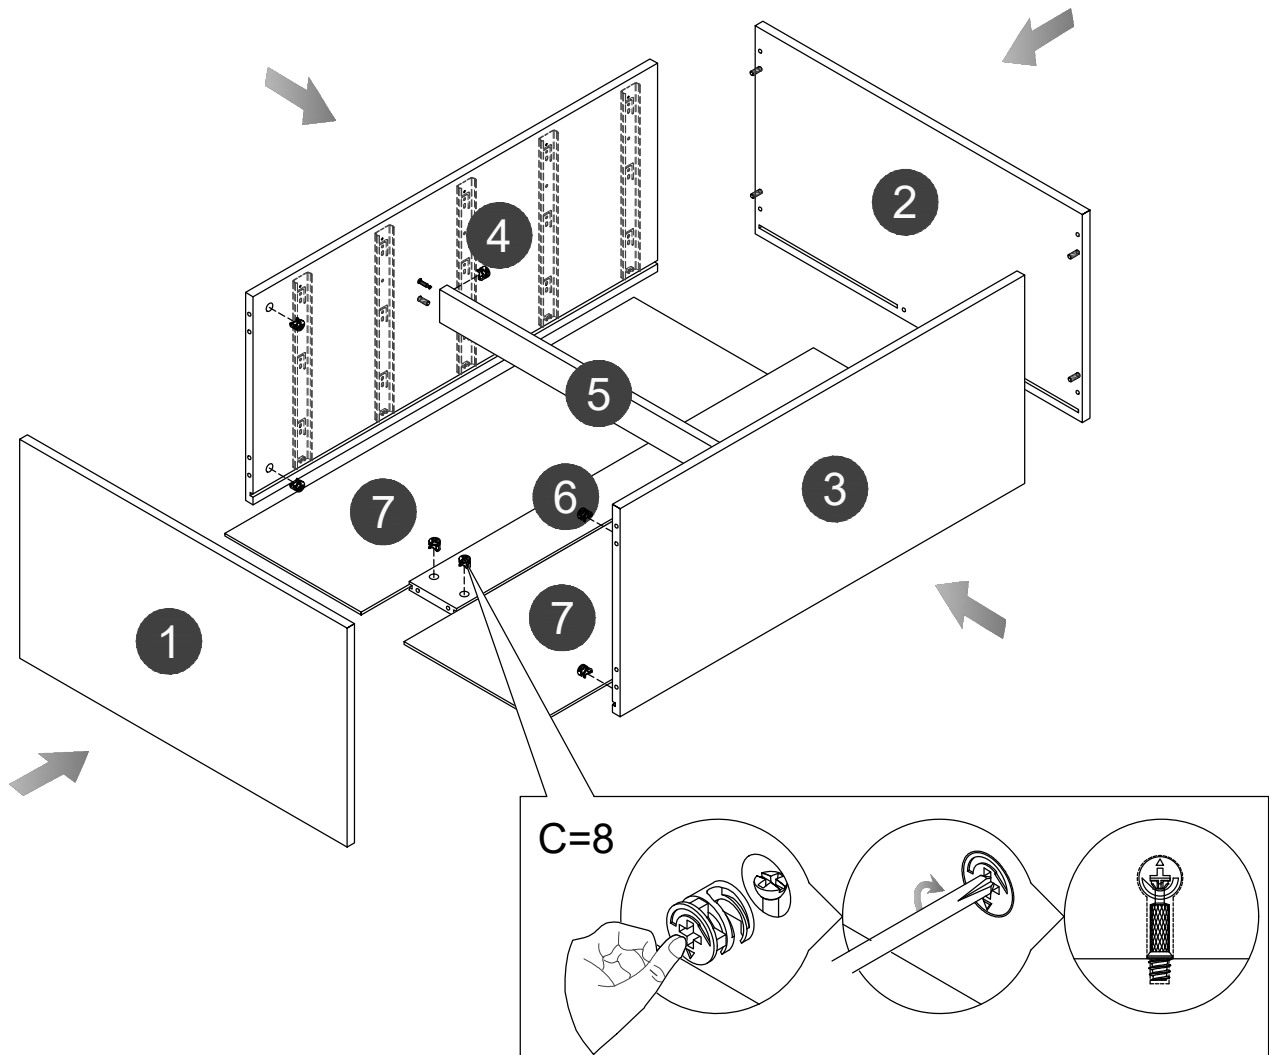


STEP 5

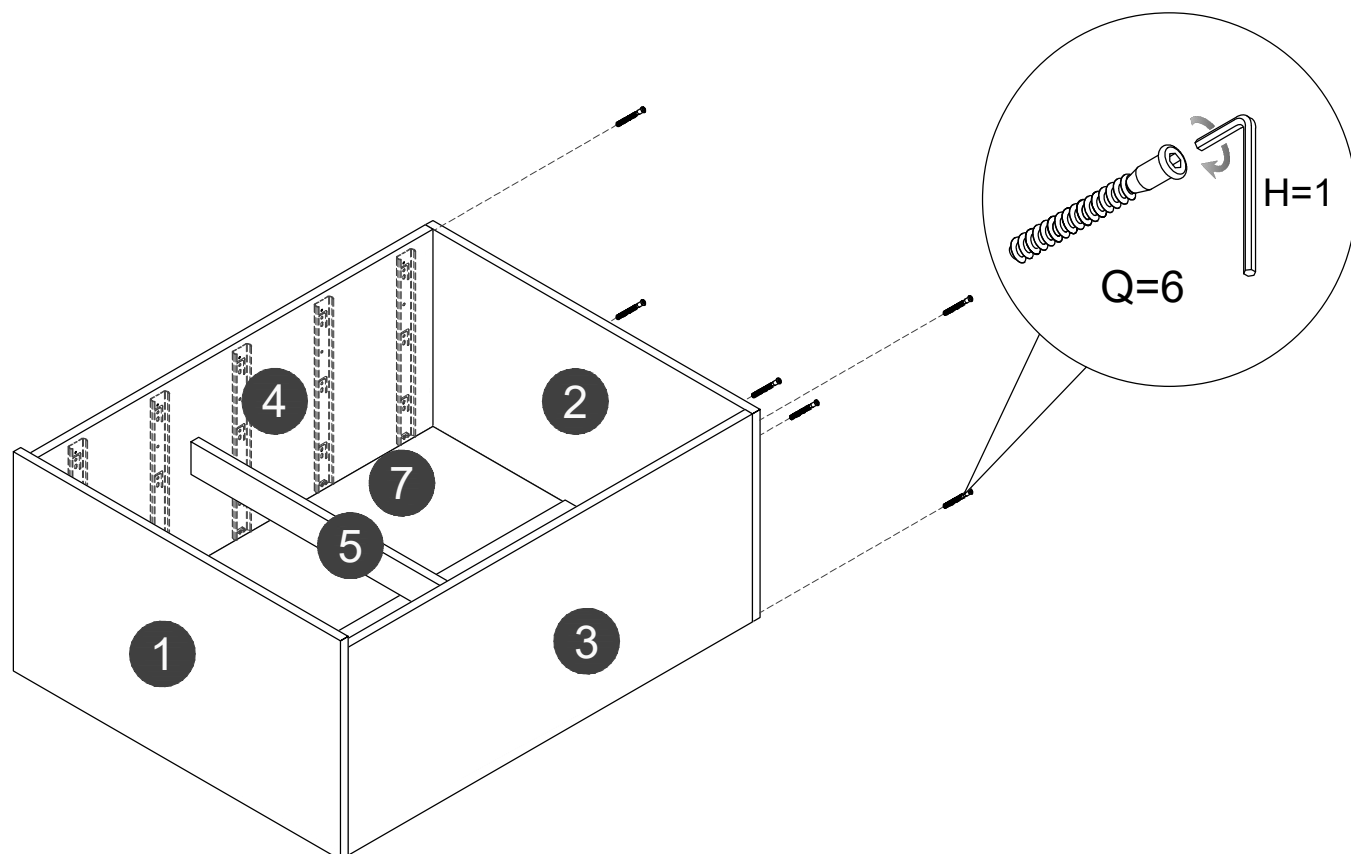


STEP 6

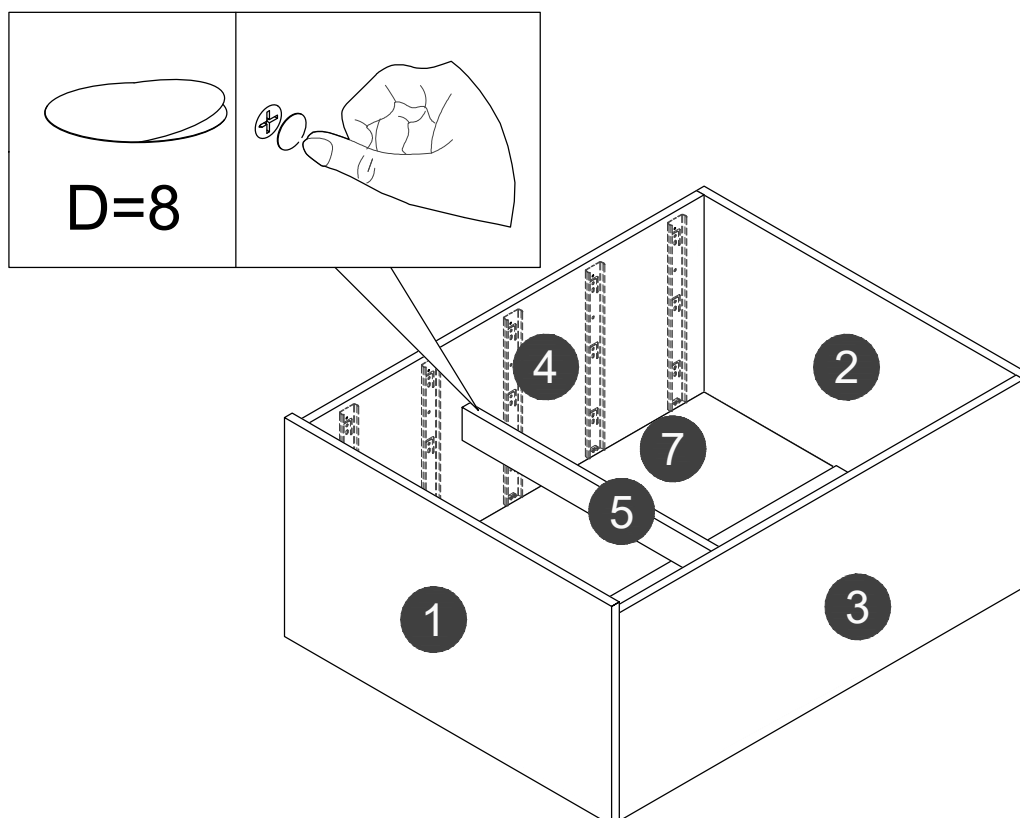


STEP 7

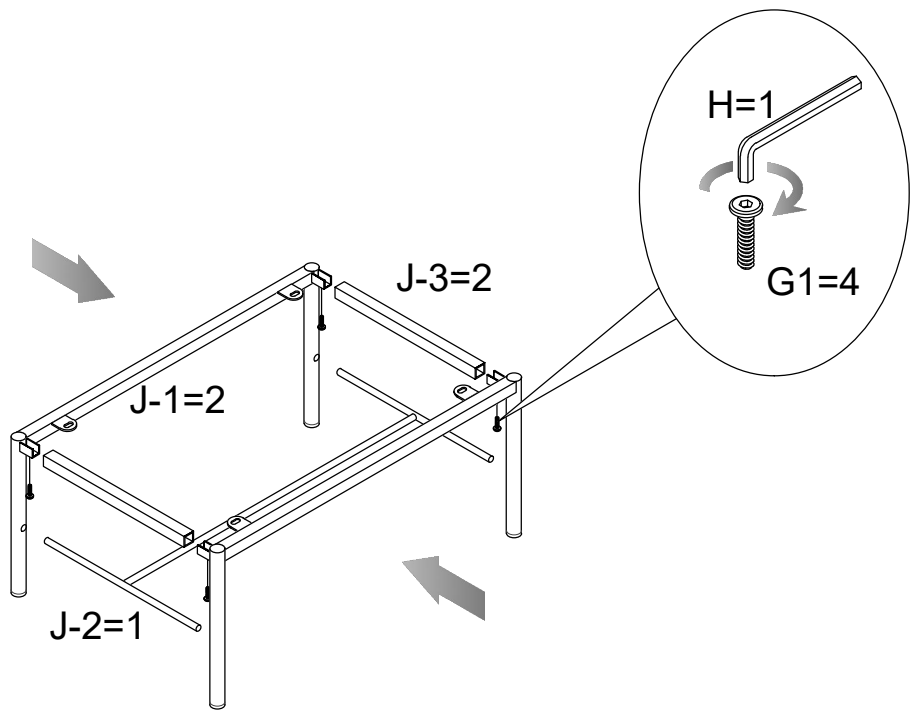


STEP 8

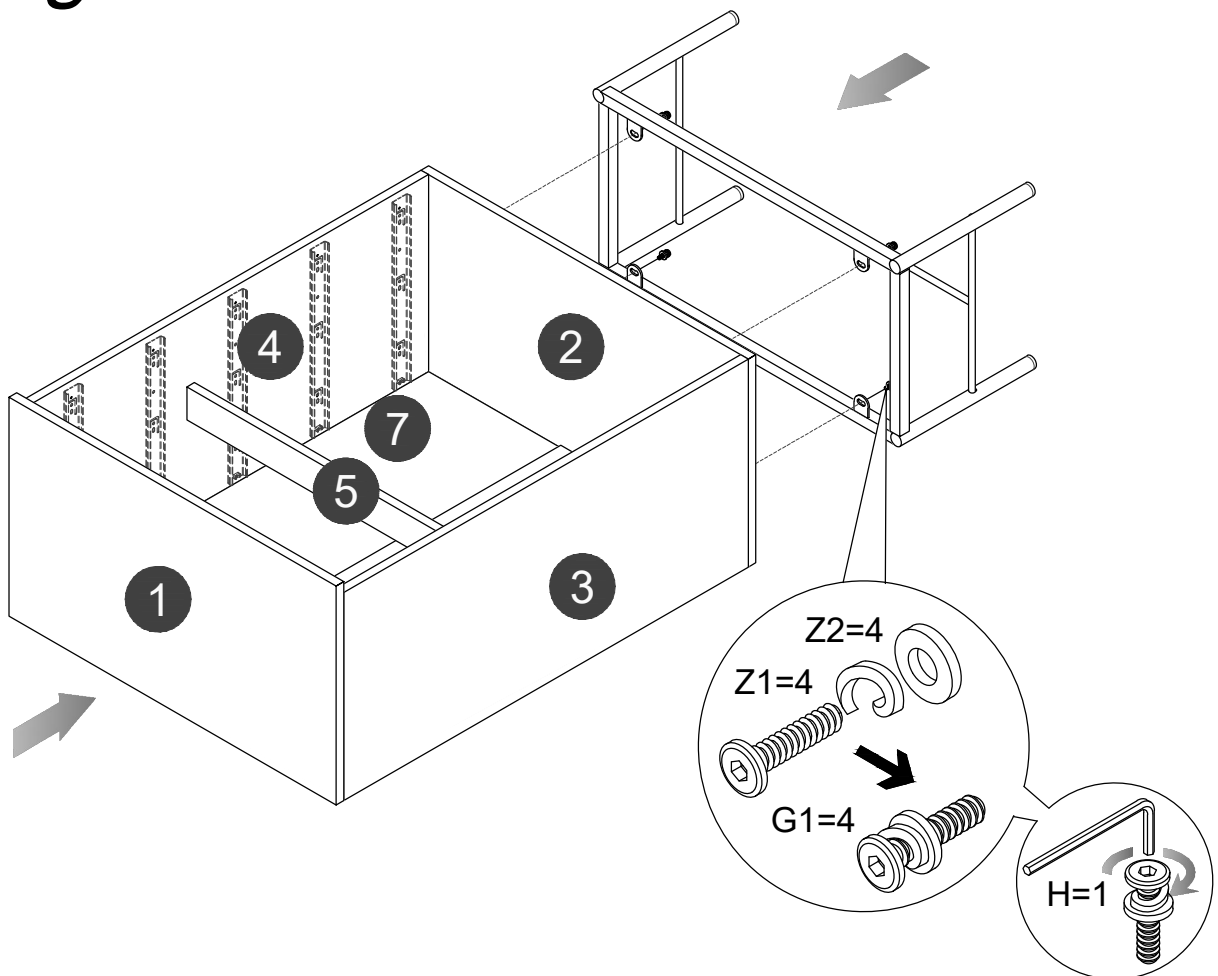


STEP 9

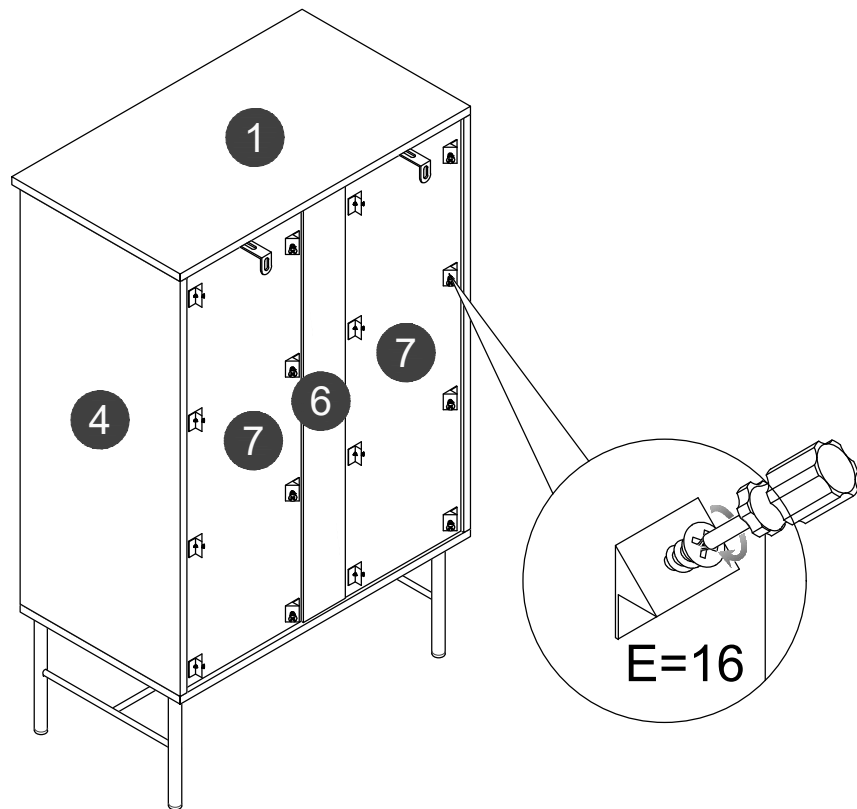

STEP 10

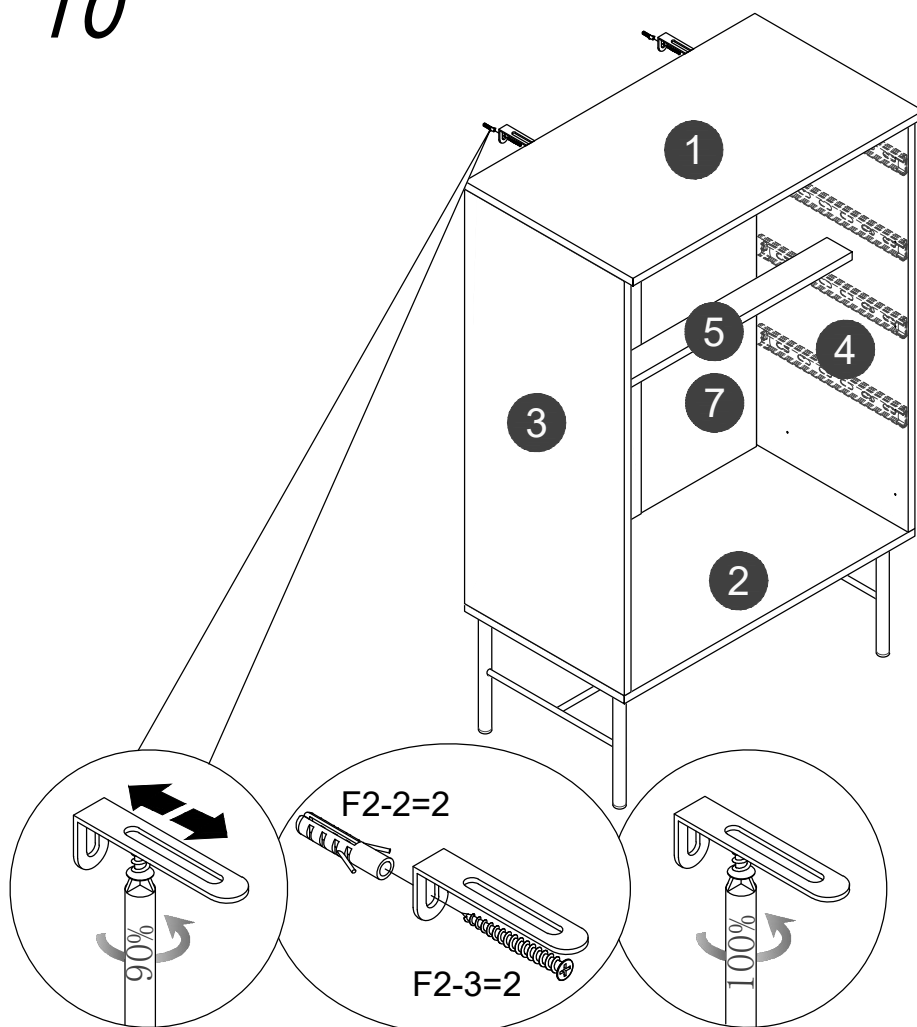


STEP 11

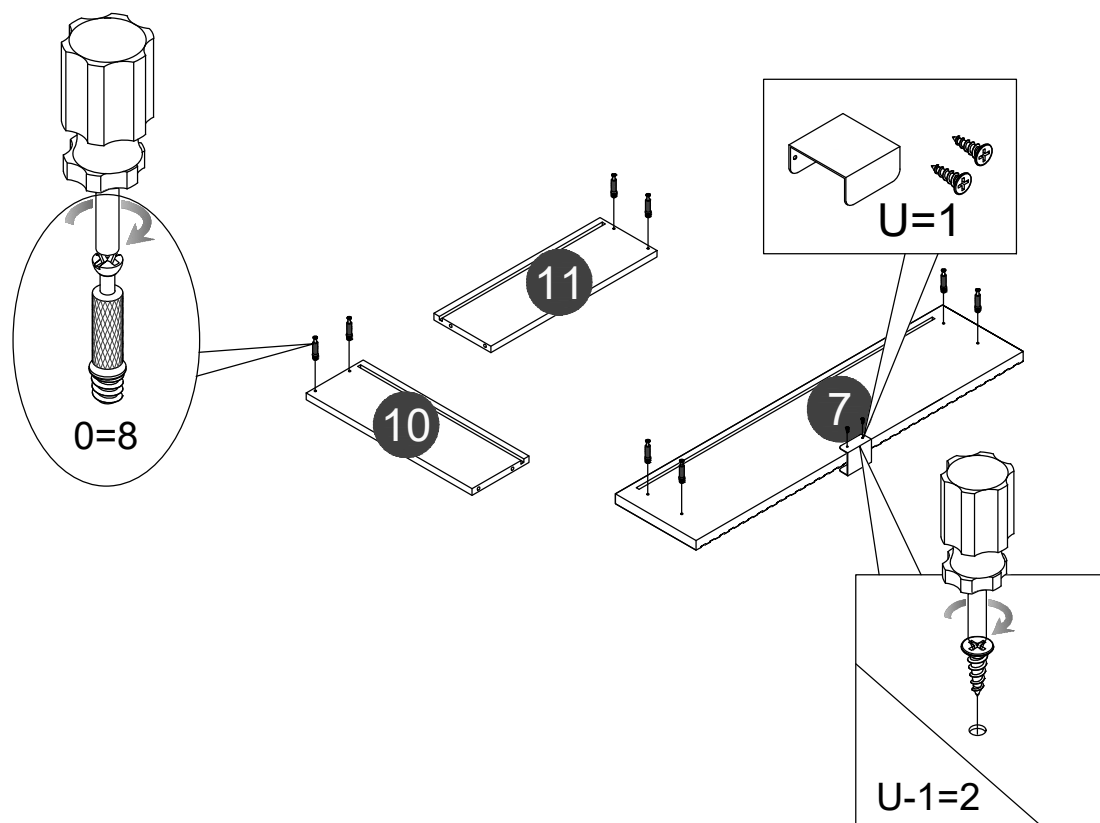


X5

STEP 12

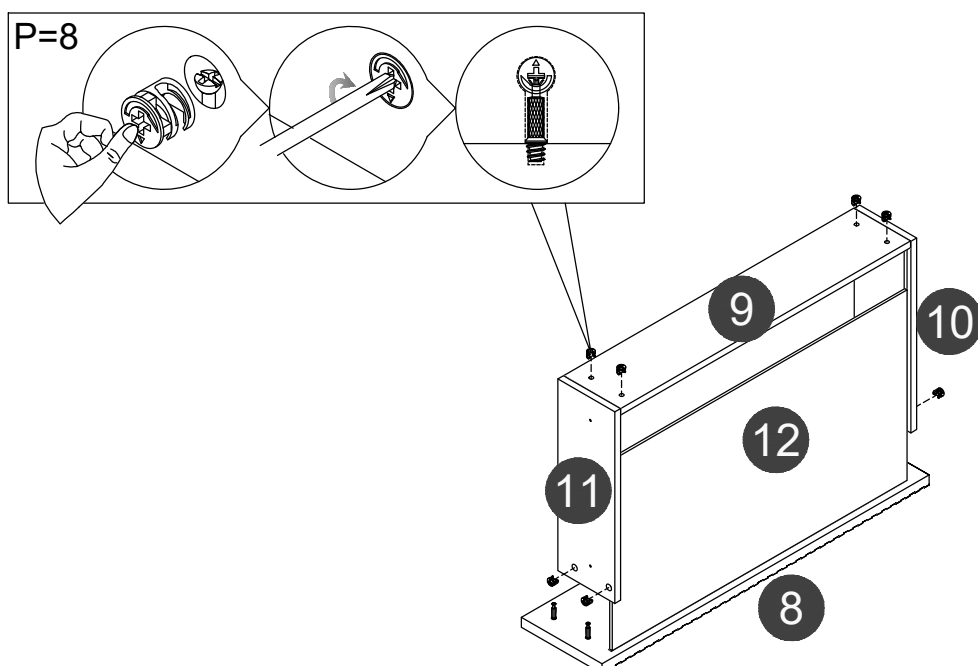


X5

STEP 13

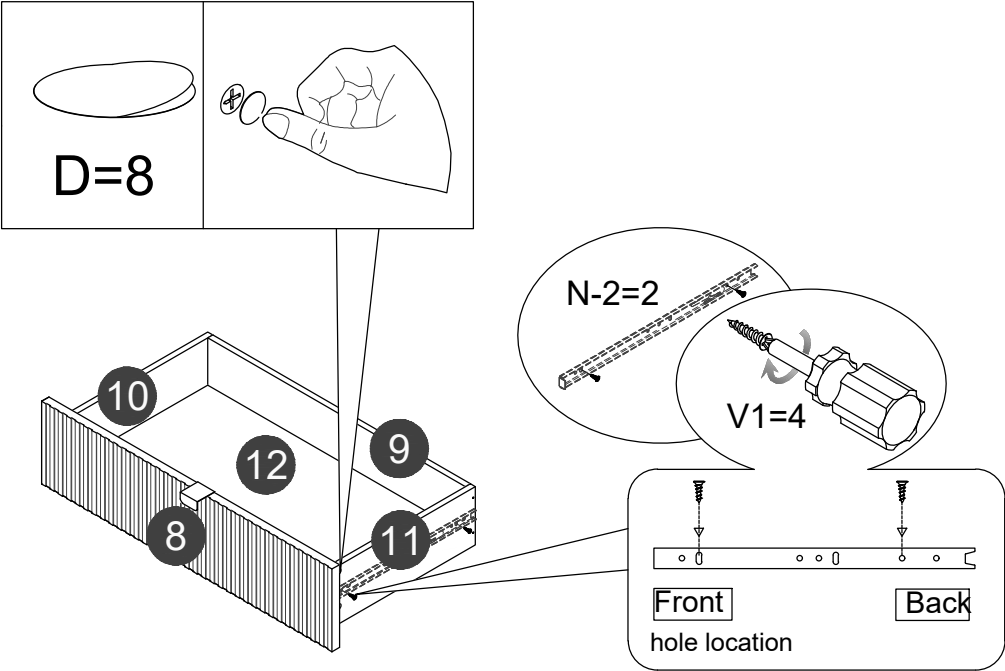


X5


STEP 14

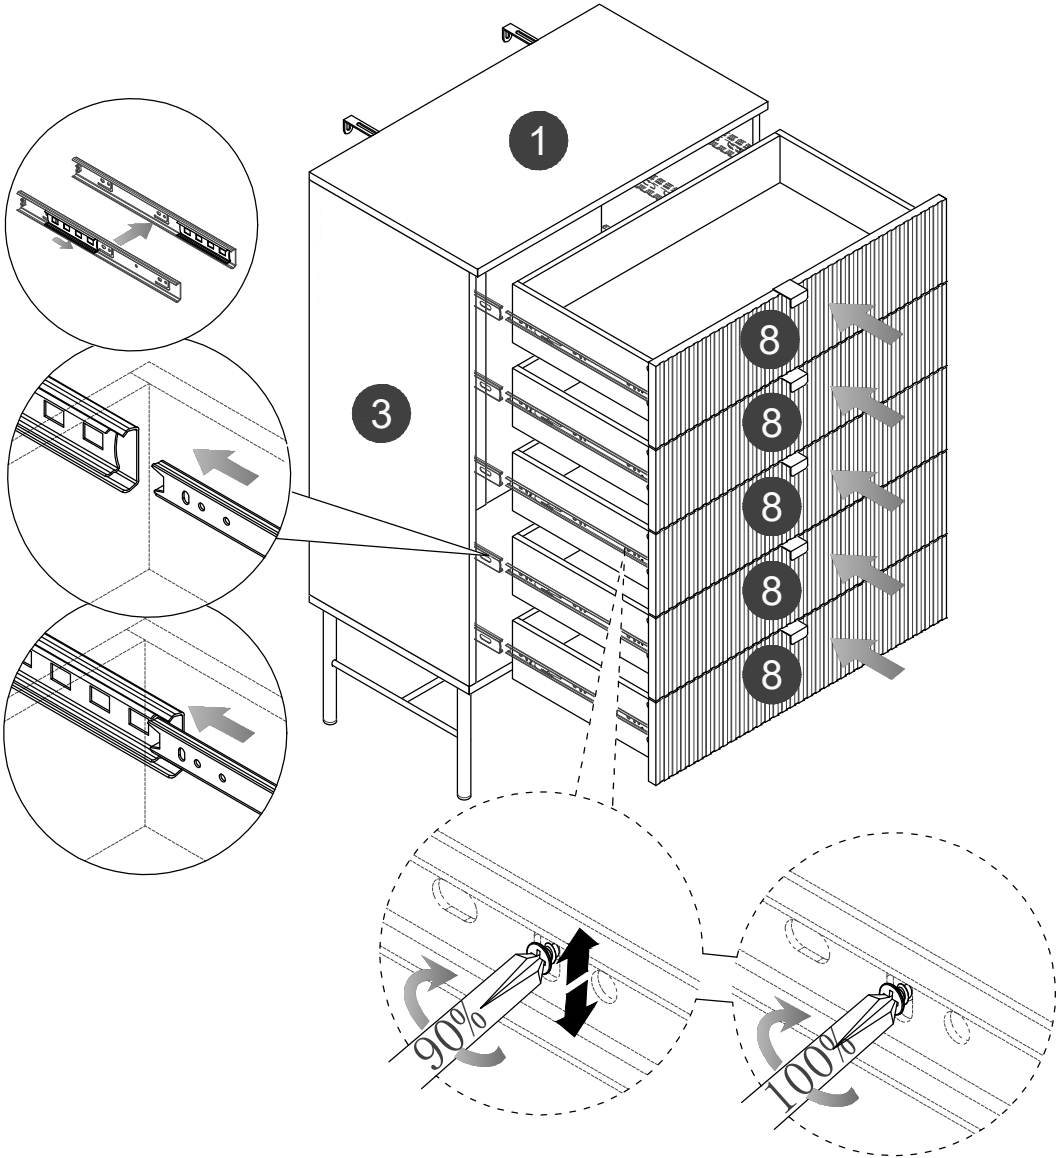

STEP 15

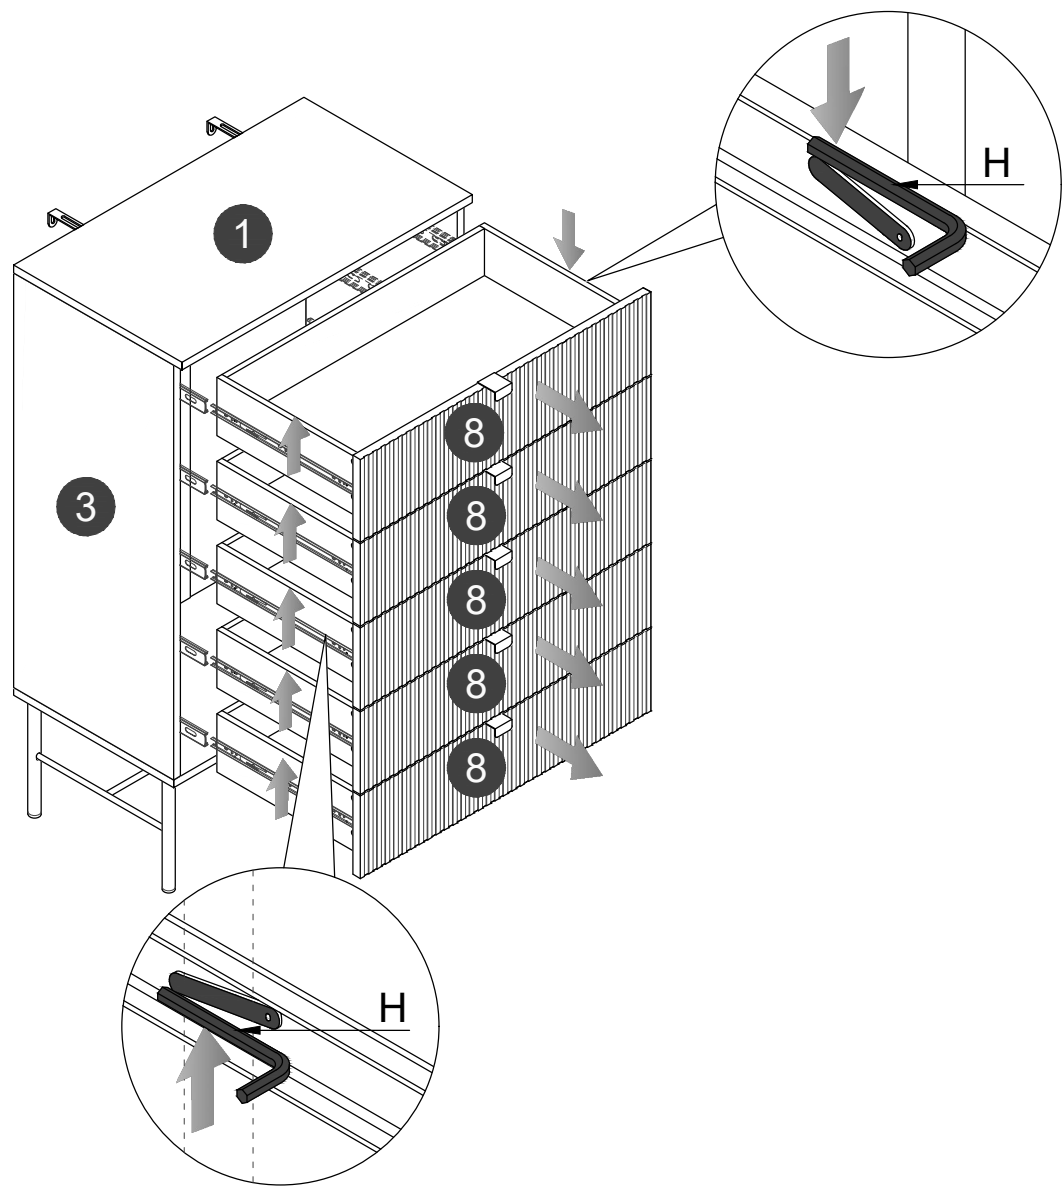

STEP 16

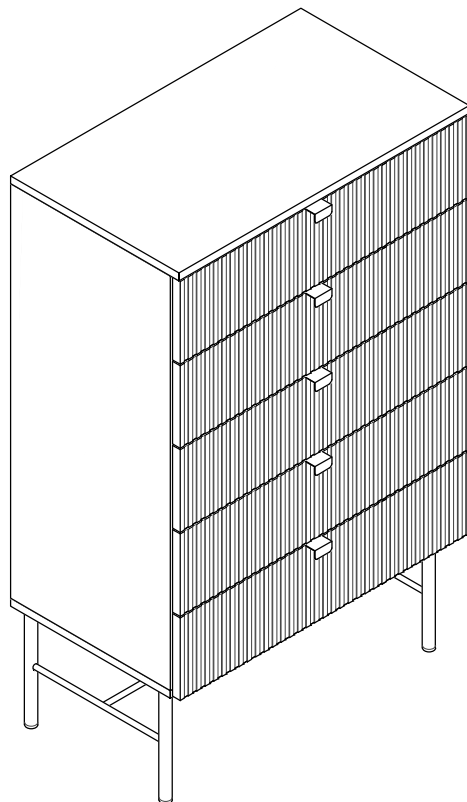

Finish