

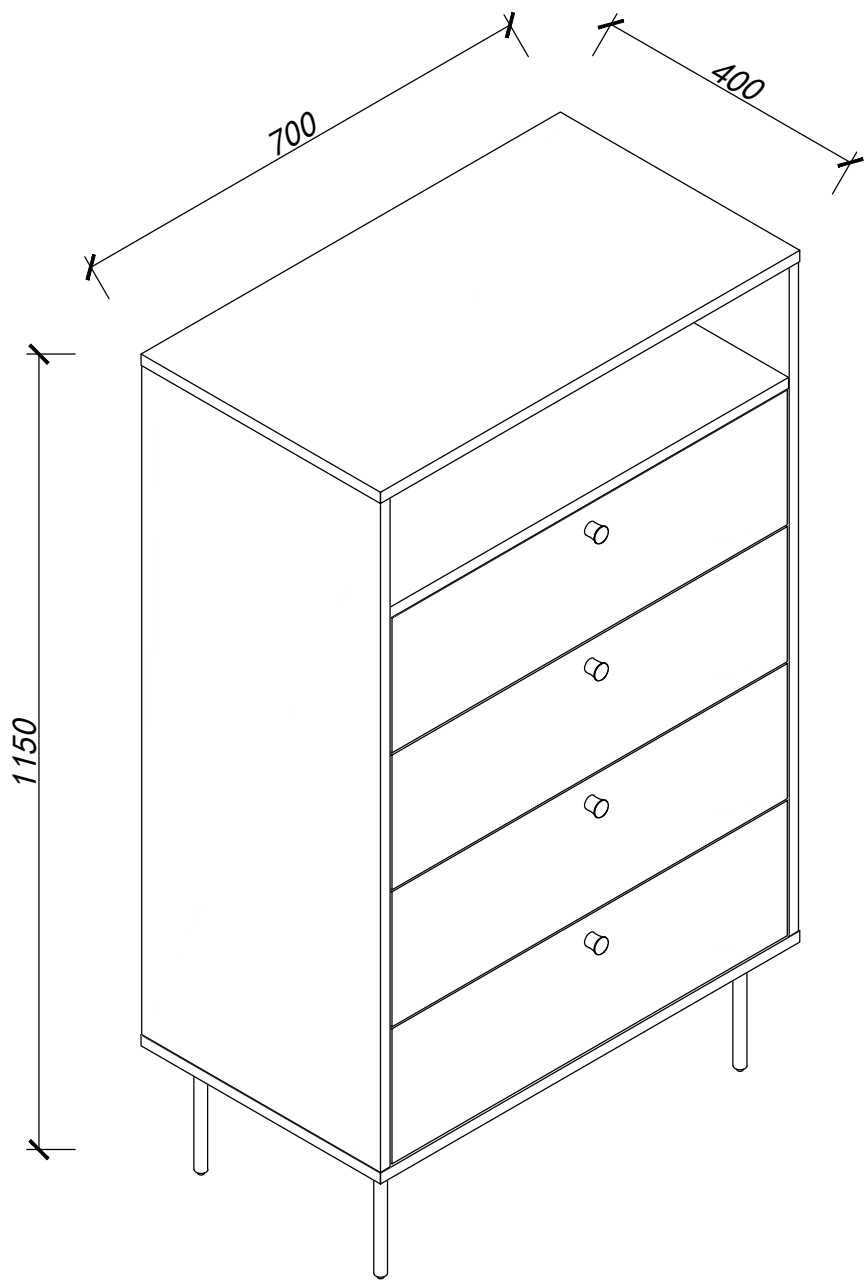
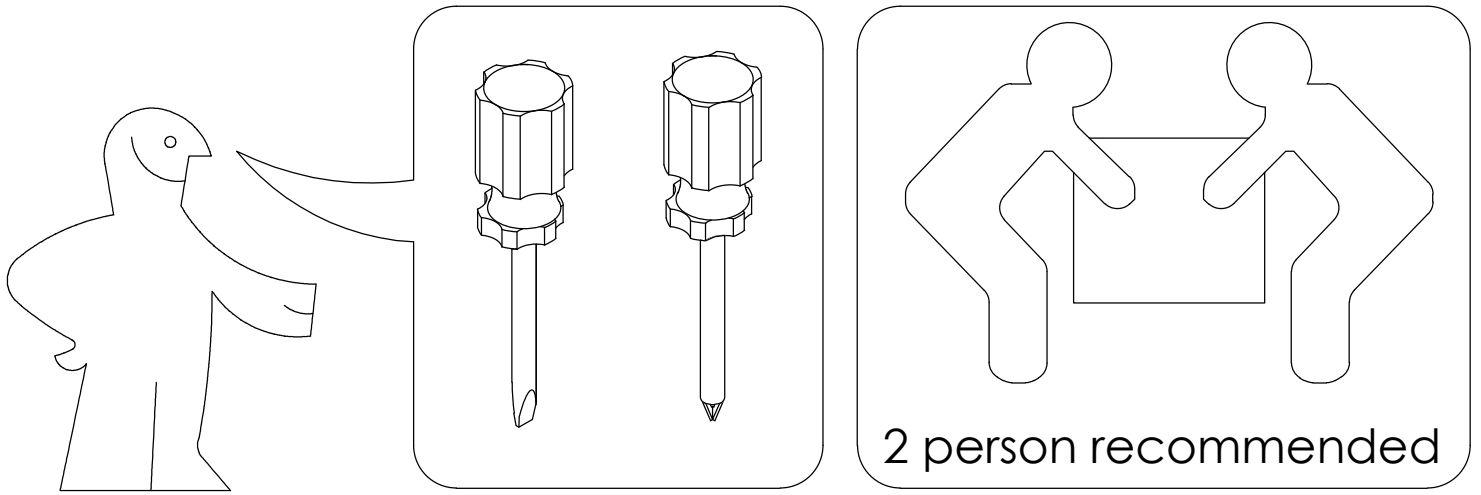


sømcasa


Assembly Instruction

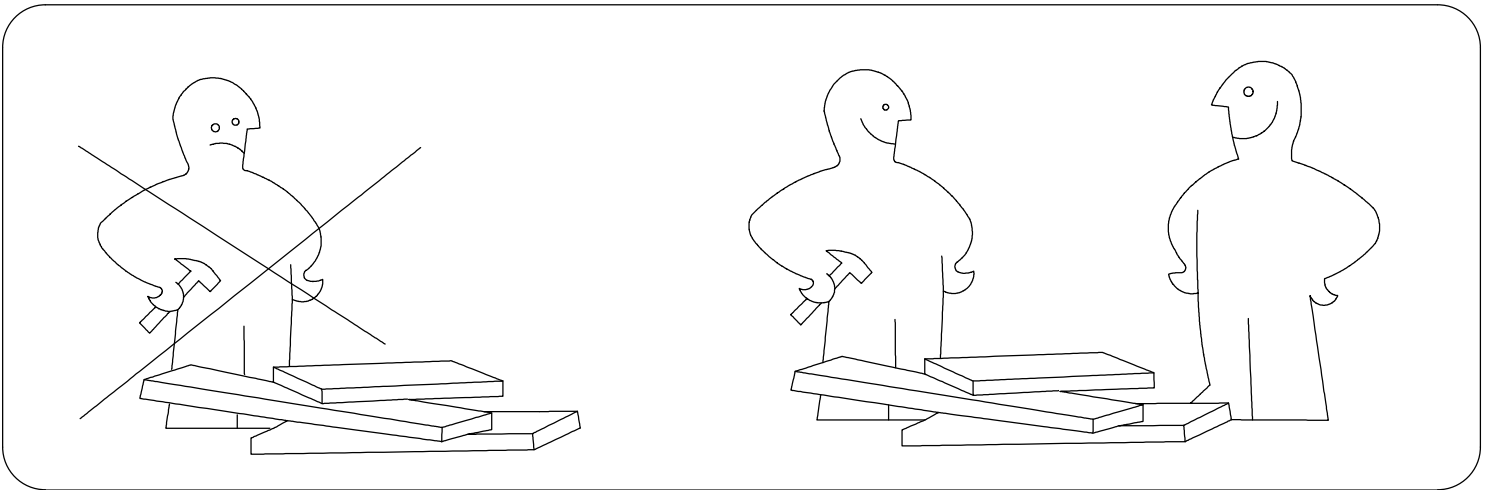

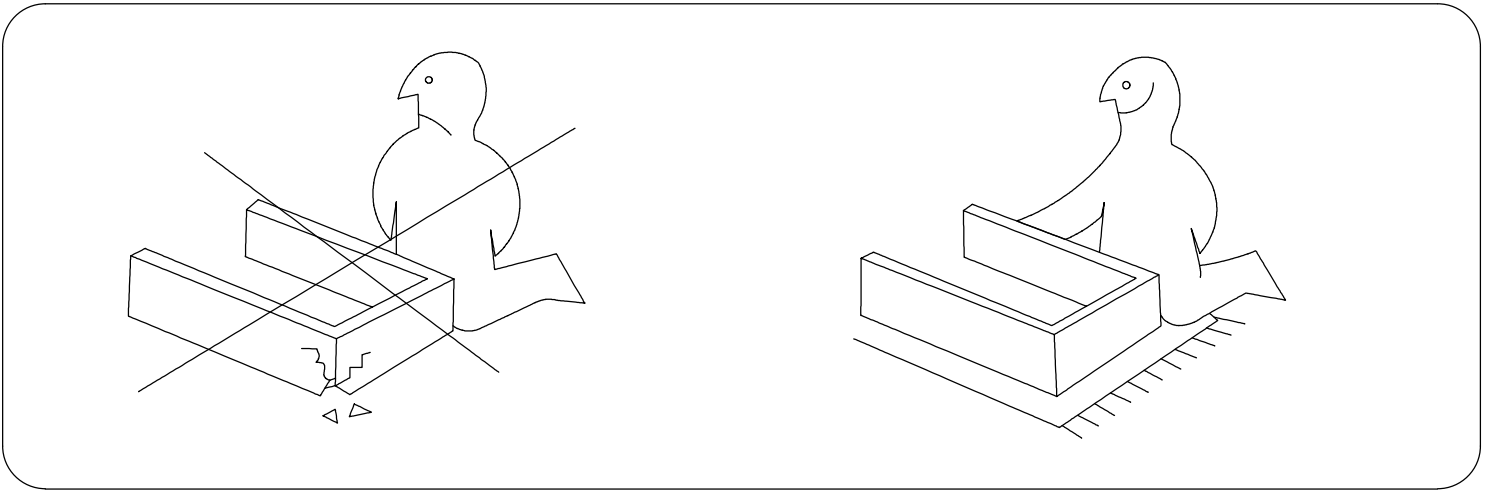

Panel No	Panel Sizes	Quantity
1	700*400*16	1
2	700*400*16	1
3	968*399*16	1
4	968*399*16	1
5	666*398*16	1
6	792*100*16	1
7	676*170*5	1

Panel No	Panel Sizes	Quantity
8	293*802*5	1
9	660*195*16	4
10	622*150*12	4
11	350*150*12	4
12	350*150*12	4
13	337*100*12	4
14	632*348*5	4

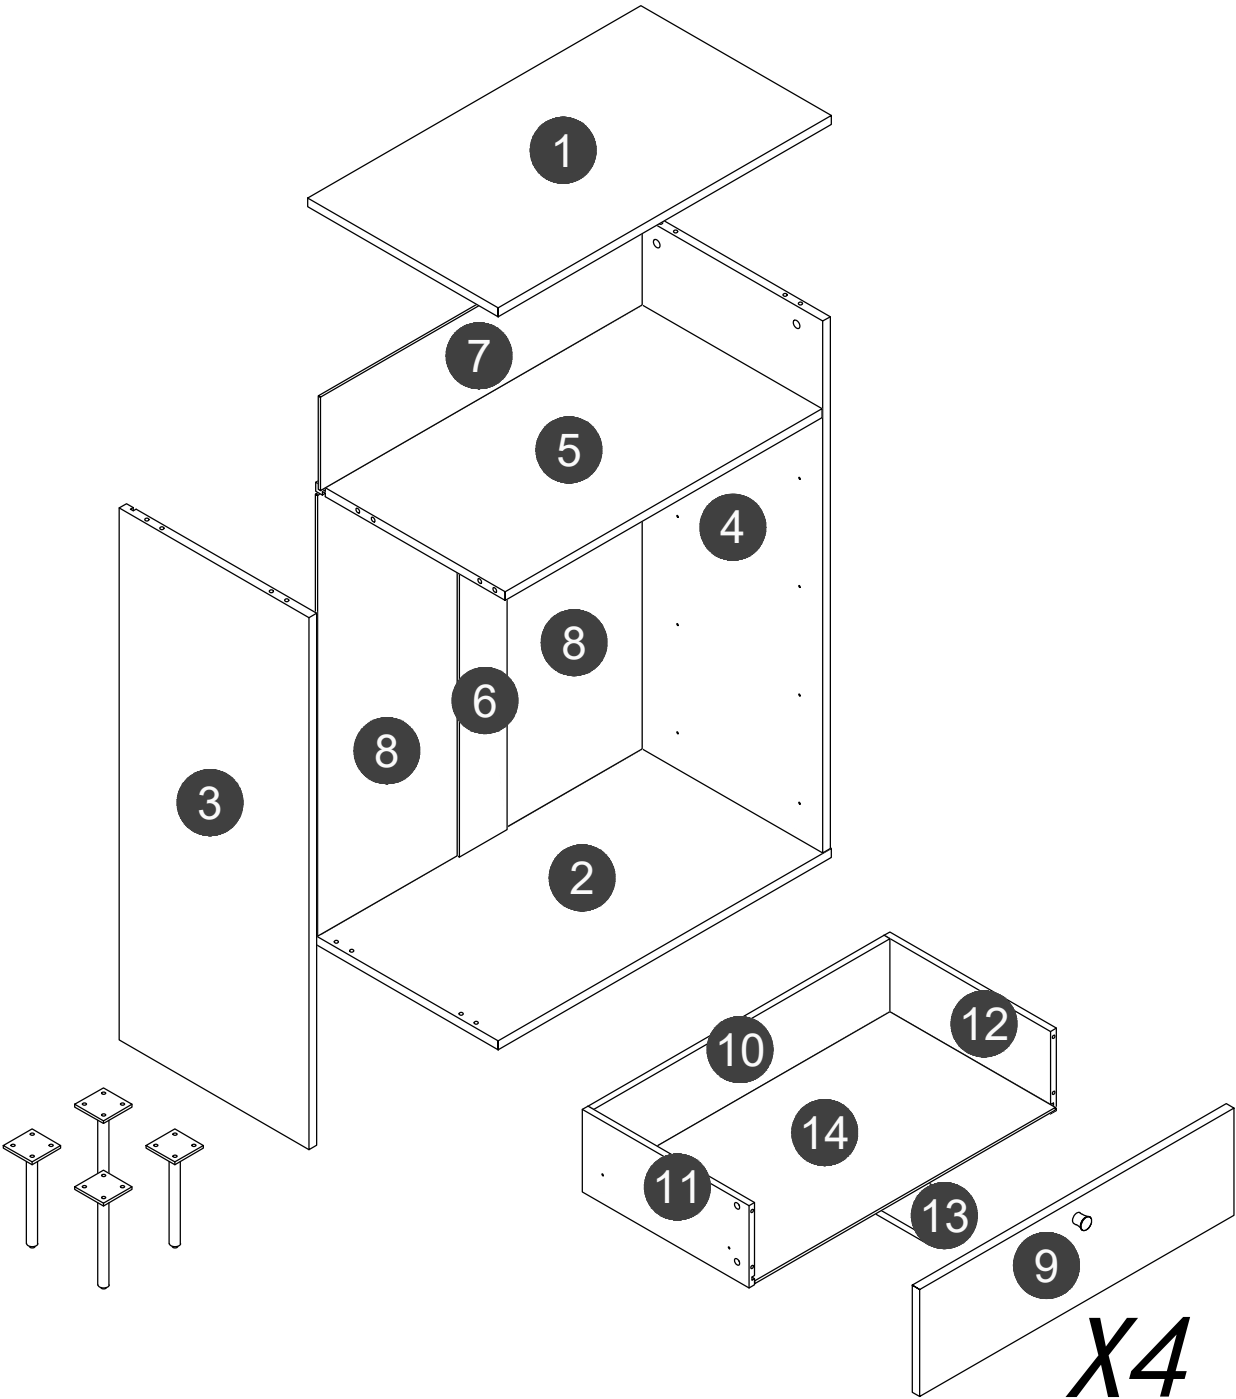

Fittings




M6*40

A=10



Φ8*30

B=12

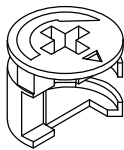

Φ15*12

C=10




Φ21

D=50



E=18

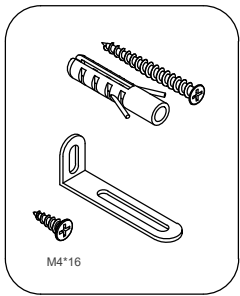


F=1




M6*16

G1=16



H =1




J=4




O =40




P =40

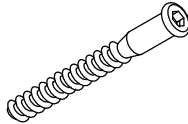


Q=6

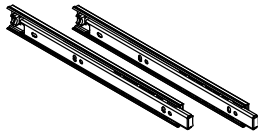

N=4



V1=32

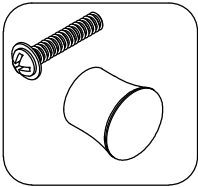

U=4




Z1=16




Z2=16


STEP 1

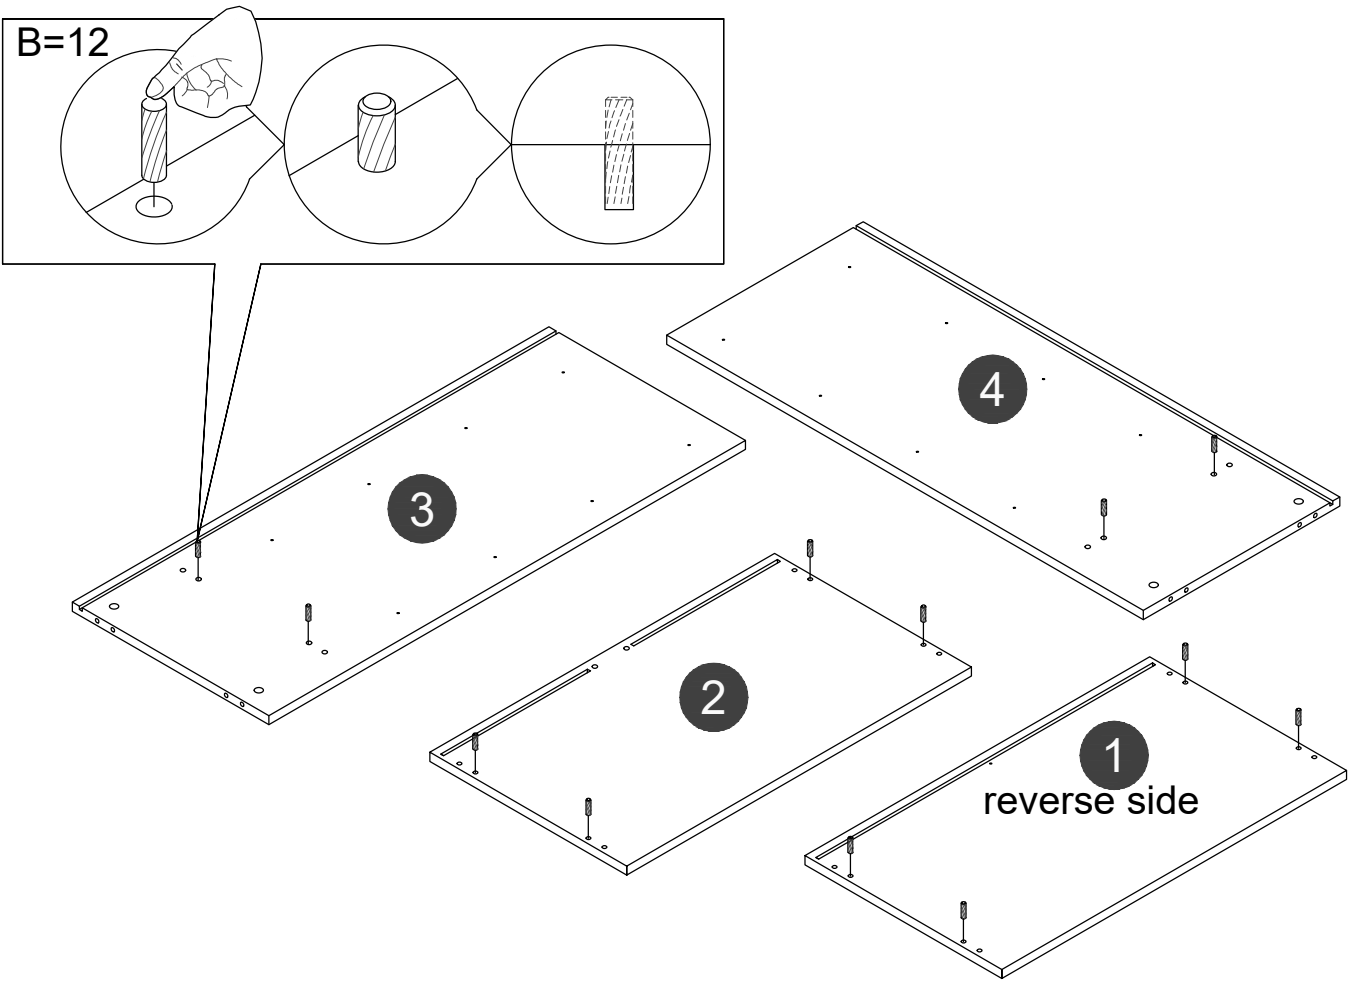


STEP 2

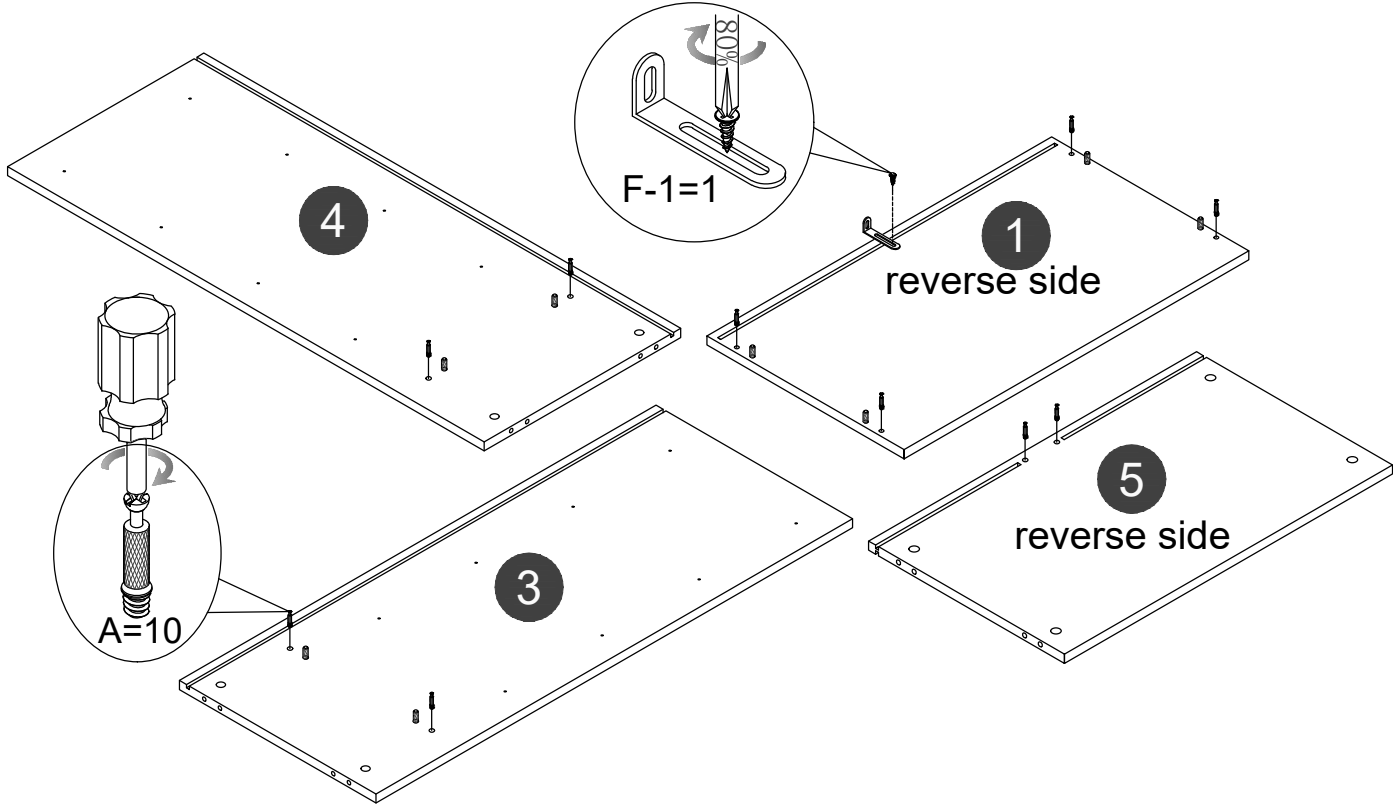


STEP 3

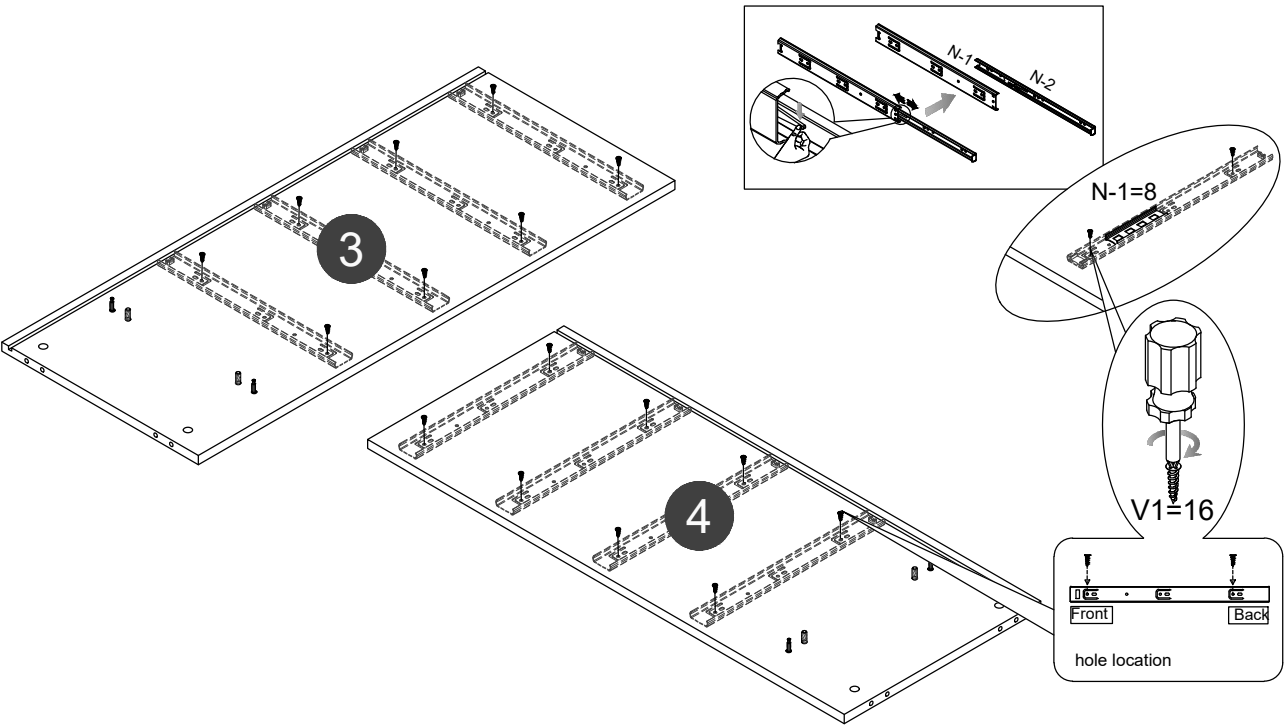


STEP 4

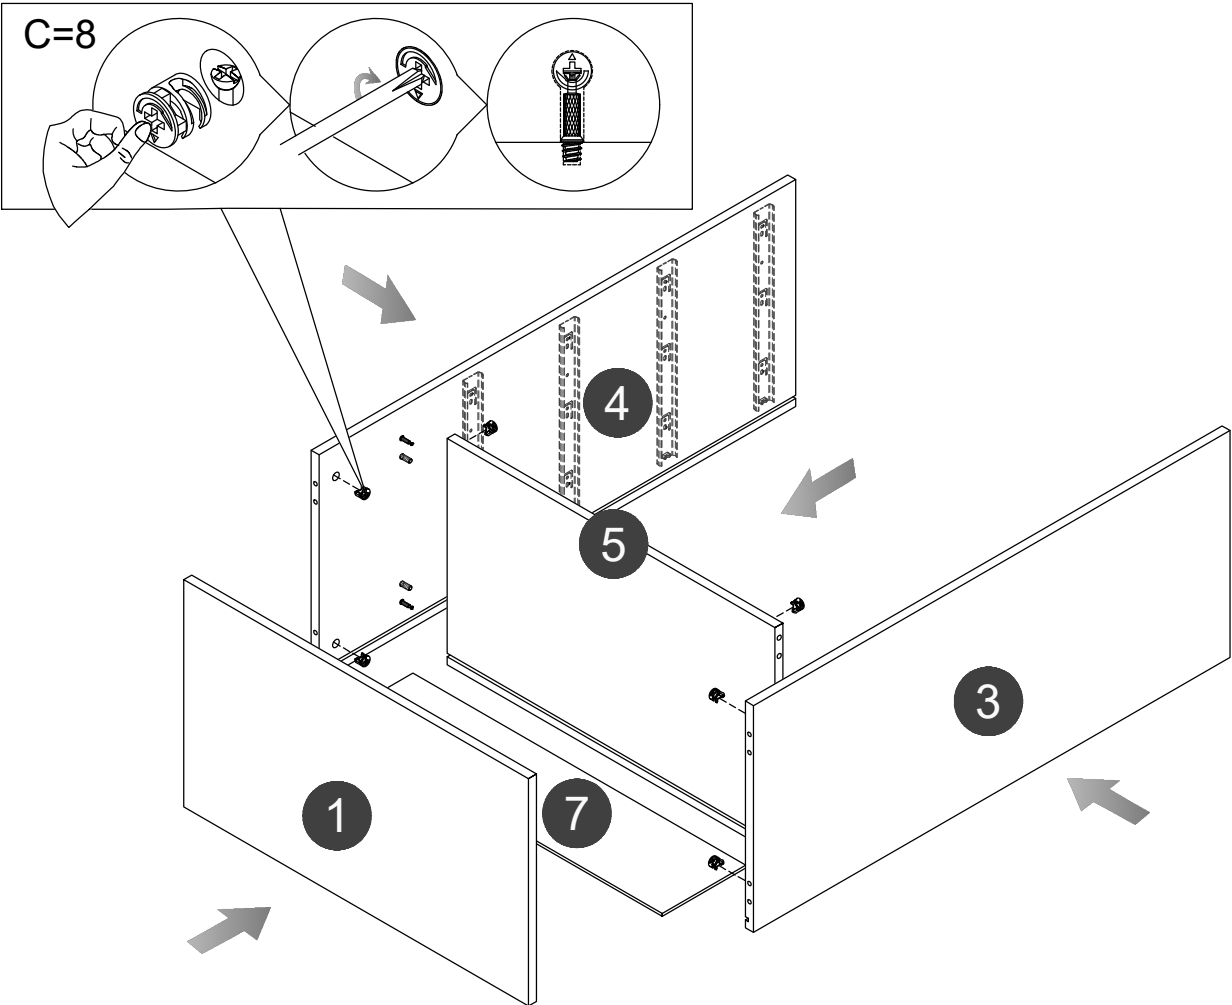


STEP 5

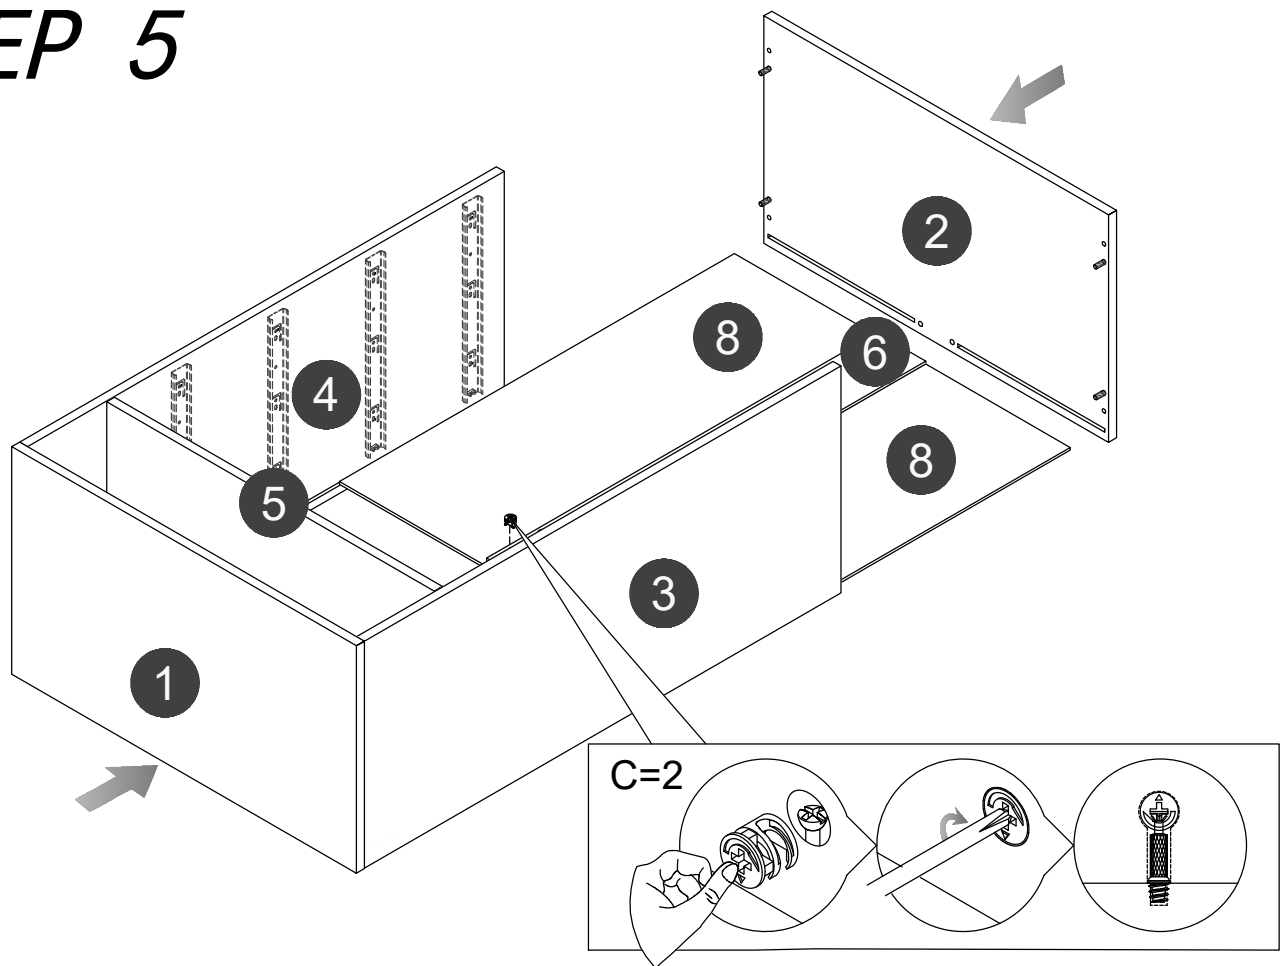


STEP 6

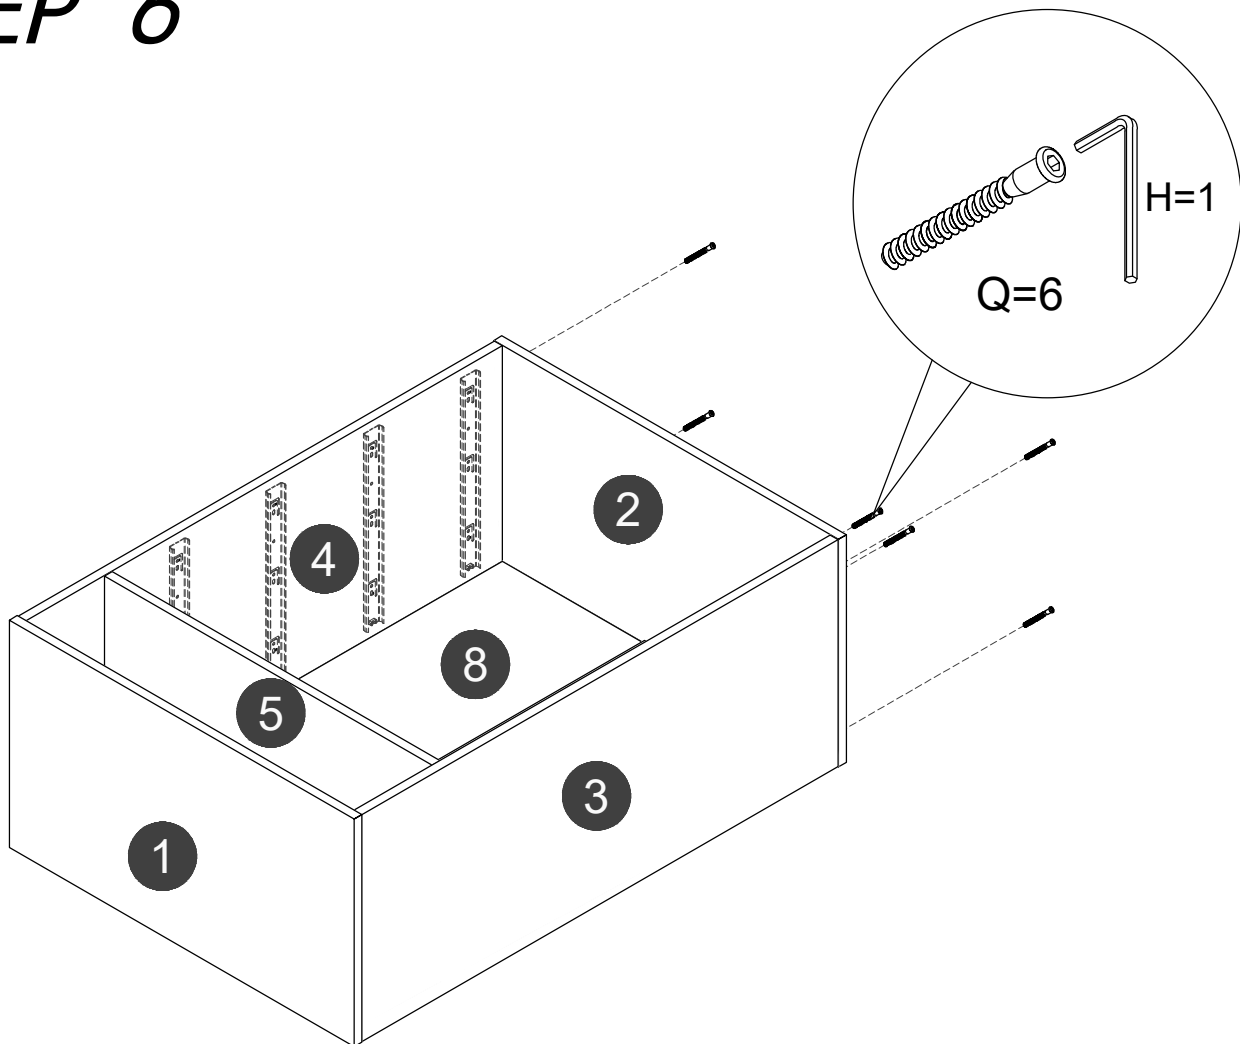


STEP 7

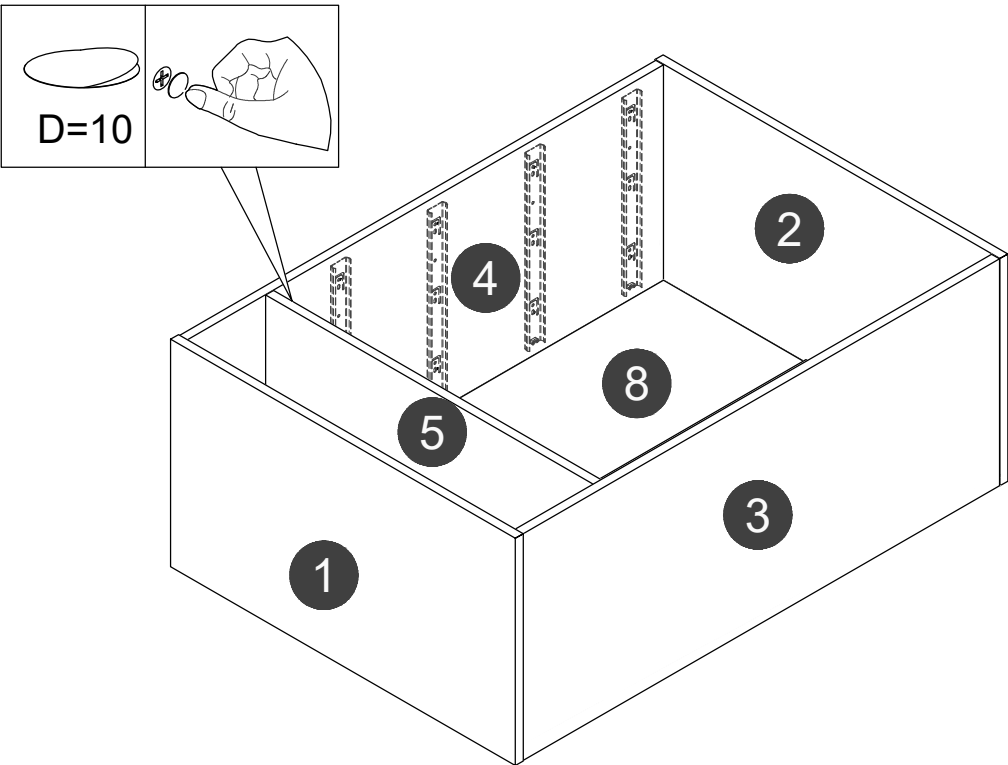


STEP 8

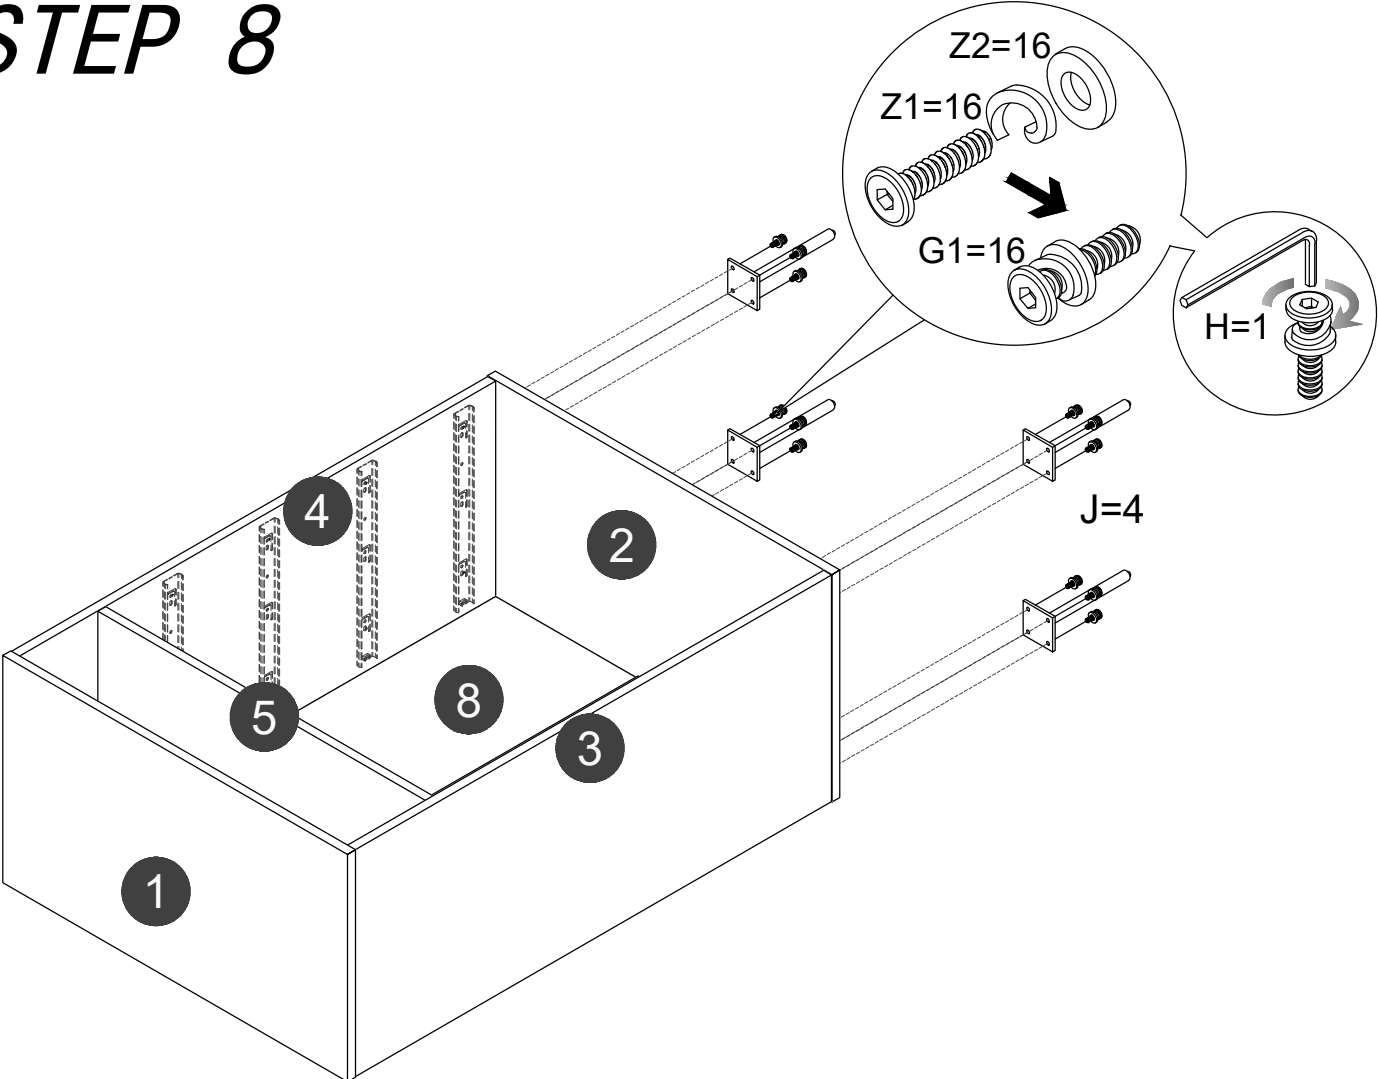


STEP 9

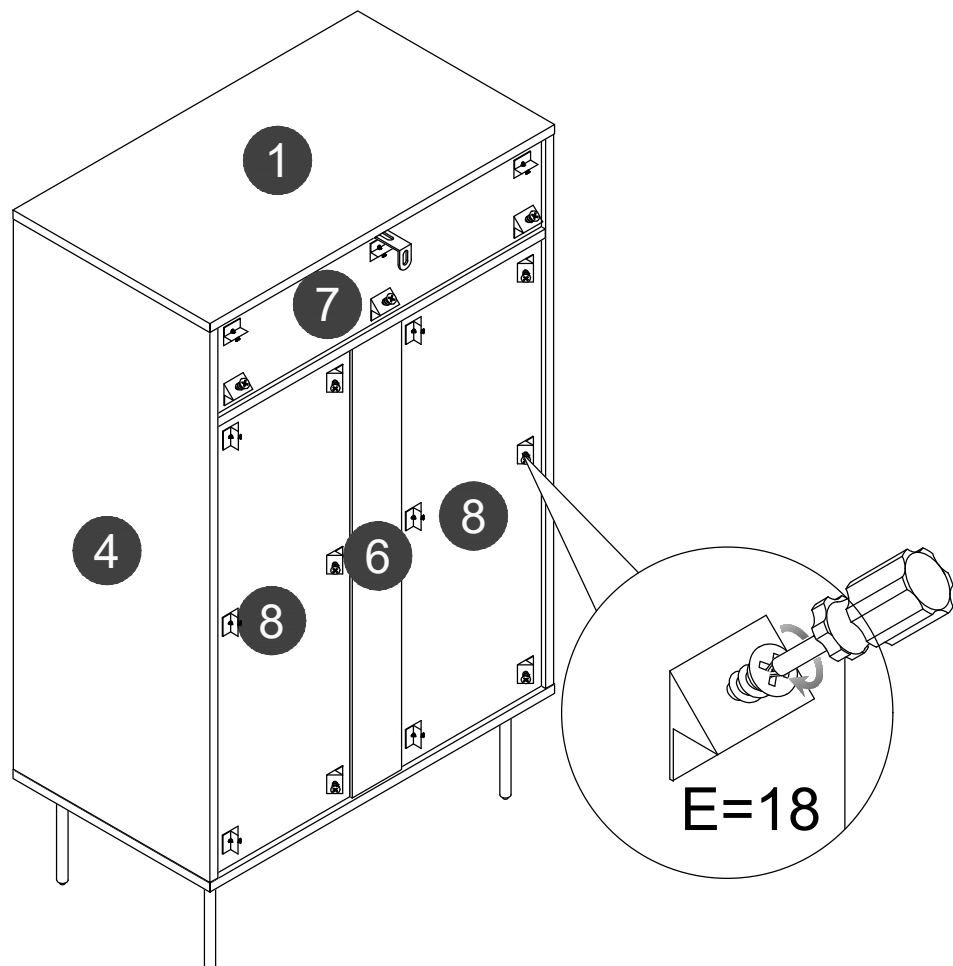


STEP 10

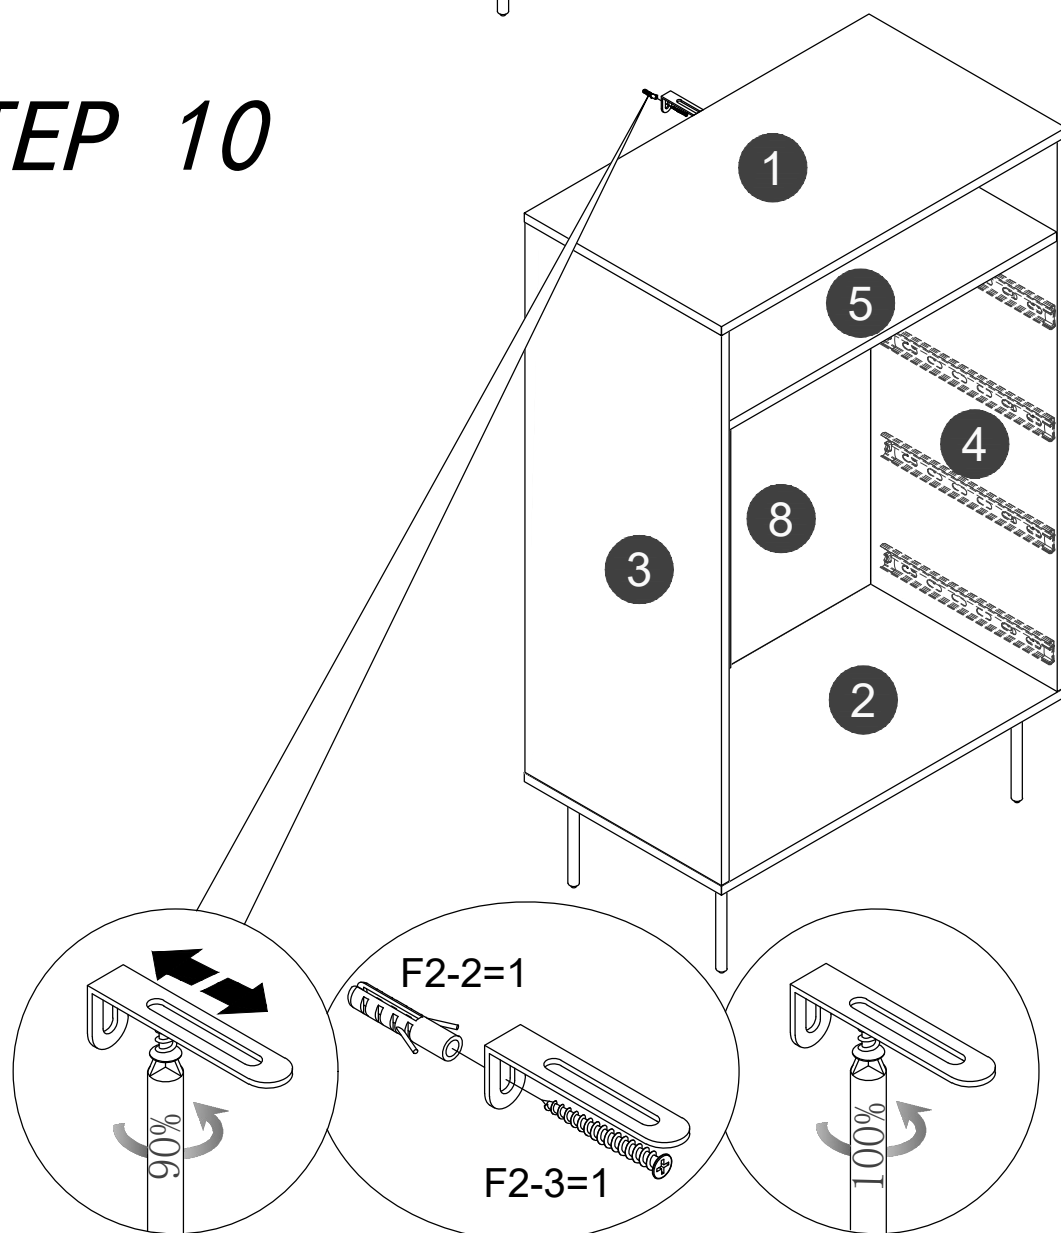


STEP 11

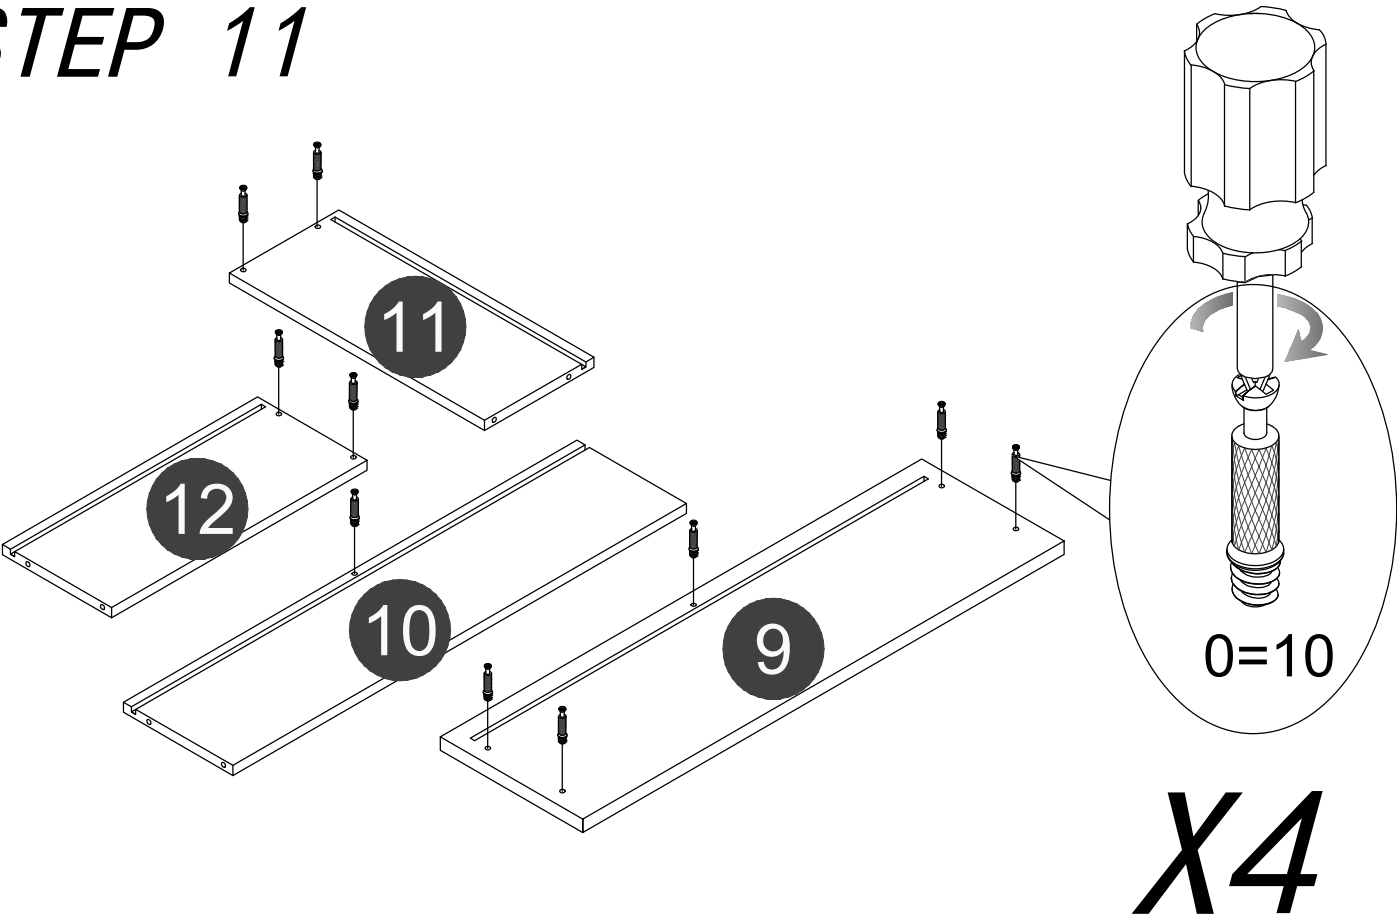

STEP 12

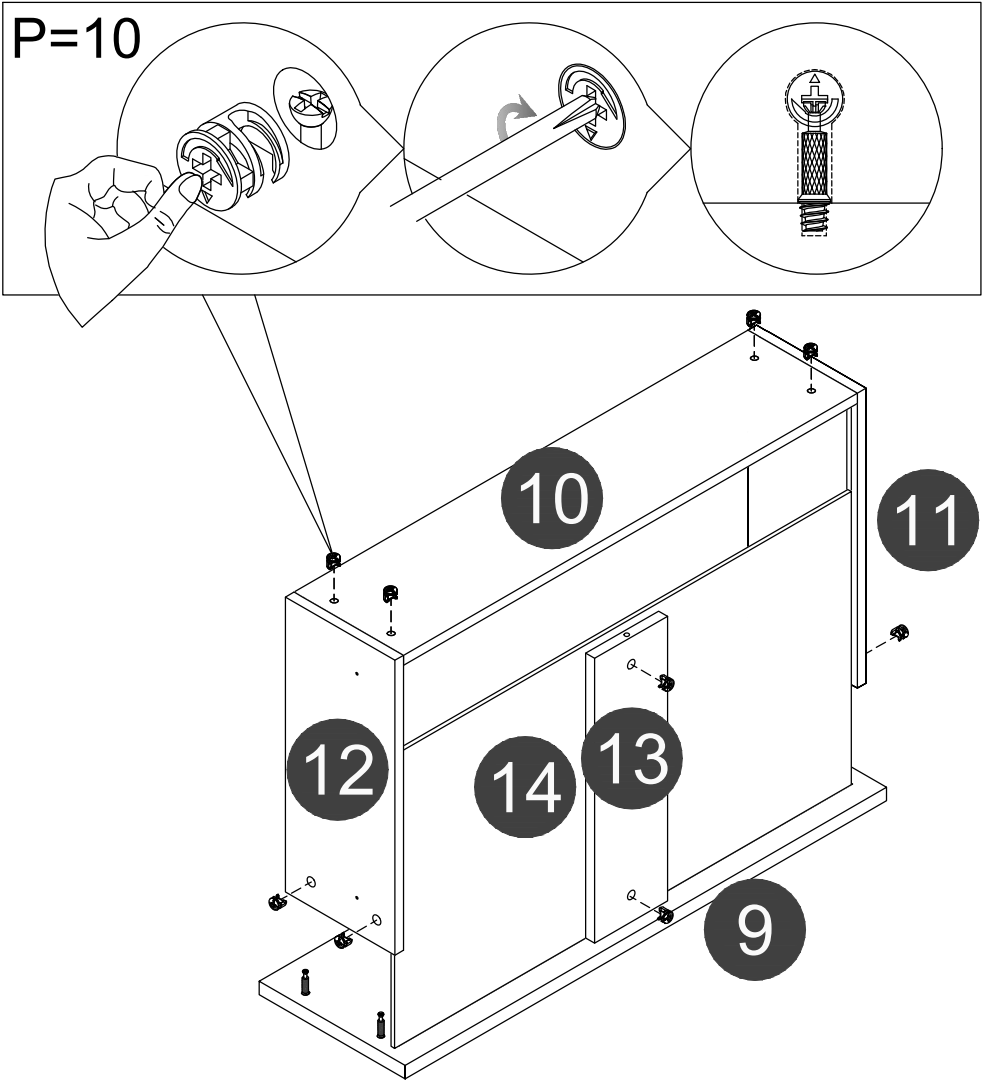


STEP 13

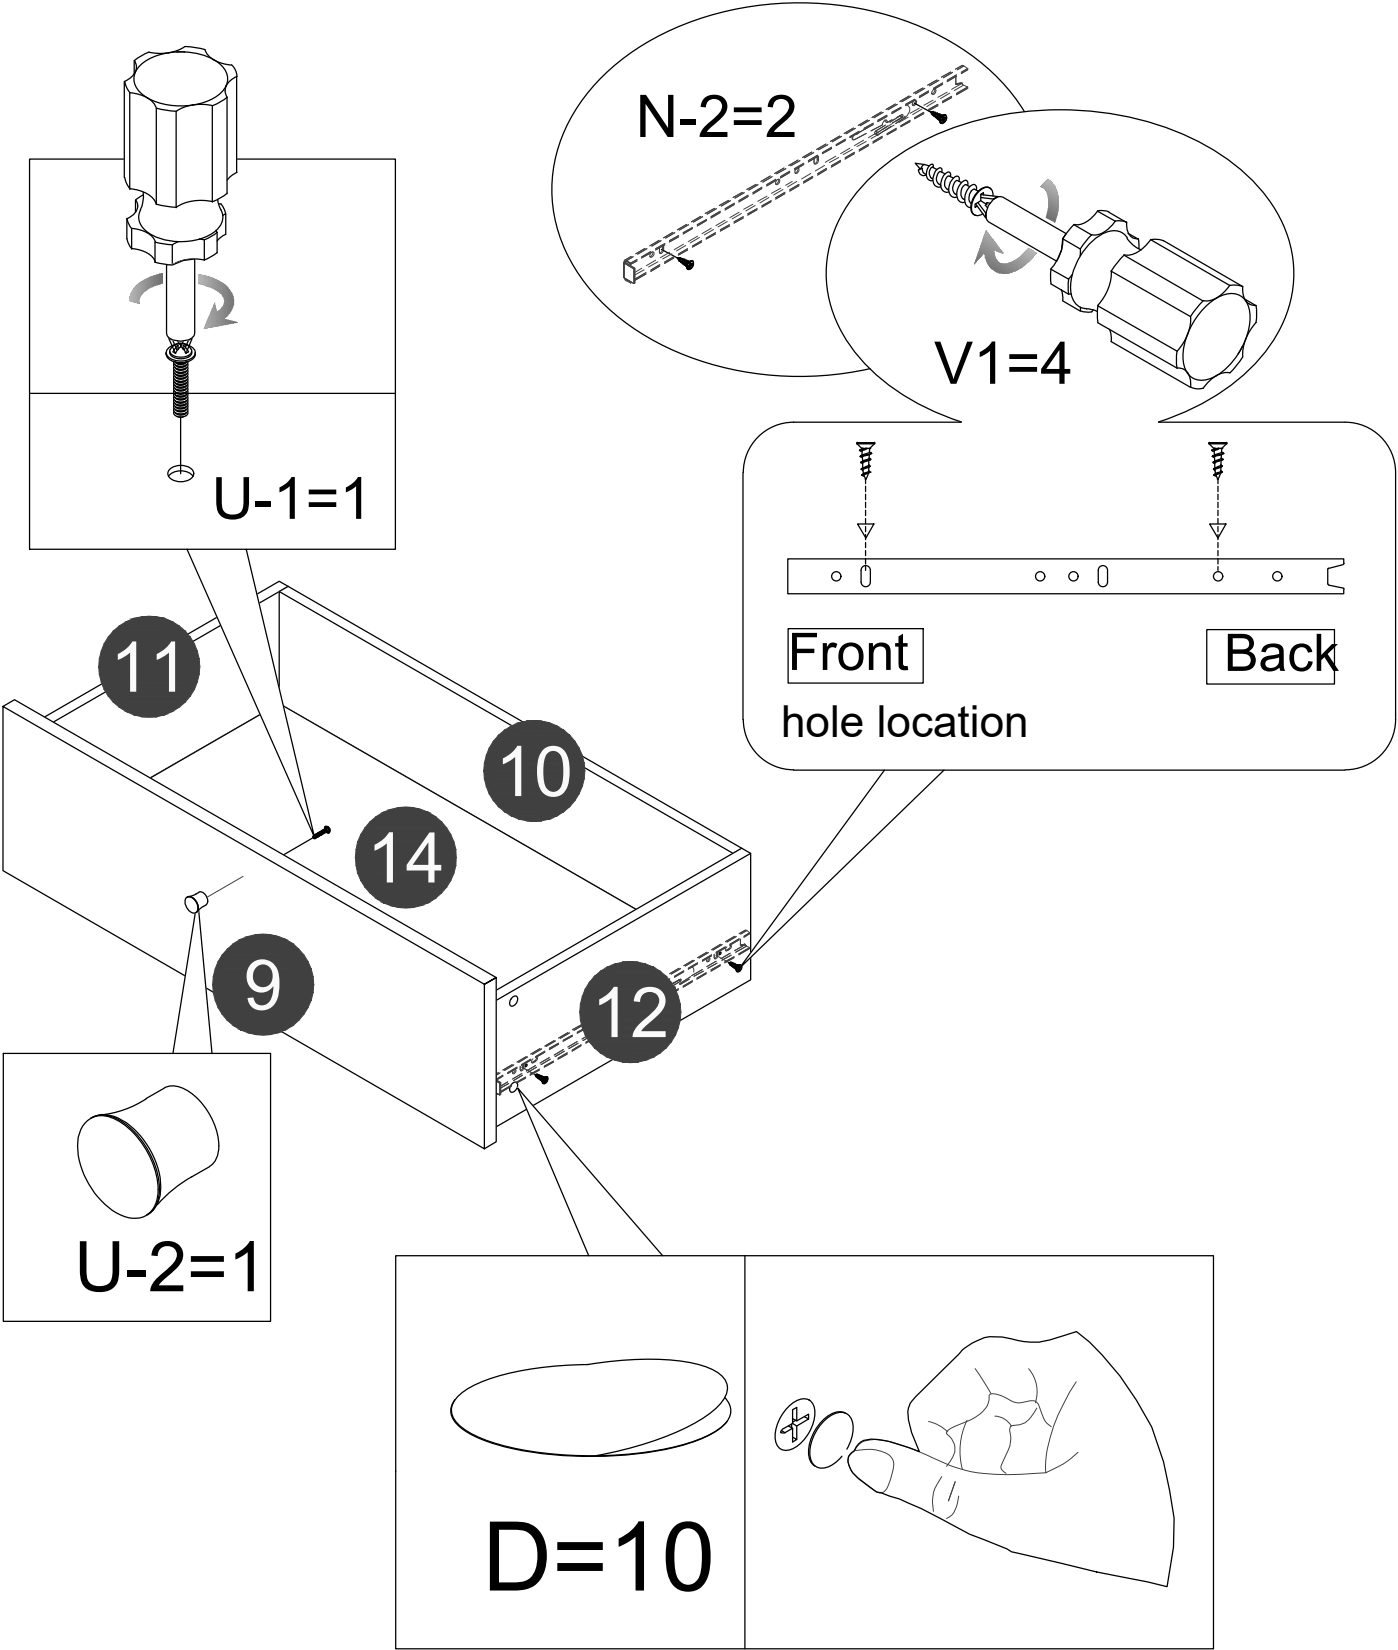


X4


STEP 14

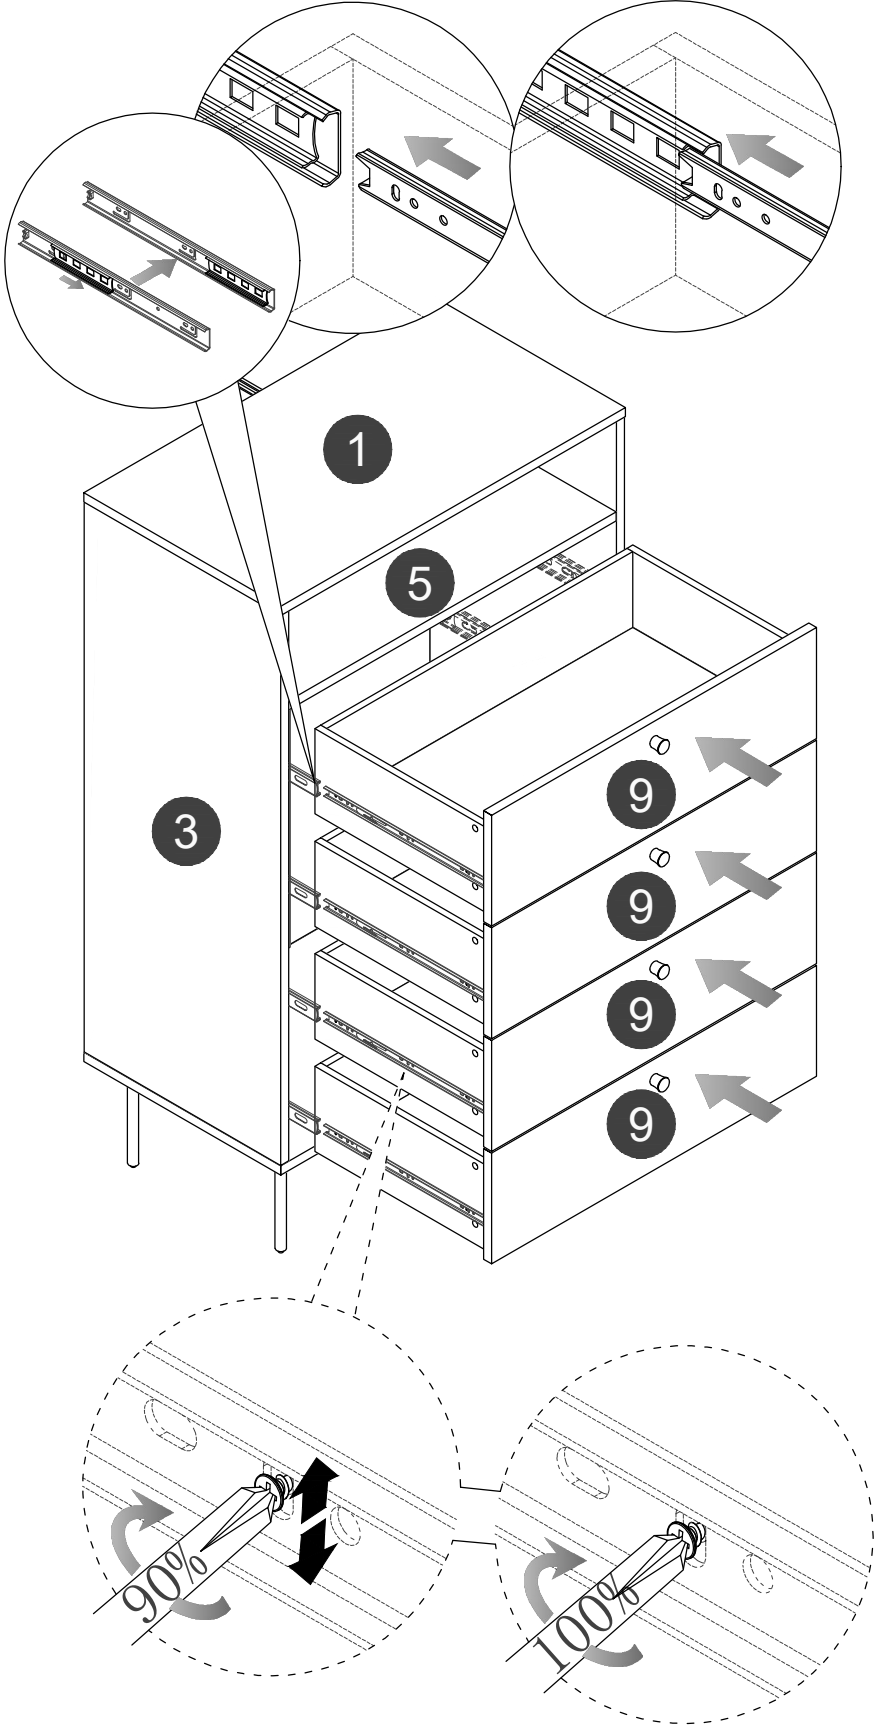

STEP 15

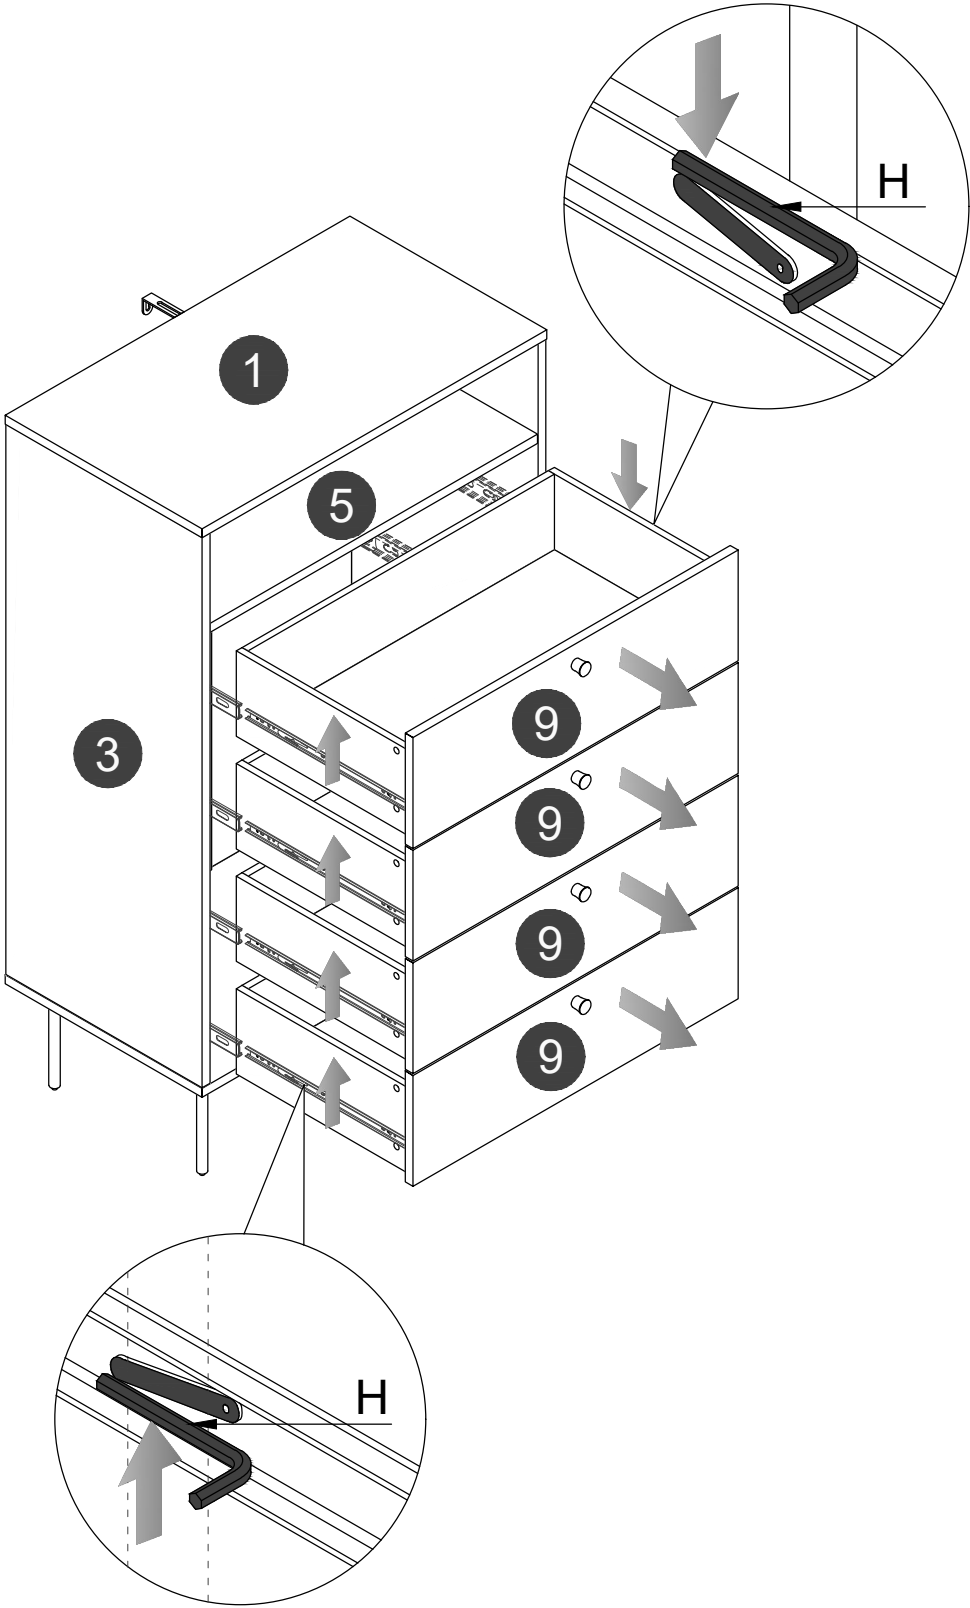

STEP 16

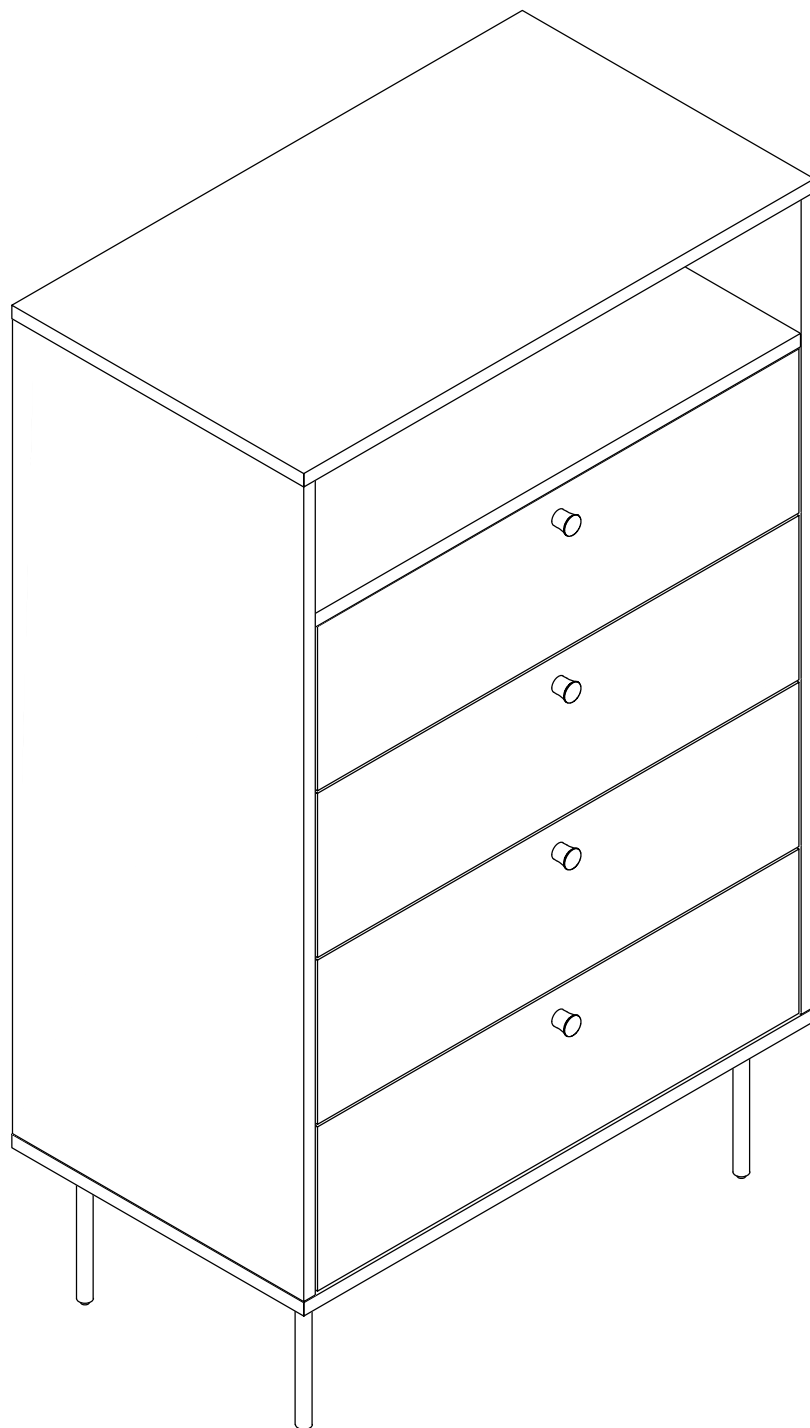

Finish