

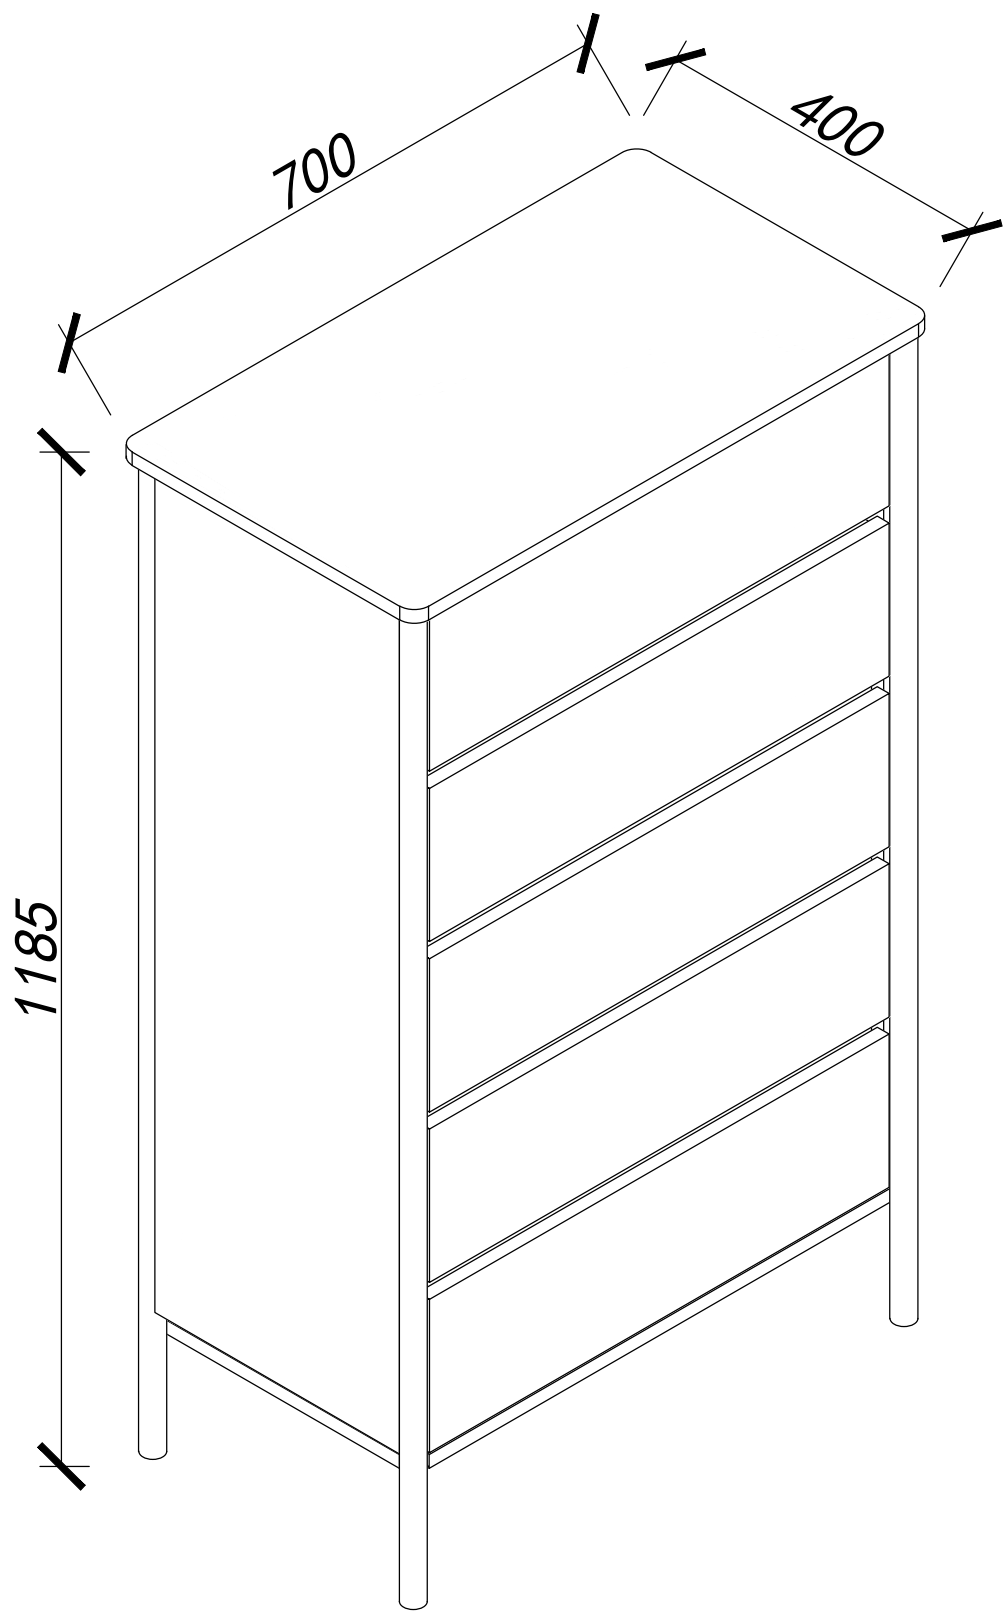
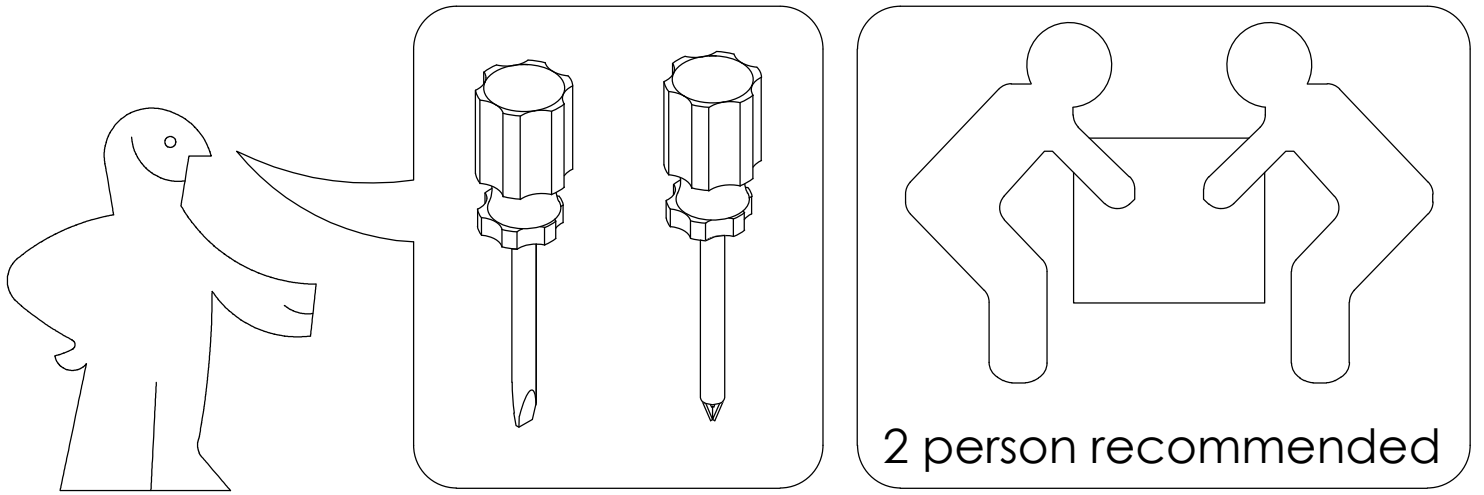
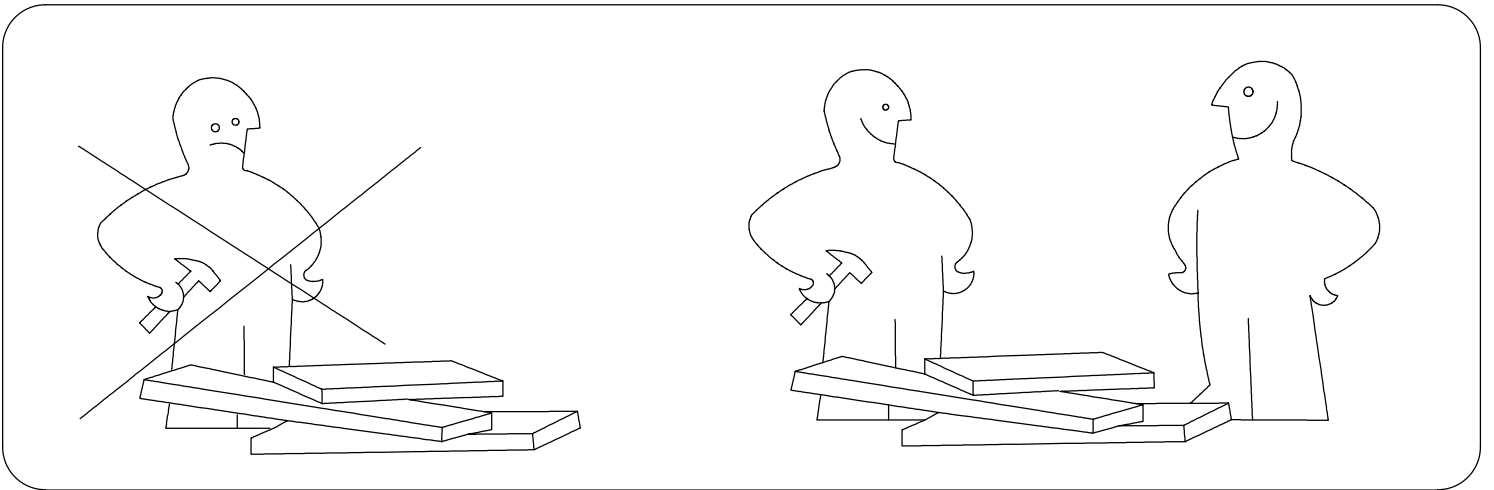


sømcasa



Assembly Instruction

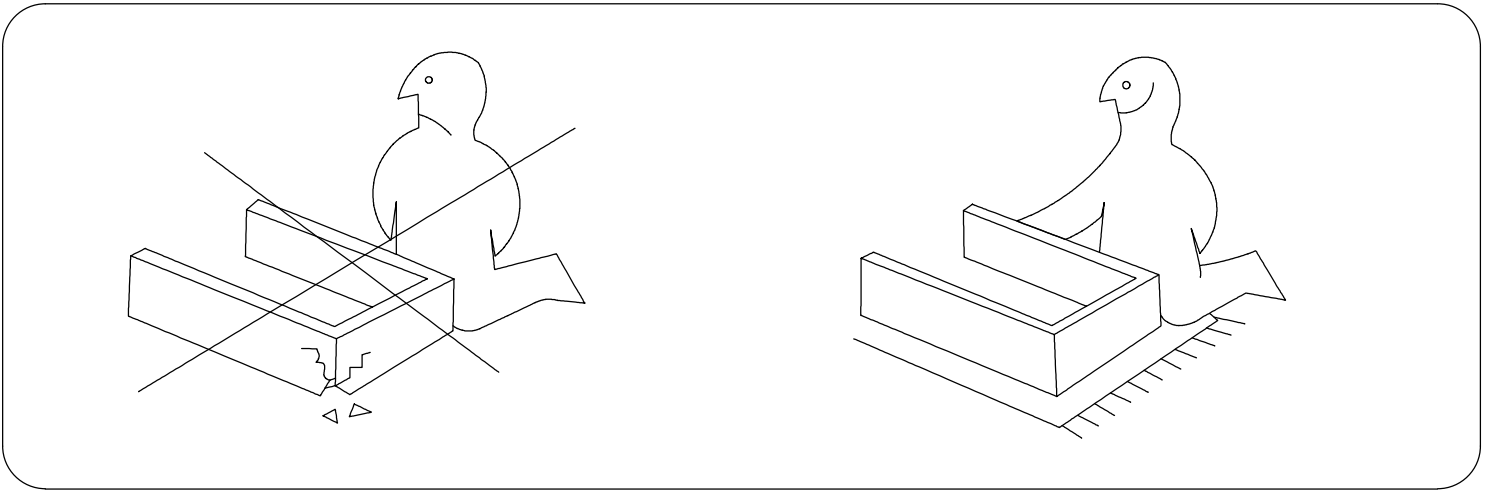

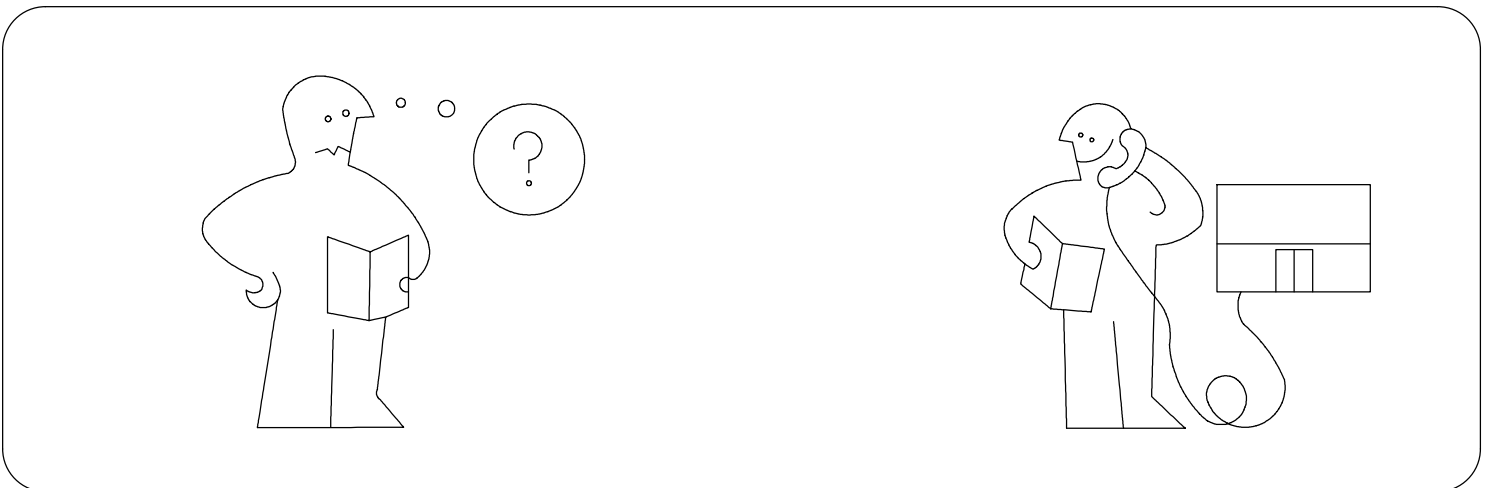

Panel No	Panel Sizes	Quantity
1	700*400*16	1
2	679*379*16	1
3	1161*396*35	1
4	1161*396*35	1
5	626*45*16	4
6	996*100*16	1

Panel No	Panel Sizes	Quantity
7	1006*280*5	2
8	620*179*16	5
9	583*120*12	5
10	300*120*12	5
11	300*120*12	5
12	593*298*5	5
13	287*100*12	5

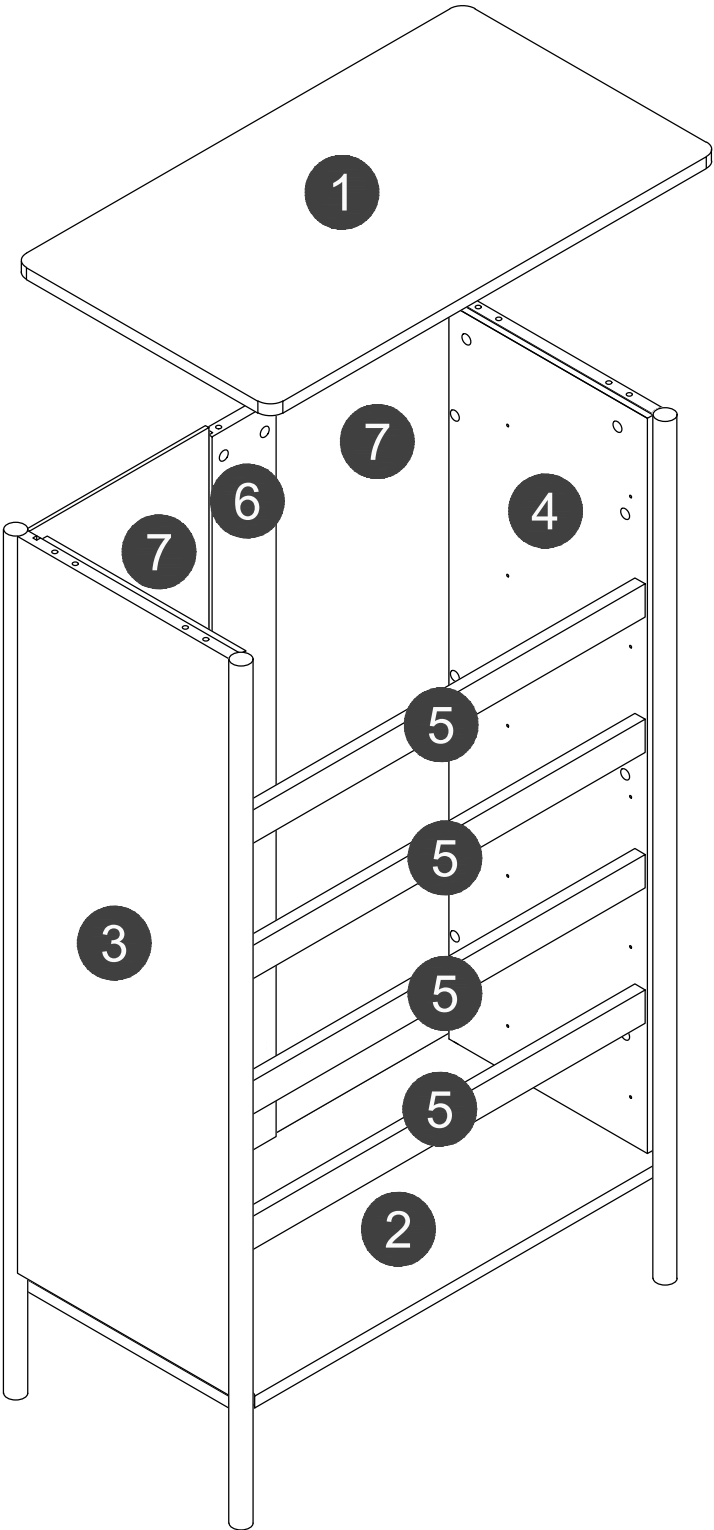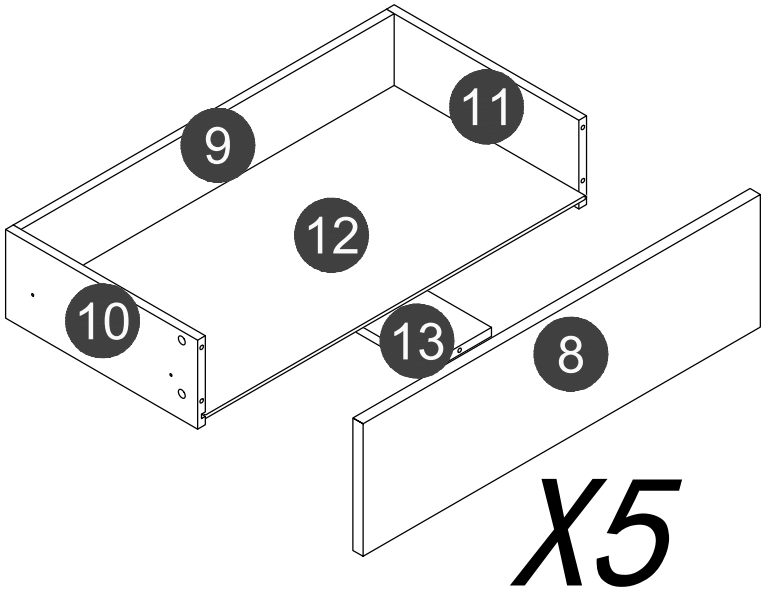

X5

Fittings




M6*40

A=14



Φ8*30

B=16

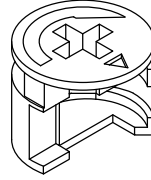


Φ15*12

C=14




Φ21

D=64

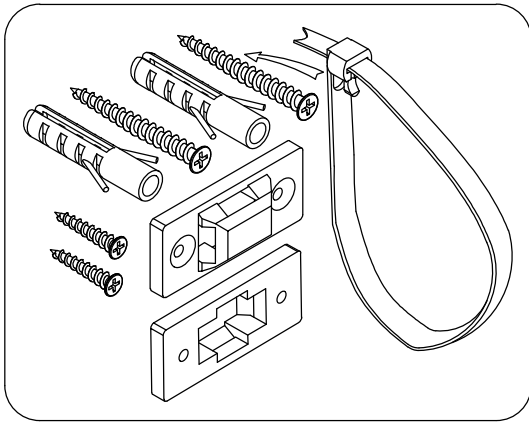


F=1

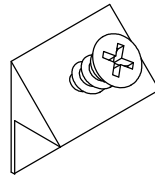

E=16




O =50

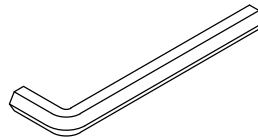


H =1




P =50

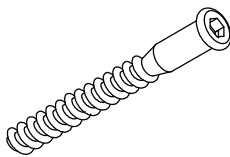

Q=6


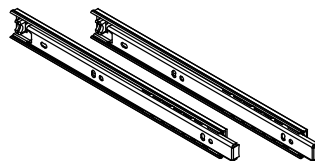


N=5




V1=40


STEP 1

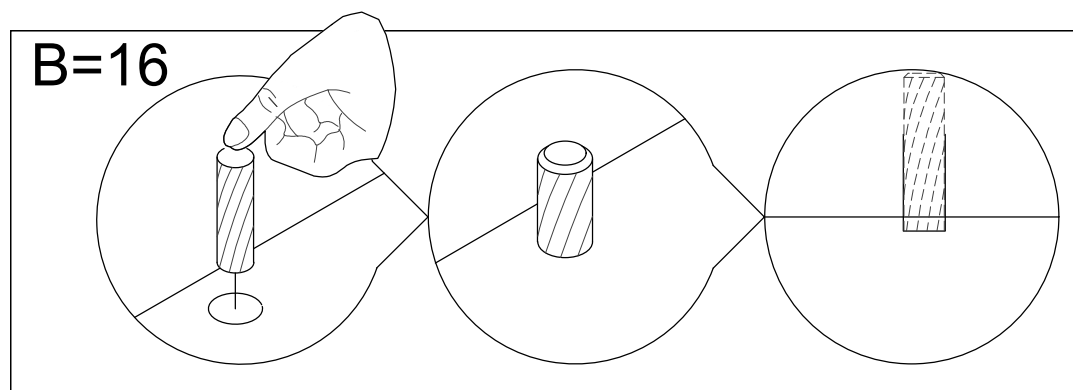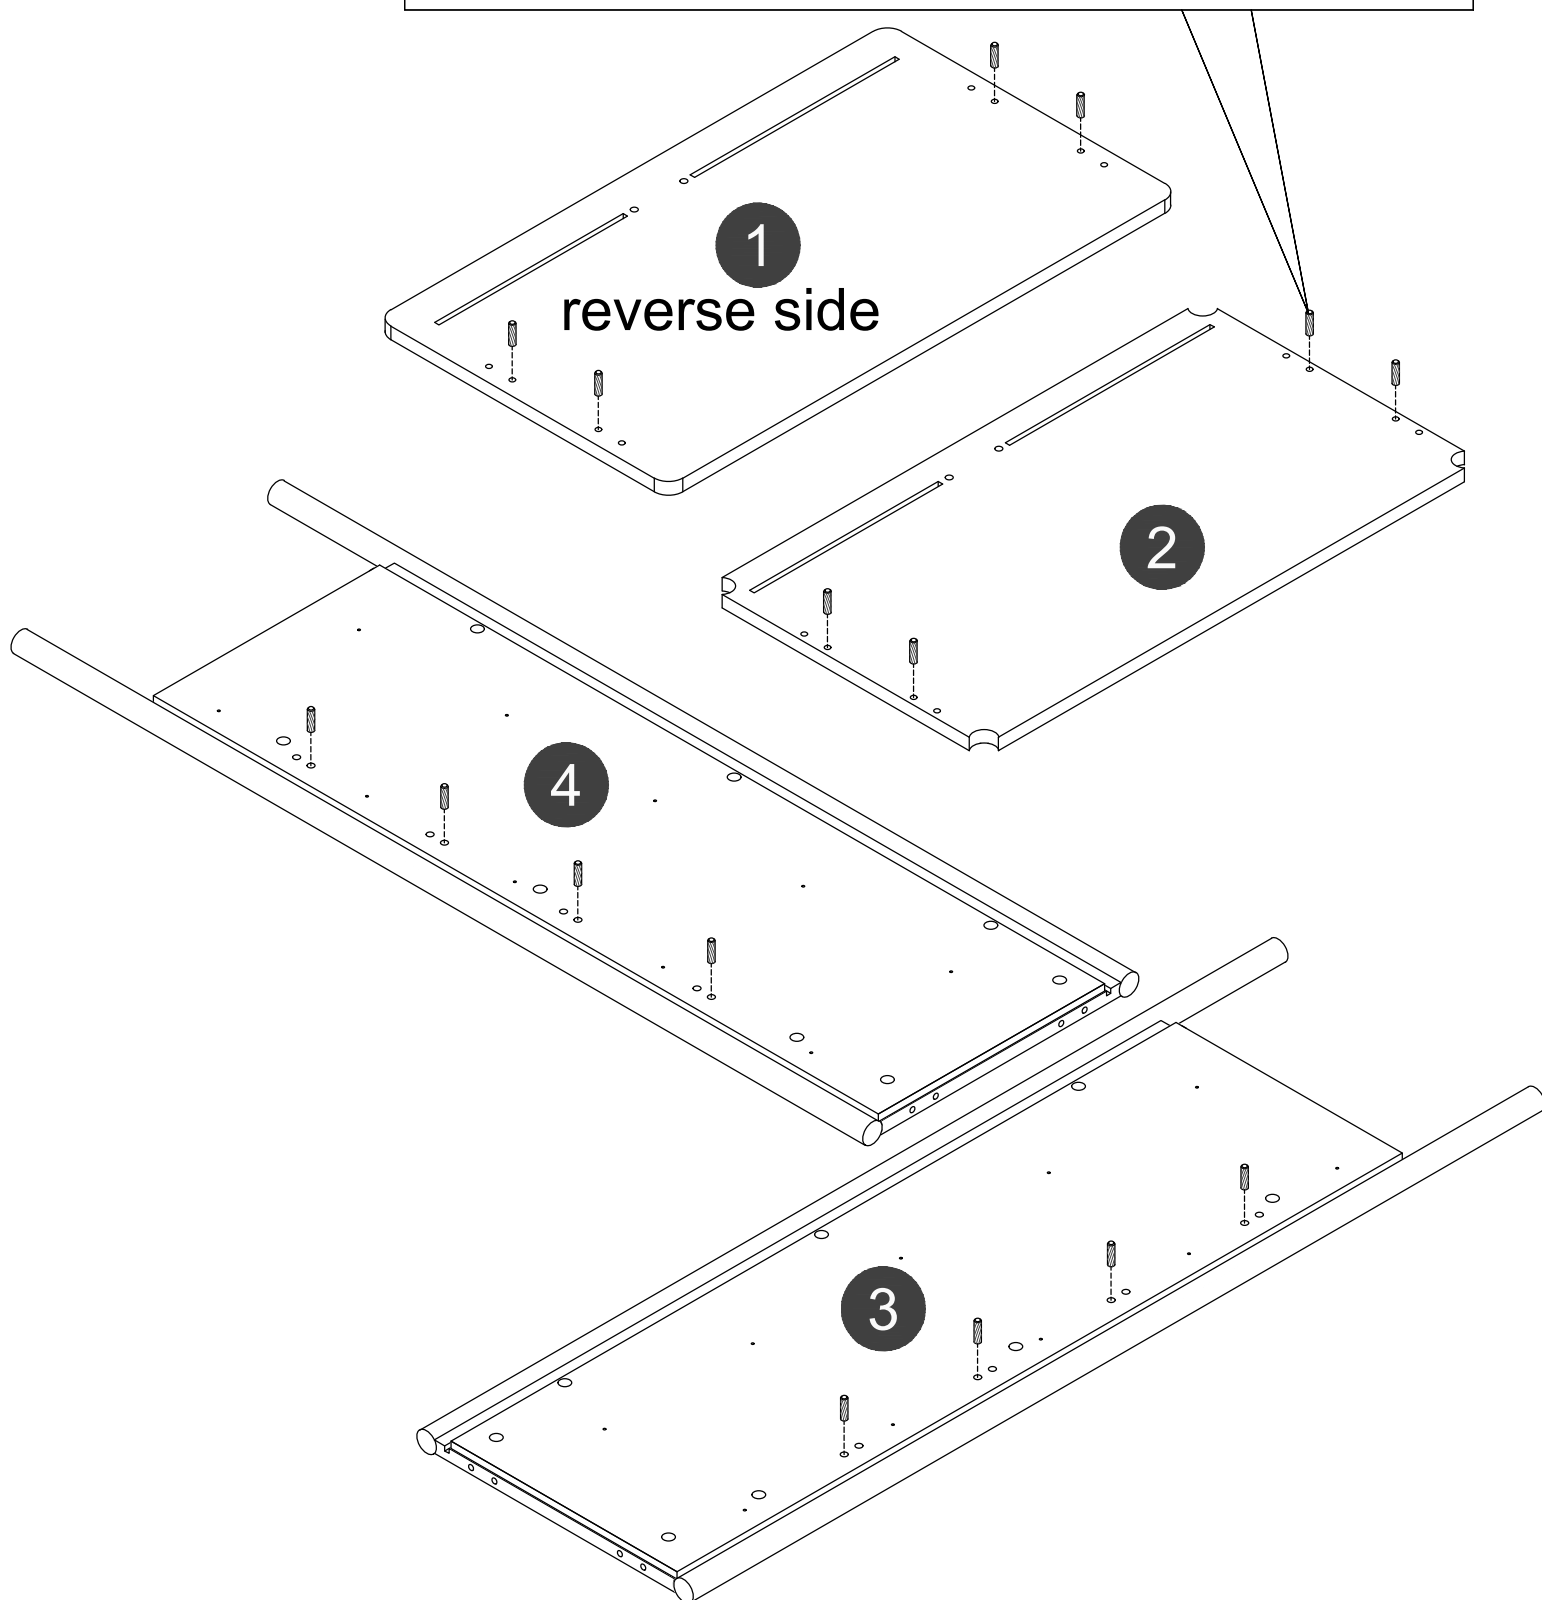


STEP 2

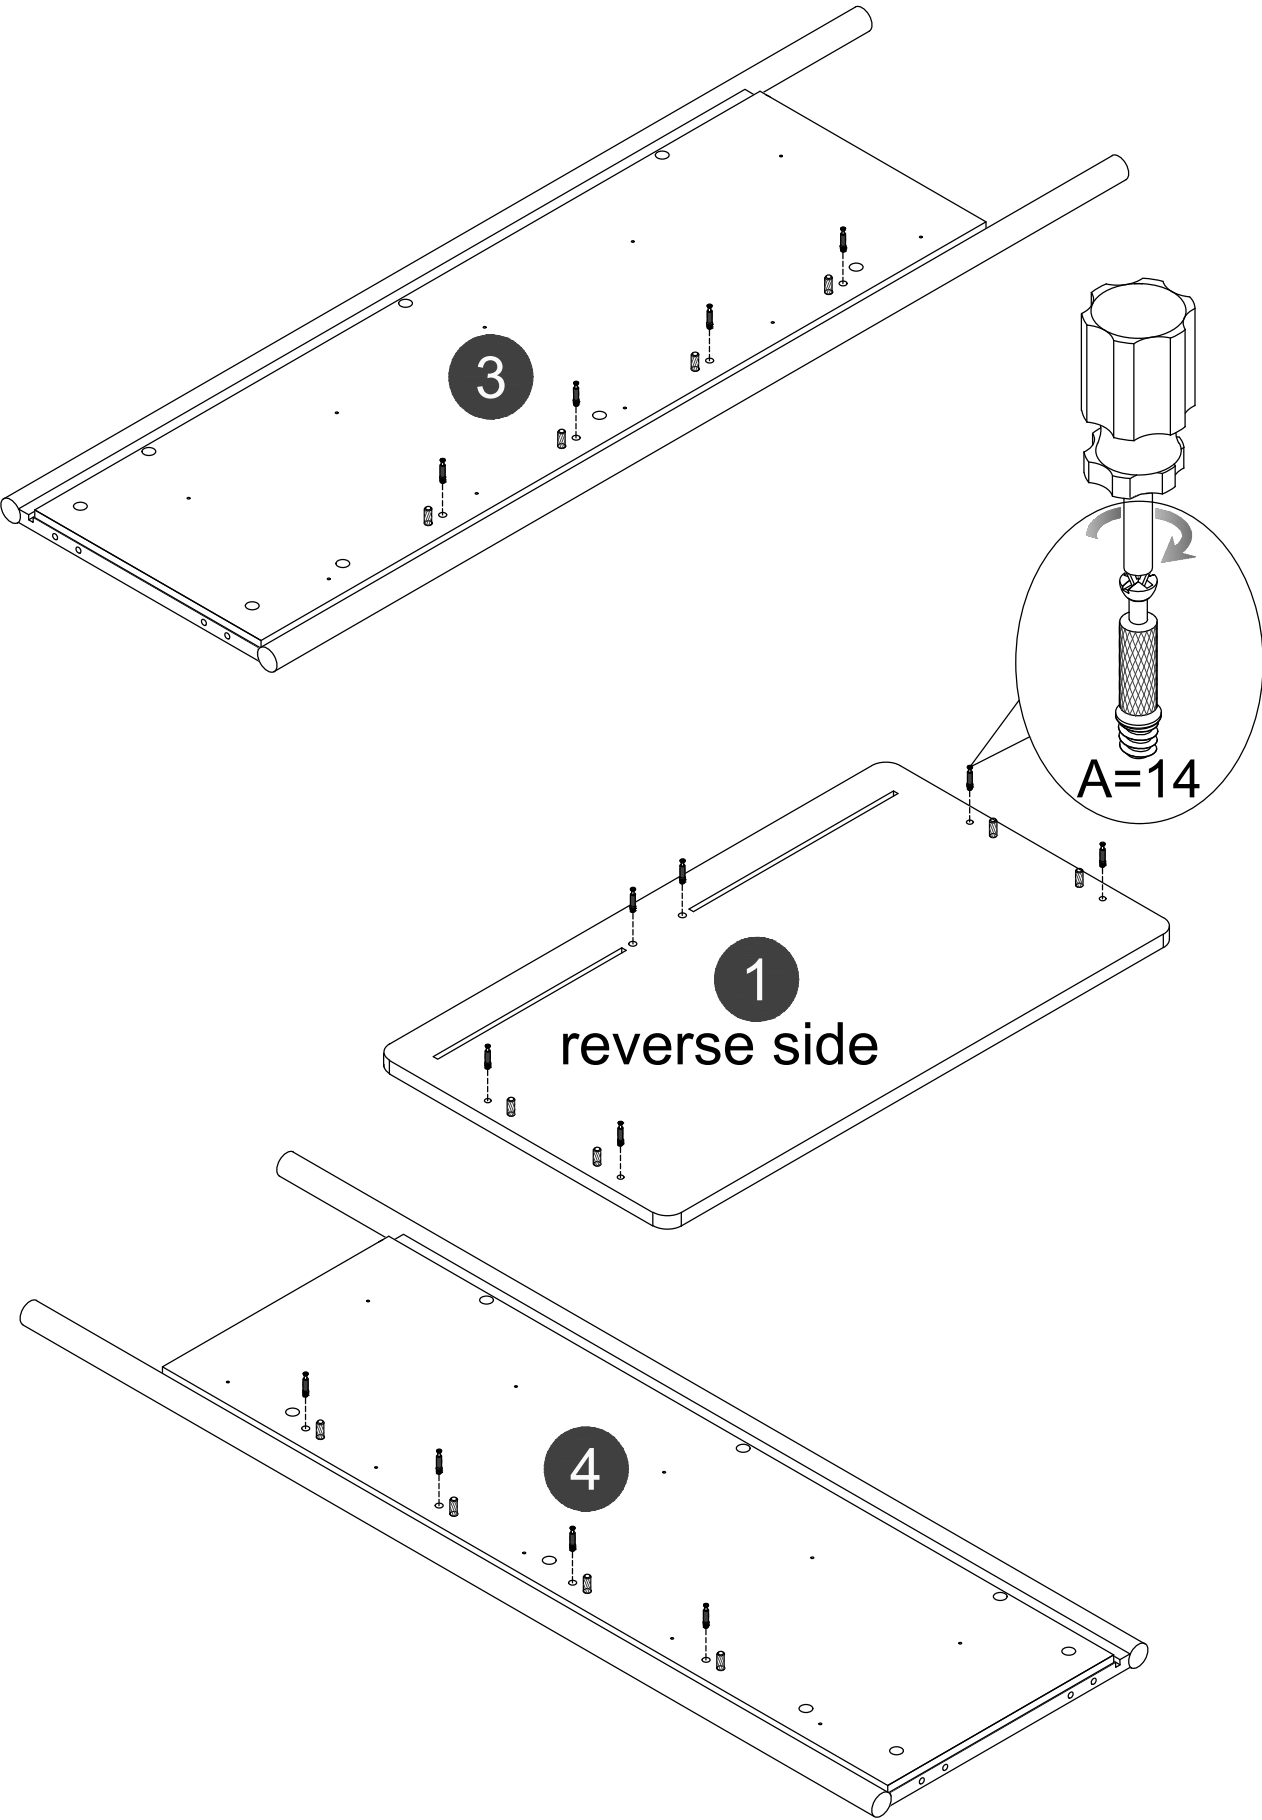



STEP 3

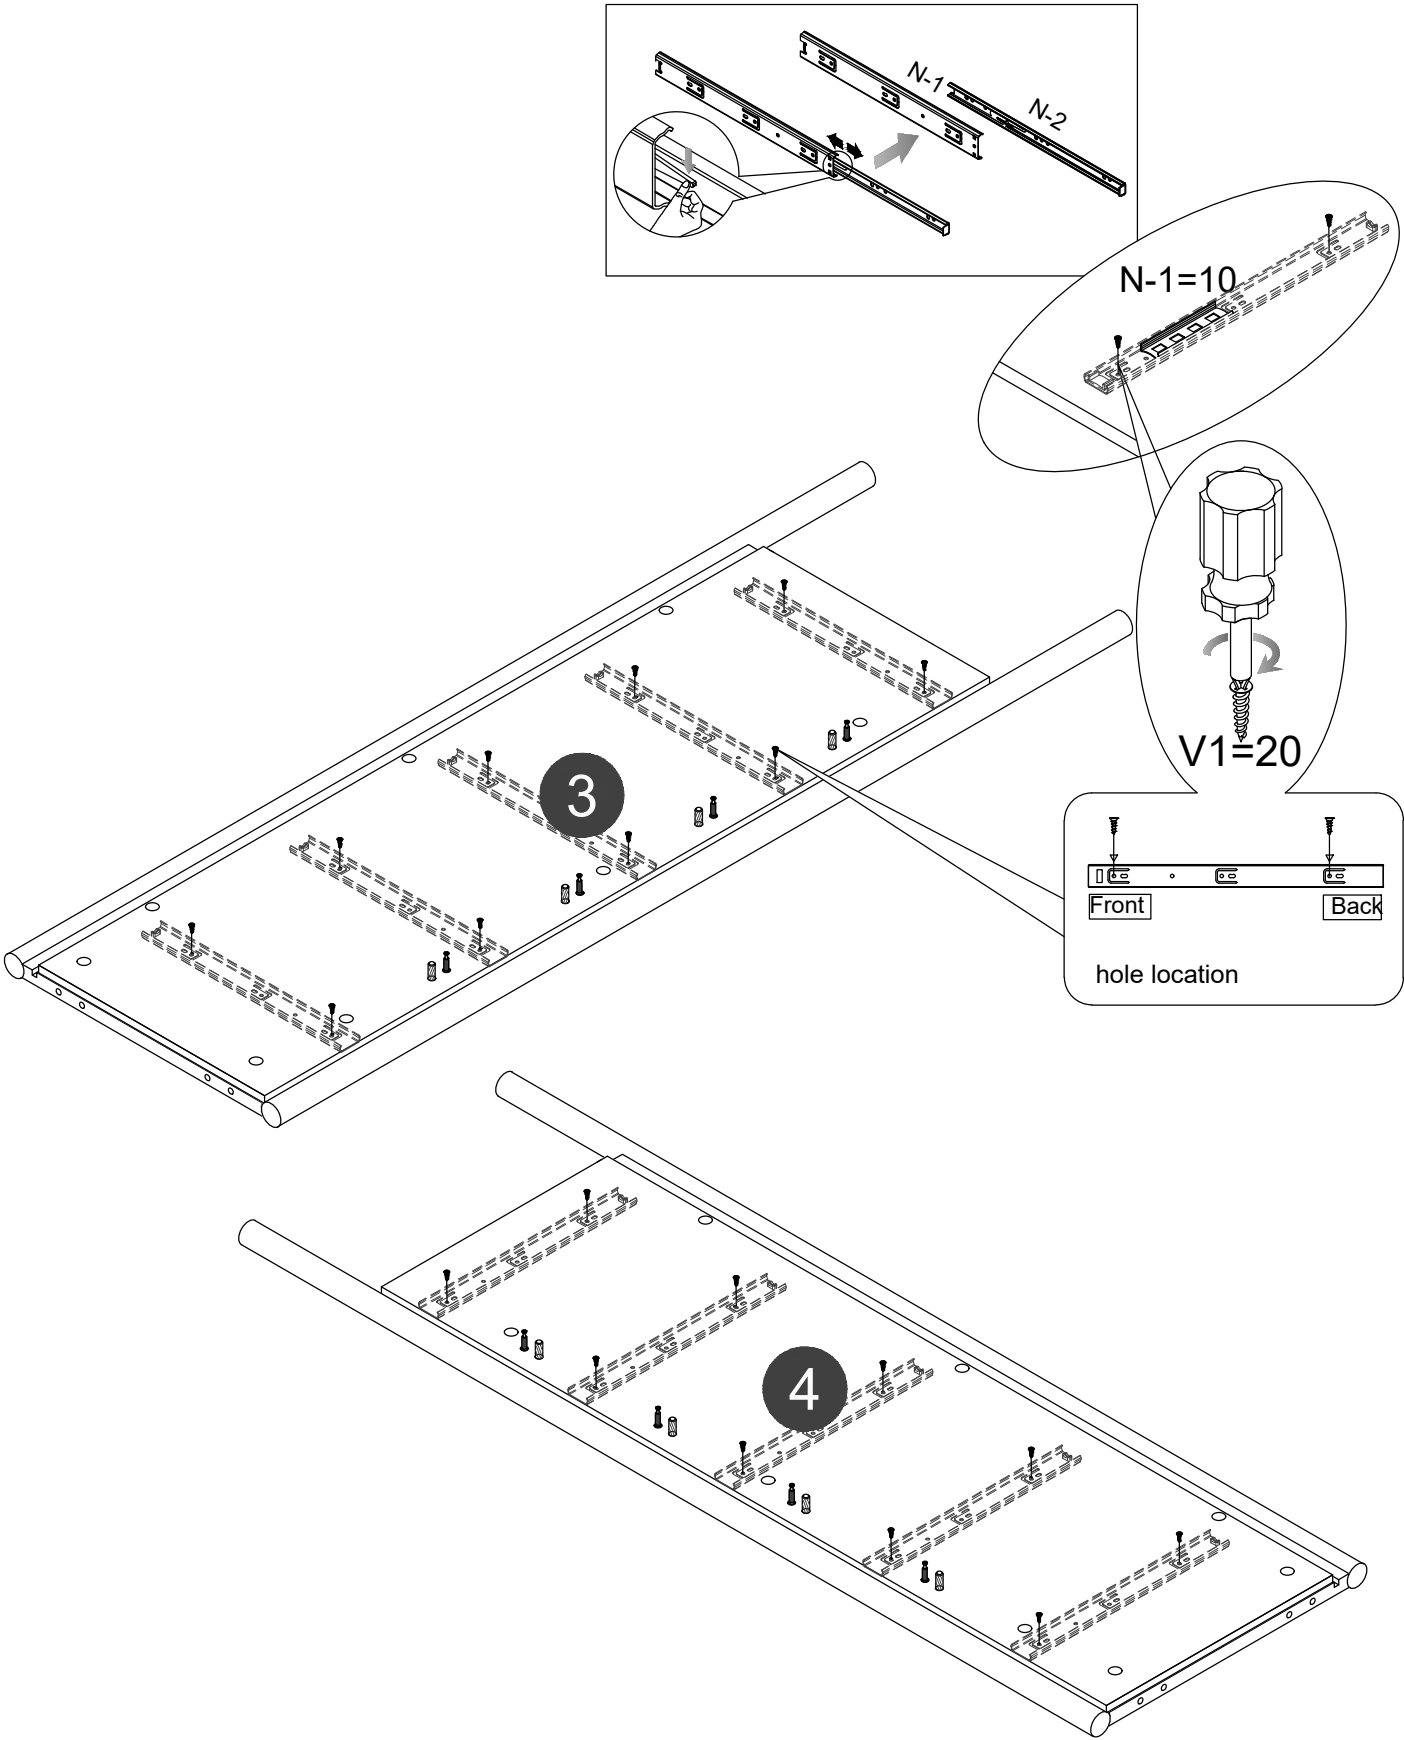


STEP 4

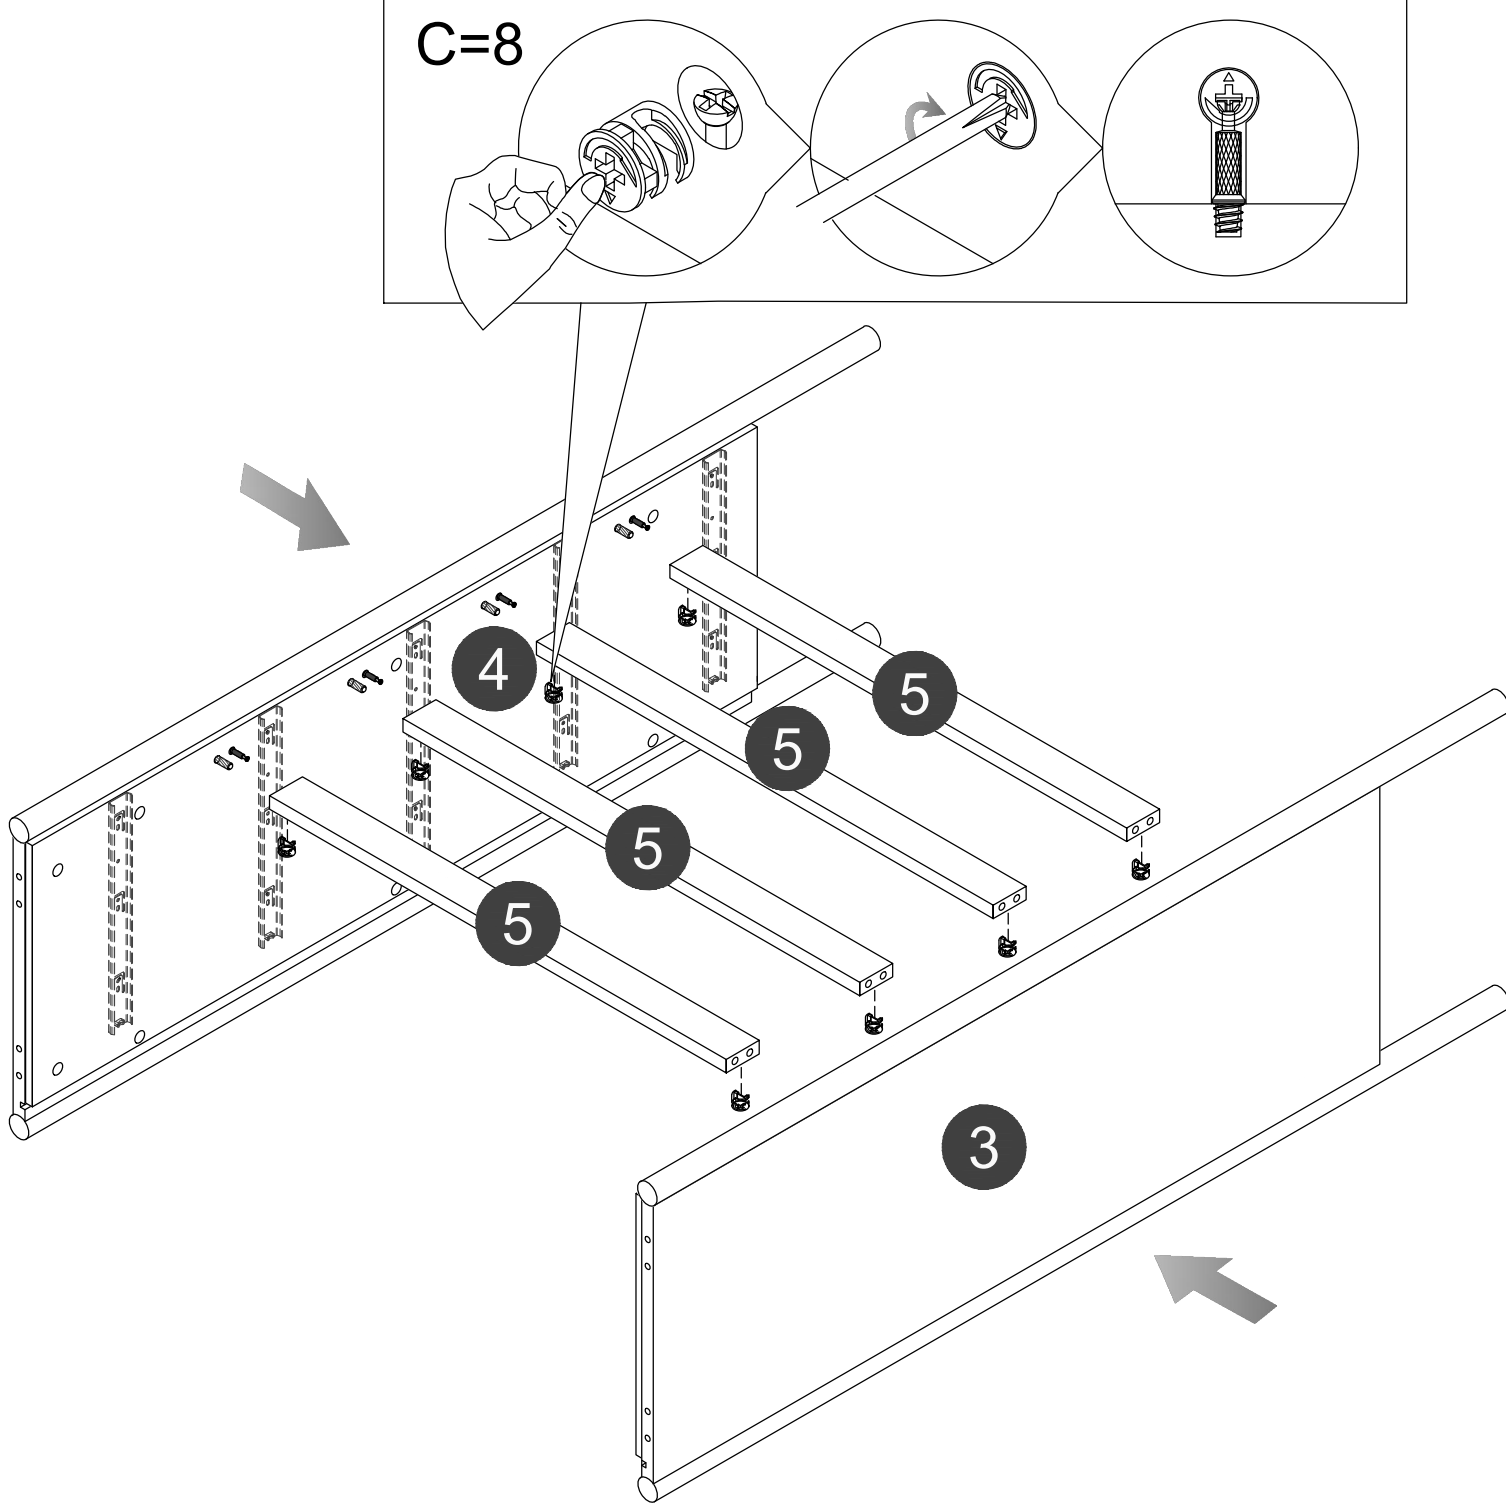


STEP 5

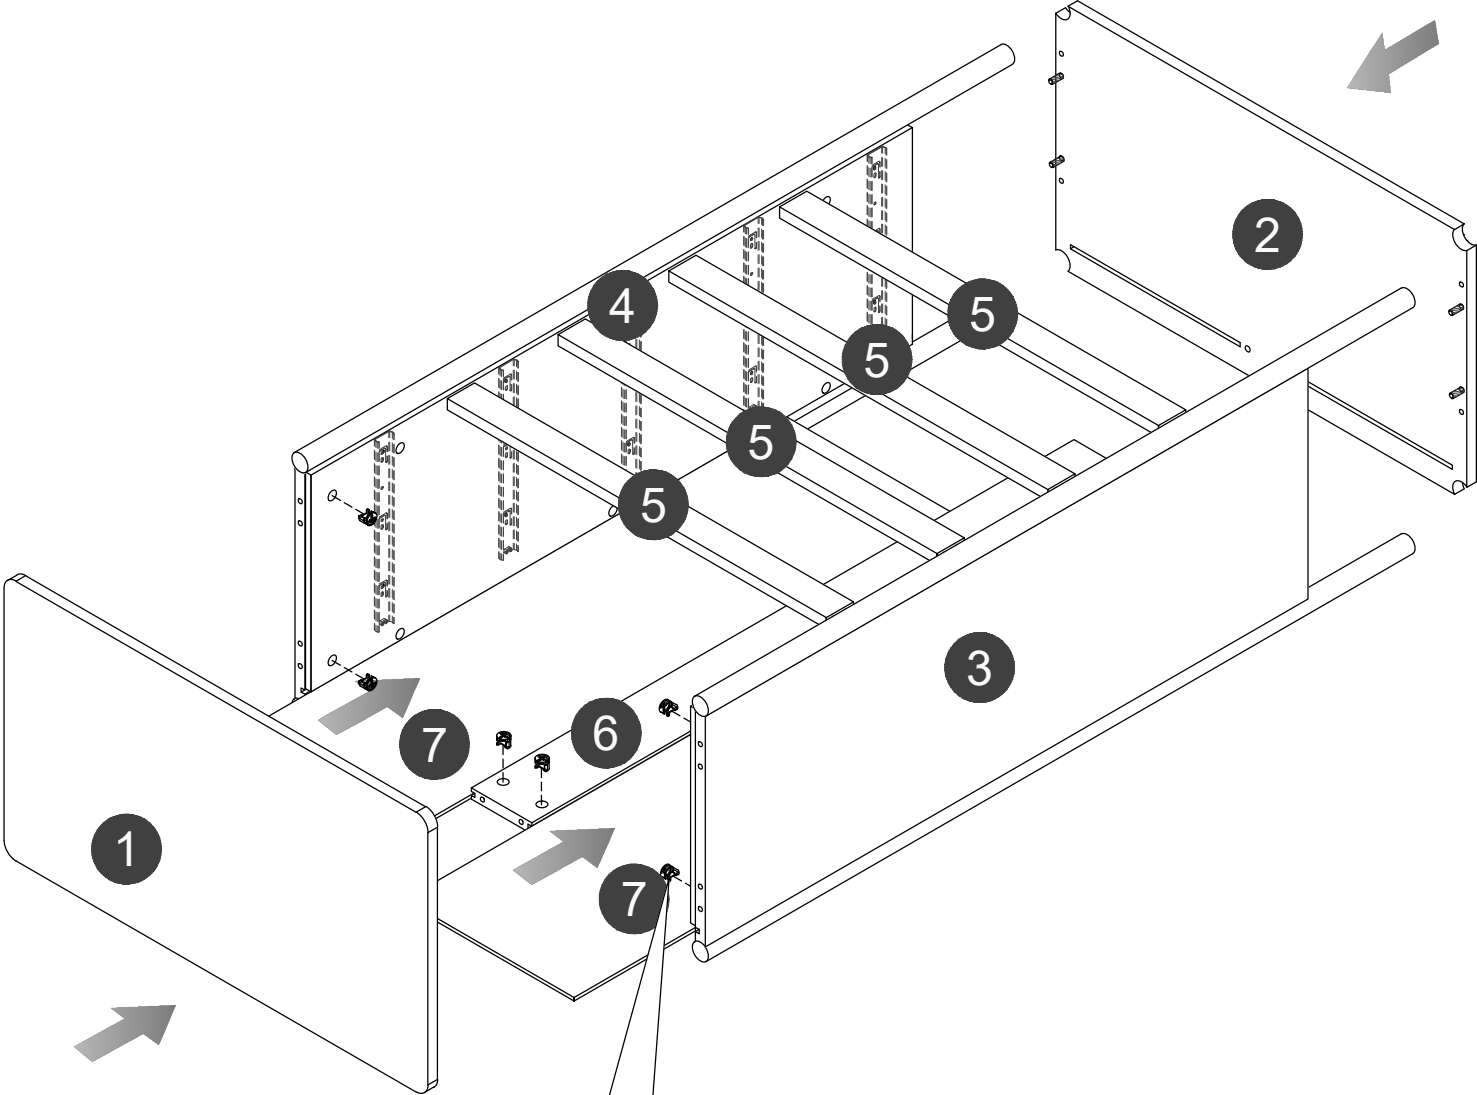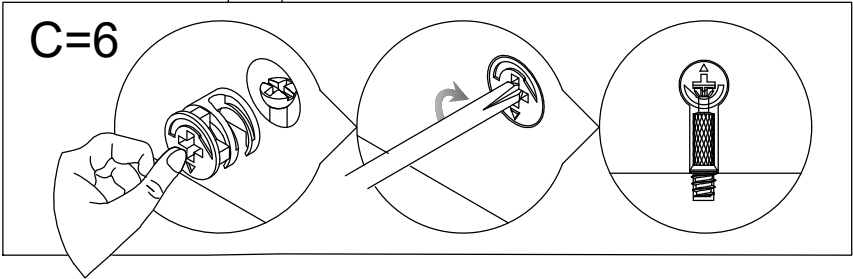


STEP 6

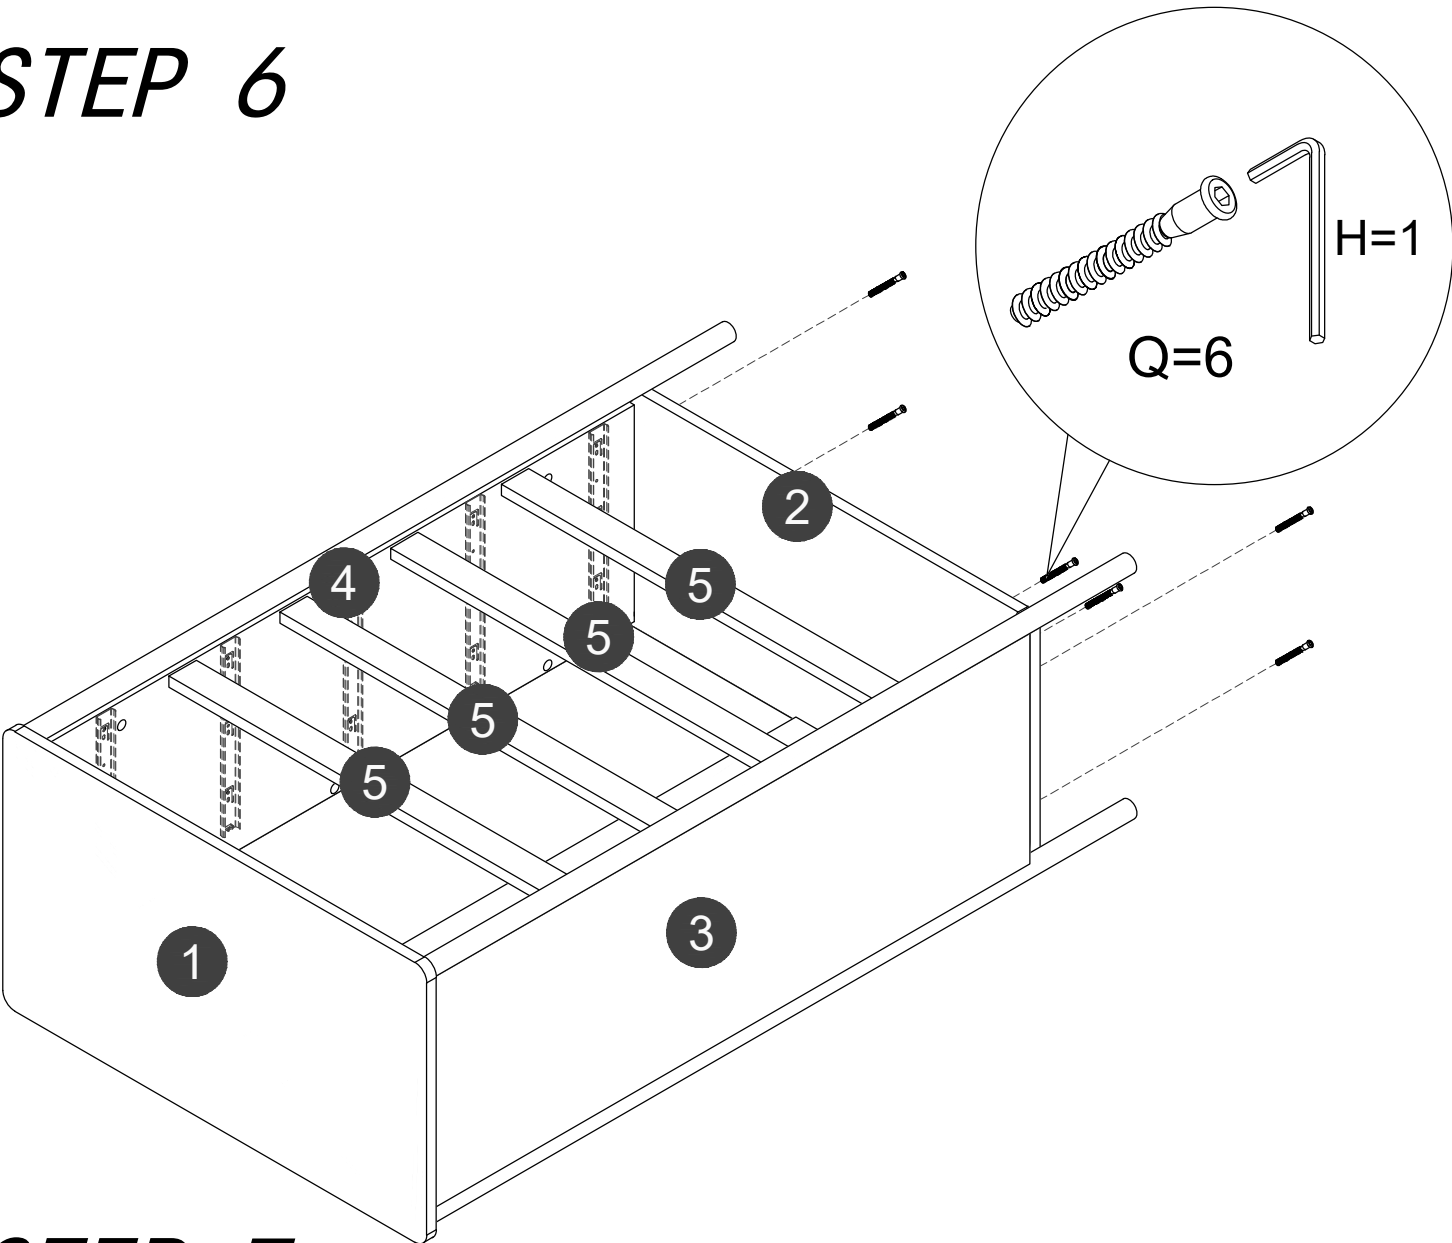


STEP 7

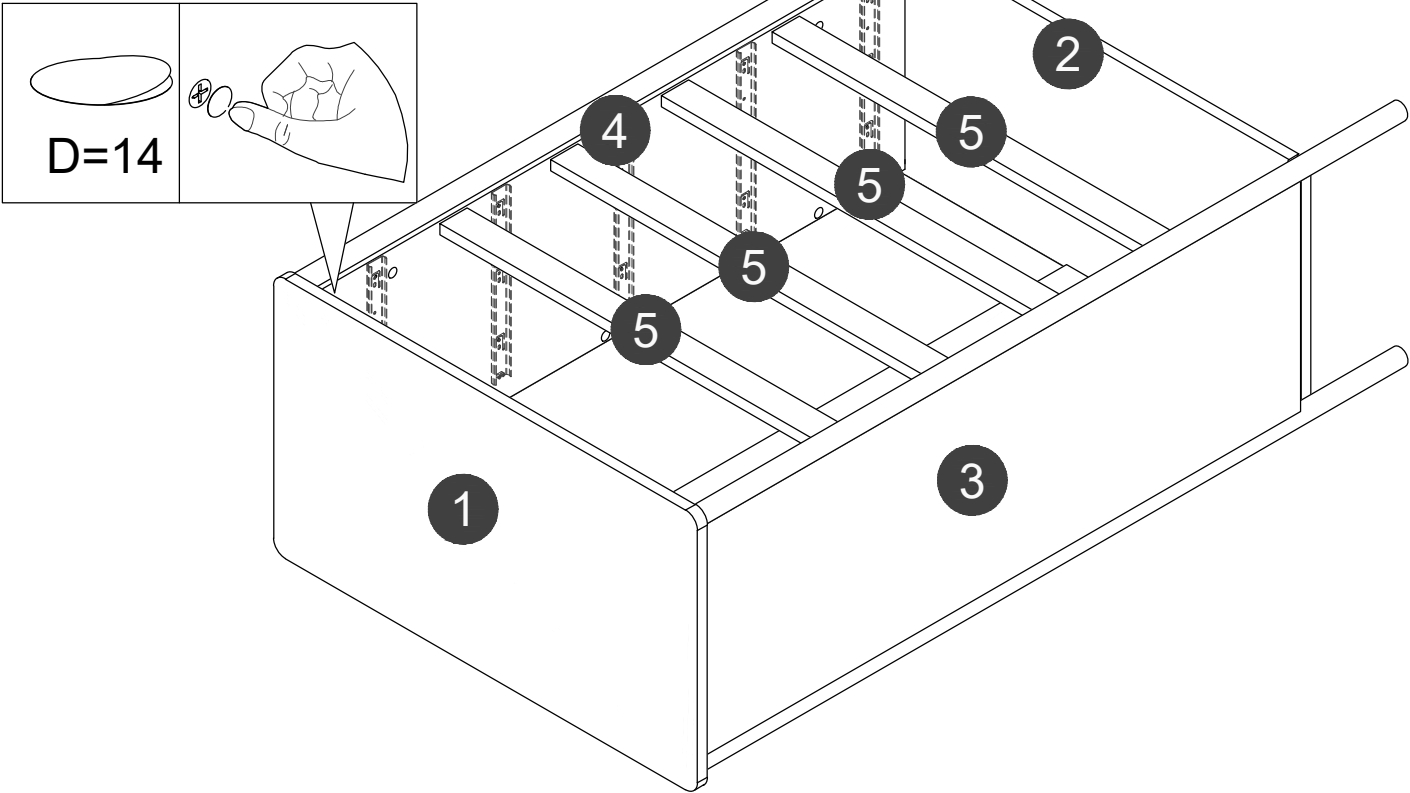


STEP 8

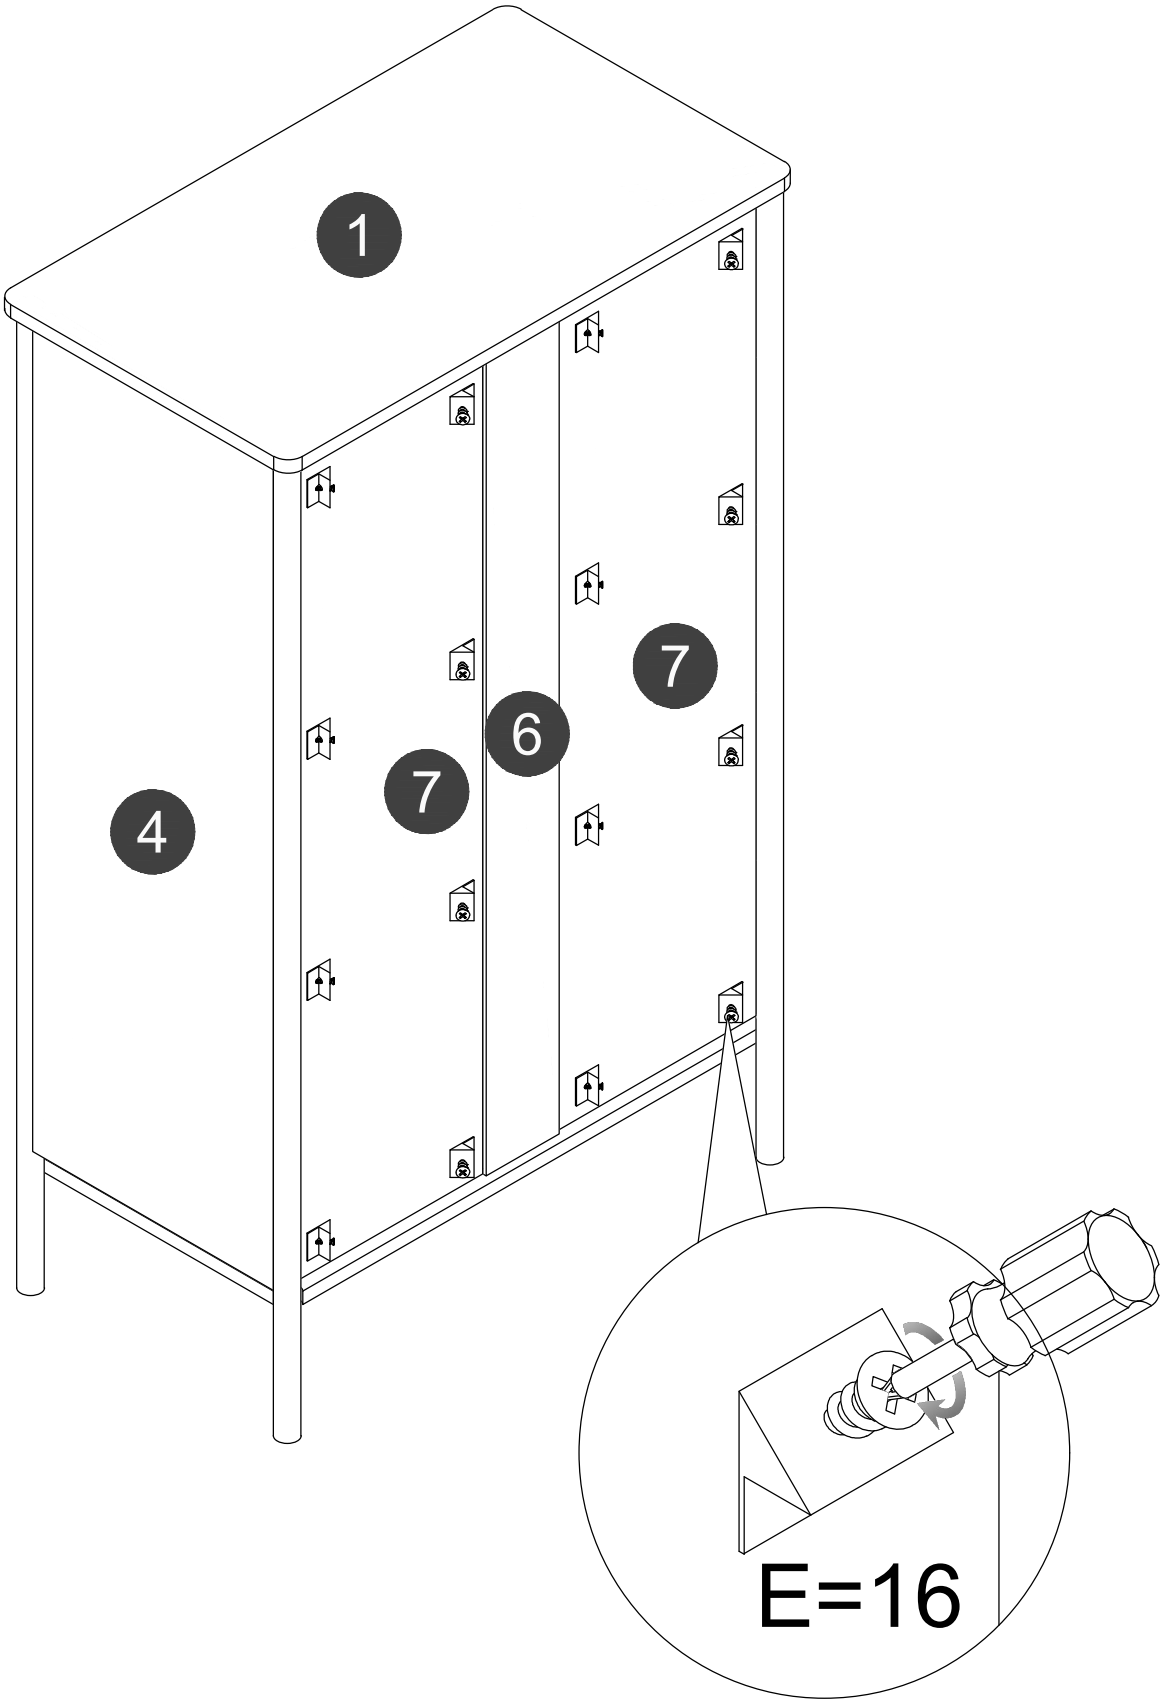


STEP 9

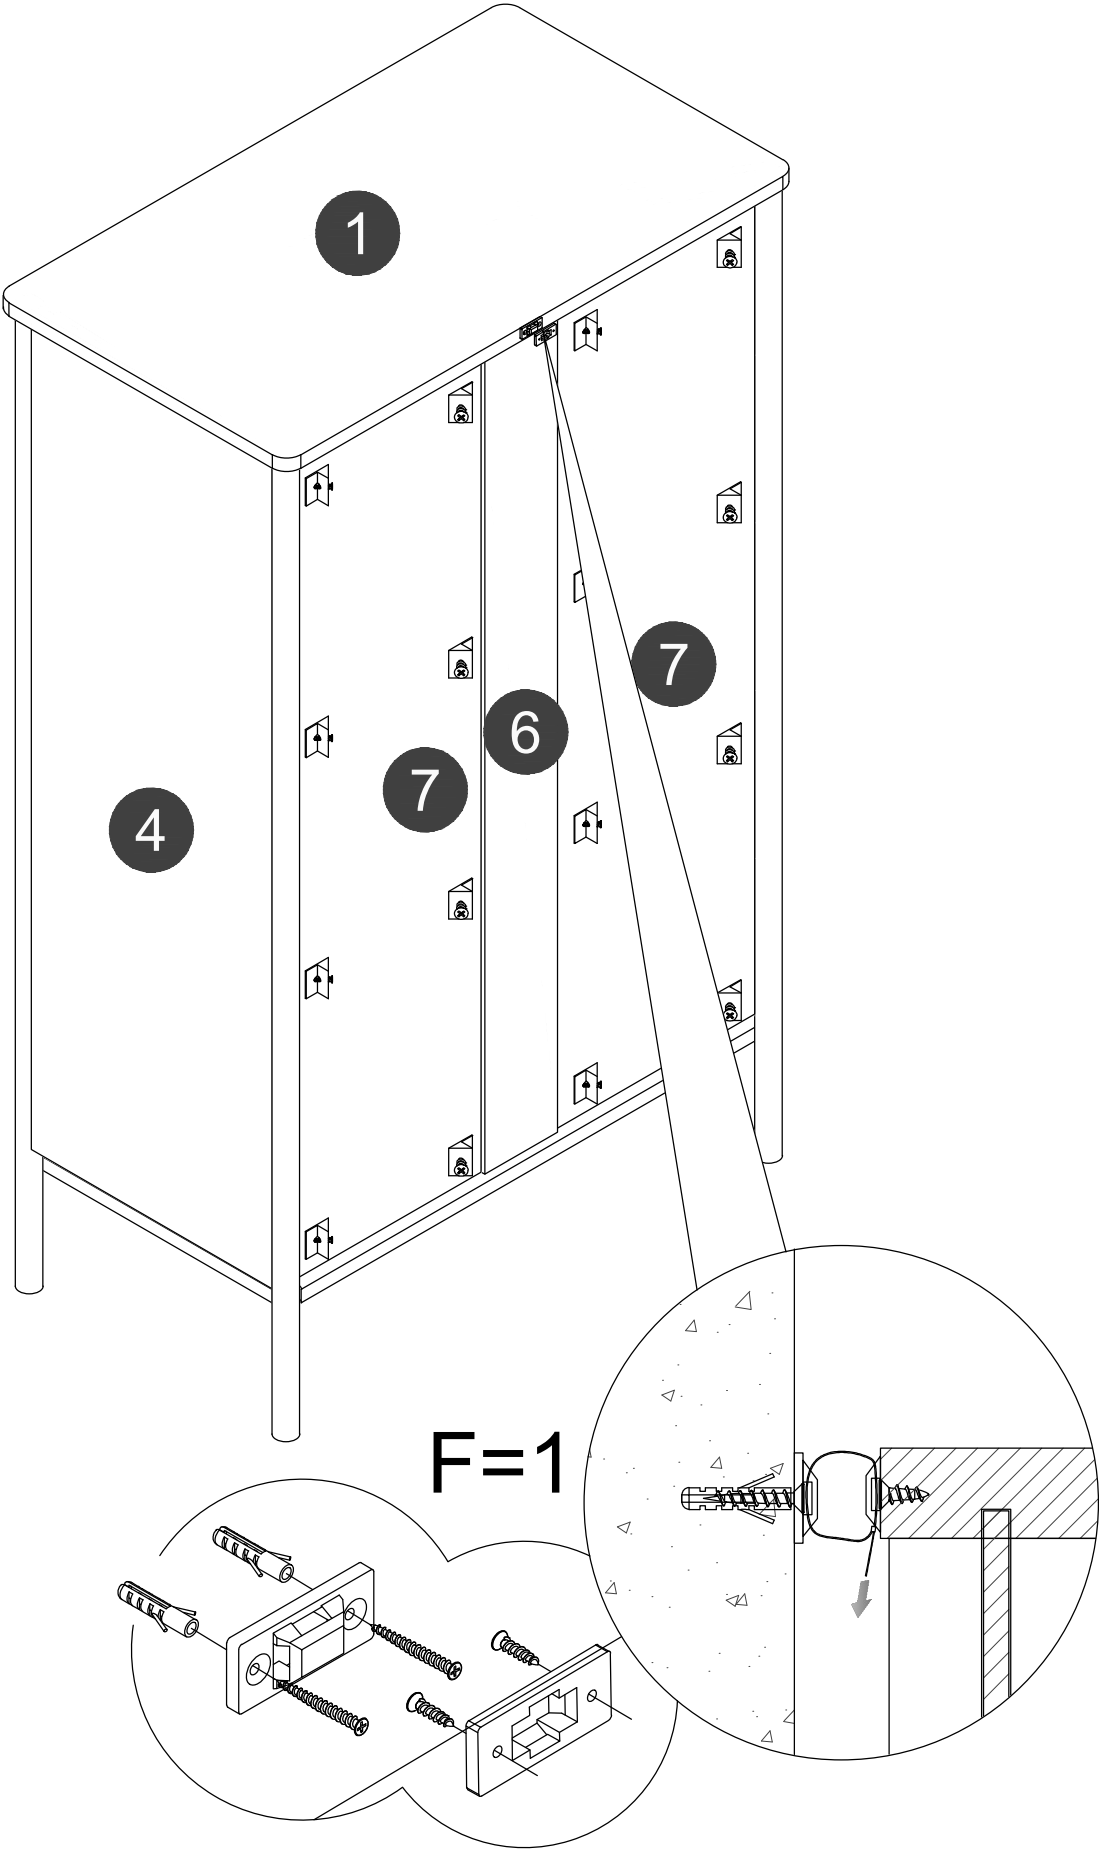


STEP 10

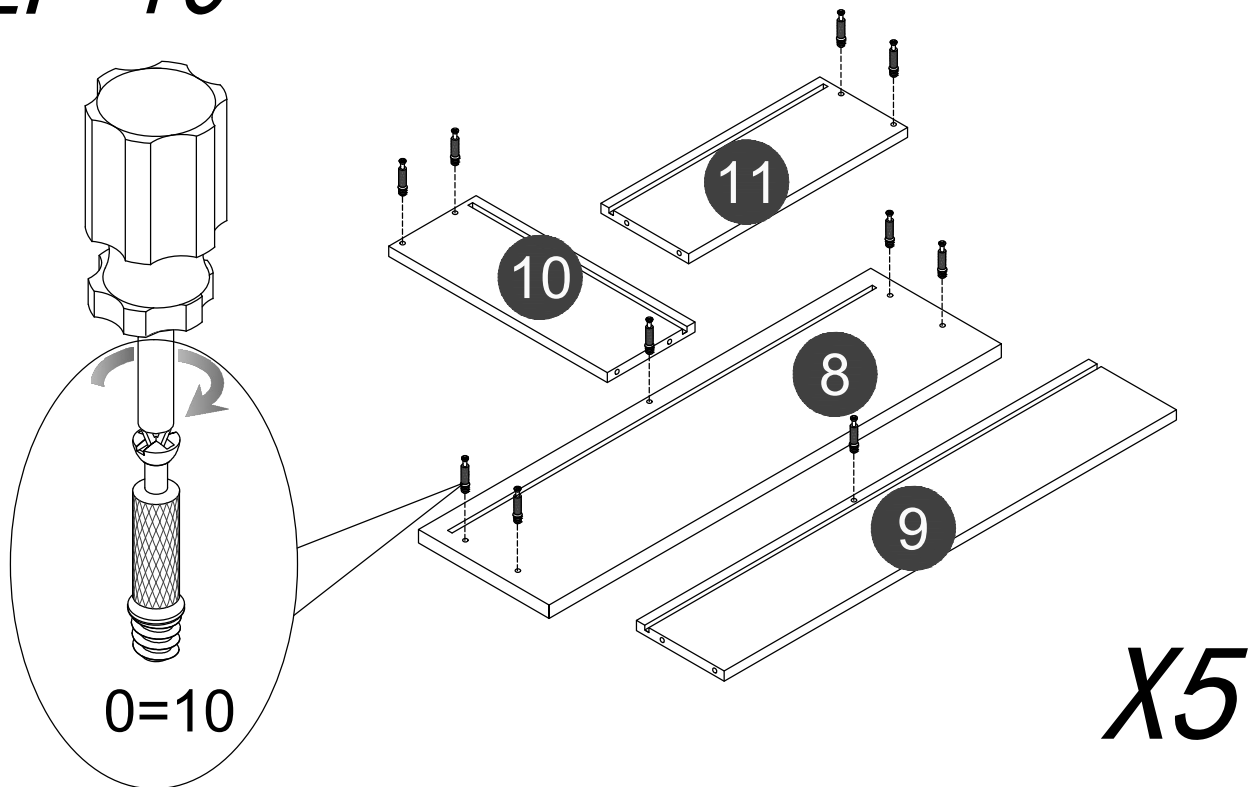

STEP 11

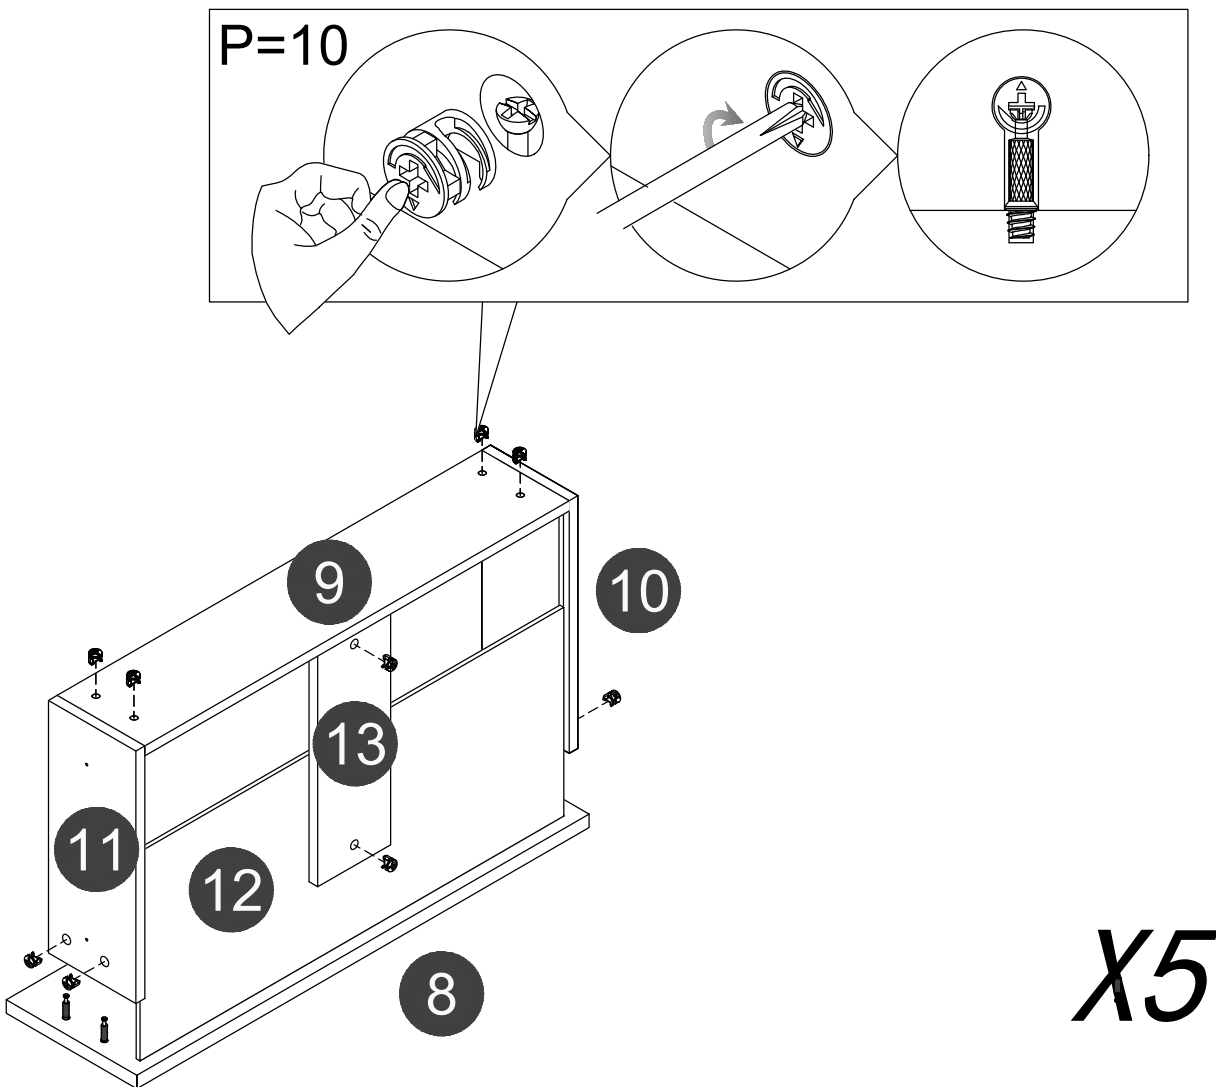


STEP 12

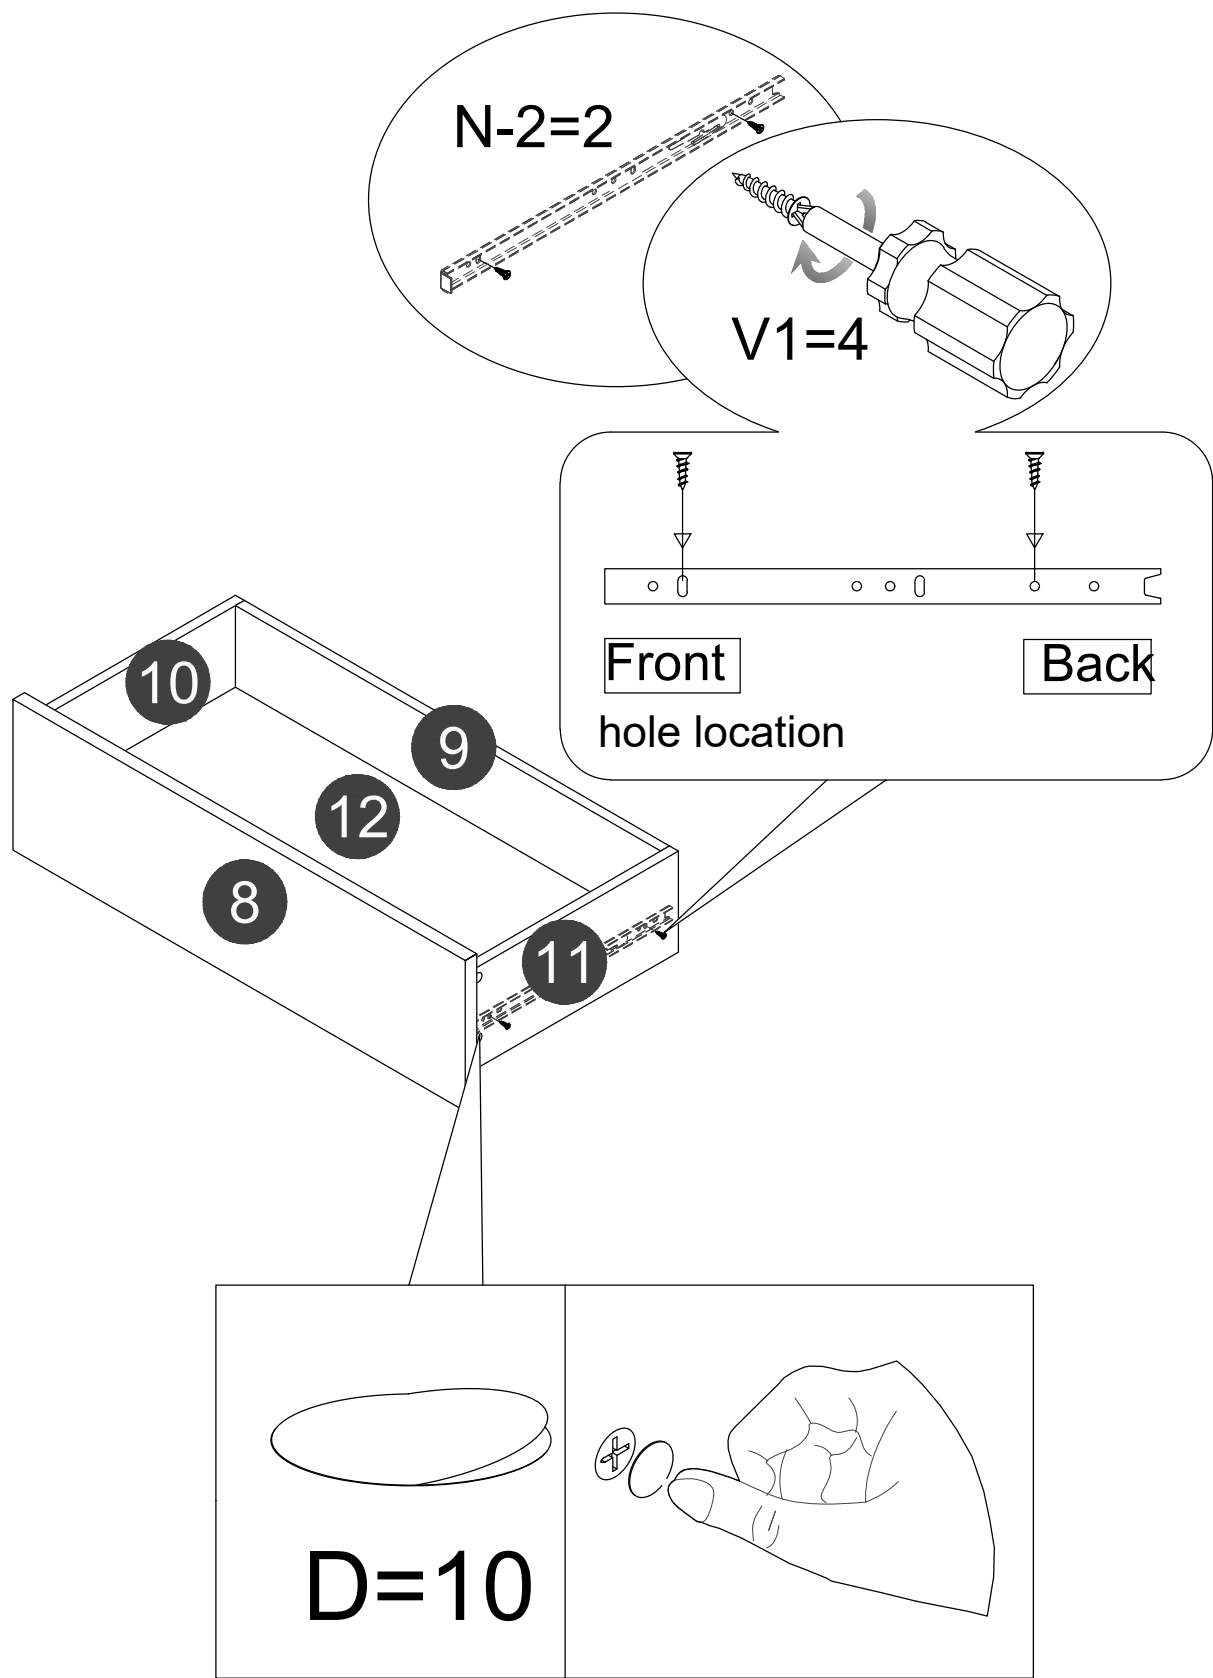


X5


STEP 13

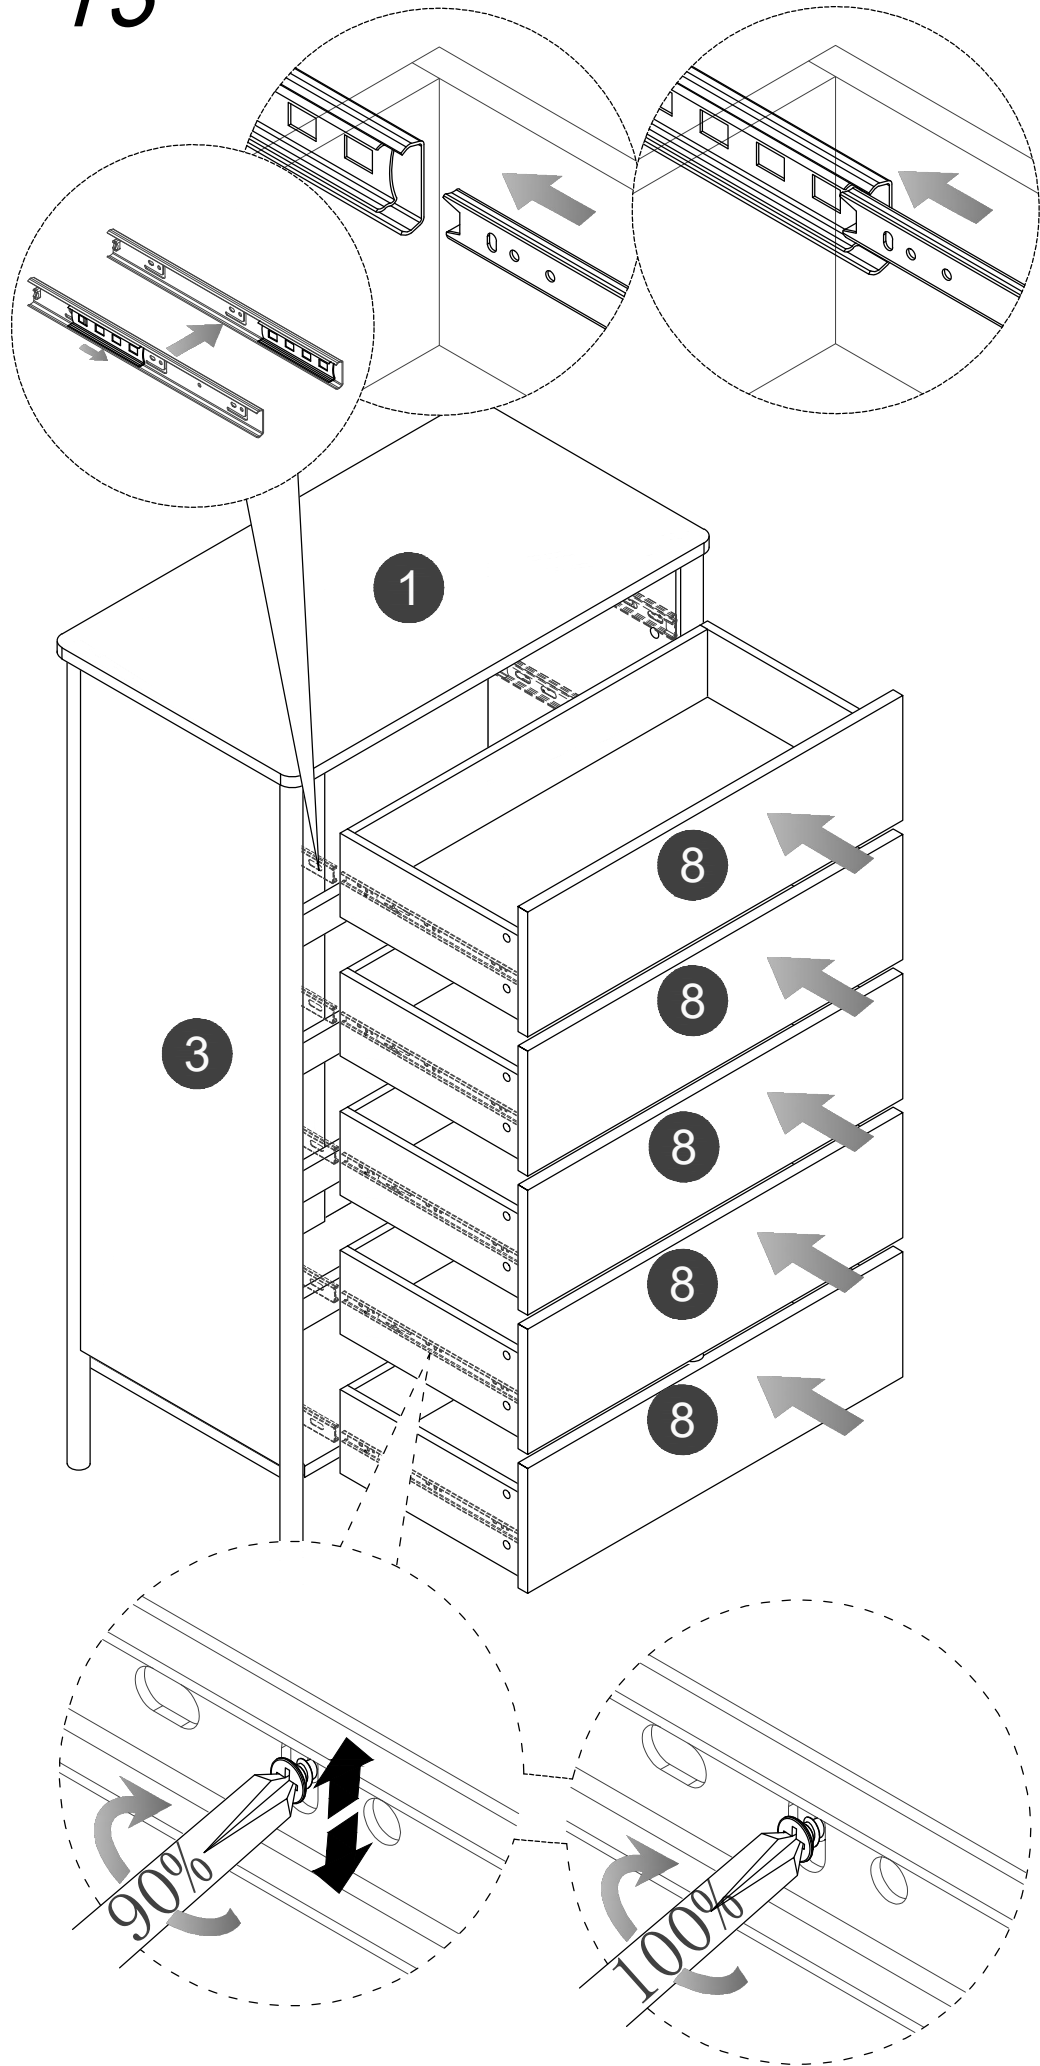

STEP 14

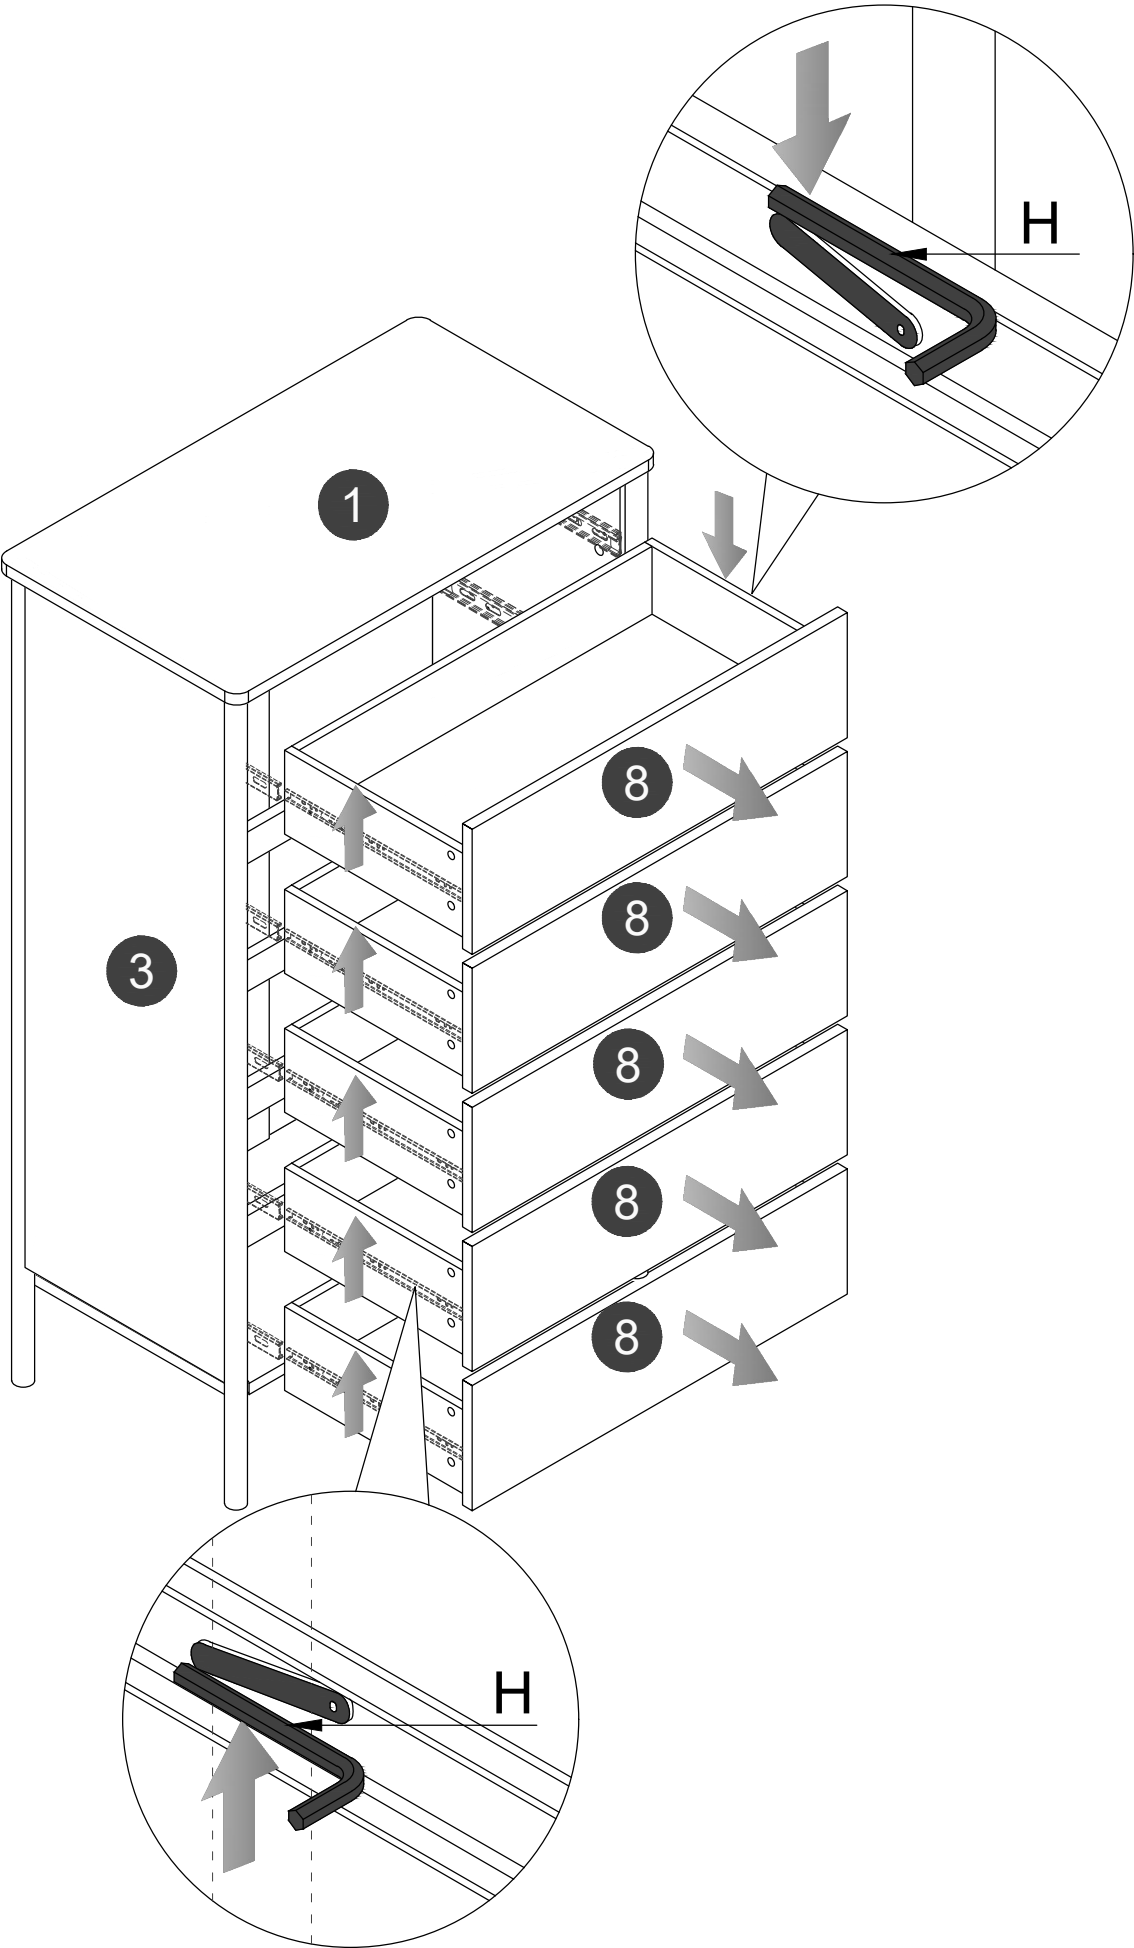

STEP 15

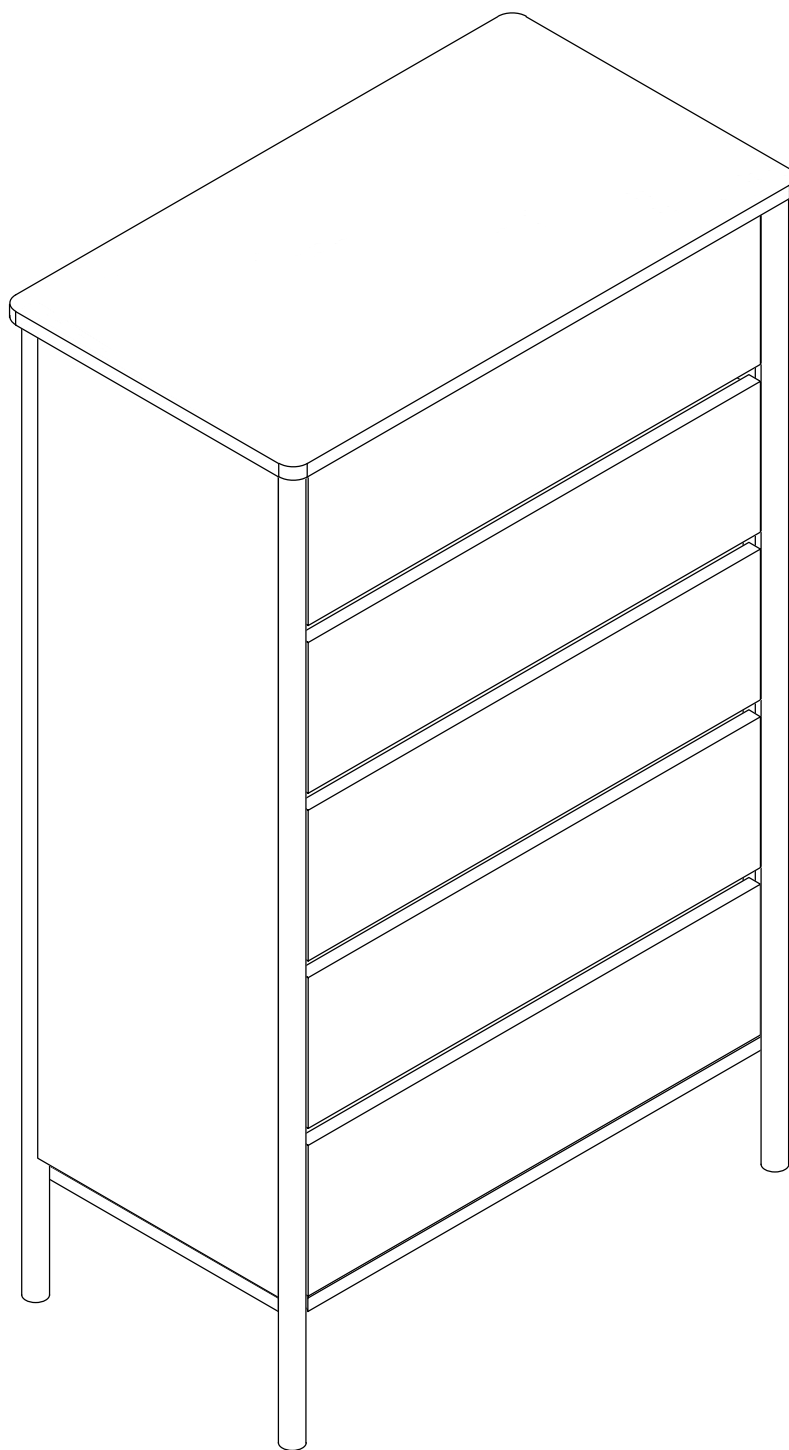

Finish